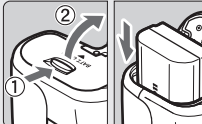
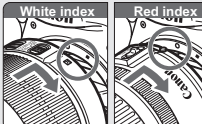
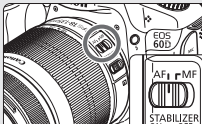



This quick guide explains basic function settings and how to shoot and playback images. You can take this guide with you for shooting. For detailed instructions, refer to the EOS 60D Instruction Manual.


Quick Start Guide


1  **Insert the battery.**

2  **Attach the lens.**
Align the lens' white or red index with the camera's index in the matching color.


3  **Set the lens focus mode switch to <AF>.**

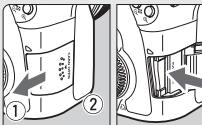4  **Open the cover and insert a SD card.**

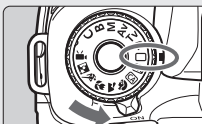5  **Set the power switch to <ON>, and while holding down the button at the center of the Mode Dial, turn the dial to <Q> (Full Auto).**

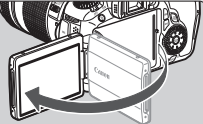6  **Flip out the LCD monitor.**

7  **Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

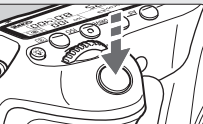8  **Take the picture.**
Press the shutter button completely to take the picture.

9  **View the image.**
The captured image will be displayed for about 2 sec. on the LCD monitor.


 The ☆ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, B, C).

Battery Life


Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 1600 shots	Approx. 1100 shots

Image Playback



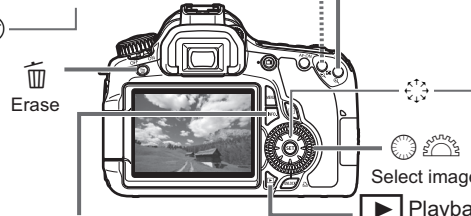


INFO. Shooting information

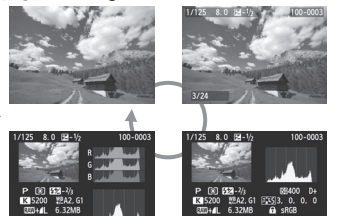

Preparation

Menu Operations

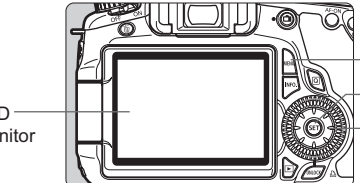

1. Press the <MENU> button to display the menu.

2. Press the <◀▶> key to select the tab, then press the <▲▼> key to select the desired item.

3. Press <SET> to display the setting.

4. After setting the item, press <SET>.

Basic Zone Modes




Movie Shooting Mode



Creative Zone Modes



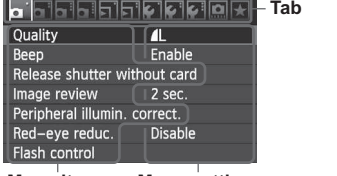


Menu items **Menu settings**

Image-recording Quality

- Select [Q] **Quality**.
- Select the image-recording quality with the <◀▶> dial or <▲▼> key.

Image-recording quality

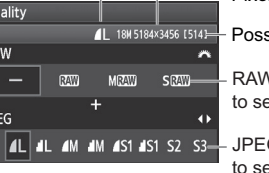

RAW: Turn the <◀▶> dial to select the quality.

JPEG: Press the <▲▼> key to select the quality.

Picture Style


- Select [Q] **Picture Style**.
- Press the <▲▼> key to select the Picture Style, then press <SET>.

Style	Description
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <[N]> (Neutral) and <[F]> (Faithful), see the camera's instruction manual.

Quick Control Screen

- Press the <Q> button.
- The Quick Control screen will appear.

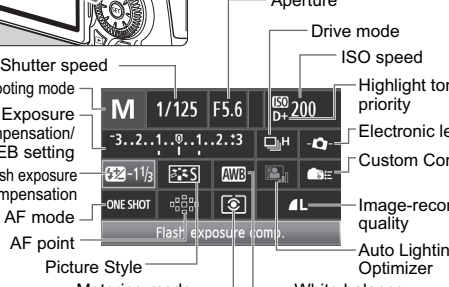

Shutter speed **Aperture** **ISO speed** **Highlight tone priority**

Shooting mode **Drive mode** **Electronic level** **Custom Controls**

Exposure compensation/AEB setting **Image-recording quality** **Auto Lighting Optimizer**

Flash exposure compensation **AF mode** **White balance**

AF point **Metering mode**

- Press the <▲▼> <◀▶> key to select the function, then turn the <◀▶> or <○> dial to set it.
- In Basic Zone modes, the selectable functions may differ depending on the Basic Zone shooting mode.

Electronic Level




- Each time you press the <INFO.> button, the screen display will change.
- Display the electronic level.

Custom Functions

C.Fn I: Exposure		C.Fn III: Autofocus/Drive	
1	Exposure level increments	1	Lens drive when AF impossible
2	ISO speed setting increments	2	AF point selection method
3	ISO expansion	3	Superimposed display
4	Bracketing auto cancel	4	AF-assist beam firing
5	Bracketing sequence	5	Mirror lockup
6	Safety shift	C.Fn IV: Operation/Others	
7	Flash sync. speed in Av mode	1	AF and metering buttons
C.Fn II: Image		2	Assign SET button
1	Long exposure noise reduction	3	Dial direction during Tv/Av
2	High ISO speed noise reduction	4	Focusing Screen
3	Highlight tone priority	5	Add image verification data

Shooting Operation

Nomenclature

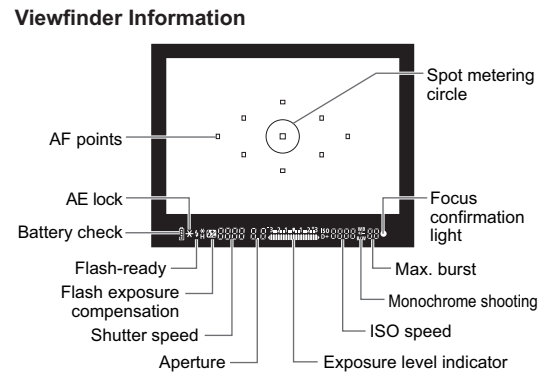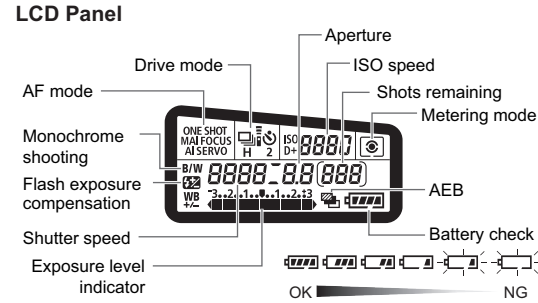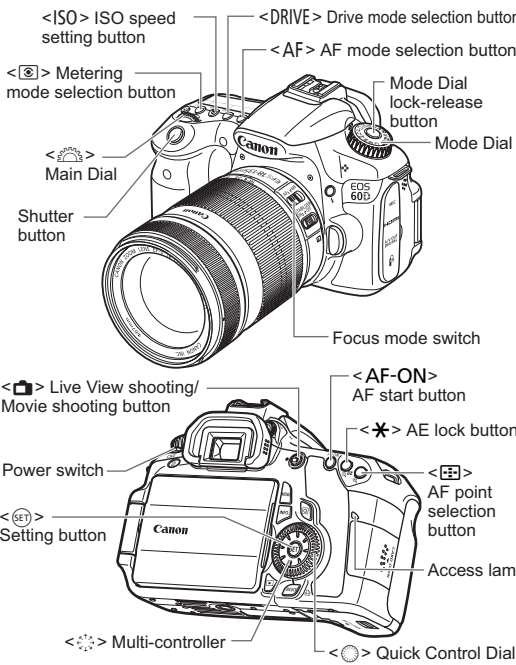

Basic Zone Modes




Pressing the <Q> button will display the Quick Control screen. In the [CA]/[P]/[L]/[S]/[N] shooting mode, press the <▲> key to select the function, then press the <◀▶> key to set it as desired.


Using the Built-in Flash

Basic Zone Modes
If necessary, the built-in flash will pop-up automatically in low-light or backlit conditions (except in the <L> <S> <N> modes).


Creative Zone Modes

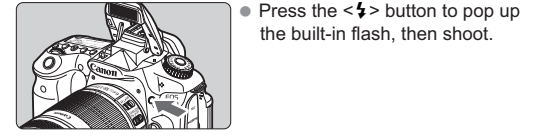


Creative Zone Modes

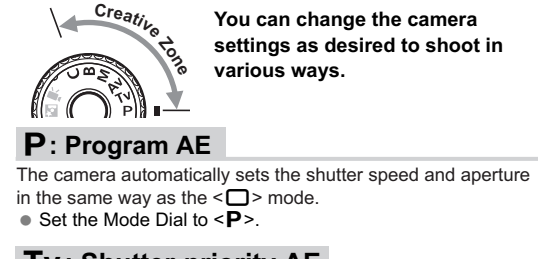


Tv: Shutter-priority AE

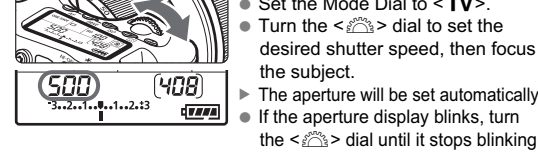


Av: Aperture-priority AE

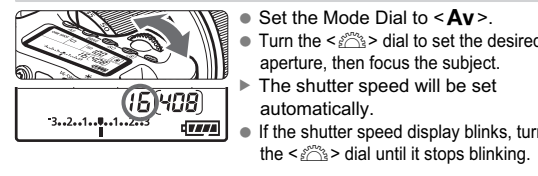

ISO: ISO Speed

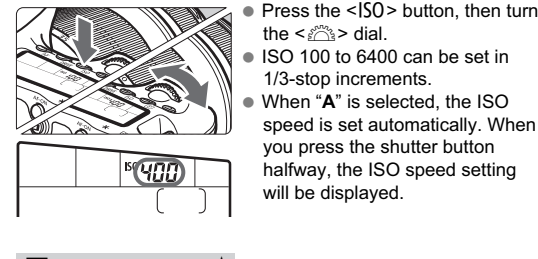


Drive Mode

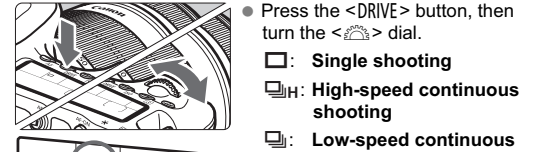


* This drive mode <T2> can be set in all shooting modes.


AF: AF Mode

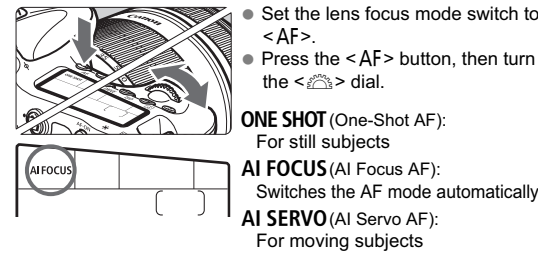

AF Point

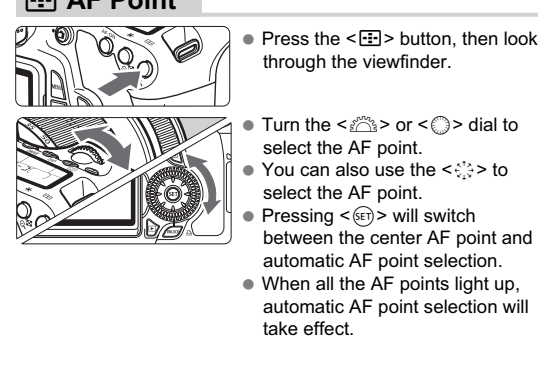

Live View Shooting

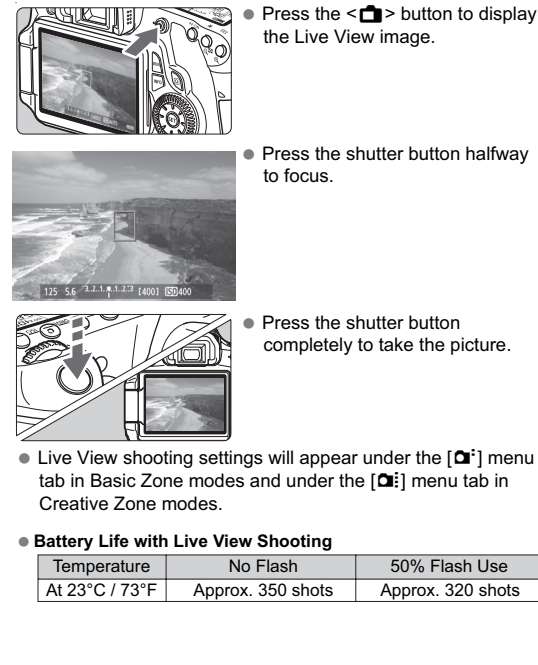

Shooting Movies

