

Register your product and get support at
www.philips.com/welcome


CSP251/00




EN User manual

PHILIPS




1

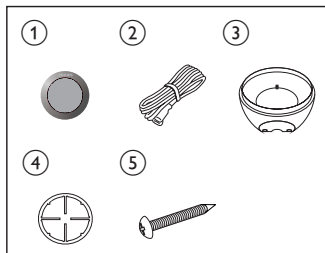


2

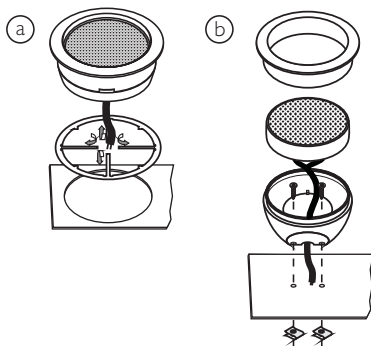

Connection

 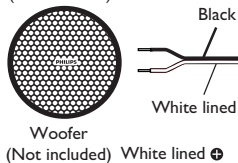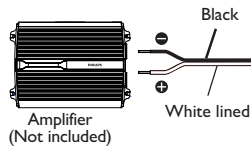

Network (Not included)

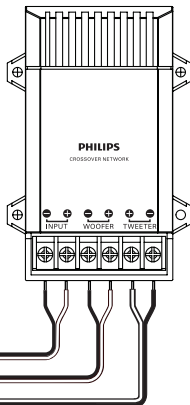

1. What's in the box 1

Check and identify the contents of your package:

- ① Tweeter (with wire) (x2)
- ② Speaker wire (x4)
- ③ Angle adapter (x2)
- ④ Mounting bracket (x4)
- ⑤ Screw

2. Mount the Tweeter 2

Option 1: Flush mounting a

Option 2: Angle mounting b

3. Connect the tweeter to network 3

4. Product information

Model	CSP251
Speaker type	1" (25mm) tweeter
RMS power (Watts)	10W
Peak music power (Watts)	100W (PMPO)
Sensitivity (dB/W/m)	90dB
Frequency response (Hz)	2000-35kHz
Impedance (ohms)	4 ohms

Note: Product information is subject to change without prior notice.



© 2010 Koninklijke Philips Electronics N.V.

All rights reserved.

CSP251_00_UM_V1.0



100% recycled paper
100% papier recyclé