

IMPORTANT SAFETY INSTRUCTIONS

YOUR SAFETY AND THAT OF OTHERS IS PARAMOUNT

This manual and the appliance itself provide important safety warnings, to be read and observed at all times.

 This is the attention symbol, pertaining to safety, which alerts users to potential risks to themselves and others.

All safety warnings are preceded by the attention symbol and the following terms:

DANGER:

Indicates a hazardous situation which, if not avoided, will cause serious injury.

WARNING:

Indicates a hazardous situation which, if not avoided, could cause serious injury.

All safety warnings give specific details of the potential danger/warning present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions:

- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- The appliance must be disconnected from the power supply before carrying out any installation work.
- Earthing of the appliance is compulsory. (Not possible for class II hoods identified by the symbol  on the dataplate).
- The power cable must be long enough for connecting the appliance, once fitted in its housing, to the power supply socket.
- Do not pull the power supply cable in order to unplug the appliance.
- The electrical components must not be accessible to the user after installation.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- The appliance is not intended for use by persons (including children) with any physical, sensory or mental impairment, or without experience and knowledge of the appliance, unless supervised or previously instructed in its use by those responsible for their safety.
- Do not repair or replace any part of the appliance unless specifically indicated in the manual. All other maintenance services must be carried out by a specialised technician.
- Children must be supervised to ensure they do not play with the appliance.
- When drilling through the wall pay attention not to damage electric connections and/or pipes:
- Air vents must always discharge to the outside.
- The manufacturer rejects all responsibilities for any damage caused by improper use or wrong settings.
- Appropriate maintenance and cleaning ensure the good working order and the best performance of the appliance. Regularly clean all stubborn surface dirt to avoid grease build up. Remove and clean or change the filter regularly.
- Never flame cook food (flambé) under the appliance. Using free flames might cause fire.
- Failure to observe the instructions for cleaning the hood and replacing the filters may result in a fire.
- Exhaust air must not be vented through a flue used for removal of fumes produced by gas combustion appliances or other combustible materials, but must have a separate outlet. All national regulations governing extraction of fumes must be observed.
- If the hood is being used at the same time as other appliances using gas or other combustible materials, the negative pressure of the room must not exceed 4 Pa (4x 10⁻⁵ bars). For this reason ensure that the room is well ventilated.
- Do not leave frying pans unattended when frying, as the frying oil may catch fire.
- Before touching the light bulbs, ensure that they are cold.
- Do not use or leave the hood without the light bulb correctly fitted, as this may cause electric shock.
- The hood is not a worktop, therefore do not place any objects on top of it or overload it.
- During all installation and maintenance operations wear appropriate working gloves.
- This appliance is not suitable for outdoor use.
- When the hob is in use, accessible parts of the hood may become hot.

Scrapping of household appliances

- This appliance is manufactured with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. Before scrapping, cut off the power supply cable.
- For further information on the treatment, recovery and recycling of household electrical appliances, contact your competent local authority, the collection service for household waste or the store where you purchased the appliance.

KEEP THIS BOOKLET FOR FUTURE CONSULTATION.

INSTALLATION

After removing the appliance packaging, make sure it has not been damaged during transportation. In the event of problems, contact the dealer or the After-Sales Service. To prevent damage from occurring, only remove the appliance from its polystyrene foam base at the time of installation.

PREPARING FOR INSTALLATION



WARNING:

very heavy product; hood handling and installation must be carried out by at least two persons.

The minimum distance between the support surface of the recipients on the cooking device and the lowest part of the hood must not be less than 45 cm in the case of electric cookers and 65 cm for gas or combination cookers.

Furthermore, before installation, check the distances specified in the hob user manual.

If the installation instructions for the cooker specify a greater distance between cooker and hood, this distance must be observed.

CONNECTION TO THE MAINS POWER SUPPLY

Make sure the power voltage specified on the appliance rating plate is the same as the mains voltage. This is located inside the hood, and can be seen if you remove the grease filter.

The power cable (H05 VV-F type) must only be replaced by qualified personnel. Contact an authorised Service Centre.

If supplied with a plug, connect the appliance to a socket complying with current regulations and located in an accessible area. If it does not have a plug (direct connection to the mains power supply) or if the socket is not in an accessible place, fit a suitable double-pole switch that ensures complete disconnection from the power supply in category III overvoltage conditions, complying with the installation rules.

GENERAL RECOMMENDATIONS

Before use

Remove cardboard protection pieces, protective film and adhesive labels from accessories.

Make sure the appliance has not been damaged during transportation.

During use

Do not place heavy objects on the appliance, as doing so may damage it.

Do not leave the appliance exposed to atmospheric agents.

SAFEGUARDING THE ENVIRONMENT

Disposal of packing

The packing material is 100% recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

Scrapping the product

- This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

TROUBLESHOOTING GUIDE

The appliance does not work:

- Check for the presence of mains electrical power and if the appliance is connected to the electrical supply.
- Turn off the appliance and restart it to see if the fault persists.

The hood's suction level is not sufficient:

- Check the suction speed and adjust as necessary;
- Check that the filters are clean;
- Check the air vents for any obstructions.

The light does not work:

- Check the light bulb and replace if necessary;
- Check that the light bulb has been correctly fitted.

AFTER-SALES SERVICE

Before calling the After-Sales Service:

1. See if you can solve the problem yourself with the help of the suggestions given in the "Troubleshooting guide".
2. Switch the appliance off and back on again it to see if the fault persists.

If after the above checks the fault still occurs, get in touch with the nearest After-Sales Service.

Always specify:

- A brief description of the fault;
- The exact type and model of the appliance;
- The service number (number after the word "Service" on the rating plate), located on the inside of the appliance. The service number is also indicated on the guarantee booklet;
- Your full address;
- Your telephone number.

SERVICE 0000 000 00000



If any repairs are required, please contact an authorised After-sales Service (to guarantee that original spare parts will be used and repairs carried out correctly).

CLEANING



WARNING:

- Never use steam cleaning equipment.
- Disconnect the appliance from the power supply.

IMPORTANT: do not use corrosive or abrasive detergents. If any of these products accidentally comes into contact with the appliance, clean immediately with a damp cloth.

- Clean the surfaces with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Finish off with a dry cloth.

IMPORTANT: do not use abrasive sponges or metallic scrapers or scourers. Over time, these can ruin the enamel surface.

- Use detergents specifically designed for cleaning the appliance and follow the manufacturer instructions.

IMPORTANT: clean the filters at least monthly to remove any oil or grease residuals.

MAINTENANCE



CAUTION:

 
- Use safety gloves.
- Disconnect the appliance from the mains power supply.

GREASE FILTERS

Metal grease filters have an unlimited life and should be washed once a month either by hand or in a dishwasher at a low temperature and with a short cycle. Washing in a dishwasher can cause grease filters to turn white, but this in no way affects efficiency.

Pull out the handle to remove the filter.


Wash the filter and leave it to dry, proceeding in reverse order to refit it.

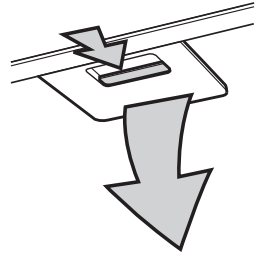

REPLACING THE HALOGEN BULBS

IMPORTANT: Replace using 20W max G4 halogen bulbs only.

 1. Disconnect the hood from the mains power supply.
2. Use a small screwdriver to gently prise (at the three points indicated) the lamp cover off.
3. Remove the burnt-out lamp and fit a new one.
4. Replace the lamp cover so that it clicks into position.

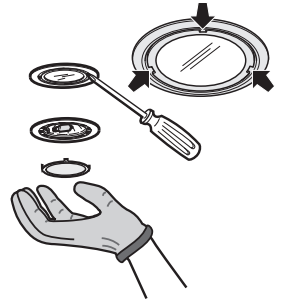

CARBON FILTER (filter hoods only)

 
Retains any unpleasant odours produced during cooking.

Fit a new carbon filter every 4 months

Fitting or replacing the carbon filter

1. Remove the grease filter (refer to the section "grease filters").
2. Place the carbon filter on the grease filter.
3. Clamp the carbon filter with the metal catches provided, to be inserted in the holes on the frame.
4. Reinsert the grease filter complete with carbon filter.

Reverse the above procedure to refit the filter holder and grease filter.

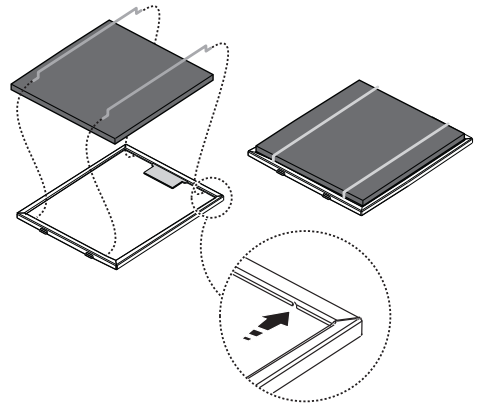

MATERIAL SUPPLIED

Remove all components from the packets. Check that all components are included.

- Hood assembled with motor and lamps installed.
- Air outlet protection
- Support bracket
- Assembly template
- Filter/s
- Instruction manual
- 1 adapter Torx T10
- 1 adapter Torx T20
- 1 Washer
- 3 plugs 8 x 40 mm
- 3 screws 5 x 45 mm
- 2 screws 3.5 x 9.5 mm
- 2 Screws M5 x 18

INSTALLATION - PRELIMINARY ASSEMBLY INSTRUCTIONS

The hood is designed for installation and use as an "Extractor Version" or a "Filter Version".

Extractor Version

IMPORTANT: If you want to use the hood as an "Extractor Version", you will need to purchase the flue kit; this must be ordered and fitted prior to use.

Fumes are extracted and expelled outside via an exhaust pipe (not supplied) fixed to the hood exhaust pipe outlet connector. Depending on the exhaust pipe purchased, make provisions for suitable fixing to the exhaust pipe outlet connector.

IMPORTANT: If already installed, remove the carbon filter/s.

Filter Version

Air is filtered through the carbon filter/s and recirculated into the surrounding environment.

 
IMPORTANT: Check that air recirculation is facilitated.

If the hood does not have a carbon filter/s, order one/them and fit it/them before use.

Install the hood well away from very dirty locations, windows, doors and sources of heat.

The hood comes supplied with all the materials required for installation on most walls/ceilings. However, a qualified technician is required to ensure that the materials are suitable for your ceiling.

INSTALLATION DIMENSIONS

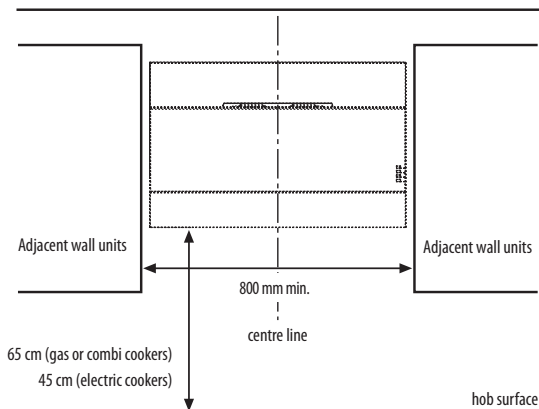

INSTALLATION - ASSEMBLY INSTRUCTIONS

The instructions below, to be carried out in the order in which they are numbered, refer to the drawings (using the same numbering) on the last pages of this manual.

1. Mark a vertical centre line on the wall.
2. Apply the drilling diagram to the wall (secure it using adhesive tape): the vertical centre line printed on the drilling diagram must be aligned with the centre line drawn on the wall, and the lower edge of the drilling diagram must be aligned with the lower edge of the hood.

IMPORTANT: The bottom edge of the drilling diagram must be at a distance of at least 45 cm (for electric hobs) or 65 cm (for gas hobs).

3. Make 3 holes as shown in the drawing and remove the drilling diagram.

In extractor mode only, with REAR AIR OUTLET:

4. Make a hole in the wall ($\varnothing$ 16 cm) for the pipe, as shown in the drilling diagram.
5. Fix the 2 support hooks near the upper holes with 2 plugs and 2 screws, and insert 1 plug in the lower hole.

For filter mode only:

6. Leave the plastic grille on the upper part.

For extractor mode only:

7. Remove the upper plastic grille by loosening the 2 screws.

In extractor mode only, with UPPER AIR OUTLET:

8. Fix the collar with 2 screws.

In extractor mode only, with REAR AIR OUTLET:

9. Release and remove the hooking brackets.
10. Release the motor by loosening the 8 screws (10.1); turn it by 180° (10.2).
Place it back in the relevant slot (10.3) and fix it in place using the 8 screws removed previously (10.4). Fix the collar to the rear air outlet using 2 screws (10.5).
11. Re-fit the hooking brackets, adjust them for wall mounting, re-tighten the screws.
12. Hook the hood onto the support hooks previously fixed to the wall.
13. Tighten the 2 adjustment screws.
14. Adjust the hood horizontally using a level and the two adjustment screws.
15. Adjust the distance between the hood and the wall.
16. Open the perimeter hood panel and remove the grease filter.
17. Secure the hood to the wall with 1 screw and 1 washer.

In extractor mode only, with UPPER AIR OUTLET:

18. Connect the fume exhaust pipe to the collar.
19. Connect the power cable to the hood socket.
20. Secure the cable to the cable clamp.

 
For filter mode only:

21. Fit the carbon filter onto the back of the grease filter, hooking it with the two rods.
22. Fit the grease filter and close the front panel.

IMPORTANT: Do not damage the electrical connections when rotating the motor.

DESCRIPTION AND USE OF HOOD

1. Control panel.
2. Grease filter.
3. Halogen lamps.
4. Front panel.
5. LEDSTRIP.

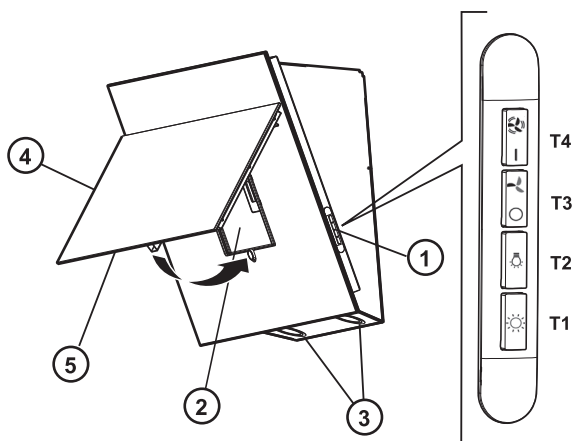

Control Panel

This hood has an ambient light function, coloured using the LEDSTRIP.

To activate this function, press button T1.

The LEDSTRIP control consists of a system which utilises RGB LEDs.

T1. LEDSTRIP control

Press button T1 to enable automatic LEDSTRIP activation, which entails cyclical changes in the lighting colour.

Press T1 again to stop the automatic lighting cycle; then a colour can be selected as desired by briefly pressing it.

Press and hold the button to switch off the LEDSTRIP at any time.

T2. Lights ON/OFF

The T2 button switches the hob light on and off.

T3. Motor OFF – Reduce speed

Press the T3 button while the hood is running to reduce the motor speed; it will eventually come to a stop.

Press and hold the button (at any speed) to switch off the motor.

T4. Motor ON – Select speed

The hood has 3 speed levels, plus an extra intensive timed speed.

Press T4 to activate the hood fan at speed level 1.

Every time it is pressed, the motor speed is increased until the maximum speed level has been reached.

The maximum (or intensive) speed level runs for 5 minutes, after which the hood reverts to the third speed level. The T4 button flashes during this intensive phase.

IMPORTANT: Condensation may form on the front surface of the hood when cooking food with the hob switched on. In this case, clean the surface of the hood with a damp cloth after cooking.