 



Tefal[®]

MAESTRO











 
EN
ZH

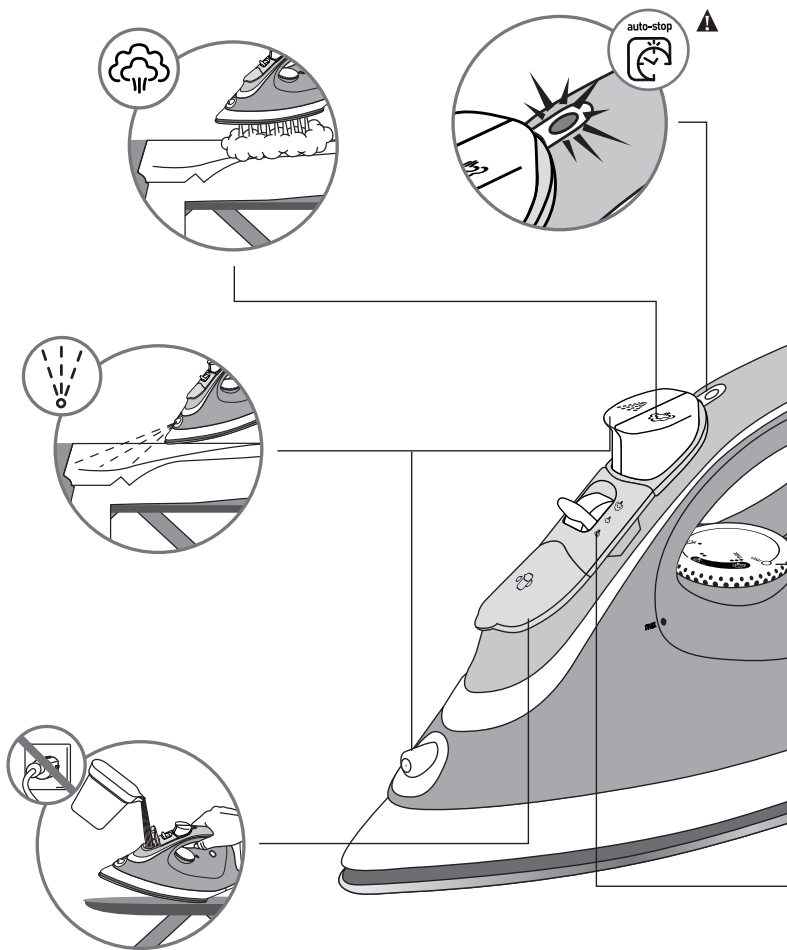





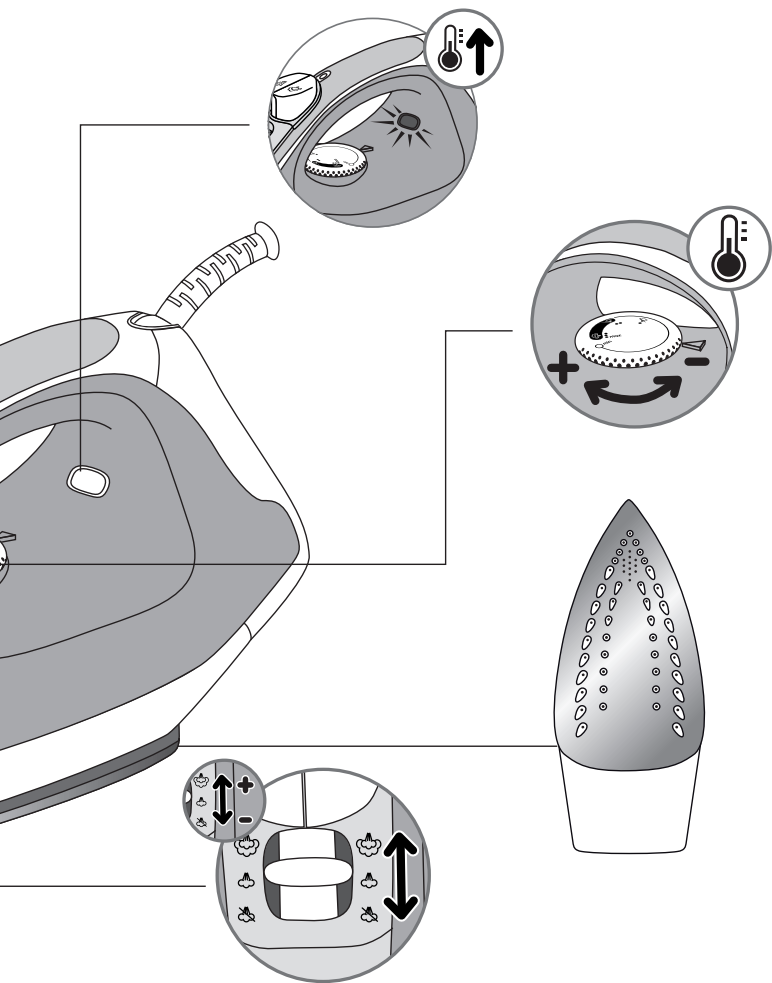

      
 
 
 
 
 
1. First use*

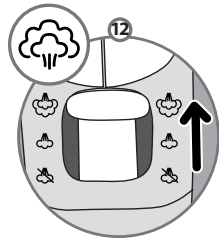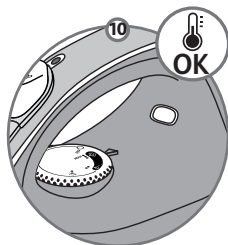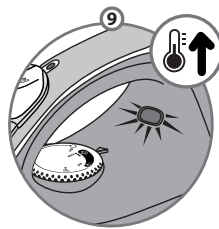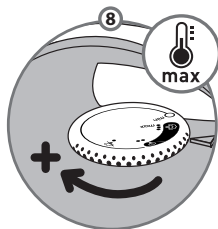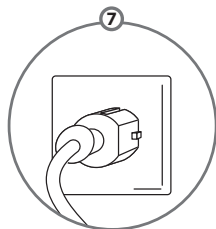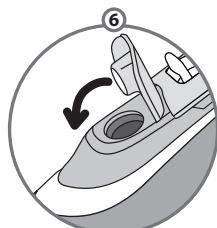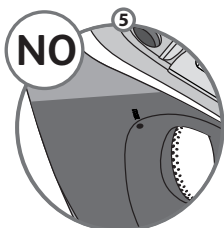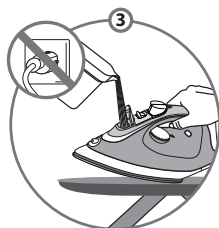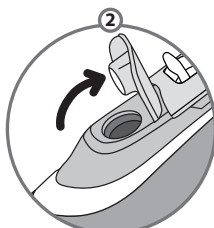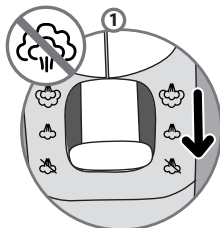

  1. First use*

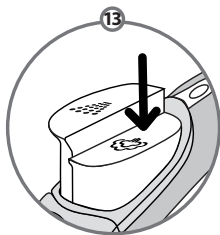
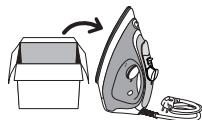


      2. Water tank filling*

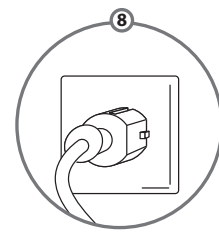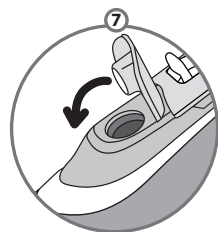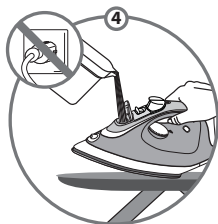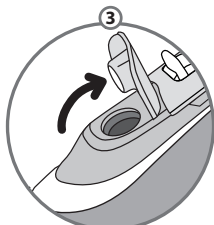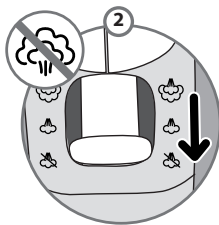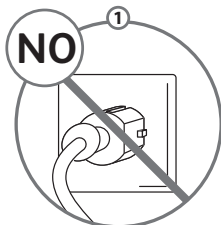



  3.1. Temperature setting*


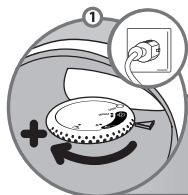
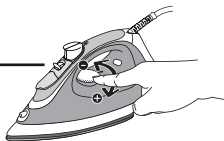


min •

• •

• • •

  
 
max

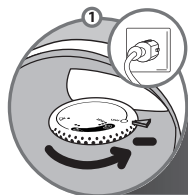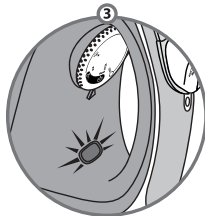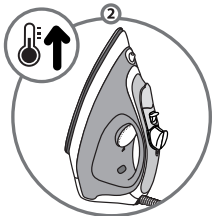

max • • •

• •


 
 
• min

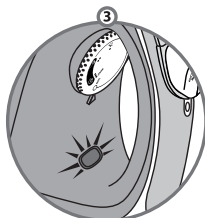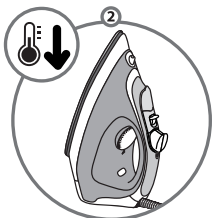

EN It is normal for the indicator light to switch on and off during ironing.
ZH 指示灯在熨烫过程中时亮时灭，属于正常现象。



   3.2. Steam setting*

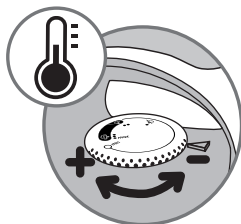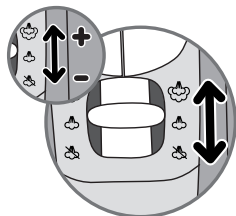

min • • • max



 
 
 
• • • • max



• • • • max





4. Extra steam*

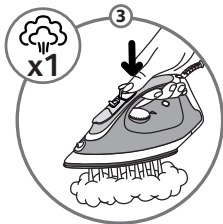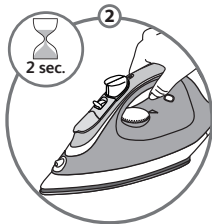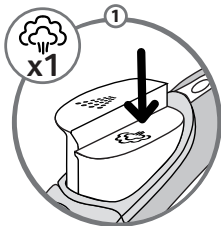

*ZH 强蒸汽









  5. Spray*

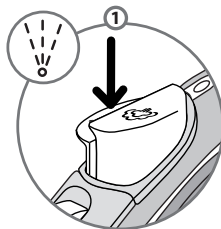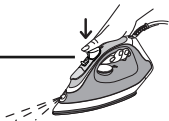








*ZH 喷水

      6. Vertical steam*






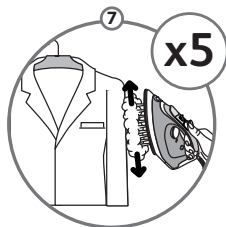
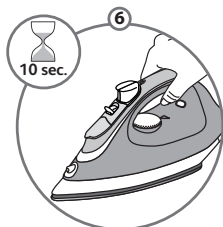
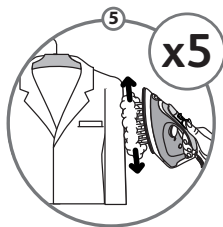
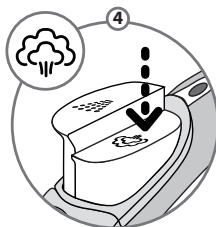
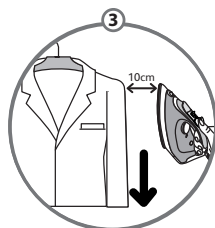
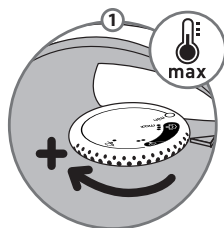


*ZH 立体垂直熨烫

       
7. Iron storage*

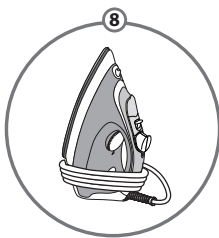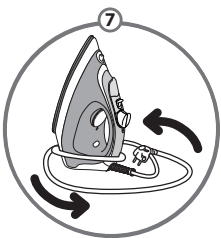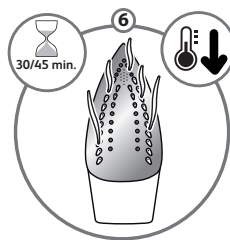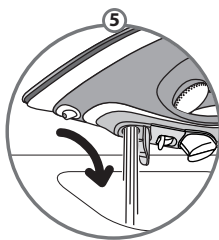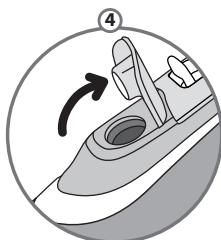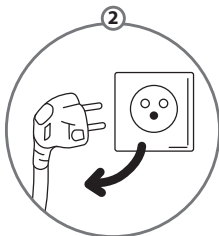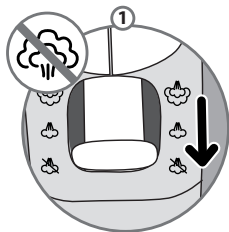

           8. Anti-calc valve cleaning (once a month)*

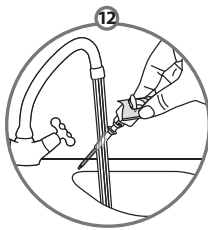
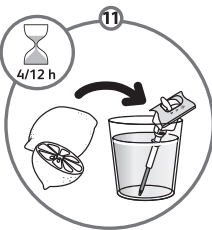
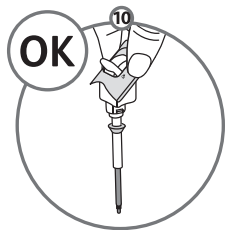
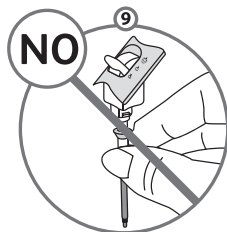
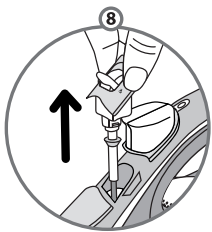
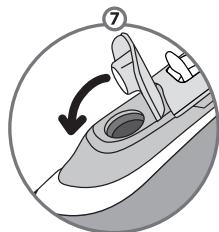
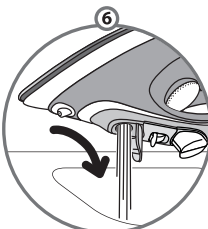
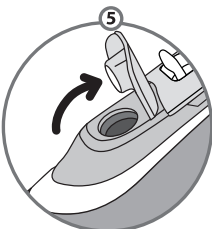
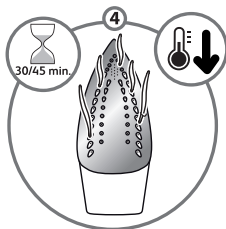
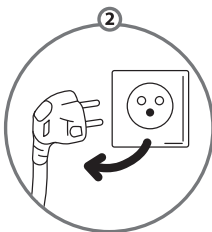
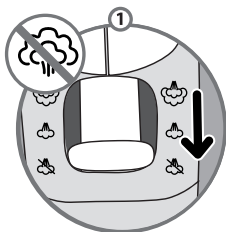


 8. Anti-calc valve cleaning (once a month)*





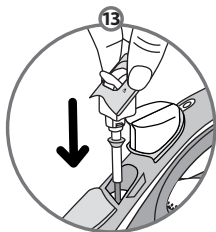


*ZH 清洗防钙阀门（每月一次）

           9. Self-cleaning (once a month)*

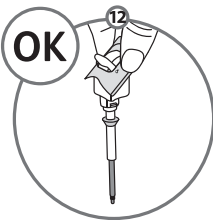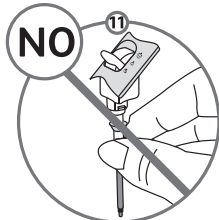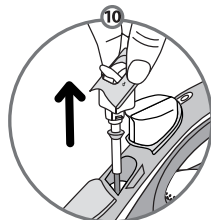
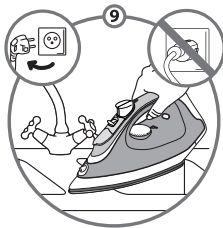
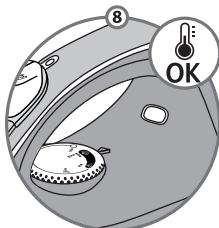
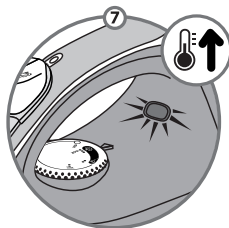
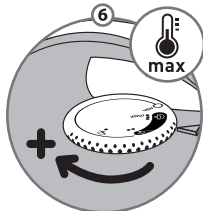
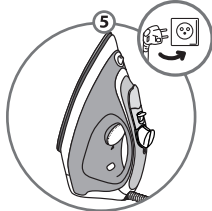
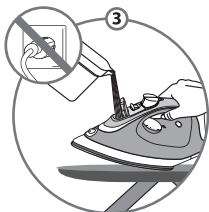
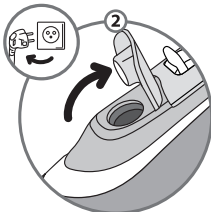
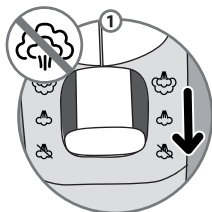


     9. Self-cleaning (once a month)*

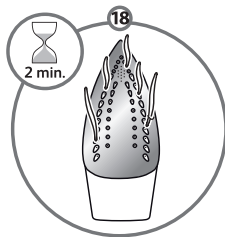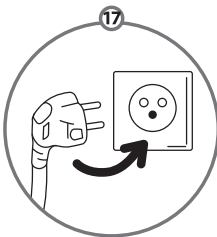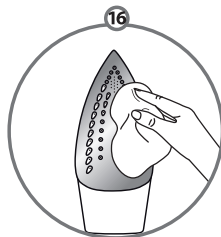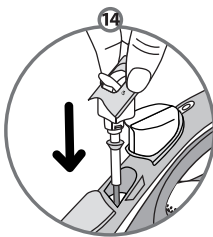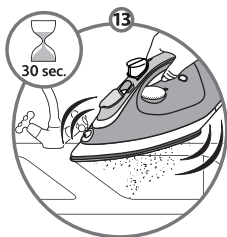

*ZH 自动清洗（每月一次）

         10. Soleplate cleaning*

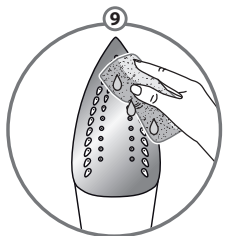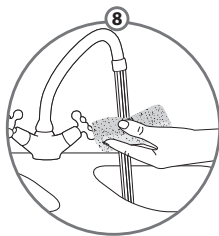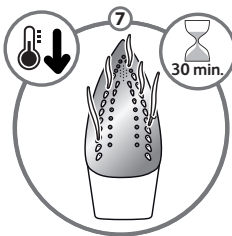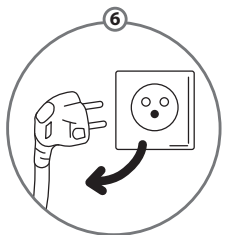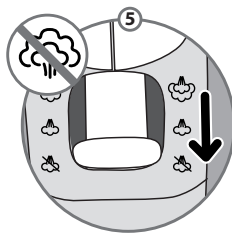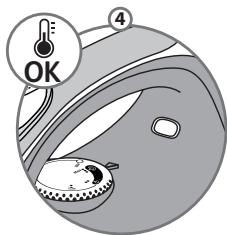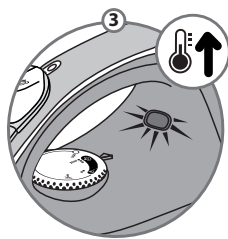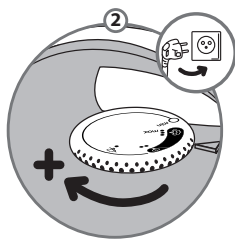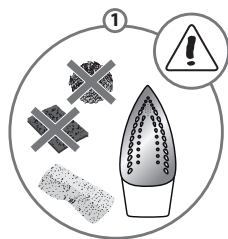

Important safety recommendations

- Please read these instructions carefully before first use. This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- Never unplug the appliance by pulling the power cord. Always unplug your appliance: before filling the water tank or rinsing the water tank, before cleaning the appliance, after each use.
- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the iron on the iron rest, make sure that the surface on which you place it is stable.
- This appliance is not intended to be used by persons (including children) with reduced or impaired physical, sensory or mental capacities or persons lacking appropriate knowledge or experience, unless a person responsible for their safety provides either supervision or appropriate instructions concerning use of the appliance prior to its use.
- Children should be supervised to ensure they do not play with the appliance.

- This appliance may be used by children aged 8 or over and persons lacking appropriate knowledge or experience or persons with reduced or impaired physical, sensory or mental capacities provided that they have been thoroughly instructed regarding use of the appliance, are supervised, and understand the risks involved. Children must not be allowed to play with the appliance. Cleaning and maintenance must not be carried out by children unless they are aged 8 or over and are supervised. Keep the appliance and power cord out of the reach of children under 8 years of age.
- The surfaces of your appliance can reach very high temperatures when functioning, which may cause burns. Do not touch the hot surfaces of the appliance (accessible metal parts and plastic parts adjacent to the metallic parts).
- Never leave the appliance unattended :
 - when it is connected to the mains,
 - until it has cooled down (around 1 hour).
- The appliance must not be used if it has been dropped, if it has any visible damage, if it leaks, or if it functions abnormally in any way. Do not attempt to dismantle your appliance: have it examined at an Approved Service Centre to avoid any danger.
- Check the electrical power for sign of wear or damage prior to use. If the electrical power cord is damaged, it must be replaced at an Approved Service Centre to avoid any danger.

- For your safety, this appliance conforms to all applicable regulations (Low Voltage Directive, Electromagnetic Compatibility, Environment, etc).
- Your steam iron is an electrical appliance: it must be used under normal conditions of use. It is designed for domestic use only.
- Always plug your steam iron:
 - into a mains circuit with voltage between 220 V and 240 V,
 - into an earthed electrical socket.
 Connecting to the wrong voltage may cause irreparable damage to the appliance and will invalidate your guarantee. If you are using a mains extension lead, ensure that it is correctly rated (16A) with an earth, and is fully extended.
- Completely unwind the power cord before plugging into an earthed socket.
- The soleplate of your iron can reach extremely high temperatures, and can cause burns: do not touch them. Never touch the electrical power cords with the soleplate of the iron.
- Your appliance emits steam, which can cause burns. Always handle the iron with care, especially when ironing vertically. Never direct the steam towards people or animals.
- Never immerse your steam iron in water or any other liquid. Never place it under a running tap.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.

PLEASE RETAIN THIS INSTRUCTION BOOKLET FOR FUTURE REFERENCE

Environment protection first !



- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➡ Leave it at a local civic waste collection point.

What water to use?

Your appliance has been designed to function with untreated tap water. However, it is necessary to operate the Self-Clean function regularly in order to eliminate hard water deposits from the steam chamber.

If your water is very hard (check with your local water authority), it is possible to mix untreated tap water with store-bought distilled or demineralised water in the following proportions :

- 50 % untreated tap water, - 50 % distilled or demineralised water.

Types of water not to use?

Heat concentrates the elements contained in water during evaporation. The types of water listed below contain organic waste or mineral elements that can cause spitting, brown staining, or premature wear of the appliance : water from clothes dryers, scented or softened water, water from refrigerators, batteries or air conditioners, pure distilled or demineralised water or rain water should not be used in your Tefal iron. Also do not use boiled, filtered or bottled water.

If there is a problem?

PROBLEM	POSSIBLE CAUSE	SOLUTION
Water drips from the holes in the soleplate.	The chosen temperature is too low and does not allow for the formation of steam.	Position the thermostat in the steam range (from ●● to MAX).
	You are using steam while the iron is not hot enough.	Wait until the thermostat light goes out.
	You are using the Shot of Steam button too often.	Wait a few seconds between each use of the button.
	There is too much steam.	Reduce the steam.
	You have stored the iron horizontally, without emptying it and without setting it to ☁.	See the section "Storing your iron".
The iron drips when you start ironing.	You have removed the anti-scale rod to fill your iron.	Do not extract the anticalc valve when filling the iron.
Brown streaks come through the holes in the soleplate and stain the linen.	You are using chemical descaling agents.	Do not add any descaling agents to the water in the water tank.
	You are not using the right type of water.	Perform a self-cleaning operation and consult the chapter "What water should I use?".
	Fabric fibres have accumulated in the holes of the soleplate and are burning.	Perform the self-cleaning operation and clean the soleplate with a damp sponge. Vacuum the holes of the soleplate from time to time.
	Your linen has not been rinsed sufficiently or you have ironed a new garment before washing it.	Make sure that your laundry is rinsed sufficiently so as to remove any deposits of soap or chemical products on new clothes.
The soleplate is dirty or brown and can stain the linen.	You are ironing with an inappropriate program (temperature too high).	Clean the soleplate as indicated above. Select the appropriate program.
	You are using starch.	Clean the soleplate as indicated above. Always spray starch onto the reverse side of the fabric to be ironed.
There is little or no steam.	The water tank is empty.	Fill it.
	The anti-calc valve is dirty.	Clean the anti-calc valve.
	Your iron has a build-up of scale.	Clean the anti-calc valve and carry out a self-clean.
	Your iron has been used dry for too long.	Carry out a self-clean.
The soleplate is scratched or damaged.	You have placed your iron flat on a metallic rest-plate or ironed over a zip.	Always set your iron on its heel. Do not iron over zips.
Steam or water come from the iron as you finish filling the tank.	The steam control is not set to the ☁ position.	Check that the steam control is set to the ☁ position.
	The water tank is overfilled.	Never exceed the Max level.
The spray does not spray.	The water tank is not filled enough.	Fill up the water tank.

If you have any problem or queries, please contact
www.tefal.com

TEFAL / T-FAL* INTERNATIONAL LIMITED GUARANTEE

 : www.tefal.com

*This product is **repairable** by TEFAL / T-FAL, during and after the **guarantee** period.*

The Guarantee

This product is guaranteed by TEFAL / T-FAL (company address and details included in the country list of the TEFAL / T-FAL International Guarantee) against any manufacturing defect in materials or workmanship during the guarantee period within those countries as stated in the Country List on the last page of the user manual, starting from the initial date of purchase.

The international manufacturer's guarantee by TEFAL / T-FAL is an extra benefit which does not affect consumer's Statutory Rights.

The international manufacturer's guarantee covers all costs related to restoring the proven defective product so that it conforms to its original specifications, through the repair or replacement of any defective part and the necessary labour. At TEFAL / T-FAL's choice, a replacement product may be provided instead of repairing a defective product. TEFAL / T-FAL's sole obligation and your exclusive resolution under this guarantee are limited to such repair or replacement.

Conditions & Exclusions

The international TEFAL / T-FAL guarantee only applies within the guarantee period and for those countries listed in the Country List attached and is valid only on presentation of a proof of purchase. The product can be taken directly in person to an authorised service centre or must be adequately packaged and returned, by recorded delivery (or equivalent method of postage), to a TEFAL / T-FAL authorised service centre. Full address details for each country's authorised service centres are listed on TEFAL / T-FAL website (www.tefal.com) or by calling the appropriate telephone number as set out in the Country List to request the appropriate postal address.

TEFAL / T-FAL shall not be obliged to repair or replace any product which is not accompanied by a valid proof of purchase.

This guarantee will not cover any damage which could occur as a result of misuse, negligence, failure to follow TEFAL / T-FAL instructions, use on current or voltage other than as stamped on the product, or a modification or unauthorised repair of the product. It also does not cover normal wear and tear, maintenance or replacement of consumable parts, or the following:

- using the wrong type of water or consumable,
- scaling (any de-scaling must be carried out according to the instructions for use),
- ingress of water, dust or insects into the product,
- mechanical damages, overloading,
- damages or bad results due to wrong voltage or frequency,
- accidents including fire, flood, thunderbolt, etc.
- professional or commercial use,
- damage to any glass or porcelain ware in the product,
- replacement of consumables.

This guarantee does not apply to any product that has been tampered with, or to damages incurred through improper use and care, faulty packaging by the owner or mishandling by any carrier.

The international TEFAL / T-FAL guarantee applies only for products purchased in one of the countries listed, **and** used for domestic purposes only in one of the countries listed on the Country List. Where a product purchased in one listed country and then used in another listed country:

- a) The international TEFAL / T-FAL guarantee duration is the one in the country of usage of the product, even if the product was purchased in another listed country with different guarantee duration.
- b) The international TEFAL / T-FAL guarantee does not apply in case of non conformity of the purchased product with the local standards, such as voltage, frequency, power plugs, or other local technical specifications.

- c) The repair process for products purchased outside the country of use may require a longer time if the product is not locally sold by TEFAL / T-FAL.
- d) In cases where the product is not repairable in the new country, the international TEFAL / T-FAL guarantee is limited to a replacement by a similar product or an alternative product at similar cost, where possible.

Consumer Statutory Rights

This international TEFAL / T-FAL guarantee does not affect the statutory rights a consumer may have or those rights that cannot be excluded or limited, nor rights against the retailer from which the consumer purchased the product. This guarantee gives a consumer specific legal rights, and the consumer may also have other legal rights which vary from State to State or Country to Country. The consumer may assert any such rights at his sole discretion.

Additional information

Accessories, consumables and end-user replaceable parts can be purchased, if locally available, as described on the TEFAL / T-FAL internet site.

** TEFAL household appliances appear under the T-FAL brand in some territories like America and Japan. TEFAL/T-FAL are registered trademarks of Groupe SEB.*

为了您的安全

- 本产品符合现行安全技术规范和标准（电磁兼容性、低电压、环境）。
- 本产品不适宜儿童使用，亦不适宜其他有生理、智力残疾人士在无人协助或监督的情况下使用。应确保儿童不随意玩耍本产品。
- 警告！接电电压必须与熨斗电压（220V-240V）相符。连接至错误的电压将造成熨斗损坏，且不在保修范围内。
- 熨斗必须插在已接地的插座上。如使用延长线，必须确保其为正确的安培数（10A），并已接地。
- 如电源线损坏，必须立即由认可的客户服务中心进行更换，以避免可能造成的危险。
- 如熨斗跌落，明显破损、渗漏或出现功能故障则不可使用。切勿自行拆开机器，应由认可的客户服务中心进行检修，以避免可能造成的危险。
- 切勿将熨斗浸泡在水中！
- 切勿以拉拽电源线的方式切断电源。在每次注水、倒水、清洗水箱前和使用后，请断开电源。
- 当熨斗在接通电源时或尚未冷却完毕的一小时之内，切勿将其置于无人监管状态。
- 本产品释放的蒸汽可能会造成烫伤，特别是烫烫至烫烫板边缘时。切勿将蒸汽直接对着人或动物。
- 熨斗必须使用和放置于稳固的表面上。当熨斗被放置于支架上时，应确保其表面平稳。
- 本产品设计仅供家庭使用，任何不适当使用或因不符合本使用说明而引起的故障，本公司概不负责，且不在保修范围内。

可使用的水？

您的熨斗可直接使用未经处理的自来水，但必须定期使用自动清洗功能以清除蒸气室内的污物和水垢。如果当地的水质较硬（与当地水资源管理机构确认）请将水与蒸馏水或去除矿物质的水按如下比例配制使用：50% 未经处理的自来水；50% 蒸馏水或除去矿物质的水。

不可使用的水？

热力令水蒸发时，会把水中的物质浓缩。下列含有有机杂质或矿物质元素的水会导致滴漏、棕色污点或令熨斗提前损耗：干衣机的水、加入香剂的水、软化水、冰箱剩水、电池液、空调排水、蒸馏水、经过滤的水或雨水，不可使用以上列出的水。

环境



环保第一！

- ① 您所使用的机器含有多种可循环利用的材质。
- ② 请将废旧机器送至专门的废旧物品回收中心。

疑难问题处理

问题	可能造成的原因	解决方法
水从底板的蒸汽孔中流出	设定温度过低，不能形成有效蒸汽	将温度调节旋钮设定于蒸汽区域（从“**”到“最大MAX”）
	使用蒸汽效果时，熨斗未达到足够温度	待指示灯熄灭
	使用蒸汽喷射按钮频率过高。 蒸汽流量太高	每次按钮间应暂停数秒 减少蒸汽流量
	储藏熨斗时水平放置，水箱未倒空。 蒸汽控制滑键未设定于 $\odot$.0. $\odot$ 位置	参见“储藏熨斗”部分
从蒸汽孔渗漏出褐色斑点污物并弄脏衣物	使用了化学除垢剂	不要在水箱的水中注入任何除垢剂
	没有使用合适的水	使用自动清洗功能，参见“使用怎样的水”部分
	织物纤维残留于底板蒸汽孔中并被烧焦	使用自动清洗功能，并用湿海绵清洗底板。 时常用吸尘器清洁底板上的蒸汽孔
	织物未彻底洗净或未洗过新衣物	确保衣物彻底清洗，以去除肥皂或化学品残留。
底板变脏或发黄，弄脏衣物	使用了不适当的程序（温度设定过高）	如上指示清洁底板选择合适的程序
	使用熨衣服浆粉的方式错误	如上指示清洁底板将浆粉喷在熨烫衣物的背面
无蒸汽或蒸汽量少	水箱无水	注水于水箱
	防垢阀门脏	清洁防垢阀门
	熨斗积聚了水垢	清洁防垢阀门并进行自动清洗
	干式熨烫方式使用时间太久	进行自动清洗
底板刮花或损坏	熨斗被水平放置于金属物体的表面或熨烫过程中碰到拉链	将熨斗竖直放置
当水箱注满水时，蒸汽或水从熨斗冒出	蒸汽控制滑键未设定于 $\odot$.0. $\odot$ 位置	确认蒸汽控制滑键设定于 $\odot$.0. $\odot$ 位置
	水箱注水过多	水位不能超过“MAX”位置
不能喷水	水箱水量不够	注水于水箱
使用熨斗时出现滴漏	拔出防钙阀门后注水。	注水时请不要拔出防钙阀门。

如有其他任何疑问或咨询，请联系我们的客户服务中心，
获取相关协助和建议。

TEFAL / T-FAL* 國際有限保用證

: www.tefal.com

在保用期內及後，TEFAL / T-FAL 會為您提供產品的維修服務。

保用證

TEFAL/T-FAL (TEFAL/T-FAL國際保用證中的國家列表所列的公司地址詳細資料) 根據使用手冊中最後一頁的國家列表中所載之國家，在保用期內（由購買日起計）提供任何材料或工藝缺陷的保用。

TEFAL/T-FAL的國際生產商保用證是一項額外權益，並不影響消費者的法定權利。生產商國際保用證涵蓋與已證明缺陷產品維修（恢復產品的本來規）相關的所有費用，包括維修或更換任何缺陷零件以及必要的人力。TEFAL/T-FAL有權選擇更換產品而不維修缺陷產品。本保用證下TEFAL/T-FAL的唯一責任及您的專享解決方法只限於更換零件或維修產品。

條款及免責

TEFAL/T-FAL國際保用證只適用於保用期內的產品以及隨附的國家列表中所載之國家，並必須出示購買證明方為有效。產品可直接送交TEFAL/T-FAL授權的售後服務中心，或必須妥善包裝並以掛號形式（或其他同等郵遞方式）送交至經TEFAL/T-FAL授權的售後服務中心。各國獲授權的售後服務中心之詳細地址請見TEFAL/T-FAL網址 (www.tefal.com)，或可致電國家列表中的相關電話查詢郵寄地址。

TEFAL/T-FAL不會維修或更換未能出示有效購買證明的產品。

本保用證不包括任何因錯誤使用、疏忽、未有遵從TEFAL/T-FAL使用說明、使用非產品規定的電壓或電流、或更改或未經授權而維修產品的損毀。保用證亦不包括正常的磨、耗材的維修或更換，及以下情況：

- 使用不適當的水，
- 生銹（如需去銹，必須根據使用說明進行），
- 產品內入水、灰塵或昆蟲，
- 機件故障負荷過重，
- 由電壓過大或頻率錯誤引起的損壞或不良結果，
- 火災、水災及電擊等意外，
- 專業或商業用途，
- 產品上任何玻璃或瓷器的損壞。

本保用證不適用於任何經胡亂改裝的部份，或由於使用不當及疏忽、持有人的包裝不當或運送途中的處理不當所引起的損壞。

TEFAL/T-FAL國際保用證只適用於列舉國家中購買，並且於國家列表所載的國家中只用於住宅用途的產品。倘產品購自其中一個列舉國而在另一列舉國家使用：

- a) 儘管產品的購買國家有不同保用證，TEFAL/T-FAL國際保用證的限期仍需按產品使用國家的規定。

- b) TEFAL/T-FAL國際保用證不適用於所購買的產品不符合當地標準，例如電壓、頻率、電源插頭和其他地方技術的規定。
- c) 倘產品不是購自當地的TEFAL/T-FAL，在使用地以外所買的產品則需要較長的維修時間。
- d) 在新的國家中產品不能修復， TEFAL/T-FAL國際保用證只限於更換同類產品或類似價錢的其他產品(如適用)。

消費者法定權利

TEFAL/T-FAL國際保用證並不影響消費者的法定權益，這些權利不排除也不局限於產品銷售商。本保用證給予消費者特定合法權益，而消費者於不同州或國家或會享有其他合法權益。消費者可根據個人判斷維護任何有關權利。

補充資料

產品的附件、耗材和更換零件可於當地購買（如有售），詳細請瀏覽TEFAL/T-FAL網站。

*TEFAL/T-FAL 為SEB集團的註冊商標。

