



5KEK1722



KitchenAid







English	5
Deutsch	0
Français	0
Italiano	0
Nederlands	0
Español	0
Português	0
Ελληνικά	0
Svenska	0
Norsk	0
Suomi	0
Dansk	0
Íslenska	0
Русский	0
Polski	0
Český	0
العربية	0





WATER KETTLE INSTRUCTIONS

TABLE OF CONTENTS

English

WATER KETTLE SAFETY

Important safeguards	6
Electrical requirements	7
Electrical equipment waste disposal	7
Battery activation (optional)	8

PARTS AND FEATURES

8

USING THE WATER KETTLE

First use	9
Filling the Water Kettle	9
Heating water	10
Temperature guide	11
Using the Hold Temperature mode	11
Turning off the Water Kettle	12

CARE AND CLEANING

Cleaning the exterior	12
Cleaning the filter	13
Descaling the Water Kettle	13

WARRANTY AND SERVICE

KitchenAid Water Kettle warranty	14
Customer service	14

WATER KETTLE SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.



WATER KETTLE SAFETY

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles.
3. To protect against fire, electrical shock and injury to persons do not immerse base, cord, plug, or Water Kettle in water or other liquids.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Unplug Water Kettle from outlet and allow to cool before cleaning or removing parts.
6. Do not operate Water Kettle with a damaged cord, plug, or other malfunction. See "Warranty and Service" section.
7. Use of replacement parts not recommended by manufacturer may result in fire, shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over counter or table edges, or allow to come into contact with heated surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. The Water Kettle should only be used to heat water.
12. Do not use Water Kettle without lid properly closed.
13. Do not use Water Kettle with loose or weakened handle.
14. Do not use the appliance for other than intended use.
15. Do not clean Water Kettle with abrasive cleaners, steel wool, or other abrasive materials.
16. Do not overfill Water Kettle.
17. **This product is designed for indoor household use only. Not designed for commercial use.**

SAVE THESE INSTRUCTIONS





WATER KETTLE SAFETY

Electrical requirements

WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 Volts

Frequency: 50/60 Hertz

Wattage: 2400 Watts for model 5KEK1722E
(kettle with European plug)

3000 Watts for model 5KEK1722B
(kettle with British plug)

NOTE: If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard. Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

English

Electrical equipment waste disposal

Disposal of packing material

The packing material is 100% recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

Scrapping the product

- This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment

and human health, which could otherwise be caused by inappropriate waste handling of this product.

 
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



WATER KETTLE SAFETY


Battery activation (optional)

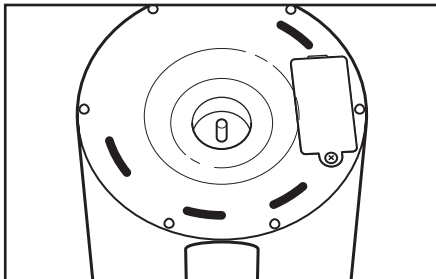

I To provide power to the display when the Water Kettle is not on the base, insert 2 AA batteries (not included) in the battery housing on the underside of the kettle.

NOTE: If batteries have been added and the Water Kettle is off the base, the display will show the current temperature of the water. Placing the Water Kettle back on the base will allow full functionality of the kettle (changing temperature, boiling, holding temperature).

 PARTS AND FEATURES

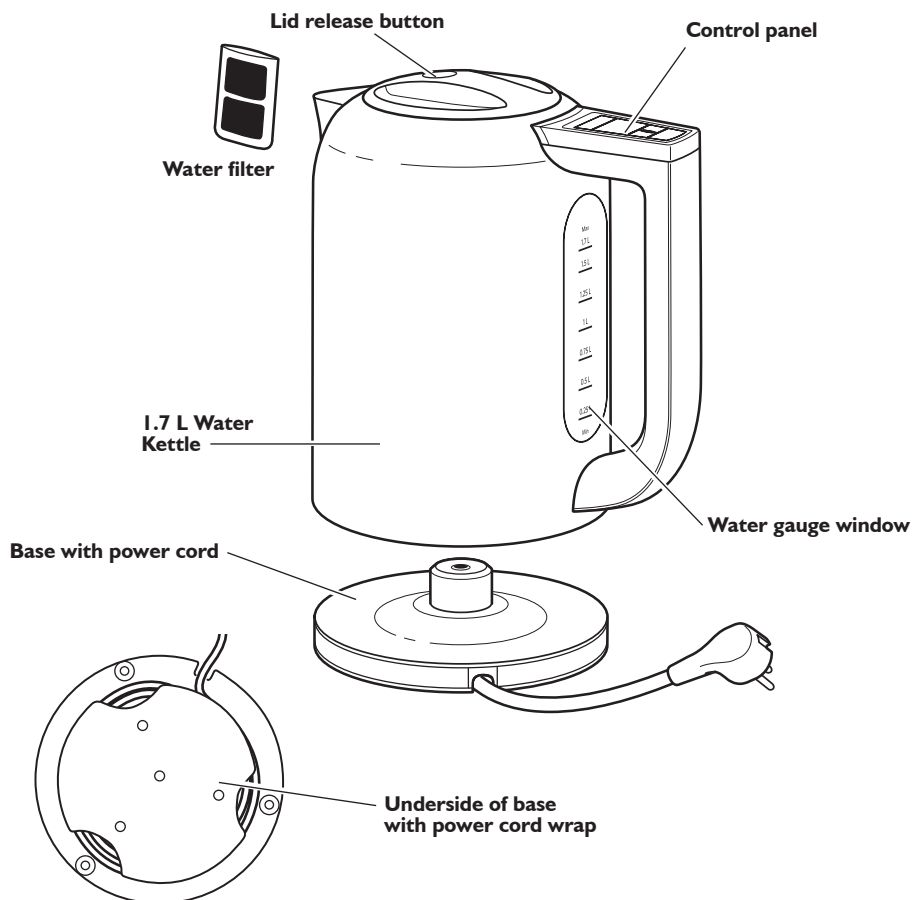



USING THE WATER KETTLE

First use

Before first use, fill the Water Kettle to the maximum level, then boil and discard the water.

 
The temperature can be displayed in Celsius degrees (°C) or Fahrenheit degrees (°F). To change setting, hold the “-” and “+” buttons down at the same time.

NOTE: The Water Kettle is designed for water only. Do not put any other liquids or substances in the Water Kettle.

Filling the Water Kettle



- 1** Open the lid of the Water Kettle by pressing the Lid Release Button.

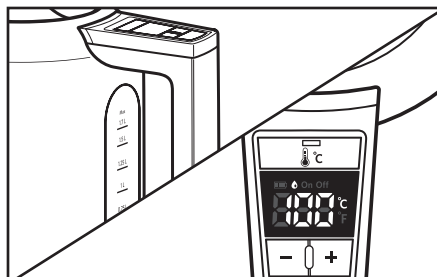


- 2** Fill Water Kettle. The water level is displayed in 0.25 L increments. If there is no water in the kettle, the water drop icon will display and the alert tone will sound for 6 seconds. Remove water if it exceeds the “Max” line.

NOTE: There must be a minimum of 0.25 L of water for the Kettle to operate. Do not exceed the “Max” fill line.



 - 3** Push the lid down so it locks into the closed position. You will hear a clicking sound which indicates the lid is locked.

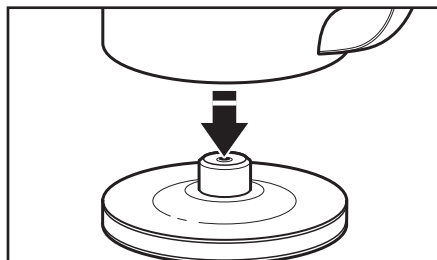


- 4** Place the Water Kettle on the base.




USING THE WATER KETTLE

 
Heating water

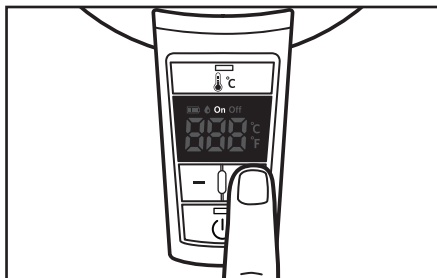

 
- 1** The display will show the default temperature 100°C. Press the "+" or "-" buttons to select your desired water temperature, from 50°C to 100°C. See the "Temperature guide" for more information.

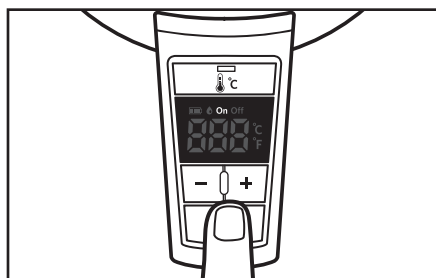

 
- 2** Press the Start/Cancel button (power icon) to save temperature and to begin heating the water. "On" will be displayed on the screen to indicate the Water Kettle is heating. The Start/Cancel button (power icon) does not function when the Water Kettle is off the base.

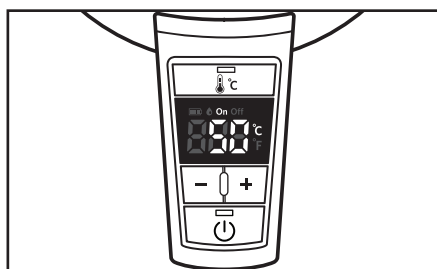

 - 3** Once the water reaches 50°C, the current temperature will show on the main display, and continue heating until the desired temperature is reached.

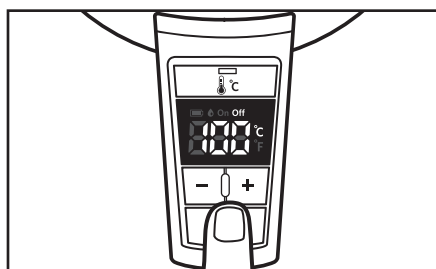

 - 4** Once the desired temperature has been reached, three beeps will sound and the word "Off" will show in the top corner of the display.

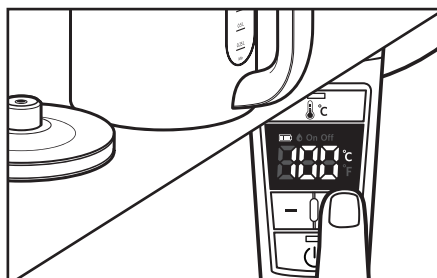

If batteries have been added and the Water Kettle is off the base, push any button to display the current temperature, and the battery icon will display the battery charge level.

NOTE: The temperature will blink 5 times and return to standby after 5 seconds. This will continue periodically until after the water temperature reduces below the desired temperature.





USING THE WATER KETTLE



Temperature guide

Use this guide for outstanding results from your Water Kettle.

60° C	70° C	80° C	90° C	100° C
Delicate Tea	Green Tea Gyokuro Sencha	Blooming Tea	Black Tea Earl Grey English Breakfast	Boil Water
	White Tea Silver Needle	Chai Green White	Oolong Tea	Chai Red
		Green Tea Bencha Genmaicha	Hot Chocolate	Herbal Tea
			Instant Coffee	Rooibos Tea
				Yerba Maté
				Instant Soup
				Oatmeal

English

  Using the Hold Temperature mode

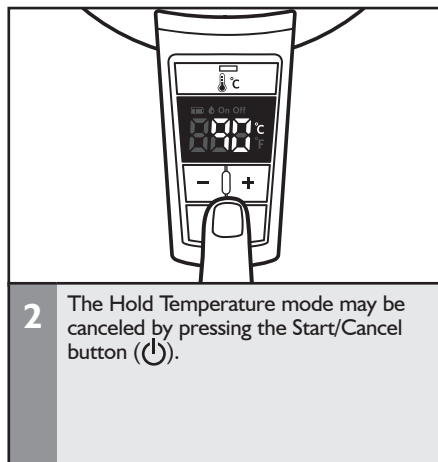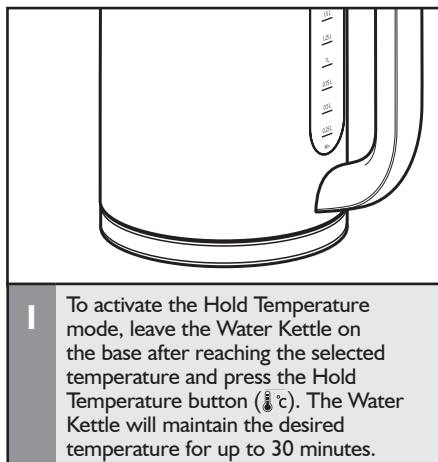

NOTE: Hold Temperature mode works for all temperatures.

NOTE: Altitude has an effect on the water boiling point. Water typically boils at 100°C, but this could go down to 92°C at increasing altitudes.

 





USING THE WATER KETTLE

Turning off the Water Kettle


The Water Kettle can be turned off in several ways:

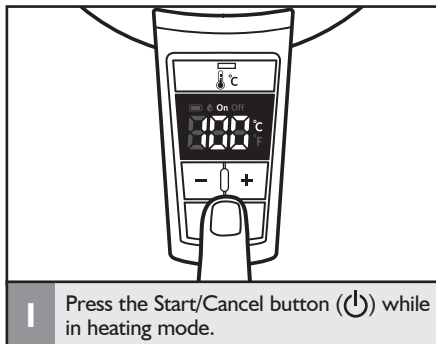

 1 Press the Start/Cancel button (⏻) while in heating mode.

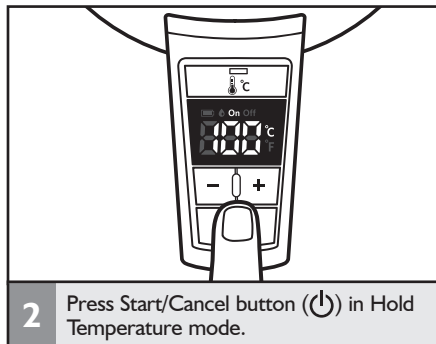

 2 Press Start/Cancel button (⏻) in Hold Temperature mode.

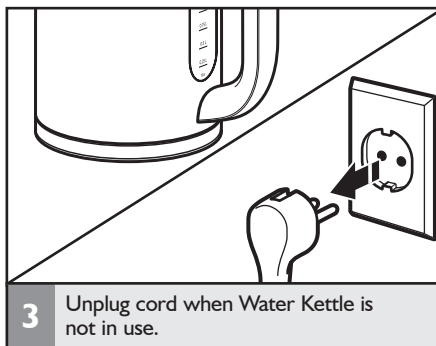


3 Unplug cord when Water Kettle is not in use.

CARE AND CLEANING

Cleaning the exterior

 IMPORTANT: Before cleaning, always disconnect the Water Kettle from electrical outlet. Make sure the Water Kettle has cooled completely.

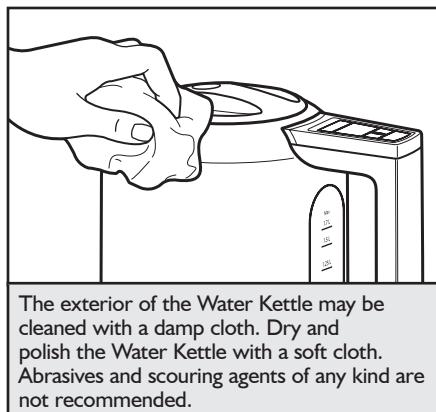

The exterior of the Water Kettle may be cleaned with a damp cloth. Dry and polish the Water Kettle with a soft cloth. Abrasives and scouring agents of any kind are not recommended.





 
CARE AND CLEANING

Cleaning the filter

The Water Kettle features a removable meshed filter that traps scale deposits for cleaner water. The filter will need to be cleaned periodically—more often if you have hard water.



- 1 To access filter: open the lid; the filter is located behind spout inside Water Kettle. Grasp the top of the filter to remove.

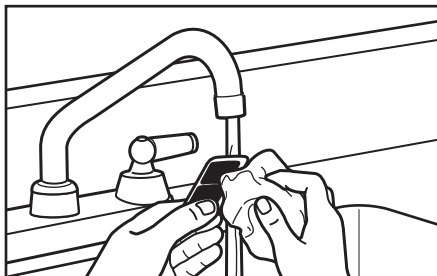


- 2 Clean under hot water with a soft brush or cloth to remove deposits, replace filter by sliding into the slot behind the spout.


NOTE: If limescale deposits remain on the filter, let it stand overnight in a solution of water and white vinegar. Rinse the filter thoroughly and replace in the Water Kettle.

Descaling the Water Kettle

 
To get the best performance from your Water Kettle, descaling will be necessary. Limescale deposits may form on the interior metal parts of the Water Kettle. The cleaning interval will depend on the hardness of the water you put in the Kettle.

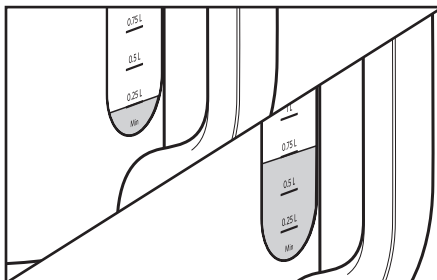

 - 1 Fill the Water Kettle with white vinegar to the 0.25 L mark. Add water to the 0.75 L mark. Boil at 100° C and allow to stand overnight.

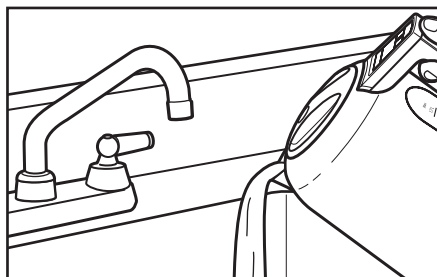

 - 2 Empty the solution from the Water Kettle.

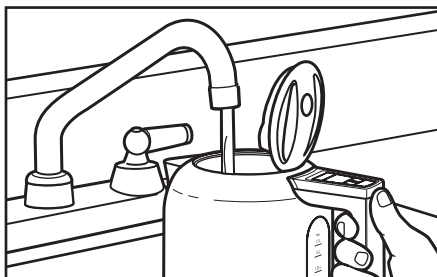

- 3 Fill the Water Kettle with water, bring to a boil and drain out the water. Repeat this step twice. The Water Kettle is now ready to use.



WARRANTY AND SERVICE

KitchenAid Water Kettle warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Middle East and Africa : For Model 5KEK1722: Two years Full Warranty from date of purchase.	The replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.	A. Repairs when Water Kettle is used for operations other than normal household beverage preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Customer service

In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorized Service Center, please find our contact details below.

NOTE: All service should be handled locally by an Authorized KitchenAid Service Center.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate)

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorized KitchenAid Service/Customer Center.

www.KitchenAid.eu

© 2013. All rights reserved.
Specifications subject to change without notice.





English



KitchenAid

© 2013. All rights reserved.
Specifications subject to change without notice.

W10597349A

09/13

