

Always there to help you

Register your product and get support at
www.philips.com/welcome

RWSS9512



User manual

Benutzerhandbuch

Manual del usuario

Mode d'emploi

Manuale utente

Gebruiksaanwijzing

Manual do utilizador

Руководство пользователя

用户手册

使用手冊

PHILIPS

Contents

 
1	Notice	4
	Compliance	4
	Important	4
2	Connect	5
	Place the wireless receiver	5
	Connect the wireless transmitter	5
	Connect rear speakers to wireless receiver	6
	Connect power cord	6
3	Troubleshooting	6
4	Product specifications	7

1 Notice

Compliance

CE 0560 !

This product complies with the radio interference requirements of the European Community.



* Wireless and Ethernet LAN functions are authorized for indoor use only.

Hereby, Philips Consumer Lifestyle, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www.philips.com/support.

Important

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet

immediately. Contact Philips Consumer Care to have the product checked before use.

- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the product!

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.



This is CLASS II apparatus with double insulation, and no protective earth provided.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

 


Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

2 Connect

Place the wireless receiver


Place the wireless receiver near the AC outlet and in between the rear speakers. Align the wireless receiver with the home theater; with Philips logo facing the home theater.

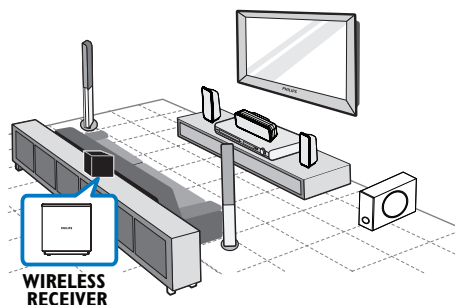

Note

- For best reception, make sure that the line-of-site between the wireless receiver and the home theater is not blocked by furniture, walls and other objects.

 Connect the wireless transmitter

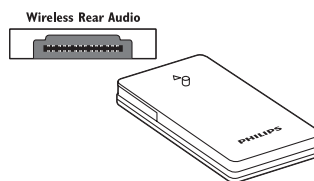


Connect the wireless transmitter to the **Wireless Rear Audio** connector on the back of the home theater.

Connect rear speakers to wireless receiver



Note

 - The rear speakers in the picture showed may vary.

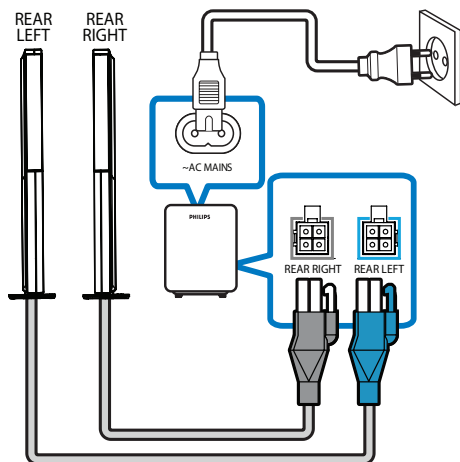

Connect the rear left and rear right speakers to the matching connectors at the back of the wireless receiver.

Connect power cord



Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.

Connect the power cords for home theater, wireless receiver and other devices after you have made all of the other connections.

- ↳ The wireless indicator lights and the wireless receiver is ready to use.

3 Troubleshooting

Follow these steps if:

- there is no sound from the rear speakers, and
- the indicator on the wireless receiver blinks continuously for more than one minute.

- 1 Connect the home theater, wireless transmitter, and wireless receiver correctly (see 'Connect' on page 5).
- 2 Insert a pin into the pairing pinhole at the back of the wireless receiver.
 - ↳ The indicator on the wireless receiver blinks for thirty seconds. Complete the remaining steps within thirty seconds.
- 3 Switch the home theater to either **AUX** source or **MUSIC iLINK** source.
- 4 Press and hold the **Navigation button** ► (right) until **PAIRING** (PAIRING) blinks on the home theater display panel.
 - ↳ **PAIRED** (PAIRED) is displayed.
 - If **FAILED** (FAILED) is displayed, repeat steps 1 to 4.

4 Product specifications



Note

- Specification and design are subject to change without notice.

Wireless receiver

- Power supply rating: 110-240V; ~50-60 Hz
- Total output power: 375W RMS (+/- 0.5 dB, 30%THD) / 300W RMS (+/- 0.5 dB, 10%THD)
- Power consumption: 40 W
- Standby power consumption: ≤ 0.5 W
- Frequency response: 150 Hz ~ 20 kHz
- S/N Ratio: 65 dB (A-Weighted)
- Distortion: 1%
- Dimensions (WxHxD):
265 x 116 x 106 (mm)
- Weight: 1.3 kg

Wireless transmitter

- RF frequency: 5.8 GHz
- Dimensions (WxHxD): 30 x 8 x 53 (mm)
- Weight: 0.009 kg



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

RWSS9512_00_UM_V1.0

