

Register your product and get support at
www.philips.com/welcome

CID3688



EN User manual	3
ZH-CN 用户手册	35

PHILIPS

Contents

1 Important	4	6 Play with Bluetooth device	19
Safety	4	Pair the Bluetooth-enabled devices	19
Notice	4	Make a call	20
Introduction	5	Receive call	20
What's in the box	5	Listen to music from Bluetooth device	21
Overview of the main unit	6	Adjust Bluetooth settings	21
2 Get started	8	7 Adjust sound	22
Install the car audio	8	Adjust volume	22
Turn on	11	Mute	22
Adjust screen	12	Select preset equalizer	22
Set date and time	12	Adjust fader/balance	22
3 Use map	13	Set Dynamic Bass Boost (DBB)	23
Upgrade the map	13	8 Adjust settings	23
4 Listen to radio	14	Display system setup menu	23
Tune to a radio station	14	Adjust general settings	23
Store radio stations in memory	14	Adjust sound settings	24
Tune to a preset station	15	Adjust video settings	25
5 Play	15	Adjust Bluetooth settings	26
Load discs	15	Adjust language settings	26
Connect USB device	16	Adjust volume settings	27
Insert SD/MMC card	16	Adjust DVD rating	27
Play/Pause	16	9 Others	28
Skip/search	17	Reset	28
Search within a title/folder	17	Remove the unit	28
Repeat	17	Replace fuse	28
Repeat a section	18	10 Product information	29
Random play	18	11 Troubleshooting	31
Select audio language	18	About Bluetooth device	31
Select audio mode	18	12 Glossary	32
Select subtitle language	18		
Rotate pictures	18		
Zoom	19		
Select slide show duration	19		

1 Important

Safety

- Read and understand all instructions before you use the apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- This unit is designed for negative ground (earth) 12 V DC operation only.
- To reduce the risk of traffic accident, do not watch video during driving.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Never insert objects into the ventilation slots or other openings on the apparatus.
- Never place any objects other than discs into the disc tray/slot.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Risk of damage to the screen! Never touch, push, rub or strike the screen with any object.
- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.
- Clean the apparatus with soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.

- The apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

Notice



**Be responsible
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Certified product. Plays all versions of DivX® video (including DivX® 6) with standard playback of DivX® media files. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Philips is under license.




Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks and trade names are those of their respective owners.

This apparatus includes this label:

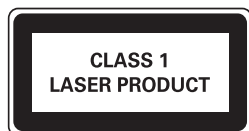

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2010 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction


With the car entertainment system, you can:

- quickly find routine through the navigation system
- enjoy audio/video/JPEG pictures from
 - DVD, VCD or CD
 - USB devices

- SD/SDHC/MMC cards
- External devices
- listen to FM or AM (MW) radio
- play audio from Bluetooth-enabled devices
- make/receive phone calls with Bluetooth-enabled devices

What's in the box


Check and identify the contents of your package:

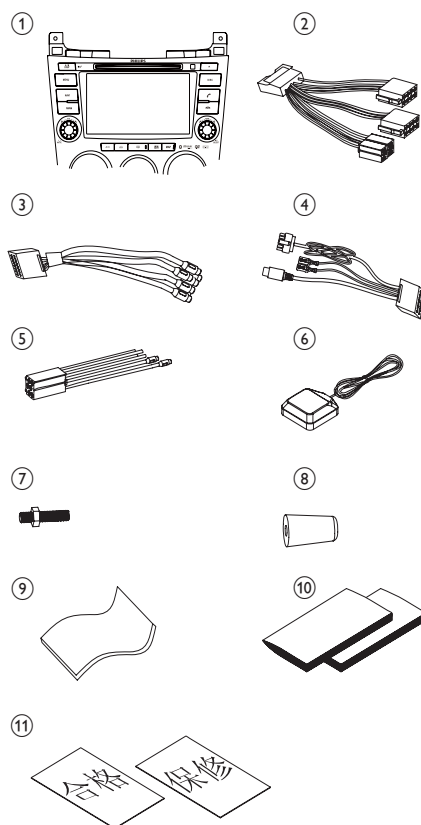

- ① Main unit
- ② power cable
- ③ AV out cable

- ④ CMMB cable
- ⑤ Camera cable
- ⑥ GPS antenna
- ⑦ Mounting bolt
- ⑧ Rubber cap
- ⑨ Cleaning cloth
- ⑩ Printing materials (include User manual, Quick start guide, Installation guide)
- ⑪ QC card / Guarantee card

Overview of the main unit

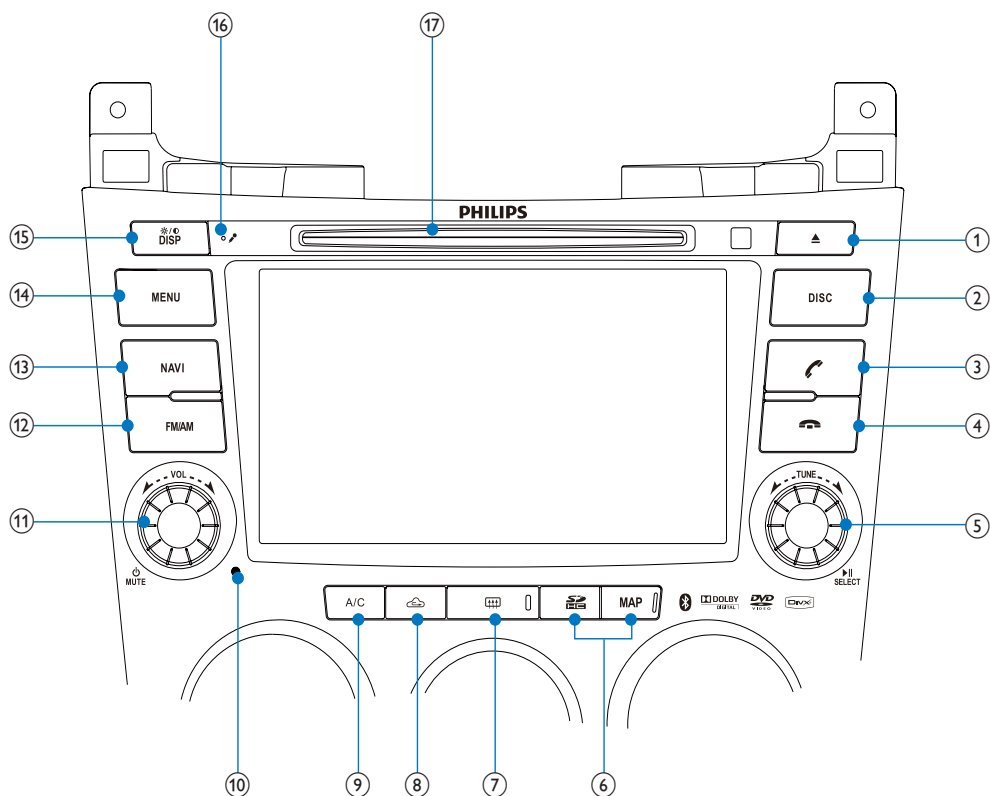

- ① 
 - Eject disc.
- ② **DISC**
 - Select the disc source.
- ③  **(Green)**
 - Answer phone.
 - Dial number.
- ④  **(Red)**
 - Terminate call.
- ⑤ **TUNE/▶||SELECT**
 - Skip to the previous or next title, chapter, or track.
 - Search backward/forward at different speeds.
 - Confirm an entry or selection.
 - Start, pause or resume play.
 - Display the EO setting interface.
- ⑥  **/MAP**
 - Open the cover and insert/remove the GPS map card.
 - Open the cover and insert/remove the SDHC card.
- ⑦ 
 - Turn on the rear window defroster.
- ⑧ 
 - Select the air inlet mode.
- ⑨ **A/C**
 - Turn on/off the air conditioner.
- ⑩ **RESET**
 - Reset the unit when it hangs up.
- ⑪  **/MUTE/VOL**
 - Turn the unit on or off.
 - Mute or unmute audio.
 - Adjust volume.
- ⑫ **FM/AM**
 - Switch to the FM/AM source.
- ⑬ **NAVI**
 - Enter the GPS navigation system or exit.
- ⑭ **MENU**
 - Return to the home menu.
- ⑮ **DISP/☼/●**
 - Adjust screen brightness.
 - Turn on/off the screen display.
- ⑯ 
 - Built-in microphone for phone calls.
- ⑰ **Disc slot**

2 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Install the car audio

These instructions are for a typical installation. However, if your car has different requirements, make the corresponding adjustment. If you have any questions regarding installation kits, consult your Philips car audio dealer.



Caution

- This unit is designed for negative ground (earth) 12 V DC operation only.
- Always install this unit in the car dashboard. Other locations can be dangerous as the rear of the unit heats up during use.
- To avoid short-circuit: before you connect, ensure that the ignition is off.
- Ensure that you connect the yellow and red power supply leads after all other leads are connected.
- Ensure that all loose leads are insulated with electrical tape.
- Ensure that the leads do not get caught under screws or in parts that will move (e.g. seat rail).
- Ensure that all ground (earth) leads are run to a common ground (earth) point.
- Use only the supplied mounting hardware for a safe and secure installation.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.

Note on the power supply lead (yellow)

- When you connect other devices to this system, ensure that the rating of the car circuit is higher than the total fuse value of all the connected devices.

Notes on speaker connection

- Never connect speaker wires to the metal body or chassis of the car.
- Never connect speaker wires with stripes to one another.


Connect wires



Caution


- Ensure that all loose leads are insulated with electrical tape.

- 1 Check the car's wiring carefully, then connect them to the two supplied ISO wires.

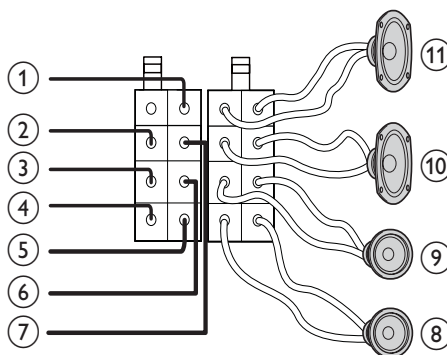


Connector	Connect to
1	CAN BOX
2 Red wire	The +12V power terminal which is live in the accessory (ACC) position of the ignition switch If there is no accessory position, connect to the +12V car battery terminal that is always live. Be sure to connect the black ground (earth) lead to a metal surface of the car first.
3 Orange wire	Illumination switch
4 Black wire	A metal surface of the car First connect the black ground (earth) lead, then connect the yellow and red power supply leads.
5 Yellow wire	The +12V car battery which is live at all times.
6 Blue wire	The electric antenna control lead or power supply lead of the antenna booster If there is no electric antenna or antenna booster, or it is manually operated telescopic antenna, it is not necessary to connect this lead.
7	CAN BOX
8 Green and green/black wires	Left speaker (Rear)
9 White and white/black wires	Left speaker (Front)
10 Gray and gray/black wires	Right speaker (Front)
11 Purple and purple/black wires	Right speaker (Rear)

- 2 Connect the other end of the two ISO connectors to the car audio system.

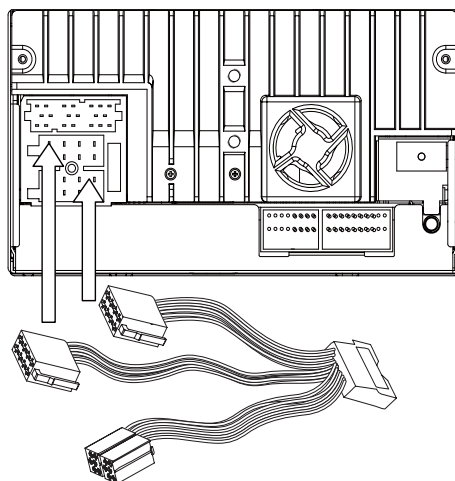


3 If necessary, do other connections:

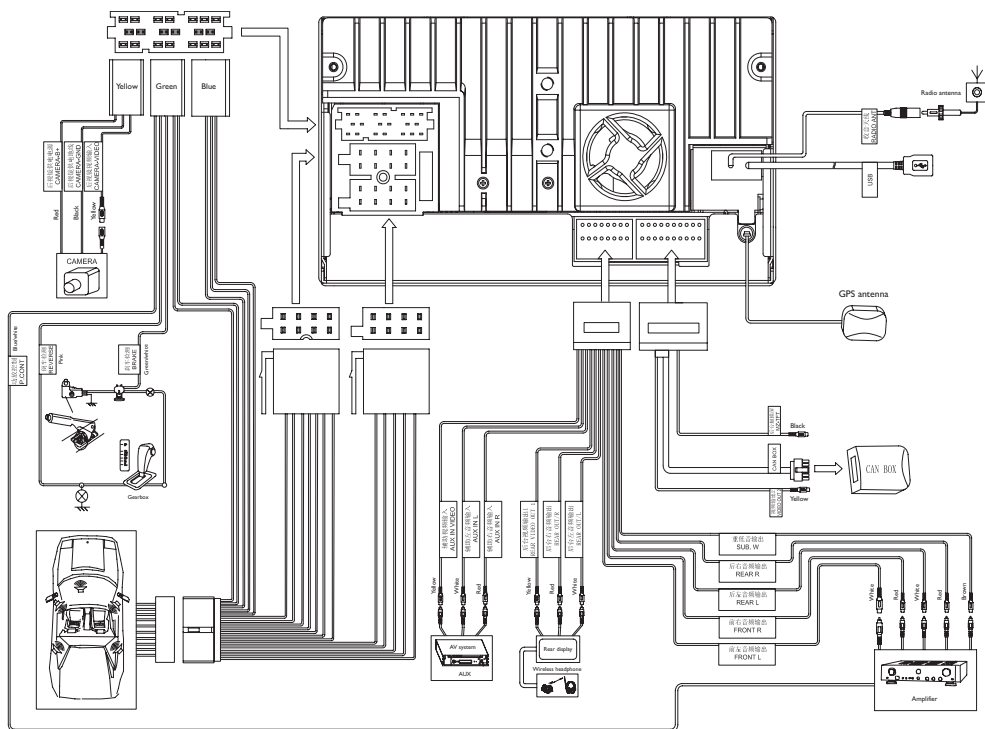

Connect GPS antenna

To receive signal from satellites, connect the supplied GPS antenna to your car and the system.

- 1 Connect the supplier GPS antenna to the system first.

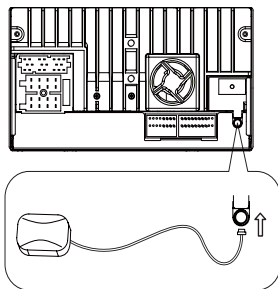


- 2 Stick the other end of the GPS antenna to a metal surface of the car.

Connect GPS antenna

If your car has built-in radio antenna, connect it to the radio antenna of the system for better radio signal.

- 1 Connect the radio antenna to the car antenna.

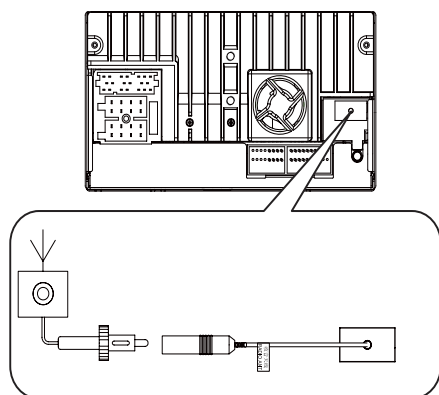


Mount in the dashboard

Note

- Check wire connections before you mount the unit into a car.
- If preset radio stations are lost when the ignition key is turned OFF and then back ON, reconnect the red leads crosswise to the yellow ones.

- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
 - If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lose its memory.
 - If the car battery is not disconnected, to avoid short-circuit, ensure that bare wires do not touch each other.
- 2 Ensure that the horizontal slant of the car dashboard opening is between 0 and 20 degrees. The unit cannot be used if the dashboard opening's slant angle is above 20 degrees.
- 3 Install the mounting bolt and place the supplied rubber cap over the end of the mounting bolt.
- 4 Slide the unit into the dashboard and fix it to the car with five screws.

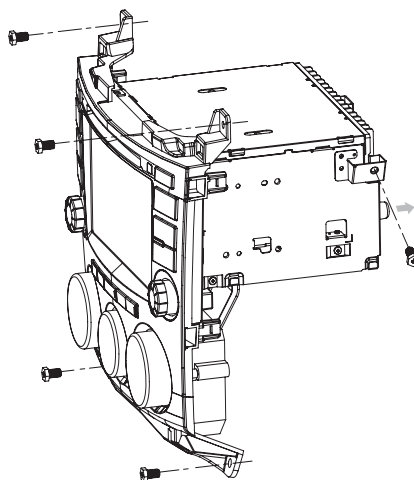


- 5 Reconnect the negative terminal of the car battery.

Turn on

Caution

- Risk of road accidents! Never watch video or adjust settings while you drive.

- 1 Press and hold **MUTE/VOL** to turn on the unit.
 - ↳ The available OSD (On-Screen Display) languages are displayed.

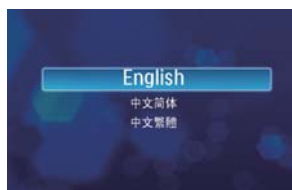

- 2 Tap a language to select.
 - ↳ The OSD language is changed to the selected language immediately.
- To turn off the unit, press and hold **MUTE/VOL**.

Adjust screen

To adjust screen brightness

- 1 Press **DISP/☞/○** to show the brightness bar.
- 2 Tap **◀▶** to adjust the value.
- 3 Press **DISP/☞/○** to confirm.

To turn on/off the screen, press and hold **DISP/☞/○**.

Set date and time

- 1 Tap the upper left corner to display the main menu.



- 2 Tap **◀** in the middle right side of the screen.
↳ The second main menu is displayed.



- 3 Tap **[Settings]**.
- 4 Tap **[Time]**.
↳ The date/time setup menu is displayed.



Set date


- 1 Tap **[Date]**.
- 2 Tap on the displayed date information.
↳ A submenu is displayed.



- 3 Tap **▲** or **▼** to set year, month and day.

Set clock mode


- 1 Tap **[Clock mode]**.

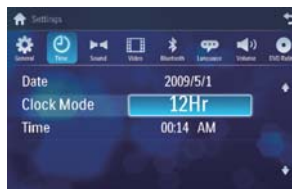

- 2 Tap on **[12Hr]** or **[24Hr]** to select clock mode.

Set time

- 1 Tap **[Time]**.
- 2 Tap on the displayed time.
↳ A submenu is displayed.

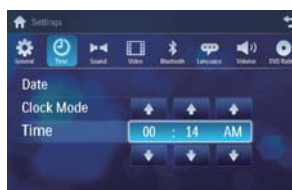

- 3 Tap **▲** or **▼** to set hour and minute.



Tip

- When date/time is set, tap **↶** first and then tap **▶** to return to the main menu.

3 Use map



Note

- You may need to upgrade the map before using it (see "Upgrade the map" section).

- 1 Tap the upper left corner to display the main menu.
- 2 Tap [Navigation].
↳ The navigation menu is displayed in a few seconds.
- 3 Refer to the map manual (in Chinese) to operate the navigation tool.




Tip

- You can press **NAVI** to enter/exit the navigation system.

- 4 Insert the upgraded map card back into the map card slot.
- 5 Turn on the car audio.
↳ The map upgrades in a few minutes.

Upgrade the map


- 1 Turn off the car audio system.
- 2 Press the map card (sold separately) until you hear a click sound.
- 3 Take out the card and bring it to the authorized service center for upgrade.

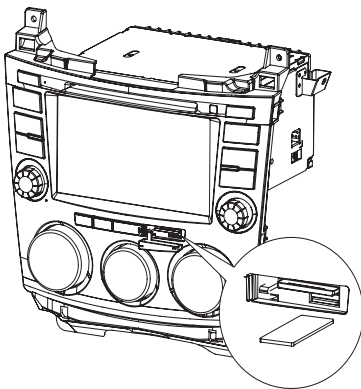

4 Listen to radio

Tune to a radio station


- 1 Tap to display the home menu.
- 2 Tap **[Radio]**.
 - ↳ Band and frequency information is displayed.

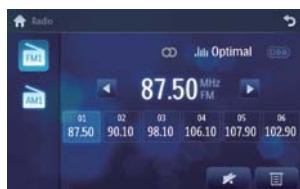

- 3 Tap on **FM** or **AM** to select band:
 - FM band options: **FM1, FM2, FM3**
 - AM band options: **AM1, AM2**
- 4 Briefly tap or to tune to a radio station by step.
 - Tap or for more than 1 second to tune to a radio station automatically.

Tune by frequency

- 1 Tap .

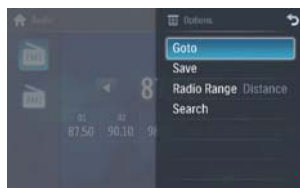

- 2 Tap **[Goto]**.
- 3 Tap the numbers to enter frequency.
 - Tap to clear the last entered number.
 - Tap to clear all the entered numbers.
- 4 Tap to confirm.
 - ↳ The radio station is broadcast.

Select radio range

Before you start to search for radio stations, you can select radio range.

- 1 Tap .
- 2 Tap **[Radio range]** to toggle tuner sensitivity from normal to high sensitivity.
 - **[Distance]**: Only stations with strong signals can be broadcast.
 - **[Local]**: Stations with strong and weak signals can be broadcast.



Store radio stations in memory

You can store up to 6 stations in each band.

Store stations manually

- 1 Tune to the station.
- 2 Tap .
- 3 Tap **[Save]**.
- 4 Tap one of the channels **01** to **06** to save the select band.




Store stations automatically

You can search for a station with intro search, which broadcasts a 10-second preview of each detected radio station.

- 1 Select band.
- 2 Tap .
- 3 Tap [Search].
 - ↳ Auto search starts. The six strongest stations of the selected band are saved in preset channels 1-6 automatically.

Tune to a preset station

- 1 Tap [Radio].
- 2 Select band.
- 3 Tap one of the preset channels (01 to 06) to select a preset station.

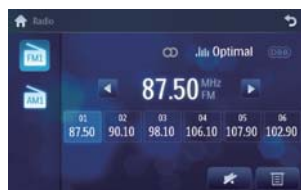

5 Play

Load discs

You can play video, audio or images stored on the following discs:


- DVD video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW



Note

- Ensure that the disc contains playable content.

- 1 Insert the disc into the disc slot with the label side facing up.
 - ↳ Play starts automatically.

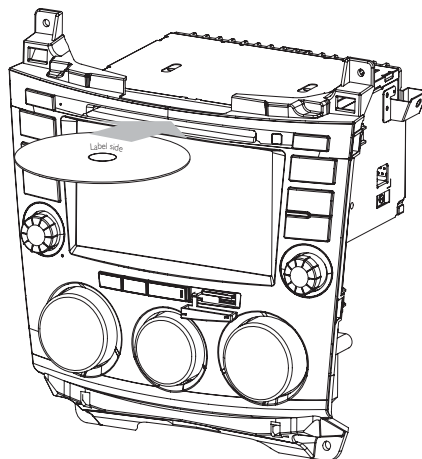

- ↳ To remove the disc, press .
- ↳ When the disc is ejected, the unit switches to the previous source, if connected. Otherwise, the unit switches to [Radio] mode automatically.


Connect USB device



Note

- Ensure that the USB device contains playable content.

- 1 Insert your USB device to the USB socket.
↳ Play starts automatically.

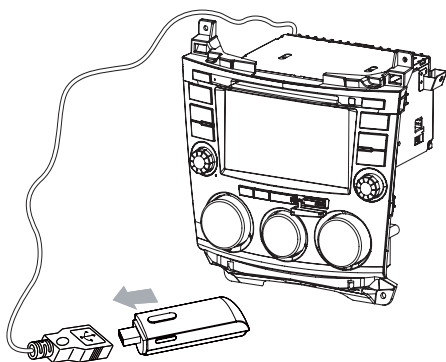

Remove the USB device

- 1 Switch to another (non-USB) source.
- 2 Remove the USB device.


Insert SD/MMC card



Note

- Ensure that the device contains playable content.
- The unit supports SDHC card.

- 1 Open the SD/MMC card cover.
- 2 Insert the SD/MMC card into the SD/MMC card slot.
↳ Play starts automatically.

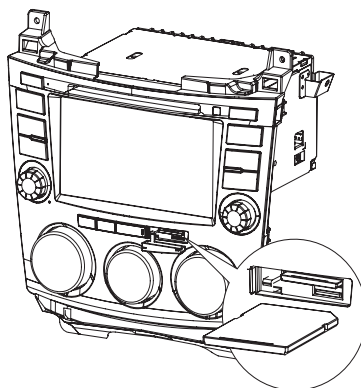

Remove the SD/MMC card

- 1 Switch to another source.
- 2 Press the card until you hear a click sound.
↳ The card is now disengaged.
- 3 Remove the SD or MMC card.

Play/Pause

- 1 Once a disc, USB or SD/MMC card is inserted, play starts automatically.



For DVD movie, if a menu appears, press **TUNE/ SELECT** to start play.

- 2 To pause, tap **⏸**.
 - To resume play, tap **⏸** again.



Tip

- You can also press **TUNE/▶⏸ SELECT** repeatedly to pause/resume play.

Skip/search

- 1 Tap to return to playlist menu.
- 2 Tap one of below icons to select folder/file:




- : To display all available audio folders/track.
- : To display all available picture folders/files.
- : To display all available video folders/files

- 3 Tap or to select a folder/track.
- 4 Tap to start play.

Search within a title/folder

Direct search

- 1 Tap anywhere except for the upper left corner to display menu on the screen, if necessary.
- 2 Tap .
↳ The search screen is displayed.

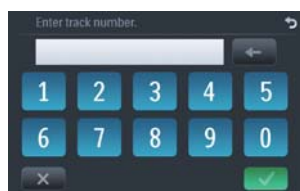

- ↳ For video files, tap **1/2** first, then tap .
- 3 Tap the numbers to enter chapter/file number; then tap .
- To clear the previous input, tap .
 - To clear all input, tap .

Repeat

During play, you can select different repeat play modes.

For DVD/VCD movie disc:

- 1 Tap anywhere except for the upper left corner to display menu on the screen, if necessary.



- 2 Tap **1/2** to display the 2nd menu.



- 3 Tap to select:
 - **[Repeat chapter]**: play the current chapter repeatedly.
 - **[Repeat title]**: play all chapters in the title repeatedly.
 - **[Repeat off]**: cancel repeat play.

For VCD karaoke:

- 1 Tap to select:
 - **[Repeat one]**: play the current track repeatedly.
 - **[Repeat all]**: play all tracks repeatedly.
 - **[Repeat off]**: cancel repeat play.

For MP3/WMA files:

- 1 During play, tap to select:
 - -1: play the current track repeatedly.
 - -Folder: play all the tracks in the current folder repeatedly.
 - (in grey color): cancel repeat play.

Repeat a section

You can repeat a specific section of video file (repeat A-B).

- 1 During play, tap anywhere except for the upper left corner to display menu on the screen, if necessary.
- 2 Tap **1/2** to display the 2nd menu, if necessary.
- 3 Tap **A-B** repeatedly to mark:
 - **[Repeat A-]**: the start of the section to repeat.
 - **[Repeat A-B]**: the end of the section to repeat.
 - The selected section plays repeatedly.
- 4 To exit A-B repeat mode, tap **A-B** repeatedly until **[Repeat A-B off]** is displayed.

Random play

You can play audio tracks/files in random order.

- 1 During play, tap  repeatedly to turn random play on or off.
 -  is highlighted: start random play.
 -  turns gray: cancel random play.

Select audio language

For video discs that contain two or more audio channels.

- 1 During play, tap anywhere except for the upper left corner to display menu on the screen, if necessary.
- 2 Tap **1/2** to display the 2nd menu.
- 3 Tap  repeatedly.
 - ↳ The audio channel information is displayed on the upper line of the screen.

Select audio mode

When you play VCDs, you can select an audio mode (R/L/Stereo).

- 1 During play, tap anywhere except for the upper left corner to display menu on the screen.
- 2 Tap  repeatedly until the audio mode is selected.


Select subtitle language

For DVD or DivX discs that contain two or more subtitle languages.

- 1 During play, tap anywhere except for the upper left corner to display menu on the screen, if necessary.
- 2 Tap **1/2** to display the 2nd menu
- 3 Tap  repeatedly to select a language.
 - ↳ The selected language is displayed.

Rotate pictures

- 1 When you view pictures, tap anywhere except for the upper left corner to display menu on the screen, if necessary.

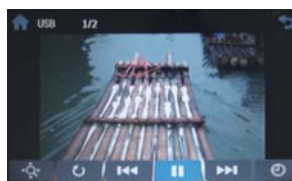

- 2 Tap  repeatedly to rotate the picture.

Zoom

You can zoom in pictures for a close view.

- 1 During view pictures, tap anywhere except for the upper left corner to display menu on the screen, if necessary.
- 2 Tap  repeatedly to zoom in the picture.



- 3 Tap , ,  or  to pan through the enlarged picture.

Select slide show duration

- 1 Tap anywhere except for the upper left corner to display menu on the screen, if necessary.
- 2 Tap  repeatedly to select:
 - **Fast:** 3 seconds
 - **Normal:** 5 seconds
 - **Slow:** 8 seconds

6 Play with Bluetooth device

You can make or receive phone calls with Bluetooth-enabled phones through the unit. You can also listen to music from a Bluetooth-enabled device.

Pair the Bluetooth-enabled devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once. You can pair up to eight devices.

Note

- The operational range between this unit and a Bluetooth device is approximately 10 meters (30 feet).
- Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- Keep this unit away from any other electronic device that may cause interference.

- 1 Turn on the Bluetooth function on the device.
- 2 Search for Bluetooth device with the device.
- 3 Select "CID3688" in the pairing list.
- 4 Enter default password "0000".
 - ➔ if pairing succeeds, phone call record is displayed.



Disconnect Bluetooth devices

- 1 To disconnect one device, tap  (red).
↳  (green) is displayed.



Tip

- The device will also be disconnected when the device is moved beyond the operational range.
- If you want to reconnect the device to the unit, place it within the operational range.
- If you do not want to reconnect the device to the unit automatically, tap  > **[Auto connect]**, then select **[Off]**. For details, see the "Adjust Bluetooth settings" section.


- **[Missed calls]**
- **[Received calls]**
- **[Dialed calls]**
- **[Phone book]**
- **[Sim phone book]**
- **[Local phone book]**

Or tap  to dial number directly, then tap  to dial.

Receive call

By default, all incoming calls are received automatically.

- 1 If there is incoming call, **[Incoming call...]** flashes on the screen. Speak into the Bluetooth microphone.

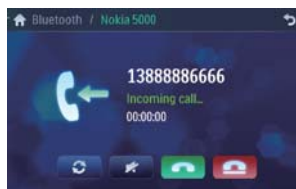

- 2 When conversation ends, tap  (red) to terminate the call.



Tip

- You can select to receive calls manually by setting **[Auto answer]** to **[Off]** status.

Make a call

- 1 Pair the phone with the unit.
- 2 Tap  to display the home menu.
- 3 Tap **[Bluetooth]**.
↳ The Bluetooth menu is displayed.



- 4 Tap  or  to select the paired phone, then tap .
- 5 Tap  or  to search for phone number from the following list:

Switch phone call to the mobile

If you do not want your passenger to hear your incoming call, you can switch the call to the mobile.

- 1 During talking, tap .
 - ↳ The voice is transferred from the unit's loudspeaker to the mobile phone.

Listen to music from Bluetooth device

If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the unit. If the device also supports AudioVideo Remote Control Profile (AVRCP) profile, you can use the control on the unit to play music stored in the device.

- 1 Pair the phone with the unit.
- 2 Tap  to return to home menu.
- 3 Tap **[Bluetooth]**.
 - ↳ The Bluetooth menu is displayed.
- 4 Start to play music stored in the device.

If your device support AVRCP.

- 1 Tap .



- 2 Tap  to start play.

Adjust Bluetooth settings

You can change below Bluetooth settings:

- **[Bluetooth]**: to turn on or off "Bluetooth" function
- **[Auto connect]**: to turn on or off "Auto connect" function
- **[Auto answer]**: to turn on or off "Auto answer" function
- **[Pairing code]**: to set pairing code
- **[Phone Book Sync]**: to synchronize phone book

- 1 In Bluetooth menu, tap .
 - ↳ The option menu is displayed.



- 2 Tap an option to change the setting.



Tip

- You can also adjust Bluetooth settings in the "Settings" menu.

7 Adjust sound

Adjust volume

- 1 Turn **⏻/MUTE/VOL** button clockwise to increase volume.
- 2 Turn **⏻/MUTE/VOL** button anti-clockwise to reduce volume.

Mute

- 1 During play, press **⏻/MUTE/VOL**.
 - To restore the sound, press **⏻/MUTE/VOL** again.



Tip

- You can also tap **🔊** on the screen to turn off sound.

Select preset equalizer

You can select preset equalizer:

- **[User]**
 - **[Techno]**
 - **[Rock]**
 - **[Classic]**
 - **[Jazz]**
 - **[Optimal]**
 - **[Flat]**
 - **[Pop]**
- 1 Tap anywhere except for the upper left corner to display menu on the screen, if necessary.
 - 2 Tap **🔊**.
 - ↳ The current Equalizer setting is displayed.



- 3 Tap **◀** or **▶** to select an EQ.
- 4 Tap **▲** or **▼** to adjust below settings:
 - **[Bass]** bass range: -14 to +14.
 - **[Mid]** middle range: -14 to +14.
 - **[Treb]** treble range: -14 to +14.
 - **[LPH]** low pass filter range: 60, 80, 100, 200.
 - **[MPF]** middle pass filter range: 500, 1K, 1.5K, 2.5K.
 - **[HPF]** high pass filter range: 10K, 12.5K, 15K, 17.5K.
- 5 Tap **⏻** to restore the above settings into default settings.
- 6 Tap **⏮** to exit.

Adjust fader/balance

You can also adjust the front and rear speaker balance, the left and right speaker balance, and subwoofer settings.

Tap anywhere except for the upper left corner to display menu on the screen, if necessary.

- 1 Tap **🔊**.
- 2 Tap **🔊**.
 - ↳ Below options are displayed:



- 3 Tap **▲** or **▼** to select subwoofer volume.
 - **[Sub]** subwoofer volume: 0 to 24.

- 4 Tap **F**, **R**, **L**, or **R** to adjust fader/balance value.
 - **[Fade]** fader range: +24 to -24. (F = front speaker; R = rear speaker)
 - **[Balance]** balance range: -24 to +24. (L = left speaker; R = right speaker)
- 5 Tap  to exit.

Set Dynamic Bass Boost (DBB)

- 1 Tap  to toggle between the settings.
 - **[DBB] on:** The  icon is illuminated.
 - **[DBB] off (default):** The  icon is gray.

8 Adjust settings

Display system setup menu

- 1 Tap the upper left corner to display main menu.



- 2 Tap  in the middle right side of the screen.
 - ↳ The second main menu is displayed.



- 3 Tap **[Settings]**.
 - ↳ The settings menu is displayed.



Tip

- When the setup adjustment is completed, tap  first and then tap  to return to main menu.

Adjust general settings

- 1 Tap **[General]**, if necessary.



- 2 Tap ▲ or ▼ to highlight a setting.
- 3 Tap on the option to display/select an option.

General settings	Options	Description
[Radio region]	[USA], [S.Amer-1], [Arabia], [China], [S.Amer-2], [Europe], [Korea], [OIRT]	Select one that matches your location.
[Radio range]	[Local]	Only stations with strong signals can be broadcast.
	[Distance]	Stations with strong and weak signals can be broadcast.
[Blackout]	[off]	Never turn on the screen saver.
	[10s]	Turn on the screen saver automatically 10 seconds after last operation.
	[20s]	Turn on the screen saver automatically 20 seconds after last operation.
[Dimmer Mode]	[Night]	Select this mode at night.
	[Dusk]	Select this mode at dusk.
	[Normal]	Set screen dimmer to normal mode.
	[Bright]	Select this mode in bright environment.

General settings	Options	Description
[Key color]	[Red]	Button backlight turns red.
	[Blue]	Button backlight turns blue.
[Beep]	[On]	Turn on the beep sound. Each time you press a button, the unit beeps.
	[Off]	Turn off the beep sound.
[WallPaper]	[Blue]	Turn background color to blue.
	[Black]	Turn background color to black.
	[Red]	Turn background color to red.
[Calibration]	[F1]	Select F1 picture as wall paper.
		Calibrate the touch screen.

- 4 Tap ↵ to exit.

Adjust sound settings

- 1 Tap [Sound].



2 Tap an option repeatedly to select:

Sound settings	Options	Description
[Sub woofer]	[On]	Turn on the subwoofer.
	[Off]	Turn off the subwoofer.
[Sub woofer filter]	[80Hz]	Select subwoofer filter criteria.
	[120Hz]	
	[160Hz]	
[DBB]	[On]	The Dynamic Bass Boost (DBB) function is on.
	[Off]	The DBB function is off.
[DRC]	[On]	Makes loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others
	[Off]	

3 Tap ↩ to exit.

Adjust video settings

1 Tap [Video].




2 Tap an option repeatedly to select:

Video settings	Options	Description
[Aspect ratio]	[Full]	For widescreen display.
	[Normal]	For normal display.
[Video input]	[Auto]	The correct format is set automatically. Select this option if you are not sure which format should be selected.
	[NTSC]	
	[PAL]	
	[Secam]	Used in France, Russia and other countries.
[Parking]	[On]	Disable video view during drive.
	[Off]	Enable video view during drive.
[DivX registration code]		View code for DivX registration.

3 Tap ↩ to exit.

Adjust Bluetooth settings

1 Tap [Bluetooth].

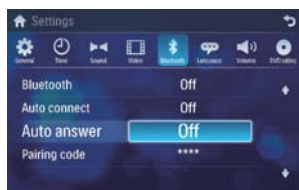


2 Tap an option repeatedly to select:

Bluetooth settings	Options	Description
[Bluetooth]	[On]	Turn on the Bluetooth function.
	[Off]	Turn off the Bluetooth function.
[Auto connect]	[On]	If the pre-paired device is within the effective range, the unit re-connects to pre-paired device automatically.
	[Off]	Need to re-connect manually.
[Auto answer]	[On]	Answer paired phone call automatically.
	[Off]	Answer phone call manually.
[Pairing code]		View code for pairing the unit with other Bluetooth devices.

3 Tap ↩ to exit.

Adjust language settings

1 Tap [Language].

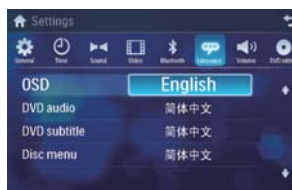

2 Tap an option repeatedly to select:

Language settings	Options	Description
[OSD]	[English]	Select on-screen-display language.
	[简体中文]	
	[繁体中文]	
[DVD audio]	[English]	Select DVD audio language. Options available are depends on DVD disc.
	[简体中文]	
	[繁体中文]	
[DVD subtitle]	[English]	Select DVD subtitle language. Options available are depends on DVD disc.
	[简体中文]	
	[繁体中文]	
[Off]	[Off]	Turn off subtitle language display.
	[简体中文]	
	[繁体中文]	
[Disc menu]	[English]	Select DVD menu language. Options available are depends on DVD disc.
	[简体中文]	
	[繁体中文]	

3 Tap ↩ to exit.

Adjust volume settings

You can set different volume for different modes.

1 Tap [Volume].

- ↳ The volume setting sub-menu is displayed.



2 Tap on a source.

- [DVD]
- [USB]
- [SDHC]
- [Radio]
- [Bluetooth]
- [AV-IN1]
- [AV-IN2]
- [TV]
- [Navigation]

3 Tap ▲ or ▼ to assign value: 0 to 12.

- ↳ When switches to the source, the volume increases automatically.

4 Tap ↶ to exit.

Adjust DVD rating

1 Tap [DVD rating].



2 Tap an option repeatedly to select:

DVD rating	Options	Description
[Set password]		Set password to restrict the play of discs. The default password is 0000.
[Rating level]	[Kid safe]	Acceptable for children.
	[G]	Acceptable for general viewers.
	[PG]	Parental guidance suggested.
	[PG-13]	Unsuitable for children under age 13.
	[PG-R]	Recommend parents to restrict children under 17 to view.
	[R]	Restricted. Recommend parent to guide children under 17 to view.
	[NC-17]	Unsuitable for children under age 17.
	[Adult]	Acceptable for adults only.
[Load factory]		Restore to default settings.


3 Tap ↶ to exit.

9 Others

Reset

When the unit hangs up, you can reset it.

- 1 Press **RESET** with a ball-point pen or similar tool.

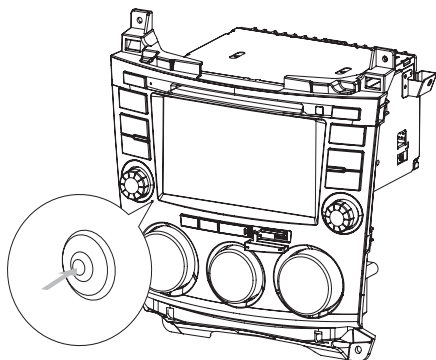


Tip

- When the unit is reset, all the settings remain unchanged.

Remove the unit

To repair, replace fuse, or replace the unit with another car audio, remove it from the dashboard.


- 1 Screw off the five (5) screws on the unit.
- 2 Pull the unit out from the dashboard.

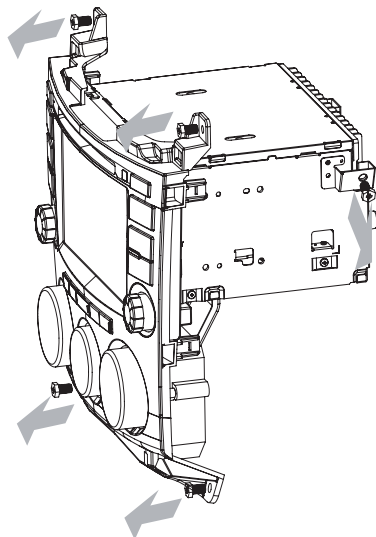

Replace fuse

If there is no power, the fuse may be damaged and need to be replaced.

- 1 Take out the unit from dashboard.
- 2 Check the electric connection.
- 3 Buy a fuse that matches the voltage of the damaged fuse (15A)
- 4 Replace the fuse.

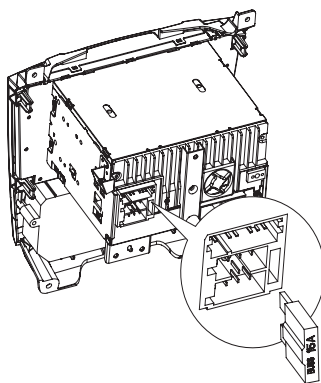



Note

- If the fuse gets damaged immediately after it has been replaced, there may be an internal malfunction. In such case, consult your Philips dealer.

10 Product information

English



Note

- Product information is subject to change without prior notice.

General

Power supply	12 V DC (11 V - 16 V), negative ground
Fuse	15 A
Suitable speaker impedance	4 - 8 Ω
Maximum power output	50 W x 4 channels
Continuous power output	24 W x 4 channels (4 Ω 10% T.H.D.)
Pre-Amp output voltage	2.0 V (CD play mode; 1 kHz, 0 dB, 10 k Ω load)
Subwoofer output voltage	2.0 V (CD play mode, 61 Hz, 0 dB, 10 k Ω load)
Aux-in level	$\geq$ 500 mV
Dimensions (W x H x D)	178 x 100 x 160 mm
Weight (main unit)	2.7 kg

Disc player

System	DVD / CD audio / MP3 system
Frequency response	20 Hz - 20k Hz
Signal/noise ratio	>75dB
Total harmonic distortion	Less than 1%
Channel separation	>55dB
Video signal format	NTSC only
Video output	1 +/- 0.2V

Tuner

Frequency range - FM	87.5 - 108.0 MHz (Europe)
Frequency range - AM (MW)	522 - 1620 KHz (Europe)
Usable sensitivity - FM	5 µV
Usable sensitivity - AM (MW)	50 µV

LCD

Screen size	7 inches (16:9)
Display resolution	800 x 480 dots
Contrast ratio	300
Brightness	350 cd/m2

Bluetooth

Communication system	Bluetooth Standard version 2.0
Output	Bluetooth Standard Power Class 2
Maximum communication range	Line of sight approx. 8m
Frequency band	2.4 GHz band (2.4000 GHz - 2.4835 GHz)
Compatible Bluetooth profiles	Hands-Free Profile (HFP) Handset Profile (HSP) Advanced Audio Distribution Profile (A2DP) Audio Video Remote Control Profile (AVRCP)
Supported codecs	
Receive	SBC (Sub Band Codec)
Transmit	SBC (Sub Band Codec)

Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (SD / MMC / SDHC)

Supported formats:

- USB or memory file format: FAT16, FAT32

- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

Supported MP3 disc format:

- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32-320 Kbps and variable bit rate

Supported video formats:

- DVD
- Divx Home theater
- MP4
- Xvid



Note

- To ensure a better playback, bit rate of 4.5 Mbps is recommended.

11 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Car engine has not been started. Start the car engine.
- Connections is incorrect.
- Fuse has been damaged. Replace fuse.

No sound

- Volume is too low. Adjust volume.
- Speaker connections is incorrect.

Disc does not play

- Disc is upside down. Ensure the printed side is upwards.
- Disc is dirty. Clean the disc with a clean, soft, lint-free cloth. Wipe the disc outwards from the center.
- Disc is defective. Try another disc.
- incompatible disc is used. Try another disc.
- Disc rating exceeds the restrict setting. Change the rating settings to lower one.
- Disc region code is not compatible with the unit. Use disc with proper region code.

No image

- Parking brake wire connection is incorrect. Check the parking wiring.

Image flashes or distorted

- Video DVD settings do not match with the DVD. Adjust video DVD settings.

- Video connection is improper. Check the connections.

Noise in broadcasts.

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.
- Change broadcast from stereo to mono.

Preset stations lost.

- Battery cable is not correctly connected. Connect the battery cable to the terminal that is always live.

Fuse is broken

- The Fuse type is incorrect. Replace it with a 15A fuse.
- Speaker wire or power wire is grounded. Check the connections.

Display show ERR-12

- USB/SD/MMC data error. Check the USB device or SD/MMC card.

About Bluetooth device

Music playback is unavailable on the system even after successful Bluetooth connection.

- The device cannot be used with the system to play music.

The audio quality is poor after connection with a Bluetooth-enabled device.

- The Bluetooth reception is poor. Move the device closer to the system or remove any obstacle between the device and the system.

Cannot connect with the system.

- The device does not support the profiles required for the system.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- The system is not in the pairing mode.
- The system is already connected with another Bluetooth-enabled device. Disconnect that device or all other connected devices and then try again.

The paired mobile phone connects and disconnects constantly.

- The Bluetooth reception is poor. Move the mobile phone closer to the system or remove any obstacle between the mobile phone and the system.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of the system.
- For some mobile phones, the Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of the system.

12 Glossary

B

Bite rate

The max data transfer through the USB port.

Bluetooth

Bluetooth® is a short-rang wireless protocol that is meant to allow mobile devices to share information and applications without the worry of cables or interface incompatibilities. The name refers to a Viking King who unified Denmark. Operate at 2.4GHz. For more information, see www.bluetooth.com.

M

MMC

MultimediaCard. A type of memory card with a flash memory.

MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

R

Region code

A system that allows discs to be played only in the region designated. This unit only plays discs that have compatible region codes. You can find the region code of your unit on the product label. Some discs are compatible with more than one region (or ALL regions.)

S

SD

Secure Digital. A type of memory card with a flash memory.

SDHC

Secure Digital High Capacity (SDHC) is a type of flash memory card based on the SDA 2.00 specification. The SDA 2.00 specification enables SD cards to reach higher capacities from 4GB to 32GB, and growing.

W

WMA (Windows Media Audio)

An audio format owned by Microsoft, is a part of Microsoft Windows Media technology. Includes Microsoft Digital Rights Management tools, Windows Media Video encoding technology, and Windows Media Audio encoding technology.

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬 (Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	O	O	O	O	O	O
DVD/CD loader DVD/CD 光盒	X	O	O	O	O	O
LCD Panel 液晶面板	X	X	O	O	O	O
Loudspeakers 喇叭单元	O	O	O	O	O	O
PWBs 电路板组件	X	O	O	O	O	O
Accessories (Remote control & cables) 附件 (遥控器, 电源线, 连接线)	X	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363 - 2006 标准规定的限量要求以下。

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363 – 2006 标准规定的限量要求。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 – 2006.



环保使用期限 Environmental Protection Use Period

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

