


➤ Instructions

Thule WingBar Edge 958X / 958XB

958100, 958120, 958200, 958220, 958300, 958320,
958400, 958420, 958500, 958520


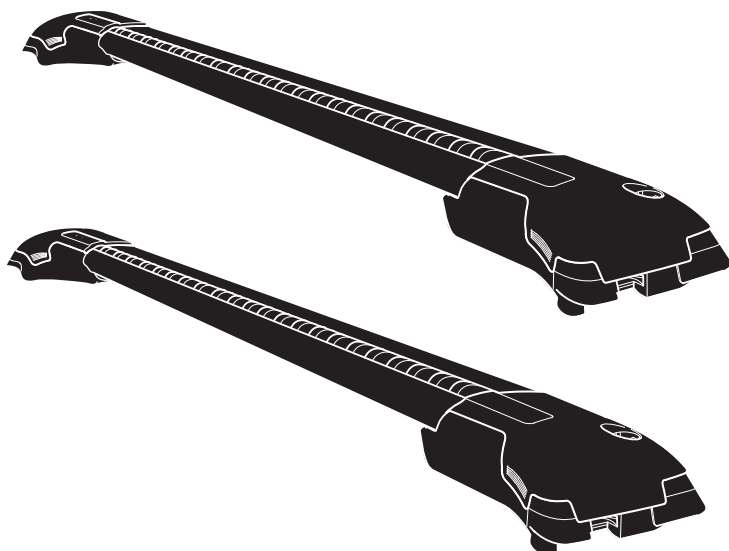


EN Roof mounted load carrier
DE Lastenträger zur Dachmontage
FR Barre de toit
NL Dakdrager
IT Barra portatutto da installare sul tetto
ES Portaequipajes de techo
PT Barra para montagem no tejadilho
SV Takmonterad lasthållare
DK Tagmonteret lastholder
NO Takmontert lastholder
FI Katolle asennettava teline
ET Katusele paigaldatav katuseraam
LV Uz jumta uzstādāms kravas turētājs
LT Ant stogo tvirtinamas krovinų laikiklis
PL Uchwyt na bagażnik bazowy montowany na dachu
RU Грузовой багажник
UK Багажник для даху
BG Багажник, монтиран върху покрива
CS Nosič pro montáž na střechu
SK Strešný nosič
SL Nosilec za strešni prtljajnik
HR/BIH Krovni nosač tereta
RO Suport încărcătură montat pe acoperiș
HU Tetőre szerelhető csomagszállító





EL Σχάρα οροφής για μεταφορά φορτίου
TR Araç üstüne bağlanan yük taşıyıcı
HE גגון מסטון לגג הארוב
AR حامل نقل مثبت على السقف
ZH 顶置行李架
JA ルーフマウント型ロードキャリア
KO 루프 장착 화물 캐리어
TH โครงยึดของบนรถทุกแบบติดตั้งบนหลังคา




CITY CRASH ISO 11154-E
Complies with ISO norm

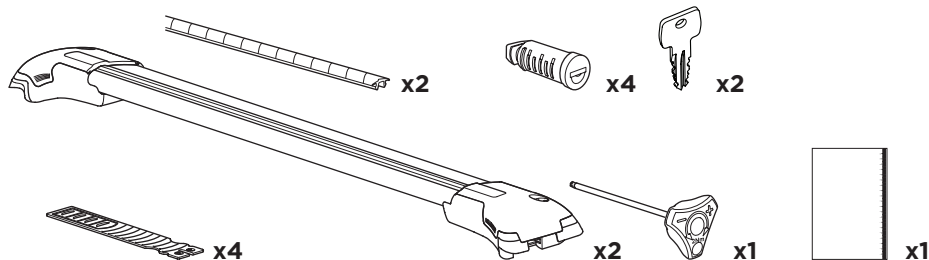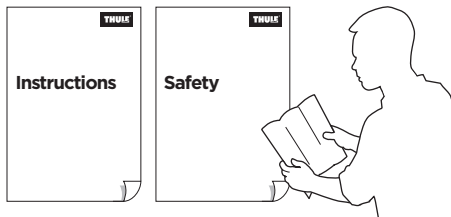



i

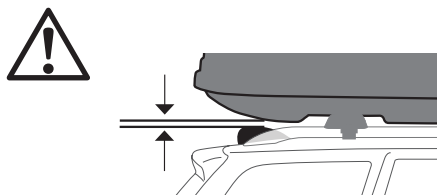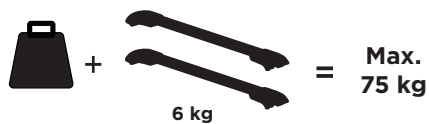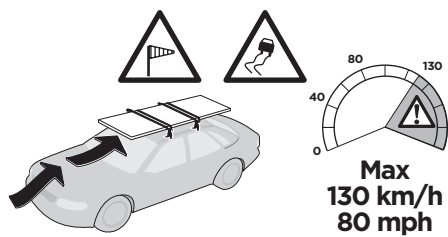 

1

 

x2

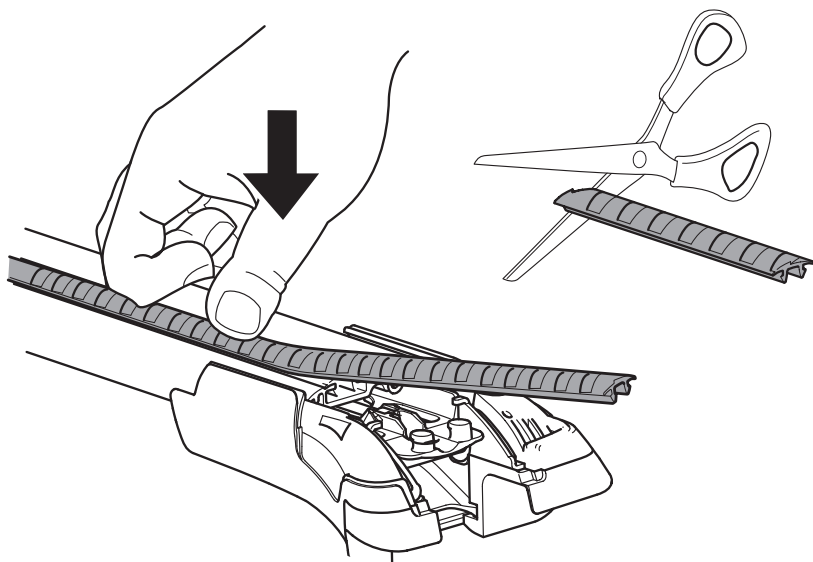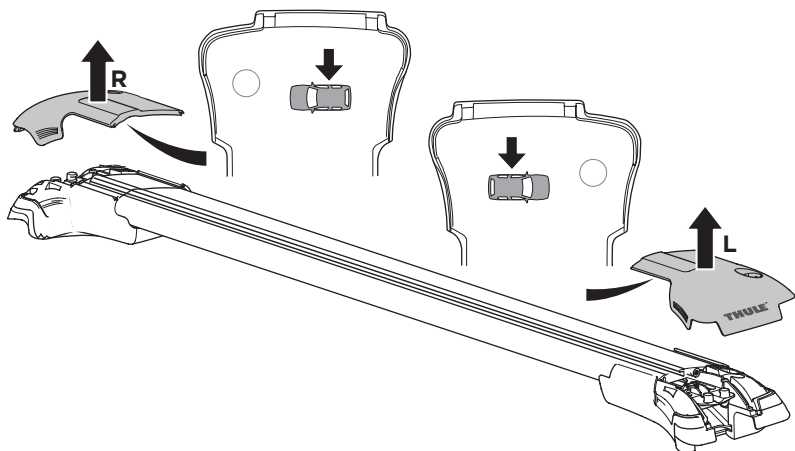

2




x2





x1


i

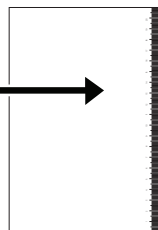

Rail	Hole
163-192 mm	4
135-163 mm	3
107-135 mm	2
79-107 mm	1

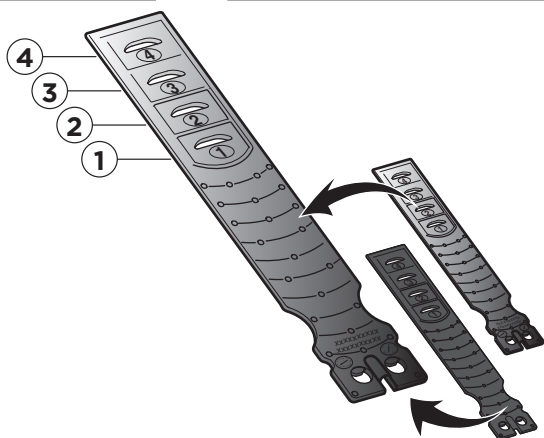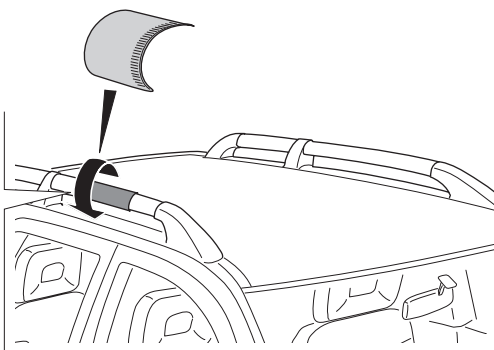



3

 


x1



x2

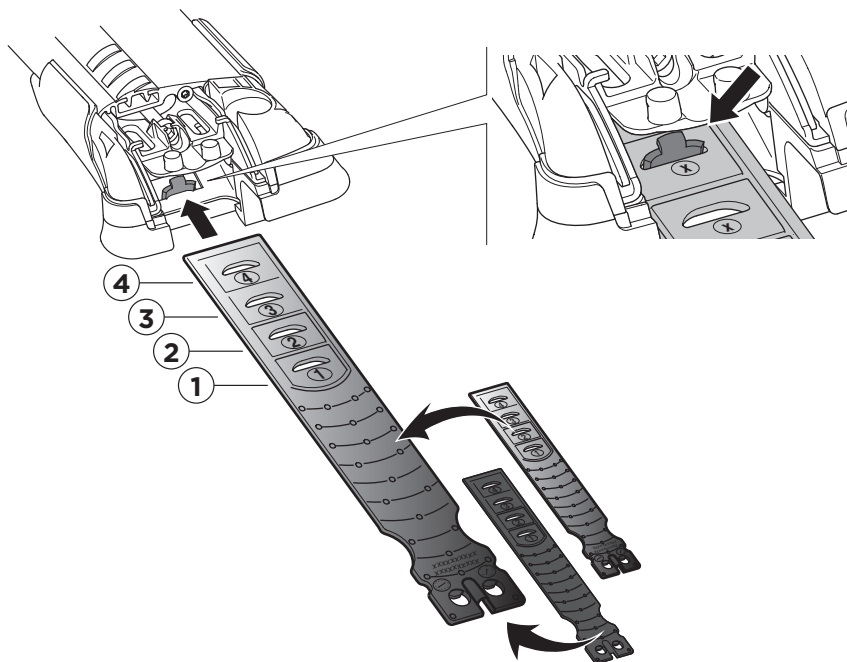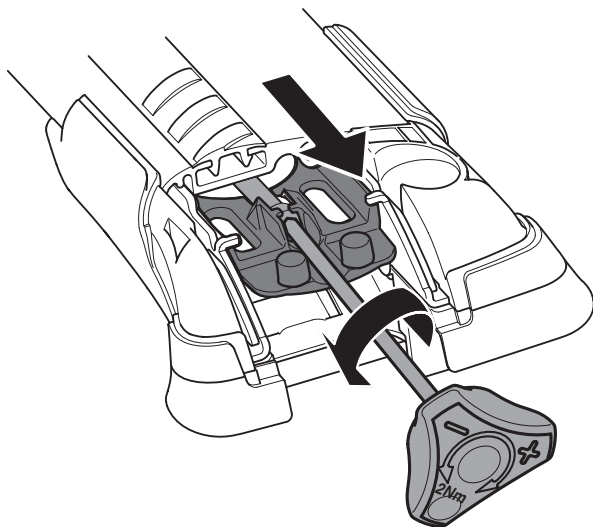

i

 

958100 / 958120
Wingbar Edge Rail S



958200 / 958220
Wingbar Edge Rail M



958300 / 958320
Wingbar Edge Rail L





958400 / 958420
Wingbar Edge Rail S/M




958500 / 958520
Wingbar Edge Rail M/L






4

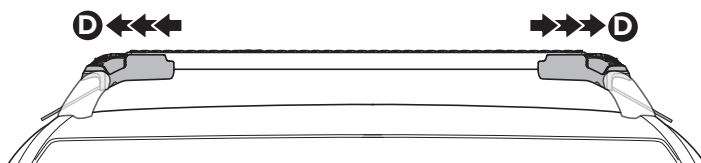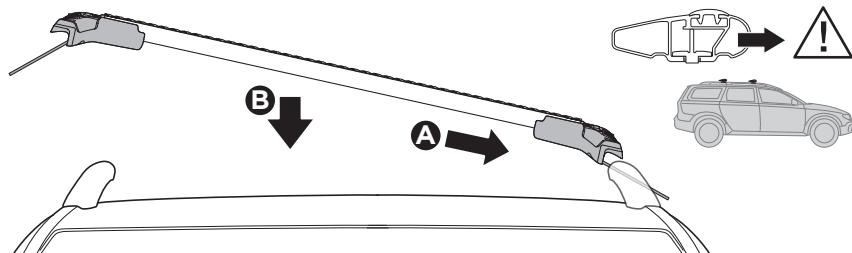

5

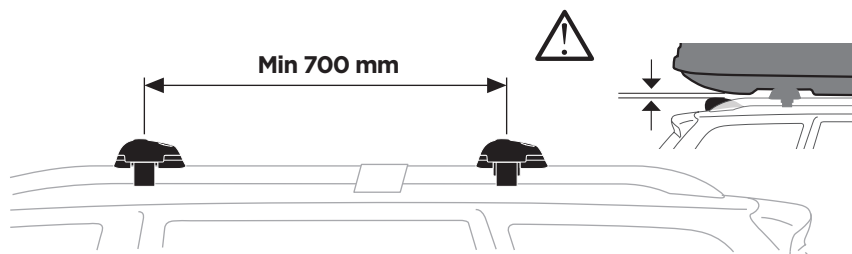

6


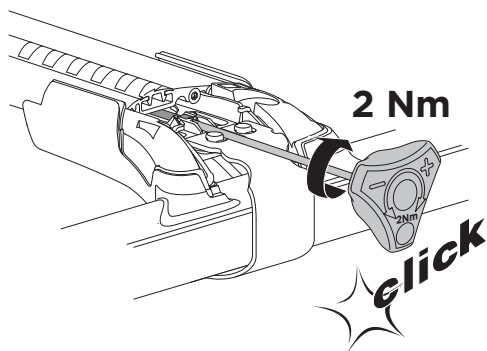
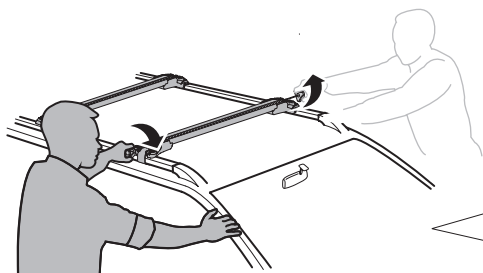
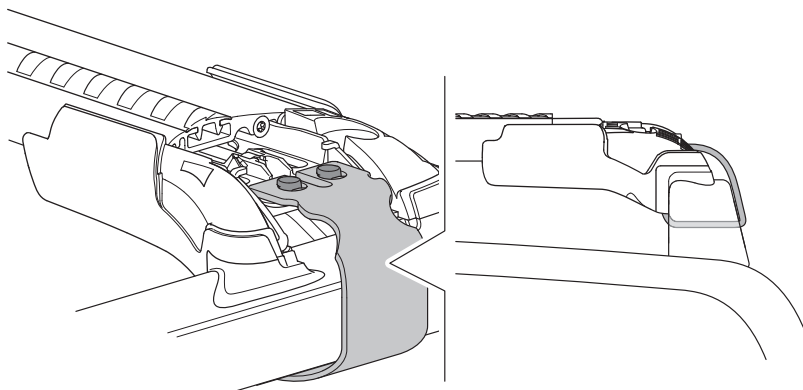


- EN** Tighten alternately
DE Die Schrauben abwechselnd anziehen
FR Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
IT Alternare il serraggio delle viti
ES Apretar alternativamente
PT Aperte alternadamente
SV Dra åt växelvis
DK Spænd skiftevis
NO Trekk til vekselvis
FI Kierrä vuorotellen
ET Pinguldage vaheldumisi
LV Pievelciēt pamīšus
LT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно
UK Затягти почергово
BG Затегнете последователно
CS Pokręťta багаžníka dokřeřaj dokřeřaj naprzemiennie.
SK Doťahujte striedavo
SL Privijajte izmenično
HR/BiH Naizmjenično zategnite
RO Strângeți alternativ
HU Egymástól függetlenül szorítandó
EL Σφιίγετε εναλλάξ
TR Dönüşümlü sıkın



إحكام الربط بالتناوب **AR**
 חזק לסירוגין **HE**

- ZH** 交替拧紧
JA 左右交互に締めつけてください
KO 번갈아 조이기
TH ขั้วในแบบสลับ





7

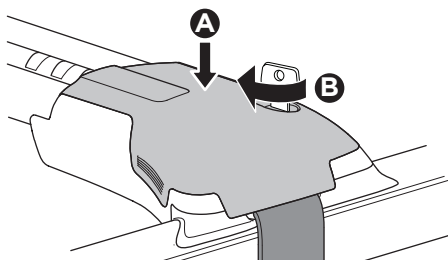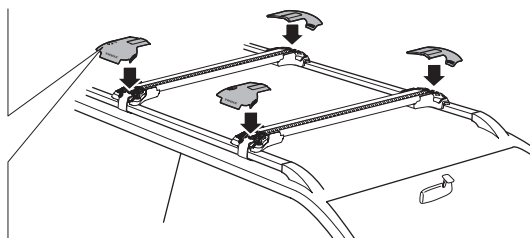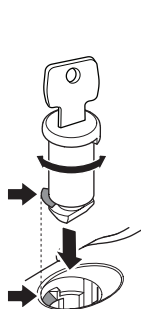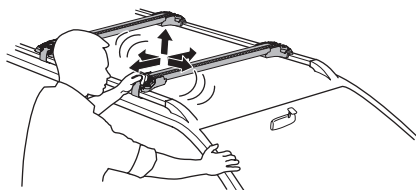


i

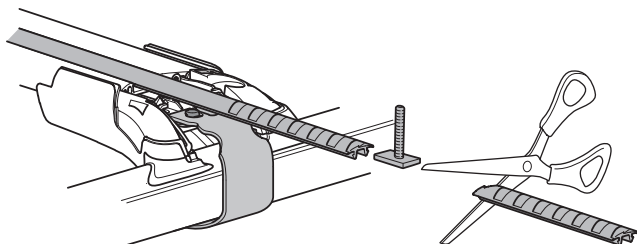 


i

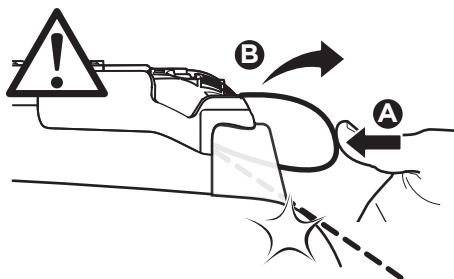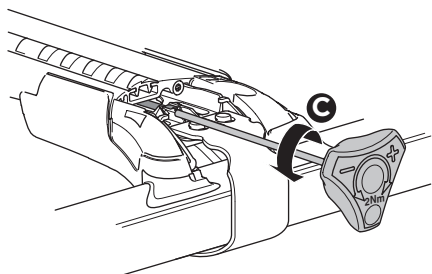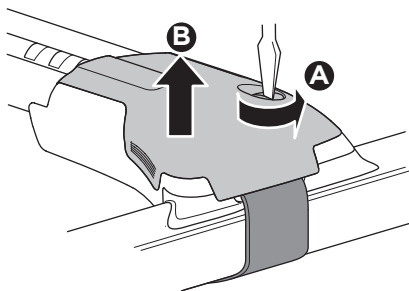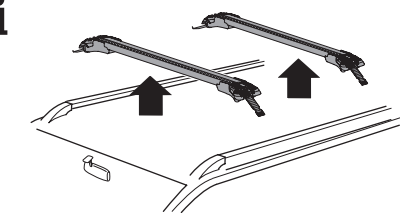

i

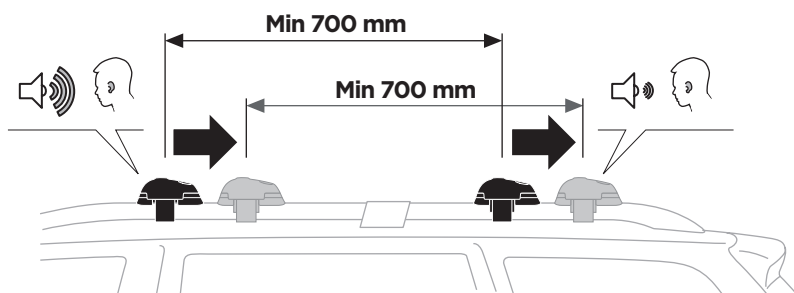

Thule One-Key System

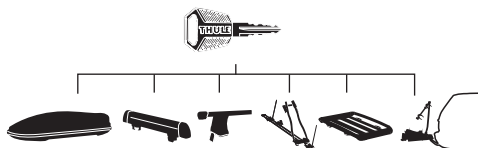

450400  (x4)


450600  (x6)

450800  (x8)

451200  (x12)

451600  (x16)

20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1

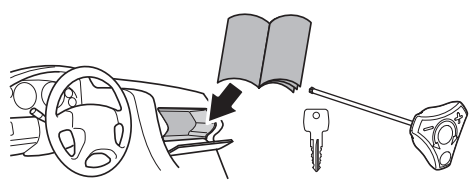

 Thule Sweden AB, Borggatan 5
335 73 Hillerstorp, SWEDEN

» PART OF THULE GROUP

 info@thule.com

© Thule Group 2019. All rights reserved.

 www.thule.com

501-7700-06