



Princess Fondue Pure Black

01.173025.02.001



PARTS DESCRIPTION

1. Base
2. Thermostat
3. Fondue pan with 8 forks
4. Fondue ring

SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The connector must be removed before the appliance will be cleaned, please make sure the inlet is completely dry before the unit will be used again.
- This appliance is intended to be used in household and similar applications such as:
- Staff kitchen areas in shops, offices and other working environments.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.
- Farm houses.
- Disconnect the mains plug from the mains when the appliance is not in use, before assembly or disassembly and before cleaning and maintenance.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- Children shall not play with the appliance.



- Surface is liable to get hot during use.

Cleaning and maintenance

- Before cleaning or maintenance, always switch off the appliance, remove the mains plug from the wall socket and wait until the appliance has cooled down.
- Do not immerse the appliance in water or any other liquids for cleaning.
- Clean the forks and the fondue pot in warm soapy water and dry them thoroughly.
- Clean the base with a clean, dry cloth.
- The appliance, base and accessories are not dishwasher proof.

BEFORE THE FIRST USE

NOTE: NEVER USE THE FONDUE POT ON ANOTHER HEATING SOURCE THAN THE SUPPLIED HEATING BASE.

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Clean the forks and the fondue pot in warm soapy water and dry them thoroughly.
- Place the device on a flat stable surface and ensure a minimum of 10 cm. free space around the device. This device is not suitable for installation in a cabinet or for outside use.

USE

- The fondue pan is suitable for various types of fondue, such as the classic meat fondue, as well as cheese fondue, a chocolate fondue or a Chinese fondue (with broth).
- You can preheat the ingredients in a pan before pouring it into the fondue pot.
- Fill the pan with oil, cheese, stock or chocolate, but do not fill it above the 1.5l maximum mark.
- Place the plug into the socket and set the thermostat to the desired setting.
- As soon as the appliance has reached the set thermostat setting, the indicator light will go out.
- While in use, the temperature light will go on and off: this shows that the thermostat is working correctly and that the contents of the pan are being heated at the set thermostat setting.
- Stir the fondue to make sure that it is fully melted.
- Pick up the food using the fondue fork
- Dip the food into the fondue and stir it into the fondue for a few seconds.
- Take the fondue fork from the fondue pot and remove the food.
- To switch off the appliance, turn the thermostat dial to the minimum temperature and remove the main plug from the wall socket.

PRODUCT SUPPORT

Should you have any question or issue with this product please contact our UK team:

Email: technical.sl.uk@smartwaresgroup.com

Phone: 0345 230 1231 (local rate)

Open Monday – Friday 10am till 4pm except Thursdays 12-30am till 4pm.

You can find all available information and spare parts at <http://www.princesshome.co.uk>

ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its life, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recycling.



princesshome.co.uk

© Princess 2019