


Maximum Equipment Mounting Depth for a NetShelter WX

The maximum equipment mounting depth for the NetShelter WX (AR100 or AR100HD) is 18". Equipment Mounting Depth is defined as: *the distance from the front mounting ears to the rear of the device.*

An equipment mounting depth of 18" leaves approximately 2.75" from the rear of the equipment to the rear door for cables.

Equipment which mounts any deeper will not allow room for cables in the rear.

This photo shows a device with 18" 'equipment mounting depth' installed into a NetShelter WX:

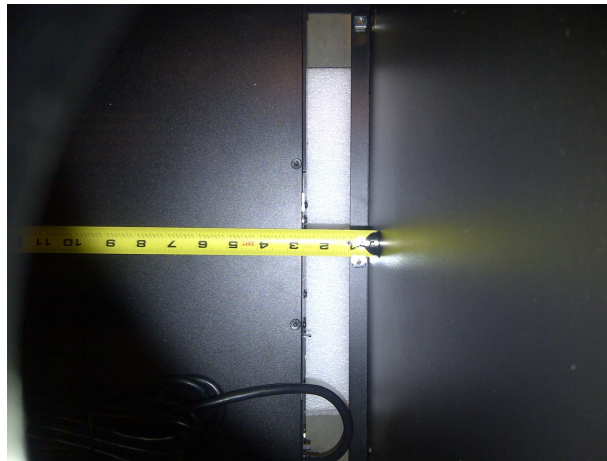


Mounting Rail Depth and Installing Deep Equipment

The maximum vertical mounting rail depth for the NetShelter WX (AR100 or AR100HD) is 15.5".

If you have a piece of equipment whose 4-post mounting rail kit is deeper than 15.5" you will not be able to use that rail kit in the NetShelter WX.

You may still be able to mount these products into the NetShelter WX if they have front mounting ears.

- Instead of using the rail kit please attach the front mounting ears as in this photo:

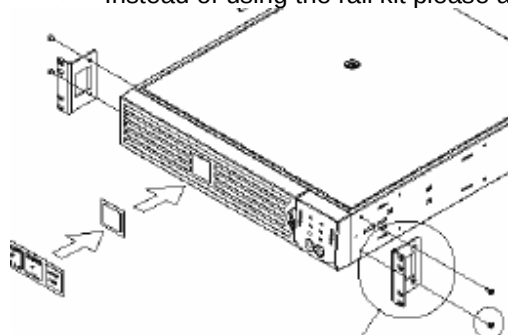

continued on next page

- Install the equipment into U-space #1. If the rear of the equipment requires support you may rest it on the rear frame of the enclosure as in this photo:

