


Your new appliance is a combined ventilated, **No-Frost** fridge-freezer exclusively for domestic use. Whirlpool Total-no-frost fridge freezers circulate chilled air around the storage areas, reducing humidity to prevent the formation of ice, thereby completely eliminating the need for defrosting. Frozen items don't stick to the walls, labelling stays legible and storage space remains neat and clear. No-Frost's temperature control helps keep food fresher for longer. In combination with **6th Sense**, not only it controls the sensor, but directs the cooling power exactly where it is needed, optimising energy efficiency.

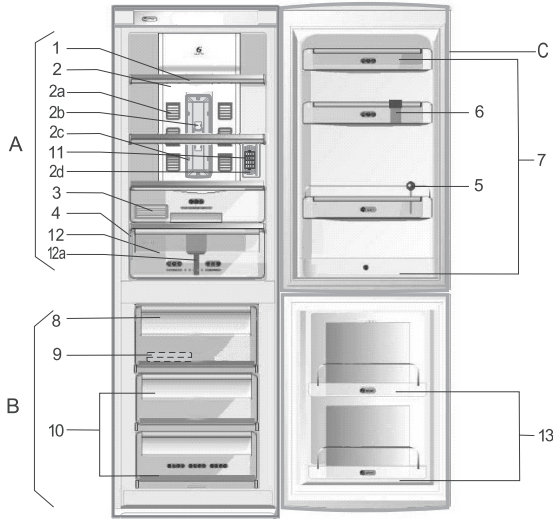

## A. Refrigerator Compartment

1. Shelves / Shelf area
2. **Multi-flow** cold air system
- 2a. Multi-flow cold air vent
- 2b. Light bulbs
- 2c. Light cover
- 2d. Air intake area
3. Cooler compartment (temperature lower than in the refrigerator compartment)
4. Rating plate
5. Removable shelf with a bottle holder
6. Divider
7. Door trays
11. Antibacterial filter grille
12. Crisper
- 12a. Crisper divider

## B. Freezer Compartment

8. Upper basket (freezing zone)
9. Ice tray
10. Storage basket for frozen food items
13. Freezer compartment door trays (for pizza or other frozen food with short storage time)

## C. Control panel and LCD display

**Note:** The number of shelves and configuration of accessories may vary, depending on model. All shelves, door trays and racks are removable.


**Do not place food in a way that obstructs the air intake area (2d) and the air flow outlets (2a).**

**Note: Refrigerator/freezer accessories are not suitable for washing in a dishwasher.**

The **anti-bacterial filter** ensures a higher level of hygiene in your refrigerator through continuous purifying of circulating air from bacteria. Remove it from the box found in the crisper drawer (item 12) and insert into the grille (item 11). Replace the filter every 6 months.


1. Remove the filter together with the grille and dispose as a whole.
2. Replace the filter and the grille with the new ones.
3. The replacement procedure is attached with the filter. Our After-sales Service can supply this type of filter.

## CONTROL PANEL DESCRIPTION

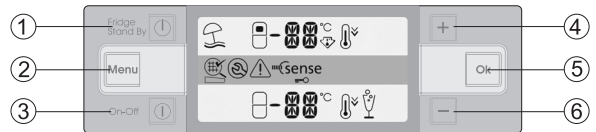

## Compartments ON / OFF, menu, selection and confirmation buttons

1. Refrigerator compartment Stand-by - ON/OFF button
2. Menu button
3. Appliance ON/OFF button
4. Selected compartment temperature increase button
5. Confirmation button
6. Selected compartment temperature decrease button.

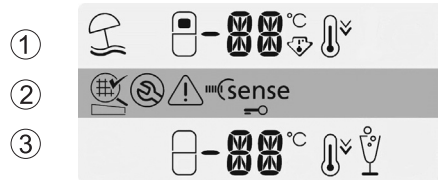

## Functions and settings symbols

1. Functions and settings for the refrigerator compartment
2. Appliance, alarm and malfunction symbols
3. Functions and settings for the freezer compartment.

**Switching on the appliance:** Press the On-Off button

**Switching off the appliance:** Press the On-Off button again

**Adjusting the temperature:** To change the temperature inside the refrigerator or freezer compartment, press the Menu button until the refrigerator or freezer temperature symbol turns on (symbol flashes).

Then adjust the temperature by pressing the +/- buttons and confirm by pressing "OK".

**Displaying the refrigerator and freezer compartment temperatures.**

The temperature inside the refrigerator compartment can be adjusted between +2°C and +8°C. In the same way, the freezer compartment temperature can be adjusted between -16°C and -24°C.

## ELECTRICAL CONNECTION

When the appliance is connected to the power supply, the display lights up and all the symbols appear on the display for a few seconds.

The factory setting -18°C appears and flashes, the symbol  Sense lits, while the refrigerator display shows a temperature of +5°C (factory-set). While the appliance is working to reach the factory-set temperature, the alarm icon lits , an acoustic alarm sounds and temperature symbol on the freezer display flashes (- -). This indicates that the appliance has not yet reached the optimal temperature for storage of foodstuffs.

Press and hold the button  until the acoustic alarm disables.

The icon  disappears when the freezer compartment reaches a temperature below -12°C, the display will show the temperature -18°C, at which point food can be loaded into the freezer compartment. After being switched on, the refrigerator needs from 2 to 3 hours to reach the correct temperature to store a typical volume of food in the refrigerator compartment.

### IMPORTANT:

- If food is placed in the refrigerator before the appliance has cooled completely, it may deteriorate.
- Turning the refrigerator and freezer controls to a cooler than recommended setting will not cool the compartments any faster.
- A built-in exterior moisture control continuously guards against moisture build-up on the front edges.

Do not be alarmed if these edges sometimes feel warm to the touch. The inside light switches on when the refrigerator door is opened. After 10 minutes of door opening the light switches off.

## GUIDE TO SELECTING FUNCTIONS

Functions are not available until freezer compartment reaches the temperature below -12°C.

### Functions and settings for the refrigerator compartment.



Refrigerator compartment door open



Refrigerator compartment temperature setting



#### Fast cooling

This function should be selected before refrigerating fresh food. To select the function, keep pressing the menu button until the display shows the fast cooling symbol . The symbol flashes, press OK to confirm. The function is automatically disabled after 6 hours, or can be manually disabled by repeating the same procedure.



#### Vacation

This function turns the refrigerator compartment to a warmer state if you are going away for some time. To select the function, keep pressing the menu button until the display shows the vacation symbol . Press OK to confirm. To turn the refrigerator back to setting point repeat this procedure.

**Important:** after activating this function, remove all perishable foodstuffs from the refrigerator compartment and leave the door closed, since the refrigerator maintains a suitable temperature to prevent the formation of unpleasant odours.



#### ON/OFF

This function turns off both the refrigerator and freezer compartments. To enable the stand-by function, press the "on-off" button for 3 seconds, two hyphens appear on both display to indicate that the appliance is on stand-by. To switch the appliance on again, follow the same procedure until the previously set temperature is shown on the display. When the appliance is on stand-by the light inside the refrigerator compartment does not work. Remember that this operation does not disconnect the appliance from the power supply.



#### Fridge Stand-by

This function turn off the fridge compartment while the freezer compartment continue to run. To enable the stand-by function, press the "Fridge stand-by" button for 3 seconds. To switch the fridge compartment on again, follow the same procedure until the previously set temperature is shown on the display. When the fridge compartment is on stand-by the light inside the refrigerator compartment does not work.

## Functions and settings for the freezer compartment

 **-18°C** Freezer compartment temperature setting



### Fast freezing

This function must be activated before freezing fresh food. To select the function, keep pressing the menu button until the display shows the fast freeze symbol. Press OK to confirm. The function is automatically disabled after 24 hours, or can be manually disabled by repeating the same procedure.



### Party mode

To select the function, keep pressing the menu button until the display shows the party mode symbol .

The symbol flashes, press OK to confirm. Use this function to chill drinks inside the freezer compartment. When the function is in operation, the symbol is animated. 30 minutes after selection (the time required to chill a 0.75 l bottle without the glass breaking), the symbol flashes, an acoustic alarm sounds and the display lights up: remove the bottle from the freezer compartment and press the OK button to disable the function.

**Important:** do not leave the bottle inside the freezer compartment longer than the time necessary for chilling.

## Appliance, alarm and malfunction symbols



### "6th Sense" function

The 6th Sense function is automatically activated when:

- a large amount of food is loaded into the refrigerator and/or freezer
- the refrigerator and/or freezer door is left open for a long time
- a prolonged power failure takes place, causing the internal temperature of the appliance to increase to values that cannot guarantee safe storage of food.

The symbol flashes for approximately 3 seconds, after which it remains permanently lit until optimal storage conditions have been automatically restored.



### Control panel lock function

This function prevents anyone from inadvertently changing settings or switching off the appliance.

To lock the control panel, press buttons "+" - "OK" - "-" at the same time for 3 seconds until the display shows the symbol : an acoustic signal confirms the function has been selected. To disable the function, follow the same procedure until the symbol  switches off.



### Alarms

In the event of an alarm, the acoustic alarm and indicator lights are activated.

#### Freezer temperature alarm

The acoustic alarm sounds: alarm symbol lights up and the temperature indicator flashes.

The alarm is activated when:

- The appliance is connected to the power supply for the first time or after prolonged disuse
- The freezer compartment temperature is too high
- The quantity of foods loaded into the freezer exceeds that indicated on the data plate
- The freezer door has been left open for a long time

**Note:** in these cases automatically appears on the display

#### Power failure alarm

The maximum temperature reached during a power failure flashes on the freezer display. The alarm symbol lights up and the acoustic alarm sounds at the same time. This alarm may activate when:

- There had been a prolonged power failure, and the freezer internal temperature rose to the level that does not guarantee appropriate food storage conditions.

**To disable the alarm press OK, after which the pre-set temperature will appear on the display.**

**Note:** evaluate the state of the stored food.

#### Operation alarms

In the event of operation alarms, other alarms will also be displayed in the refrigerator or freezer compartment, depending on the malfunction site, (e.g. CF, AL01, AL02, AL03 or AL04 etc...) call After-sales Service and specify the alarm code.



#### Refrigerator door open alarm

The refrigerator door symbol lights up and the acoustic alarm sounds.

The alarm is activated when the refrigerator's door is left open for more than 2 minutes. Press OK to mute the acoustic alarm.

If the door is not closed, the acoustic alarm will sound again after two minutes. Close the door/s and press the OK button.

**Note:** in these cases 6th Sense automatically appears on the display



Malfunction and After-sales Service symbol  
(Call After-sales Service)



Listeria indicator - average temperature of the whole compartment (depending on model)

### Right temperature inside the refrigerator

The symbol  indicates the coldest zone in the refrigerator compartment. For optimum temperature adjustment, the refrigerator is provided with a temperature indicator to allow you control the average temperature.

## Checking the temperature

After the appliance has been switched on for at least 24 hours, can be checked if the temperature in the refrigerator is correct and, if necessary, adjust the setting as indicated in the user instructions (see "Adjusting the temperature").

The internal temperature of the refrigerator depends on various factors such as the ambient temperature of the room, the amount of food stored and how often the door is opened. These factors should be taken into account when setting the appliance.

If the symbol  is switched OFF, it means that the temp. inside the refrigerator is too warm; in this case adjust the temp., setting and wait for at least 12 hours before checking again if the temp. is correct.

**IMPORTANT:** after opening the door or loading the refrigerator, it is normal if the symbol is switched OFF for some time, especially if room temperature is very warm.



## Function indicating the necessity to replace the Anti-bacterial filter

The replacement of the filter is described on the first page of this Product Sheet.

After connecting the appliance, the three-segment  icon is displayed.

The segments will sequentially go off:



- after 2 months



- after 4 months



- after 6 months

After 6 months of operation, the  alarm icon and

 icon will be displayed, indicating that it is necessary to replace the filter. After replacing the filter, keep the "OK" button pressed for about 5 seconds, until the  alarm icon goes off and the three-segment  icon

reappears. It is possible to switch the  icon off until the filter is replaced (for about 6 hours) by pressing the "OK" button.

## Cleaning

Press the Stand-by button, which allows you to switch off the refrigerator compartment alone, keeping the freezer on. The refrigerator compartment can now be emptied and cleaned.

## REPLACING THE LIGHT BULB

Always disconnect the refrigerator from the power supply before replacing any light bulbs.

If the inside light is not working:


- Remove the light cover using a small screwdriver. Put the tip of screwdriver into upper rectangular hole, press down the catch for unblock and pull cover towards outside.
- Check the bulb and if necessary replace it.
- Pull the bulb towards the outside of the lamp holder. Put the new one pushing connectors to the sockets of lamp holder. It is used a special bulb, which does not unscrew. This bulb is available only from our After-sales Service. Replace using maximum 15W bulb.
- Assembly again the light cover pushing in its place, hearing "click effect". Do not leave not covered bulbs.

## Warning:

After removing the light cover in order to cleaning, unplug the appliance at first. Use only slightly wet wash cloth. Do not touch the bulbs. Keep special precautions.

## FRESH CONTROL COMPARTMENT UNBLOCK

Press the both locks, pull the drawer out.

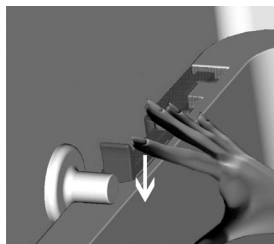

## Changing the position of shelves:

Your refrigerator allows you to change the position of shelves according to your needs.

- To remove the shelf, pull it forward to the stop.
- Keep the lock pressed down as shown in the picture detail, and pull the shelf frontward until it is released. The locks can be pressed separately.
- Pull the pins outward to remove the rails.
- Remove the rails as in the picture and place them where you wish.
- To place the rails observe the inscription "Λ" written on the rail.
- After that, place the shelf on them.

