




PW-2050 BATTERY POWER TESTER


Testing of batteries :

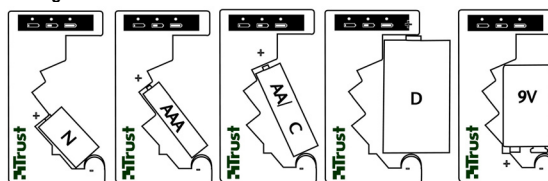

Technical specifications :

		1.5 V batteries		9 V batteries	
		0 – 1,1 V	0 – 6,6 V	0 – 6,6 V	0 – 6,6 V
	EMPTY	0 – 1,1 V	0 – 6,6 V	0 – 6,6 V	0 – 6,6 V
	HALF	1,1 – 1,3 V	6,6 – 7,8 V	6,6 – 7,8 V	6,6 – 7,8 V
	FULL	> 1,3 V	> 7,8 V	> 7,8 V	> 7,8 V

Replace empty battery :

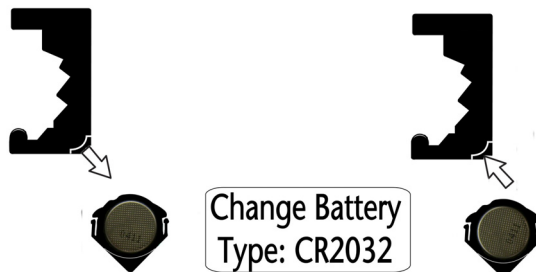

More information & FAQ : www.trust.com/14418

CE : www.trust.com/14418/ce

Warranty : www.trust.com/warranty

L I F E I S M O R E ! T R U S T U S

TRUST.COM