

Philips audio player

SA4126
SA4127
SA4146
SA4147

Quick start guide



- 1 Install
- 2 Connect
- 3 Transfer
- 4 Enjoy

PHILIPS

Need help?

Please visit

www.philips.com/welcome

where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

Need help?

Look up our Support Centre website

www.philips.com/welcome

Besoin d'aide ?

Visitez la page Web de notre centre
d'assistance à l'adresse

www.philips.com/welcome

¿Necesita ayuda?

Consulte nuestra página Web de Soporte técnico,
www.philips.com/welcome

Support?

Besuchen Sie unser Support Center auf
www.philips.com/welcome

Contents

EN

- 2 Is there a manual?
- 2 Register your product
- 2 Don't forget about upgrades
- 3 What's in the box
- 4 Overview of controls and connections
- 5 Install
- 5 Connect
 - 5 Insert the battery
 - 5 Read the battery level indication of your player
- 6 Transfer
 - 6 Transfer music with Windows Media Player 11
- 7 Enjoy
 - 7 Power on and play
 - 7 Navigate the menu
- 8 Music mode
- 8 Recordings
 - 8 Make recordings
 - 8 Play back recordings
- 9 Using the pouch
- 9 Changing the cover
- 10 Attaching the neck strap
- 11 Troubleshooting
 - 11 How do I recover my player?
 - 11 How do I reset my player?
- 11 Disposal of your old product

Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: www.philips.com/welcome

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free upgrades of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

What's in the box



*



Headphones



USB cable



AAA battery



CD-ROM



Pouch



Extra cover



Quick Start Guide

What else will you need?




Computer

A computer with:
 Windows XP (SP2 or above)
 Pentium Class 300MHz processor or higher
 CD-ROM drive
 128 MB RAM
 500MB Hard Disk space
 USB Port
 Internet connection (preferable)
 Microsoft Internet Explorer 6.0 or later

* The color of your player's cover may differ from the pictures in this user manual, depending on the region in which you bought your player.

Overview of controls and connections

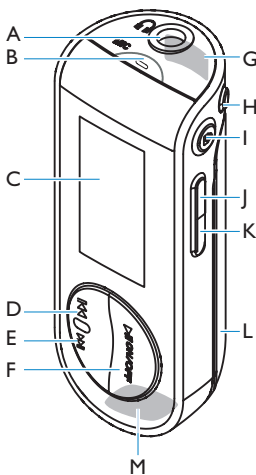

A	Headphones jack
B	Microphone
C Display	Dynamically display menu, options and track information
D	Press to return to a previous song, press and hold to fast rewind. In menu mode, press to navigate through the menu.
E	Press to skip to the next song, press and hold to fast forward. In menu mode, press to navigate through the menu.
F	Power on/off and Play/Pause, confirm a menu setting
G	Eyelet for neck strap
H REC	Start or stop voice recording
I MENU/	Press to access the menu / Return to previous menu Press and hold to disable or enable the player's controls
J Vol -	Volume down
K Vol +	Volume up
L	Battery door
M	USB connector

I Install

EN

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the on-screen instructions to complete the installation of **Windows Media Player 11** and **Philips Device Manager**.

2 Connect

A Insert the battery



- 1 Remove the battery door by sliding it in direction of the arrow.



- 2 Insert the supplied AAA battery into the battery compartment.

B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:



Full



Two-thirds full



Half full



Low



Empty

TIP When the batteries are almost empty, the low battery screen  blinks. Your player will power down in less than 60 seconds. Your player will save all settings and un-finished recordings before it powers down.

3 Transfer

A Transfer music with Windows Media Player 11



- 1 Start **Windows Media Player 11**.
- 2 Connect the player to your computer using the supplied USB cable.
- 3 Once the player is connected, the sync tab changes as shown () and the device and its contents become visible in **Windows Media Player 11**(see figure above).
- 4 **Windows Media Player 11** will automatically start synchronizing the contents of your music library to your player.

For details on how to set synchronization options in **Windows Media Player 11**, pls refer to the user manual.

4 Enjoy

EN

A Power on and play

To power on, press ►|| until the **PHILIPS** welcome screen appears.
To power off, press and hold ►|| until there is no display on the screen.

B Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations. Use ◀◀ and ▶▶ to browse through menus. Press ►|| to confirm your selection. You can press **MENU** to access the menu and return to the previous level. When your player powers up, you can see the Root menu. It includes:

🎵 Music	Play your digital music tracks
📁 Recordings	Play your recordings
⚙ Settings	Change the play mode, equalizer, backlight or language settings, display the player information

From the main menu, select **Music** to enter music mode.
You can search from the following music options:

All songs
Album
Artists
Playlists

- ▶ Alphabetically listed albums
- ▶ Alphabetically listed artists
- ▶ Playlists collections

Music mode (also applicable to playback of recordings)

You can do the following actions during music playback:

To	Do this
Play / Pause music	Press ►
Skip to next song	Press ►
Return to previous song	Press ◄
Fast forward	Press and hold ►

To	Do this
Fast rewind	Press and hold ◄
Return to browsing	Press MENU key
Increase volume	Press Vol +
Decrease volume	Press Vol -

Recordings

Your player allows you to make voice recordings and play back your recordings.

Make recordings

- 1 Press and hold **REC** to start voice recording.
 - > Your player displays the recording progress.
- 2 Press and hold **REC** again to stop voice recording
 - > Your player displays the saving progress. The voice recording will be saved on your player. (Filename format: VOICEXXX.WAV where XXX is the recording number which is automatically generated.)

TIP You can pause and restart a recording anytime with ►||.

Play back recordings

You can find your recordings in the recordings mode.

- 1 From the root menu, select **RECORDINGS** to enter the recordings mode. Your player will play all your recordings alphabetically and playback will start with the latest recording made.
- 2 Press ►|| to pause the current recording on playback.
- 3 Press |◄ or ►| to play the next or previous recordings.
- 4 Press and hold |◄ or ►| to fast forward or fast rewind the current recording on playback.


Using the pouch



- 1 Place the magnetic side of the pouch on one of the flat surfaces of the player as shown above.
- 2 Flip pouch over to wrap around the player.
- 3 The pouch should cover the player completely.
- 4 With the pouch in position, the navigation keys and LCD display are fully visible through the clear window.


Changing the cover

- 1 Use a fingernail to lift the cover off in direction of the darts in the illustration.
- 2 Position the new cover while aligning the 5 tabs of the cover with the corresponding slots in the player casing.
- 3 Press the cover down until it locks into place with an audible click.

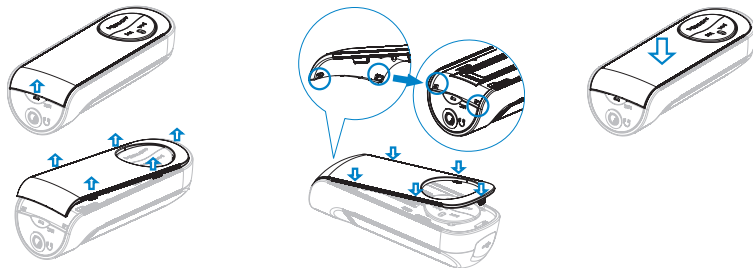

Attaching the neck strap

- 1 Thread the fine loop at the end of the neck strap through the little eyelet at the back of your player.
(This involves some skill and you may need to use a needle to do so).
- 2 Then thread the whole neck strap through the small loop to secure the player to the strap.
- 3 The neck strap can be detached from the fine loop by pressing the two locking tabs of the buckle and pulling the two buckle halves apart.
- 4 To re-attach the neck strap, simply push the two buckle halves back together until they interlock with an audible click.

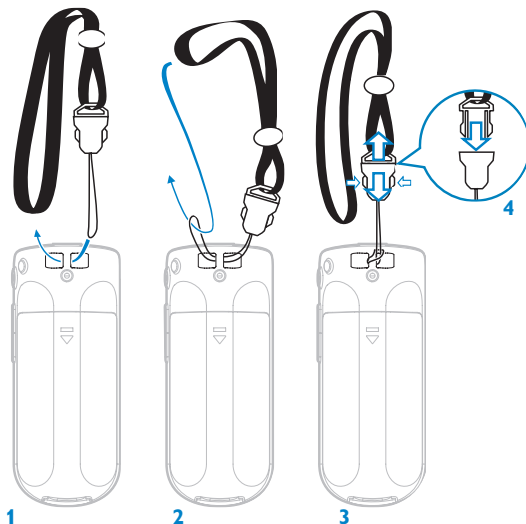

Please note that the neck strap should be attached “after” the pouch is fitted to the player. When removing the pouch, the neck strap has to be detached first.

Troubleshooting

How do I recover my player?

In the event of a device error, please follow the below procedures:

- 1 Make sure the player is disconnected from the PC and turned off.
- 2 Launch the **Philips Device Manager** at **Start > Programs > Philips Device Manager > Philips Device Manager**.
- 3 Press and hold ►►.
- 4 Connect the player to the computer USB port.
- 5 Keep holding ►► until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
- 6 After the repair process is completed, click **OK** and disconnect your player.
- 7 The player is ready for use again after a restart.

WARNING When the first time you connect the device to a PC in recovery mode, a hardware wizard will be popped up to install the software. Please select "install the software automatically" and click Next, and then click Finish to complete the installation. During the installation, a warning message stating "The Software you are installing for this hardware has not passed Windows Logo testing." , please select "Continue Anyway", this installation will not affect your PC.

How do I reset my player?

In case the player does not react on any key press, did hang up or freeze up, please remove the battery and insert it again.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

 Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2007 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

wk7241



Printed in China