

Register your product
and get support at
www.philips.com/welcome

SRP1101/10



EN User Manual

PHILIPS

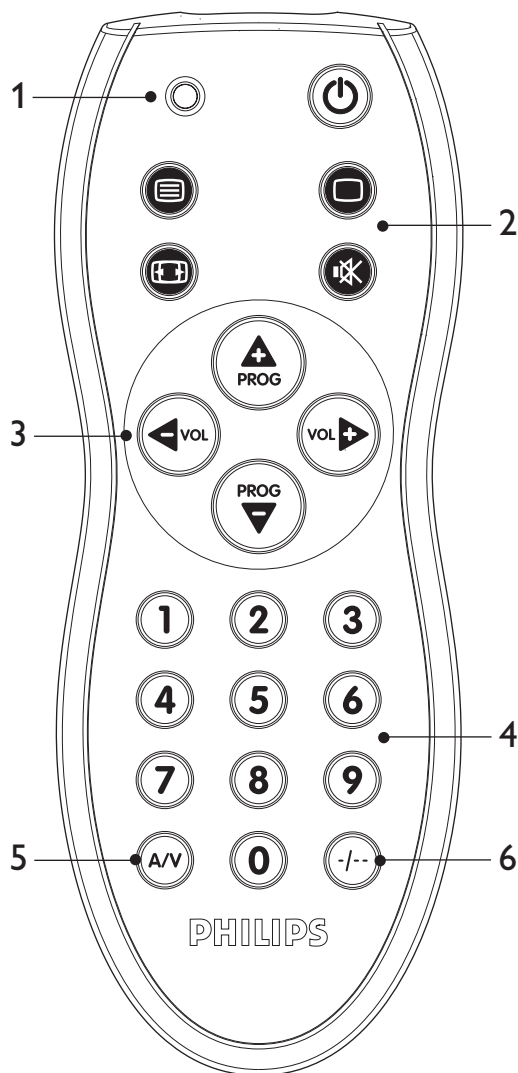 


Table of contents

1	Your SRP1101	3
2	Getting started	3-6
2.1	Inserting the batteries	3
2.2	Setting up the universal remote control	4-6
3	Using the universal remote control	6-8
3.1	Buttons and functions	6-7
3.2	Resetting a button to its original function	7-8
4	Service and support	8-10
4.1	Frequently asked questions	8-10
4.2	Need help?	10
	Helpline	10
	Brandlist	11-21
	Information to the consumer	22
	Compliance with EMF	22
	Recycling and disposal	22
	Battery information	22

1 Your SRP1101

 
Congratulations on your purchase of the Philips SRP1101 universal remote control. After setting up the remote control you can operate the most-used functions of almost any brand of TV.

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

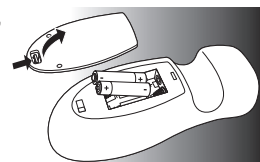

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

 
2.2 Setting up the universal remote control

The remote control can be set up to operate traditional TV, flat screen TV and projection TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos.

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

- 2 Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds**.

- The green Setup light  lights up. The remote control is now in setup mode.

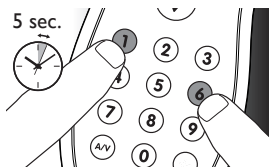


- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A four-digit code is shown for each brand.


Use the digit buttons to enter the code for your brand:

 - If the green Setup light  turns off, an invalid code was entered. In this case, try again.

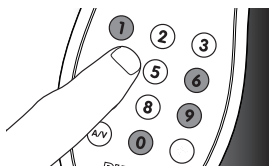


- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.

 - The remote control is now set up to operate your TV.
- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

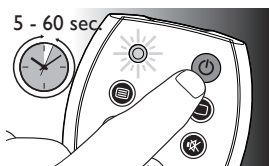

 
- 5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the ,  and digit buttons function properly.

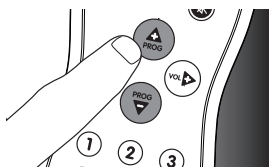

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.1.

- 6 Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds** to finish setup.

 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

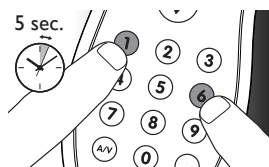

Important

If you made a mistake:

- Keep buttons ① and ⑥ **pressed simultaneously for 5 seconds** to exit setup. The green Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Improving buttons

When correctly set up, the remote control should be able to operate your TV. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.



Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

 
- 1 Make sure that the TV is switched on.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the TV responds. Repeat this for every button that does not function.
- If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup

1 Make sure the TV is switched on.

2 Keep buttons ① and ④ pressed simultaneously for 5 seconds.

- The green Setup light ① lights up. The remote control is now in setup mode.

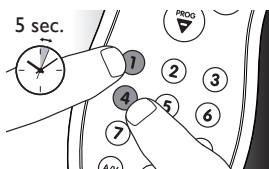


3 Press and hold the button that does not function and immediately release it when the TV responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

4 Keep buttons ① and ⑥ pressed simultaneously for 5 seconds to save your settings and exit setup mode.

 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

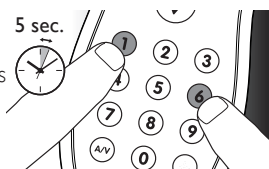

3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons that you need for operating your TV.

Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP1101.
- Only functions that are available on your original remote control can be used for operating your TV with the SRP1101.

- 1 ① setup light. Lights up when a remote control command is being sent and when the remote control is in setup mode.
- ② switches the TV on/off.

Note

 
For some TV brands/types, the ② button will only switch off the TV. You will have to press a digit button (direct channel selection) to switch on the TV again.

- 2 ③ teletext on (③)/off (④).
- ⑤ selects between regular (4:3) and wide screen (16:9) TV.
- ⑥ mutes TV sound.
- 3 ⑦ previous/next channel.
- ⑧ adjust TV volume.
- 4 ① ② ③ digit buttons for direct channel/track selection.
- ④ ⑤ ⑥
- ⑦ ⑧ ⑨
- ⑩ ⑪
- 5 ⑫ switches between external (Audio/Video) inputs of your TV.
- 6 ⑬ selects between one and two-figure channel numbers and channel numbers with more than two or three figures.

3.2 Resetting a button to its original function

If an improved button (see chapter 2.2.1) still does not function as expected, you can always reset the button to its original function.

- 1 Keep buttons ① and ⑥ pressed simultaneously for 5 seconds, until the green Setup light ① lights up.
- The remote control is now in setup mode.
- 2 Press digit buttons ⑨, ⑨ and ⑥, in that order:
- After each button press the green Setup light ① blinks once.

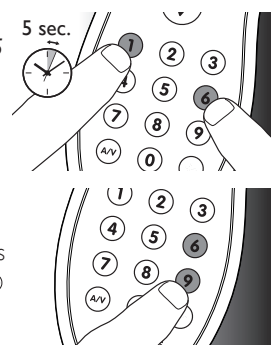

- 3 Press the button that you wish to reset **twice**.

E.g. the  button.

- After each button press the green Setup light  blinks once.
- The green Setup light  will blink one more time to confirm that the button was successfully reset to its original function.



4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my TV is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV brands.

- You will find a complete brand list on page 11-21 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV turns OFF in step 4 but does not turn ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.1) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.1.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The TV does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control.
- Try improving buttons. See chapter 2.2.1.

Wrong code selected during setup.

- Set up the remote control again. Always test if the TV responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.1.
- Check whether you are using the correct button to switch on Teletext. For TV this is the  button.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?
No. All user settings will be retained in the remote control memory for 5 minutes.

**Warning**

The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP1101, you can always contact us.

When calling our helpline, make sure to have the SRP1101 at hand when you call, so that our operators can help you determine whether the SRP1101 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP1101/10.

Date of purchase://
(day/month/year)

For **online support** go to:
www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

4Kus.....	0005	Arc En Ciel.....	0178
		Arcam.....	0179
A		Arcam Delta.....	3524
A.R. Systems.....	0012	Arcelik.....	4791 (DB1)
Acme.....	3521	Ardem.....	0184
Acoustic Solutions.....	0032 (DB1)	Aristona.....	0192
Acura.....	0036	Arthur Martin.....	0200
ADA.....	0038	ASA.....	0202
ADC.....	0040	Asberg.....	0205
Addison.....	0043	Asono.....	0212
Adelsound.....	0044	Astra.....	0221
ADL.....	0045 (DB1)	Asuka.....	0227
Admiral.....	0046	Atacom.....	0228
Advent.....	0054 (DB1)	Atec.....	0230 (DB1)
Adyson.....	0058	Atlantic.....	0233
AEG.....	0059	Atori.....	0237
Agashi.....	0063	Auchan.....	0240
Agazi.....	3522	Audiosonic.....	0264
AGB.....	0064	Audioton.....	0266
Aiko.....	0069	Audix.....	0270 (DB1)
Aim.....	0070	Ausind.....	0276
Airis.....	0071	Autovox.....	0280
Aiwa.....	0072	Avious.....	0291
Akai.....	0074	Awa.....	0296
Akiba.....	0078	Axxon.....	0303 (DB1)
Akito.....	0082	Ayomi.....	3525
Akura.....	0083		
Alaron.....	0085	B	
Alba.....	0086	B&D.....	3609 (DB1)
Alcyon.....	0093	Baird.....	0311
Alize.....	0100	Bang & Olufsen.....	0314
Alkos.....	3523	BARON.....	3959
Allorgan.....	0105	Basic Line.....	0325
Allstar.....	0108	Bastide.....	0327
Ambassador.....	0120	Baur.....	0331
Amitech.....	0130	Baze.....	0334
Amoi.....	0132	Bazin.....	0335
Amplivision.....	0138	BBK.....	0337
Amstrad.....	0140	Beijing.....	0345
AMW.....	0143	Beko.....	0346
Anam.....	0146	Bellagio.....	0354
Anam National.....	0147	BenQ.....	0359
Andersson.....	0148 (DB1)	Beon.....	0361
Anglo.....	0151	Best.....	0364
Anitech.....	0154	Best Buy.....	0365
Ansonic.....	0156	Bestar.....	0368
AOC.....	0165	Bestar-Daewoo.....	0369
Apex.....	3691	Binatone.....	0378
Apollo.....	0171	Black Diamond.....	0384 (DB1)

Black Panther Line. 4196
 Black Star..... 0386
 Blacktron..... 3526
 Blackway..... 0388
 Blaupunkt..... 0390
 Blue Media..... 3378 (DB1)
 Blue Sky..... 0395
 Blue Star..... 0396
 BlueH..... 3793 (DB1)
 Boghe..... 0400
 Bondstec..... 0403
 Boots..... 0405
 BPL..... 0413
 Brainwave..... 0415
 Brandt..... 0416
 Brimax..... 3797 (DB1)
 Brinkmann..... 0423
 Brionvega..... 0424
 Britannia..... 0425
 Bruns..... 0435
 BskyB..... 0436
 BSR..... 0437
 BTC..... 0439
 Bush..... 0445

C

Caihong..... 0462
 Cambridge Audio... 0470
 Cameron..... 4032
 Capsonic..... 0486
 Carad..... 0488
 Carena..... 0489
 Carrefour..... 0492
 Cascade..... 0496
 Casio..... 0499
 Cat..... 0500
 Catha..... 4094
 Cathay..... 0501
 Catron..... 0502
 CCE..... 0504
 Celestial..... 0511
 Centrex..... 0516
 Centrum..... 0519
 Centurion..... 0520
 Century..... 0521
 CGE..... 0523
 CGV..... 0524
 Changcheng..... 0526
 Changfei..... 0527

Changhai..... 0529
 Changhong..... 0530
 Chimei..... 3563
 Chuangjia..... 4096
 Chunfeng..... 0546
 Chung Hsin..... 0547
 Chunsun..... 0549
 Cimline..... 0552
 Cinetec..... 0560
 CineVision..... 0562
 Cinex..... 0563 (DB1)
 City..... 0569
 Clarivox..... 0576
 Classic..... 0580
 Clatronic..... 0581
 Clayton..... 0582 (DB1)
 CMS..... 0590
 CMS Hightec..... 0591
 Coby..... 0597
 Concorde..... 0626
 Condor..... 0627
 Conia..... 0628
 Conrowa..... 0634
 Contec..... 0635
 Continental Edison 0637
 Cosmel..... 0647
 Crosley..... 0655
 Crown..... 0658
 CS Electronics..... 0663
 CTC..... 0664
 CTC Clatronic..... 3527
 C-Tech..... 0449
 CVG..... 3996
 Cybercom..... 0671 (DB1)
 CyberHome..... 0672
 Cybermaxx..... 3696 (DB1)
 Cybertron..... 0675

D

Daenyx..... 0690
 Daewoo..... 0692
 Dainichi..... 0694
 Dansai..... 0699
 Dantax..... 0702
 Datron..... 4201
 Datsura..... 0703
 Dawa..... 0707
 Daytek..... 0708
 Dayton..... 0709

Daytron..... 0710
 DCE..... 0713 (DB1)
 De Graaf..... 0716
 DEC..... 0717
 Decca..... 0718
 Deitron..... 0722
 Denko..... 0730
 Denon..... 0731
 Denver..... 0733
 Denzel..... 0734
 Desay..... 0737
 Desmet..... 0738
 DGM..... 3566 (DB1)
 Diamant..... 0746
 Diamond..... 0747
 DICRA..... 4938 (DB1)
 Digatron..... 0751
 Digihome..... 0758 (DB1)
 Digiline..... 0759
 DigiLogic..... 0760 (DB1)
 Digital Device..... 0770 (DB1)
 Digitek..... 0779 (DB1)
 Digator..... 0781
 DiK..... 0787 (DB1)
 Dikom..... 3391 (DB1)
 Dixi..... 0807
 DK Digital..... 0808
 DMTech..... 0813
 Dongda..... 0820
 Donghai..... 0821
 Dragon Systems.... 4830 (DB1)
 Drean..... 0832
 DSE..... 0833
 DTS..... 0837
 Dual..... 0838
 Dual-Tec..... 3528
 Dumont..... 0840
 Duongjie..... 4101
 Durabrand..... 0842 (DB1)
 Dux..... 0843
 D-Vision..... 0684
 DVX..... 0847
 Dynatron..... 0855
 Dynex..... 3476

E

Easy Home..... 3700
 Easy Living..... 0860 (DB1)
 Eclipse..... 0867

E-Dem..... 3624
 Elbe..... 0880
 Elbe-Sharp..... 3529
 Elcatech..... 0882
 Elcit..... 0883
 Electa..... 3530
 ELECTRO TECH.... 3531
 Electrohome..... 0890
 Elektra..... 0896
 Element..... 3477
 Elfunk..... 0899 (DB1)
 ELG..... 0900
 Elin..... 0902
 Elite..... 0903
 Elmak..... 0907
 Elonex..... 4019 (DB1)
 Elsay..... 0909
 Elta..... 0910
 Emerson..... 0917
 e-motion..... 3496 (DB1)
 Emperor..... 0921
 Enzer..... 0934
 Epson..... 0937
 Erres..... 0942
 ESC..... 0945
 Etron..... 0949
 Etzuko..... 4203
 Eurofeel..... 0954
 EuroLine..... 0955
 Euroman..... 0956
 Europa..... 0957
 Europhon..... 0959
 Evesham..... 0972 (DB1)
 Expert..... 0976
 Exquisit..... 0978

F

Fagor Life..... 4102
 Feilang..... 0990
 Feilu..... 0991
 Feiyue..... 0993
 Fenmenti..... 4103
 Fenner..... 0994
 Ferguson..... 0996
 Fidelity..... 0998
 Filsai..... 1000
 Finlandia..... 1003
 Finlux..... 1004
 Fintec..... 1006

Firstline.....1008
 Fisher.....1009
 Flint.....1014
 FNR.....1016
 Formenti.....1023
 Formenti-Phoenix.....1024
 Fortress.....1027
 Fraba.....1030
 Friac.....1040
 Frontech.....1042
 Fujicom.....1048 (DB1)
 Fujitsu.....1052
 Fujitsu General.....1053
 Fujitsu Siemens.....1054 (DB1)
 Funai.....1056

G

Galaxi.....1068
 Galaxis.....1069
 GBC.....1078
 Geant Casino.....1082
 GEC.....1083
 Geloso.....1087
 General.....1090
 General Technic.....1095
 Genexxa.....1097
 Gericom.....1103
 GFM.....3820
 Giant.....1113
 Giec.....1115
 Global Solutions.....1120
 Global Sphere.....1121
 Go Video.....1126
 Gold.....3823 (DB1)
 GoldHand.....1136
 Goldline.....1138
 GoldStar.....1140
 Goodmans.....1142
 Gorenje.....1144
 GPM.....1149
 Gradiente.....1151
 Graetz.....1152
 Gran Prix.....1153 (DB1)
 Granada.....1154
 Grandin.....1156
 Great Wall.....4105
 Gronic.....1160
 Grundig.....1162
 Grunkel.....1164

GVG.....1169

H

H&B.....3635
 Haaz.....1172
 Haier.....1175
 Haihong.....1176
 Halifax.....1179
 Hampton.....1183
 Hanns.G.....3478 (DB1)
 Hannspree.....1189 (DB1)
 Hanseatic.....1190
 Hantarex.....1192
 Hantor.....1193
 Harman/Kardon.....1198
 Harwood.....1204
 Hauppauge.....1206
 HCM.....1210
 Hema.....1222
 Hemmermann.....1223
 Henss.....1224 (DB1)
 Hifivox.....1233
 Higashi.....1234
 Highline.....1236
 Hikona.....1237
 HiLine.....3533
 HiMAX.....1241
 Hinari.....1243
 Hisawa.....1247
 Hisense.....1249
 Hitachi.....1251
 Hitachi Fujian.....1252
 Hitsu.....1257
 Hoehner.....1262
 Hoher.....4504 (DB1)
 Home Tech Industries.....1266
 Hongmei.....1272
 Hornyphon.....1277
 Hoshai.....1278
 Huafa.....1287
 Huanghaimei.....1288
 Huanghe.....1289
 Huanglong.....1290
 Huangshan.....1291
 Huanyu.....1292
 Huari.....1294
 Hugoson.....1297 (DB1)
 Huijiaban.....4108

Humax.....1298
 Hygashi.....1308
 Hyper.....1309
 Hypson.....1312
 Hyundai.....1315

I

Iberia.....1320
 ICE.....1324
 ICeS.....1325
 iDEAL.....3641 (DB1)
 Ikei.....1332 (DB1)
 IISonic.....1334 (DB1)
 Iiyama.....1335 (DB1)
 Impego.....4207
 Imperial.....1346
 Indesit.....1349
 Indiana.....1350
 Ingelen.....1354
 Ingersol.....1355
 Inno Hit.....1358
 Innovation.....1360
 Inspira.....4296 (DB1)
 Interactive.....3534
 Interbuy.....1376
 Interfunk.....1377
 Internal.....1379
 International.....1380
 Intervision.....1386
 IR.....4110
 Irradio.....1396
 Isukai.....1402
 ITC.....1404
 ITS.....1405
 ITT.....1406
 ITV.....1408

J

JEC.....1426
 JGC.....1434 (DB1)
 Jiahua.....1435
 Jinhai.....1439
 Jinxing.....1442
 JVC.....1464

K

Kaisui.....1471
 Kamosonic.....3535
 Kamp.....1475

Kangchong.....1476
 Kanghua.....1477
 Kangwei.....4115
 Kansai.....1480
 Kapsch.....1483
 Karcher.....1484
 Kawa.....1487
 Kawasho.....1489
 Kendo.....1500
 Kennedy.....1504
 Kennex.....1505
 Kenwood.....1507
 KeyPlug.....3646
 KIC.....1512
 Kihiro.....1513
 Kingavon.....1519
 Kingsley.....1520
 Kiota.....1522
 Kiss.....1524
 Kiton.....1525
 Kneissel.....1535
 Koda.....1539
 Kolin.....1541
 Kolster.....1543
 Konig.....1547
 Konka.....1548
 Korpel.....1552
 Korting.....1554
 Kosmos.....1557
 Koyoda.....1561
 KTV.....1572
 Kuro.....1579
 KXD.....1581
 Kyoshu.....1583
 Kyoto.....1585

L

L&S Electronic.....1588
 Lafayette.....1591
 LaSAT.....1597
 Lawson.....1603
 Layco.....4117
 Lecson.....1606
 Lenco.....1615
 Lenoir.....1617
 Lenoxx.....1618 (DB1)
 Lesa.....1622
 Leyco.....1627
 LG.....1628

LG/Goldstar	3536
LiesenK	3537
LiesenK & Tter	1630
Liesenkotter	1631
Life	3538
Lifetec	1633
Limit	1637
LiteOn	1645
Lloyds	3539
Lloyd's	1648
Local India TV	1653
Lodos	1659 (DB1)
Loewe	1660
Loewe Opta	3540
LogicLab	3650
Logik	1661
Luma	1674
Lumatron	1676
Lux May	1680
Luxor	1683

M

M Electronic	1688
Madison	1698
Magnadyne	1702
Magnafon	1703
Magnavox	1706
Magnex	1707
Magnum	1709
Majestic	1713
Mandor	1717
Manesth	1718
Manhattan	1719
Maqma	1722 (DB1)
Marantz	1724
Marelli	1729
Mark	1731
Marquant	1734
Mascom	1738 (DB1)
Masuda	1744
Matsui	1750
Matsushita	1751
Maxim	1759 (DB1)
MBO	1765 (DB1)
McMichael	1768
MDS	1772 (DB1)
Mecotek	1776
Mediator	1784
Mediencom	1786

Medion	1787
Medison	1788
MegaDrive	4297 (DB1)
Meletronic	3654
M-Electronic	3541
Melvox	1799
Memorex	1800
Memphis	1802
Mercury	1804
Metz	1810
MiCO	1813
Micromaxx	1822
Micromedia	1823
Micromega	1824
Microspot	3849 (DB1)
Microstar	1827
Migros	1832
Mikomi	1833 (DB1)
Minato	1835
Minax	1836 (DB1)
Minerva	1838
Minoka	1840
Minowa	1843
Mirai	1849 (DB1)
Mitsai	3851 (DB1)
Mitsubishi	1855
Mivar	1857
Mizuda	1860
Monyka	1873
Morgans	3970
Motion	1877
MTC	1889
MTEC	1890
MTlogic	1892
Mudan	1896
Multi System	3542
Multistandard	1904
Multisystem	4121
Multitec	1906
Multitech	1907
Murphy	1911
Musikland	1915
Mustek	1916
Mx Onda	1919
Myrica	3946 (DB1)
Mystral	1925

N

NAD	1926
Naiko	1930
Nakamichi	1932
Nakimura	1933
Naonis	1936
National	1942
NEC	1950
Neckermann	1951
NEI	1952
Nesco	1960
Netsat	1966
Netway	3419 (DB1)
Network	1968
Neufunk	1970
Nevir	1977
New Tech	1979
New World	1980
Next Base	1983
Nicamagic	1994
Nikai	4566 (DB1)
Nikkai	1998
Nikkei	1999 (DB1)
Nimbro	4065 (DB1)
Noblex	2013
Nobliko	2014
Nogamatic	2016
Nokia	2017
Nordic	2021
Nordmende	2022
Nordvision	3543
Normerel	2024
Novatronic	2035
Nu-Tec	2048

O

O.K.Line	4301 (DB1)
Oceanic	2061
Okana	4122
Okano	2065
Omni	2074
ONCEAS	3544
Onida	2081
Onimax	2082
Onkyo	2085
Onn	3663 (DB1)
Onwa	2087
Onyx	3864 (DB1)
Oopla	2088

Opera	2090
Optim	2094
Orava	2101
Orbit	2103
Orion	2111
Oritron	2112
Online	2113
Ormond	2114
Orson	2115
Orsowe	2116
Osaki	2118
Osio	2121
Oso	2122
Osume	2123
Otto Versand	2126
Oulin	4123

P

P&B	2132
Pacific	2135
Pael	2140
Palladium	2145
Palsonic	2147
Panama	2149
Panasonic	2153
Panavision	2154
Panda	2155
PARK	3951 (DB1)
Pathe Cinema	2168
Pathe Marconi	2169
Pausa	2171
peekTOn	2178
Pensonic	3778
Perdio	2185
Perfekt	2186
Philco	2192
Philharmonic	2194
Philips	2195
Philips Magnavox	3715
Phocus	2198 (DB1)
Phoenix	2199
Phonola	2201
Phonotrend	2202
Pioneer	2212
Pionier	2213
Plantron	2219
Playsonic	2224
Plu2	2225 (DB1)
Pointer	2229

Polaroid.....	2230	Reflex.....	2368	Seitech.....	3433 (DB1)	Sontech.....	3435
Poppy.....	2236	Relisys.....	2374 (DB1)	Seleco.....	2528	Sony.....	2679
Portland.....	2238	Render.....	4072 (DB1)	Sencora.....	2531	Sound & Vision.....	2680
Powerpoint.....	2241	Reoc.....	2379	Sentra.....	2534	Soundmaster.....	2685
Prandoni Prince.....	4125	Revox.....	2383	Sentron.....	4216	Soundmax.....	2687
Precision.....	2244	Revoy.....	2384	Serino.....	2539	Soundwave.....	2689
Prima.....	2253	Rex.....	2385	Shanghai.....	2547	Soyo.....	2693 (DB1)
PrimeView.....	3513 (DB1)	RFT.....	2386	Shanshui.....	4133	Spectra.....	2697
Prinz.....	2260	Rhapsody.....	2387	Shaofeng.....	2549	Srypton.....	4138
Pro2.....	2265 (DB1)	Rimax.....	2391	Sharp.....	2550	Standard.....	2713
Profekt.....	4126	R-Line.....	2327	Shencai.....	2553	Star Cluster.....	3724
Profex.....	2269	Roadstar.....	2398	ShengCai.....	4217	Starlight.....	2727
Profilo.....	2272	Robotron.....	2401	Shenyang.....	2555	Starlite.....	2728
Profitronic.....	2273	Ronin.....	2412	Sherwood.....	2557	Starmedia.....	2730
Proline.....	2274	Rover.....	2415 (DB1)	Shinelco.....	4074 (DB1)	Stenway.....	2739
Promax.....	2275	Rowa.....	2416	Shintom.....	2563	Stern.....	2741
Proson.....	2281 (DB1)	Rownsonic.....	2417	Shintoshi.....	2564	Stevison.....	2742 (DB1)
Prosonic.....	2282	Royal.....	2419	Shivaki.....	2567	Strato.....	2745
Protech.....	2284	Royal Lux.....	2420	Shorai.....	2569	Strong.....	2748 (DB1)
ProVision.....	2291	RTF.....	3548	Siam.....	2572	Stylandia.....	2752
Pye.....	2302			Siarem.....	2573	Sungoo.....	3767 (DB1)
Pyle.....	2303 (DB1)	S		Siemens.....	2574	Sunkai.....	2762
Pymi.....	2304	Saba.....	2429	Siera.....	2576	Sunstar.....	2768
		Sabaki.....	2430	Sierra.....	3549	Suntronic.....	2770
Q		Sagem.....	2434	Siesta.....	2577	Sunwood.....	2772
Quandra Vision.....	3546	Saisho.....	2437	Sigmathek.....	2580	Superla.....	2782
Quasar.....	2320	Saivod.....	2439	Silva.....	2591	Supersonic.....	2787
Quelle.....	2322	Salora.....	2443	Silva Schneider.....	2592	SuperTech.....	2789
Questa.....	2324	Sambers.....	2445	Silver.....	2594	Supervision.....	2791
		Sampo.....	2446	Singer.....	2599	Supra.....	2792
R		Samsung.....	2448	Sinudyne.....	2601	Supratech.....	2793 (DB1)
Radialva.....	2329	Samurai.....	2451	Skantic.....	2605	Susumu.....	2797
Radio.....	4128	Sandra.....	2454	SKY.....	2610	Sutron.....	2798
Radio Shack.....	3547	Sansui.....	2458	Skymaster.....	2621	Swedx.....	2803 (DB1)
Radiola.....	2330	Sanwa.....	2461	Skyworth.....	2631	Swissflex.....	2805 (DB1)
Radiomarelli.....	2331	Sanyo.....	2462	Slim Art.....	2636	Swisstec.....	2806 (DB1)
Radionette.....	2332	Sanyuan.....	2464	SM Electronic.....	2639	Sydney.....	2808
RadioShack.....	2333	Saville.....	2491	Smart.....	2642 (DB1)	Sylvania.....	2809
Radiotone.....	2334	SBR.....	2492	S-Media.....	3515 (DB1)	Symphonic.....	2810
Raite.....	2340	ScanMagic.....	2496	Sogera.....	2649	Synn.....	2813
Rank.....	2345	Schaub Lorenz.....	2500	Solavox.....	2654	Sysline.....	2815
RBM.....	2350	Schneider.....	2501	Sonawa.....	2663	Sytong.....	2820
RCA.....	2351	Schoentech.....	3504 (DB1)	Songdian.....	4136		
REC.....	2357	Scientific Labs.....	2504	Soniko.....	2669	T	
Recor.....	2359	Scott.....	2508	Sonitron.....	2671	T.D.E. Systems.....	2822
Rectiligne.....	2362	Seeltech.....	2519	Sonneclair.....	2673	Tactus.....	2825
Red Star.....	3669 (DB1)	SEG.....	2522	Sonoko.....	2675	Taishan.....	2835
Rediffusion.....	2364	SEI.....	2524	Sonolor.....	2676	Taisho.....	2836
Redstar.....	2366	Sei-Sinudyne.....	2525	Sontec.....	2677	Tandberg.....	2842

Tandy.....	2843	Tokyo.....	3004
Tashiko.....	2850	Tomashi.....	3006
Tatung.....	2852	Tom-Tec.....	3005 (DB1)
TCL.....	2856	Tonsai.....	4223
TCM.....	2857	Top Suxess.....	3013
Teac.....	2860	Toshiba.....	3021
Teachimagen.....	4140	Towada.....	3028
Tec.....	2861	Towika.....	4224
Tech Line.....	2863	Toyoda.....	3030
Techica.....	2865	Trakton.....	3036
Technema.....	2866	Trans Continens.....	3037
Technica.....	2868 (DB1)	TRANS-continents.....	3039
Technics.....	2869	Transfec.....	4143
Technika.....	2870	Transonic.....	3041
TechniSat.....	2873	Transtec.....	3042
Technisson.....	2874 (DB1)	Trident.....	3054
Techvision.....	4307 (DB1)	Trio.....	3056
Techwood.....	2884 (DB1)	Tristar.....	3057
Teco.....	2886 (DB1)	Triumph.....	3058
Tedex.....	2889	TruVision.....	3061
Teleavia.....	2901	TSM.....	3065
Telecor.....	2910	TVA.....	4225
Telefunken.....	2914	TVE.....	3897 (DB1)
Telefusion.....	2915		
Telegazi.....	2917		
Telemeister.....	2924		
Telesonic.....	2930		
Telestar.....	2931		
Telesystem.....	2933 (DB1)		
Teletech.....	2934		
Teleton.....	2935		
Televideon.....	2938		
Television.....	2939		
Televiso.....	2941		
Temco.....	2946		
Tennessee.....	2952		
Tenosal.....	2953		
Tensai.....	2954		
Tenson.....	2955		
Tesla.....	3680 (DB1)		
Tesmet.....	3550		
Tevion.....	2962		
Textet.....	2963		
Thes.....	3769 (DB1)		
Thomson.....	2972		
Thorn.....	2974		
Tiankeban.....	4142		
Tobo.....	2999		
Tokai.....	3001		

U

Uher.....	3089
Ultravox.....	3095
Umax.....	3098
UMC.....	3099 (DB1)
Unic Line.....	3100
Union.....	3781
United.....	3106
United Quick Star.....	4226
Universal.....	3113
Universum.....	3115
Univox.....	3116

V

V7 Videoseven.....	3130 (DB1)
Vestel.....	3148
Vexa.....	3149
Vibrant.....	3154
Victor.....	3155
Videologic.....	3165
Videologique.....	3166
Videon.....	4227
Videosat.....	3170
VideoSystem.....	3172
Videotechnic.....	3173

Videoton.....	3174	X	
Viewmaster.....	3182	Xbox.....	3295
Viewsonic.....	3186	Xiahua.....	3299
Viore.....	3192 (DB1)	Xiangyu.....	3302
Visiola.....	3197	Xingfu.....	3305
Vision.....	3198	Xinghai.....	3306
Vistar.....	3207	Xinrisong.....	3308
Visual Innovations.....	4773 (DB1)	XLogic.....	3310
Vivax.....	3601 (DB1)	XMS.....	3312
Vivid.....	3210 (DB1)	Xoro.....	3315
Vortec.....	3217	Xrypton.....	3317
Voxson.....	3220	Xuelian.....	3320

W

Waitec.....	3227	Y	
Waltham.....	3230	Yakumo.....	3324
Watson.....	3233	Yamada.....	3325
Watt Radio.....	3234	Yamaha.....	3326
Wega.....	3238	Yamakawa.....	3327
Wegavox.....	3239	Yamishi.....	3328
Welkin.....	3242 (DB1)	Yokan.....	3335
Wellington.....	3243 (DB1)	Yoko.....	3336
Welltech.....	3244	Yorx.....	3340
Weltblick.....	3245	Yuhang.....	3345
Weltstar.....	3247 (DB1)	Yukai.....	3346
Weston.....	3251	Yüsmart.....	4777 (DB1)
WestStar.....	3519 (DB1)		
Wharfedale.....	3255		
White Westinghouse.....	3258		
Wilson.....	3260 (DB1)		
Windsor.....	3265 (DB1)		
Windstar.....	3266		
Wintel.....	3271 (DB1)		
World-of-Vision.....	3282 (DB1)		
Woxter.....	3286		

Y

Z

Zanussi.....	3349
Zenith.....	3356
ZhuHai.....	3364

(DB1) Brands only available from version DB1 onwards.

You can find the DB version on the sticker inside the battery compartment.



Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.



Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.

© 2011 Koninklijke Philips Electronics N.V.
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner:
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5359 3

December 2011

www.philips.com

RTP/4911