


SP 1200SF

User's Guide

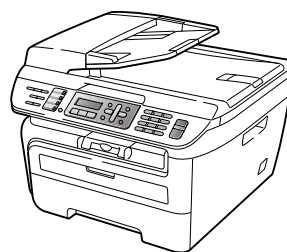

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Important Information in this manual before using the machine.

Table of Contents

Section I General

1	General information	2
	Using the documentation	2
	Symbols and conventions used in the documentation	2
	Accessing the Software User's Guide	2
	Viewing documentation	3
	Control panel overview (For EU only).....	5
	Control panel overview (For USA, Canada and Asia/Oceania).....	7
2	Loading paper and documents	9
	Loading paper and print media	9
	Loading paper in the paper tray.....	9
	Loading paper in the manual feed slot	11
	Unprintable area (A4)	14
	Unprintable area (Letter)	15
	Acceptable paper and other print media.....	16
	Recommended paper and print media (for EU).....	16
	Recommended paper and print media (For USA and Canada)	16
	Type and size of paper	17
	Handling and using special paper	18
	Loading documents	21
	Using the automatic document feeder (ADF)	21
	Using the scanner glass	22
3	General setup	23
	Mode timer.....	23
	Paper settings.....	23
	Paper type	23
	Paper size.....	23
	Volume settings	24
	Ring volume.....	24
	Beeper volume	24
	Speaker volume.....	24
	Automatic daylight savings time	25
	Ecology features.....	25
	Toner Save	25
	Sleep time.....	25
	LCD contrast.....	25
	Dial prefix (For USA, Canada and Asia only)	26
	Setting up the prefix number	26
	Changing the prefix number	26

4	Security features	27
	Security	27
	Memory Security	27
	Setting lock	28
	Restricting dialling	29
	Dial pad restriction	29
	One Touch restriction	29
	Speed Dial restriction	30

Section II Fax

5	Sending a fax	32
	How to fax	32
	Entering fax mode	32
	Sending a fax from the ADF	32
	Sending a fax from the scanner glass	32
	Cancelling a fax in progress	33
	Broadcasting	33
	Cancelling a broadcast in progress	33
	Additional sending operations	34
	Sending faxes using multiple settings	34
	Electronic cover page	34
	Contrast	35
	Changing fax resolution	36
	Dual access	36
	Real time transmission	36
	Overseas mode	37
	Delayed fax	37
	Delayed batch transmission	37
	Checking and cancelling waiting jobs	38
	Sending a fax manually	38
	Out of memory message	38
6	Receiving a fax	39
	Receive modes	39
	Choosing the receive mode	39
	Using receive modes	40
	Fax Only	40
	Fax/Tel	40
	Manual	40
	External TAD	40
	Receive mode settings	41
	Ring delay	41
	F/T ring time (Fax/Tel mode only)	41
	Fax Detect (Easy Receive)	41
	Setting the print density	42

Additional receiving operations.....	42
Printing a reduced incoming fax	42
Setting the fax receive stamp	42
Receiving a fax at the end of a conversation.....	43
Receiving faxes into memory	43
Printing a fax from the memory	43

7 Telephone and external devices 44

Telephone Service for U.K.....	44
Caller ID.....	44
Setting the telephone line type	45
BT call sign (U.K. only)	46
Telephone Service for USA and Canada.....	46
Voice Mail	46
Distinctive Ring	47
Caller ID.....	49
Telephone Service for Australia.....	50
Do you have Voice Mail?	50
Telstra® FaxStream® Duet® (Distinctive Ringing)	50
What is the Advantage of using Telstra® FaxStream® Duet®	
Function?.....	51
How does Telstra® FaxStream® Duet® Work?.....	51
Set the Distinctive Ring to ON	52
Turning off Distinctive Ring.....	52
Telephone Service for Some Countries.....	52
Do you have Voice Mail?	52
Distinctive Ringing (For Singapore and Hong Kong).....	52
Caller ID.....	54
Connecting an external TAD	55
Connections.....	55
Recording an outgoing message (OGM).....	56
Multi-line connections (PBX)	56
External and extension telephones.....	57
Operation from extension telephones.....	57
Using external and extension telephones.....	57
For Fax/Tel mode only.....	58
Connecting an external or extension telephone	58
Special line considerations for U.K.....	59
Special line considerations for USA and Canada	60
Using a cordless external handset	61
Using remote codes.....	62

8	Dialling and storing numbers	63
	How to dial	63
	Manual dialling	63
	One touch dialling	63
	Speed dialling	63
	Search	63
	Fax redial	64
	Storing numbers	64
	Storing a pause	64
	Storing one touch dial numbers	65
	Storing speed dial numbers	65
	Changing one touch and speed dial numbers	66
	Setting up groups for broadcasting	66
	Combining quick dial numbers	67
	Pause	67
	Tone or pulse	68
	Tone or pulse (not available in USA and New Zealand)	68
9	Remote fax options	69
	Fax forwarding	69
	Paging (For USA and Canada only)	69
	Fax storage	70
	PC fax receive	71
	Changing remote fax options	72
	Turning off remote fax options	72
	Remote retrieval	73
	Setting a remote access code	73
	Using your remote access code	73
	Retrieving fax messages	74
	Changing the fax forwarding number	74
	Remote fax commands	75
10	Polling	76
	Polling receive	76
	Secure polling (for EU and Asia/Oceania)	76
	Delayed polling (for EU and Asia/Oceania)	76
	Sequential polling	77
	Polled transmit	77
	Setup for polled transmit	
	(For EU, Asia and Oceania)	77
	Setup for polled transmit (for USA and Canada)	78
	Setup for polled transmit with a secure code (for EU, Asia and Oceania)	78

11	Printing reports	80
	Fax reports.....	80
	Transmission verification report.....	80
	Fax journal.....	80
	Reports.....	81
	How to print a report.....	81

Section III Copy

12	Making copies	84
	How to copy.....	84
	Entering copy mode.....	84
	Making a single copy.....	84
	Making multiple copies.....	84
	Stop copying.....	84
	2 in 1 ID Copy.....	84
	Copy options (temporary settings).....	85
	Enlarging or reducing the image copied.....	85
	Using the Options key.....	87
	Improving copy quality.....	88
	Sorting copies using the ADF.....	88
	Adjusting contrast.....	89
	Making N in 1 copies (page layout).....	89
	Out of memory message.....	90

Section IV Software

13	Software features	92
	How to read PDF User's Guide.....	92

Section V Appendixes

A	Safety and legal	94
	Choosing a location	94
	Important information	95
	Safety precautions	95
	Certification	98
	Declaration of conformity	98
	Notice to Users in EU Countries	98
	Notice to Users Accessing Analog PSTN in EU Countries	98
	Symbols for the main power switch	99
	IEC 60825-1:2007 Specification	99
	Disconnect device	100
	Wiring information (U.K. only)	100
	Radio interference	100
	Recycling information in accordance with the WEEE (2002/96/EC) and Battery (2006/66/EC) Directives	101
	International ENERGY STAR® Qualification Statement	101
	Important safety instructions for EU	102
	Important information (for USA and Canada)	104
	Standard telephone and FCC notices	104
	Industry Canada Compliance Statement (Canada only)	106
	Laser safety	106
	FDA regulations	107
	Important safety instructions (for USA and Canada)	107
	Important Information for Australia	109
	IMPORTANT-For Your Safety	109
	Important safety instructions	109
	Important Information for Some Countries	111
	Important Safety Instructions	111
	Legal limitations for copying	113
	Trademarks	114
B	Troubleshooting and routine maintenance	115
	Troubleshooting	115
	If you are having difficulty with your machine	115
	Improving the print quality	120
	Setting dial tone detection	126
	Telephone line interference	126
	Error and maintenance messages	127
	Transferring your faxes or Fax Journal report	131
	Document jams	132
	Paper jams	133
	Routine maintenance	137
	Cleaning the outside of the machine	137
	Cleaning the scanner glass	138
	Cleaning the laser scanner window	139
	Cleaning the corona wire	141
	Cleaning the drum unit	143

	Replacing the consumable items.....	145
	Replacing a toner cartridge	146
	Replacing the drum unit.....	149
	Machine information	152
	Checking the serial number.....	152
	Checking the page counters.....	152
	Checking the Drum life	152
	Packing and shipping the machine	152
C	Menu and features	154
	On-screen programming.....	154
	Menu table.....	154
	Memory storage.....	154
	Menu keys	154
	How to access the menu mode	155
	Menu table.....	156
	Entering text	165
D	Specifications	167
	General.....	167
	Print media.....	169
	Fax.....	170
	Copy	171
	Scan	172
	Print	173
	Interfaces.....	173
	Computer requirements.....	174
	Consumable items	175
E	Glossary	176
F	Index	180



General

General information	2
Loading paper and documents	9
General setup	23
Security features	27

Using the documentation

Thank you for buying this machine! Reading the documentation will help you make the most of your machine.

Symbols and conventions used in the documentation

The following symbols and conventions are used throughout the documentation.

Bold	Bold style identifies keys on the machine control panel or computer screen.
<i>Italics</i>	Italicized style emphasizes an important point or refers you to a related topic.
<code>Courier New</code>	Courier New font identifies the messages shown on the LCD of the machine.



Warnings tell you what to do to prevent possible personal injury.



Cautions specify procedures you must follow or avoid to prevent possible damage to the machine or other objects.



Electrical Hazard icons alert you to a possible electrical shock.



Hot Surface icons warn you not to touch machine parts that are hot.



Incorrect setup icons alert you to devices and operations that are not compatible with the machine.



Note icons give useful tips.

Accessing the Software User's Guide

This User's Guide does not contain all the information about the machine such as how to use the advanced features of Fax, Printer, Scanner, PC Fax. When you are ready to learn detailed information about these operations, read the **Software User's Guide**.

Viewing documentation

Viewing documentation

To view the documentation, from the **Start** menu, point to **SP1200 series, SP1200SF Documentation**, from the program group, and then click **User's Guides**.

If you have not installed the software, you can find the documentation by following the instructions below:


- 1 Turn on your PC.
Insert the CD-ROM labelled Manuals into your CD-ROM drive.



Note

Be sure to use the CD-ROM titled "PaperPort™ 11SE and Documentation SP 1200SF"

- 2 If the language selection screen appears, click your language.
- 3 The CD-ROM main menu will appear.

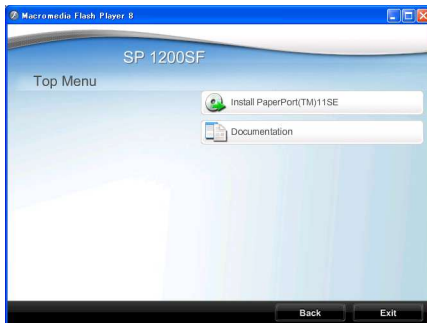

If this window does not appear, use Windows® Explorer to find and run the start.exe program from the root directory of the CD-ROM.

- 4 Click SP 1200SF documentation

- 5 Click the documentation you want to read:
PDF documents (3 manuals):
User's Guide for stand-alone operations, **Software User's Guide** and **Quick Setup Guide**.
This format is recommended for printing the manuals.

How to find scanning instructions

There are several ways you can scan documents. You can find the instructions as follows:

Software User's Guide:


- Scanning a document using the TWAIN driver in Chapter 2
- Scanning a document using the WIA driver in Chapter 2
- Using ControlCenter3 in Chapter 3

ScanSoft™ PaperPort™ 11SE with OCR How-to-Guides

- The complete ScanSoft™ PaperPort™ 11SE with OCR How-to-Guides can be viewed from the Help selection in the ScanSoft™ PaperPort™ 11SE application.

Control panel overview (For EU only)

1

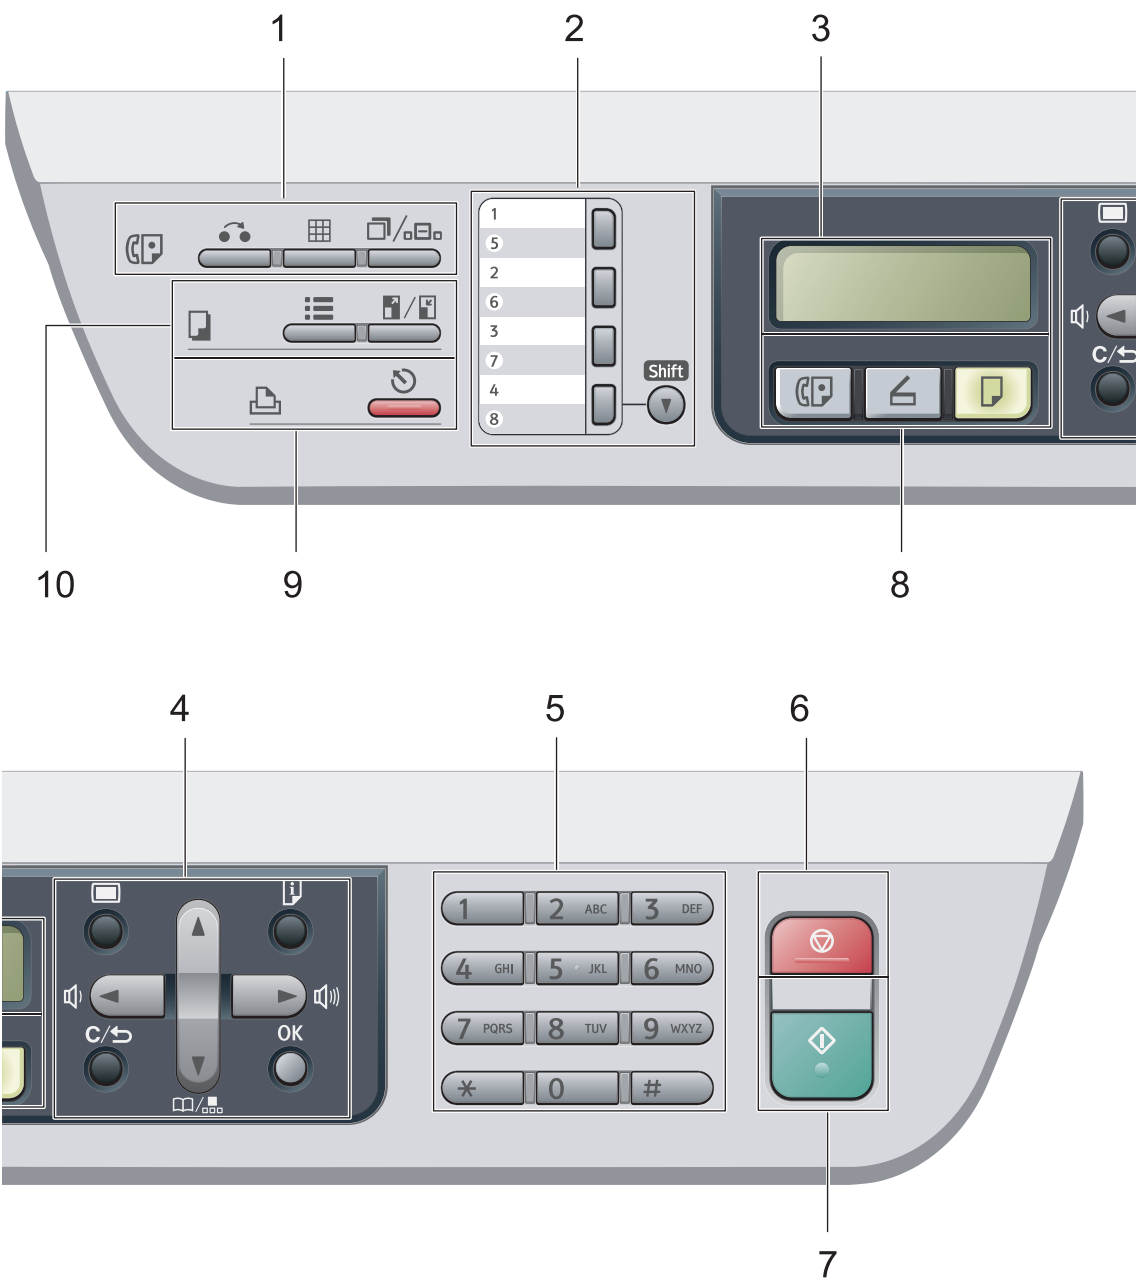

1 Fax and telephone keys: **Hook**

This key is used to have a telephone conversation after picking up the external handset during the F/T pseudo-ring.

When connected to a PBX, you can use this key to gain access to an outside line, to recall an operator, or to transfer a call to another extension.

 Resolution

Sets the resolution when sending a fax.

 Redial/Pause

Redials the last number called. It also inserts a pause when programming quick dial numbers or when dialling a number manually.

2 One Touch keys

These 4 keys give you instant access to 8 previously stored numbers.

Shift

Lets you access One Touch numbers 5 to 8 when held down.

3 LCD

Displays messages to help you set up and use your machine.

4 Menu keys: **Menu**

Lets you access the Menu to program your settings in this machine.

 Clear/Back

Deletes entered data or lets you cancel the current setting.

OK

Lets you store your settings in the machine.

Volume keys **◀ or ▶**

Press to scroll backwards or forwards through menu selections. Press to change the volume when in fax or standby mode.

▲ or ▼

Press to scroll through the menus and options.

 Search/Speed Dial

Lets you look up numbers that are stored in the dialling memory. It also lets you dial stored numbers by pressing a three-digit number.

 Reports

Print the Transmission Verification Report, Help List, Tel Index List, Fax Journal, User Settings and Order Form.

5 Dial pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

The # key temporarily switches the dialling mode from Pulse to Tone during a telephone call.

6 Stop/Exit

Stops an operation or exits from a menu.

7 Start

Lets you start sending faxes, making copies or scanning.

8 Mode keys: **Fax**

Puts the machine in Fax mode.

 Scan

Puts the machine in Scan mode. (For details about scanning, see the *Software User's Guide on the CD-ROM*.)

 Copy

Puts the machine in Copy mode.

9 Print keys: **Job Cancel**

Cancels a programmed print job and clears it from the machine's memory.

To cancel multiple print jobs, hold down this key until the LCD shows
Job Cancel (All).


10 Copy keys: **Options**

You can quickly and easily choose temporary settings for copying.

 Enlarge/Reduce

Reduces or enlarges copies.

Control panel overview (For USA, Canada and Asia/Oceania)

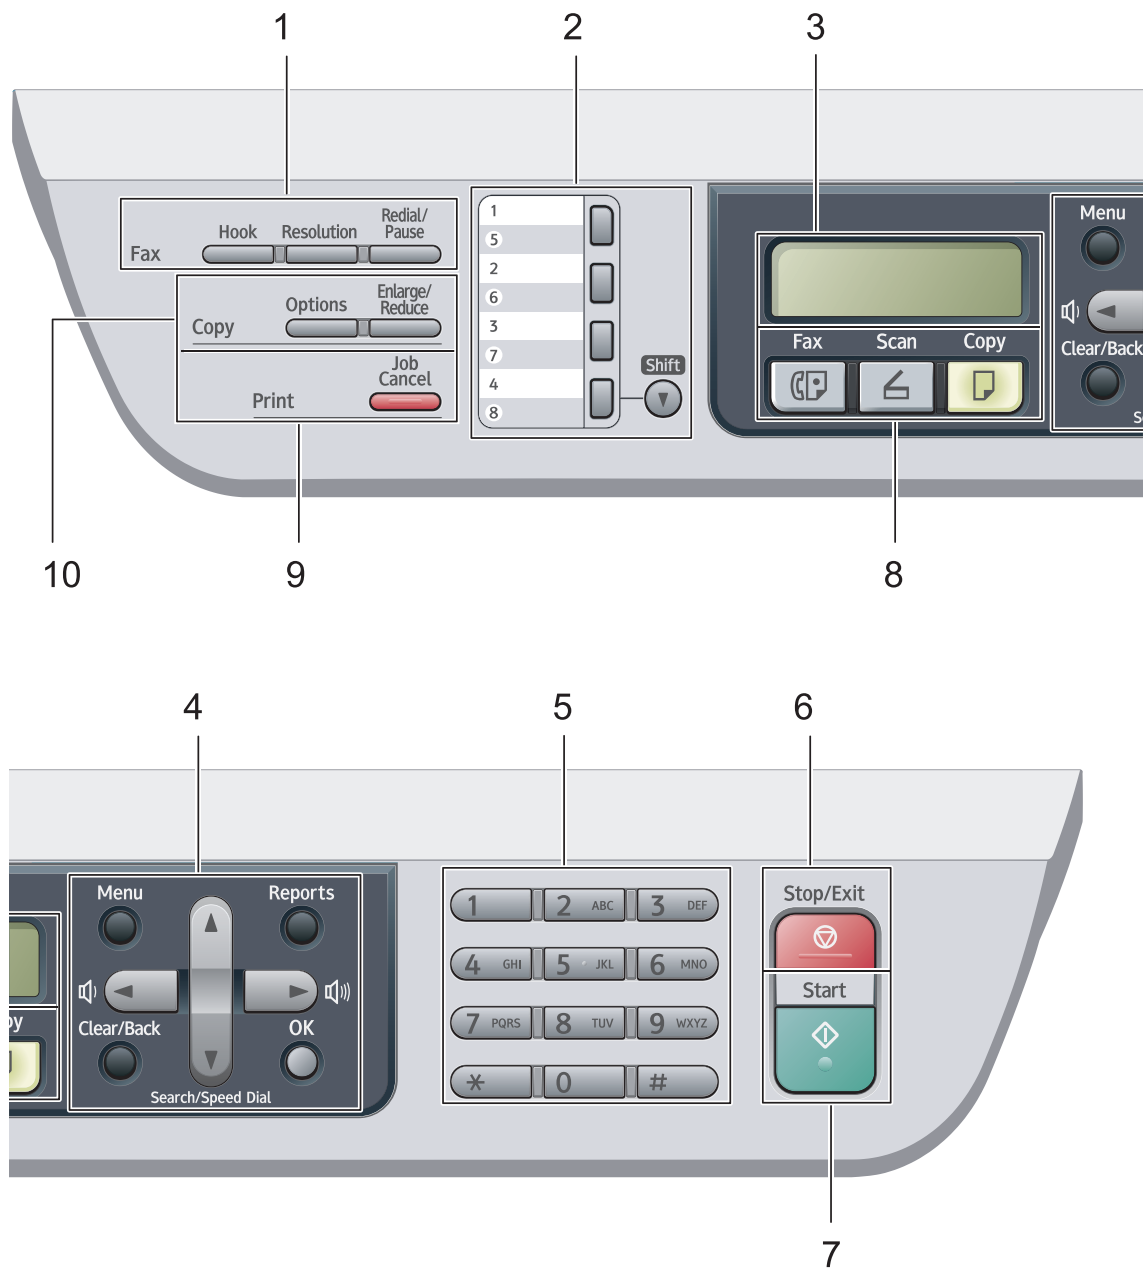

1 Fax and telephone keys:**Hook**

This key is used to have a telephone conversation after picking up the external handset during the F/T pseudo-ring.

When connected to a PBX, you can use this key to gain access to an outside line, to recall an operator, or to transfer a call to another extension.

Resolution

Sets the resolution when sending a fax.

Redial/Pause

Redials the last number called. It also inserts a pause when programming quick dial numbers or when dialling a number manually.

2 One Touch keys

These 4 keys give you instant access to 8 previously stored numbers.

Shift

Lets you access One Touch numbers 5 to 8 when held down.

3 LCD

Displays messages to help you set up and use your machine.

4 Menu keys:**Menu**

Lets you access the Menu to program your settings in this machine.

Clear/Back

Deletes entered data or lets you cancel the current setting.

OK

Lets you store your settings in the machine.

Volume keys

◀ or ▶

Press to scroll backwards or forwards through menu selections. Press to change the volume when in fax or standby mode.

▲ or ▼

Press to scroll through the menus and options.

▼ Search/Speed Dial

Lets you look up numbers that are stored in the dialling memory. It also lets you dial stored numbers by pressing a three-digit number.

Reports

Print the Transmission Verification Report, Help List, Tel Index List, Fax Journal, User Settings and Order Form.

5 Dial pad

Use these keys to dial telephone and fax numbers and as a keyboard for entering information into the machine.

The # key temporarily switches the dialling mode from Pulse to Tone during a telephone call.

6 Stop/Exit

Stops an operation or exits from a menu.

7 Start

Lets you start sending faxes, making copies or scanning.

8 Mode keys:**Fax**

Puts the machine in Fax mode.

Scan

Puts the machine in Scan mode. (For details about scanning, see the *Software User's Guide on the CD-ROM*.)

Copy

Puts the machine in Copy mode.

9 Print keys:**Job Cancel**

Cancels a programmed print job and clears it from the machine's memory.

To cancel multiple print jobs, hold down this key until the LCD shows

Job Cancel (All).

10 Copy keys:**Options**

You can quickly and easily choose temporary settings for copying.

Enlarge/Reduce


Reduces or enlarges copies.

Loading paper and print media

The machine can feed paper from the standard paper tray or manual feed slot.

When you put paper into the paper tray, note the following:


- If your application software supports paper size selection on the print menu, you can select it through the software. If your application software does not support it, you can set the paper size in the printer driver or by using the control panel buttons.
- Before using paper that has holes in it, such as organizer sheets, you must 'fan' the stack to avoid paper jams and misfeeds.

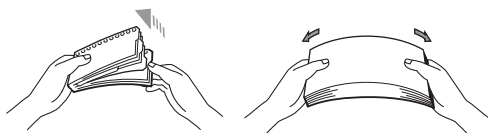


Loading paper in the paper tray

Printing on plain paper, recycled paper or transparencies from the paper tray

- 1 Pull the paper tray completely out of the machine.

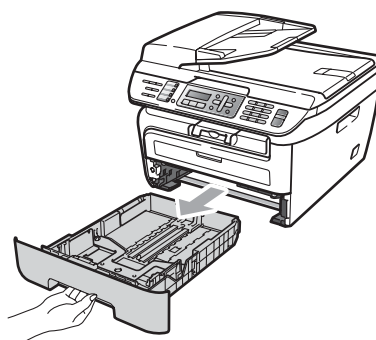


- 2 While pressing the green paper guide release lever, slide the paper guides to fit the paper size. Make sure that the guides are firmly in the slots.

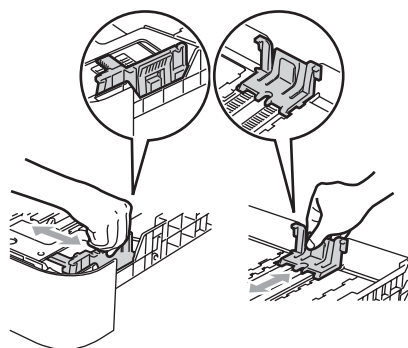




Note

(For USA, Canada and Asia) For Legal size paper, press the release button in the bottom of the paper tray and then pull out the back of the paper tray. (Legal size paper is not available in some regions)

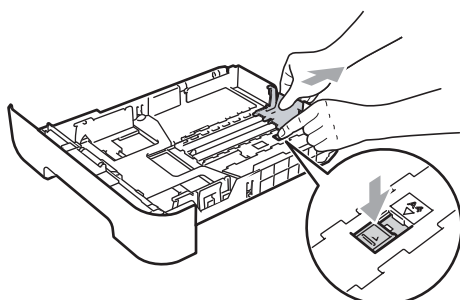

3

Put paper in the tray, and make sure that the paper is below the maximum paper mark (1). The side to be printed on must be face down.

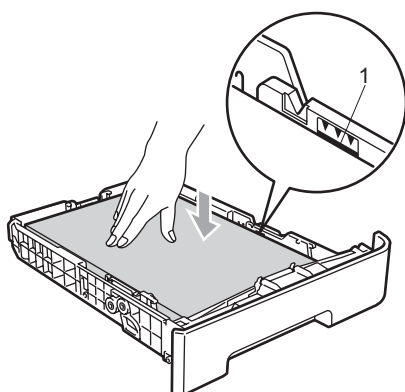

CAUTION


To prevent damage to your machine caused by paper misfeeding, make sure the paper guides touch the sides of the paper.

4

Put the paper tray firmly back in the machine. Make sure that it is completely inserted into the machine.

5

Fold out the support flap (1) to prevent paper from sliding off the face-down output tray.

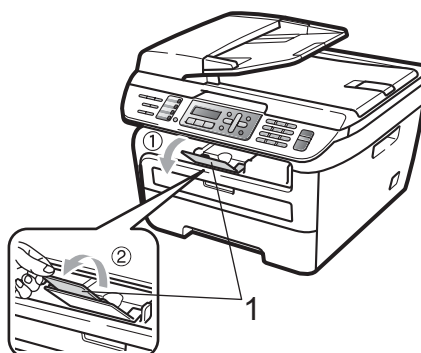

Loading paper in the manual feed slot

You can load envelopes and special print media one at a time into this slot. Use the manual feed slot to print or copy on labels, envelopes or thicker paper.


Printing on plain paper, recycled paper or transparencies from the manual feed slot




Note

The machine automatically turns on the Manual Feed mode when you put paper in the manual feed slot.


- 1 Lift up the support flap (1) to prevent paper from sliding off the face-down output tray, or remove each page as soon as it comes out of the machine.

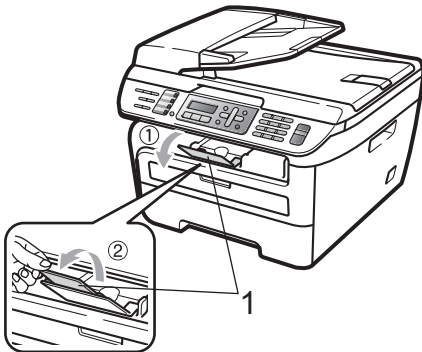

- 2 Open the manual feed slot cover.

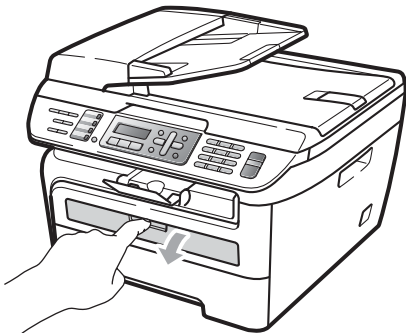

- 3 Using both hands, slide the manual feed slot paper guides to the width of the paper that you are going to use.

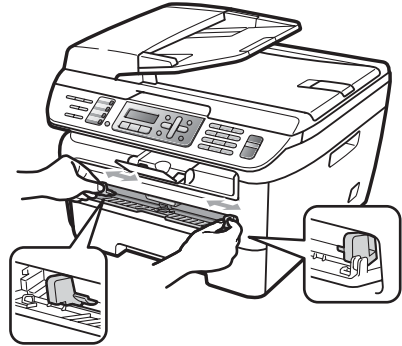

- 4 Using both hands, put one sheet of paper or one transparency in the manual feed slot until the front edge touches the paper feed roller. When you feel the machine pull in the paper, let go.



Printing on thick paper, bond paper, labels and envelopes


When the back output tray is pulled down, the machine has a straight paper path from the manual feed slot through to the back of the machine. Use this paper feed and output method when you want to print on thick paper, labels or envelopes.




Note

- Remove each printed sheet or envelope immediately to prevent a paper jam.
- The machine automatically turns on the Manual Feed mode when you put paper in the manual feed slot.


- 1 Open the back cover (back output tray).

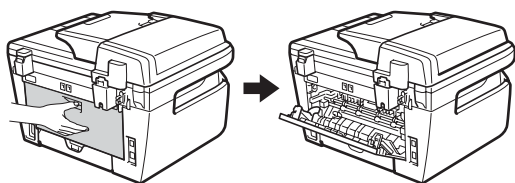

- 2 Open the manual feed slot cover.

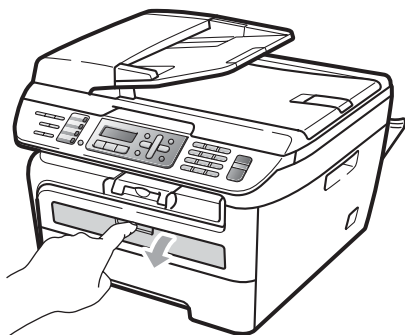

- 3 Using both hands, slide the manual feed slot paper guides to the width of the paper that you are going to use.

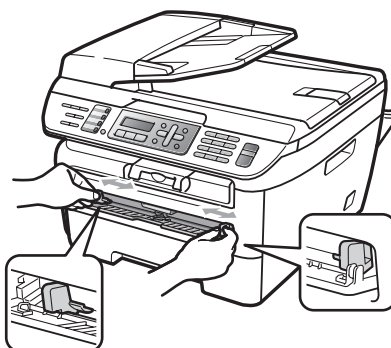


- 4 Using both hands, put one sheet of paper or one envelope in the manual feed slot until the front edge of the paper or envelope touches the paper feed roller. When you feel the machine pull in the paper, let go.




**Note**

- Put the paper into the manual feed slot with the side to be printed face up.
- Make sure that the paper or print media (see *Acceptable paper and other print media* on page 16.) is straight and in the correct position on the manual feed slot. If it is not, the paper or the transparency may not be fed correctly, resulting in a skewed printout or a paper jam.
- Do not put more than one sheet of paper in the manual feed slot at any one time, as it may cause a jam.
- If you put any print media in the manual feed slot before the machine is in the Ready state, the print media may be ejected without being printed on.
- To easily remove a small printout from the output tray, lift up the scanner cover by using both hands as shown in the illustration.

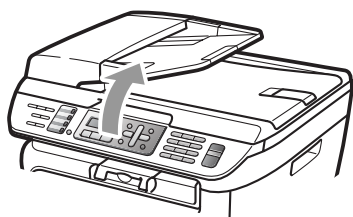

- You can still use the machine while the scanner cover is up. To close the scanner cover, push it down with both hands.

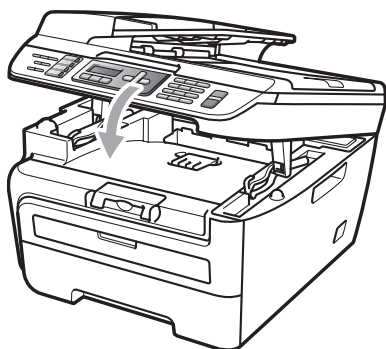


Unprintable area (A4)

Unprintable area for faxes and copies

The printable area of your machine begins at approximately 3 mm from the top and bottom and 2 mm from both sides of the paper.

- 1 3 mm
- 2 2 mm

 **Note** (For copies) The unprintable area shown above is for a single copy or a 1 in 1 copy using A4 size paper. The unprintable area changes with the paper size.


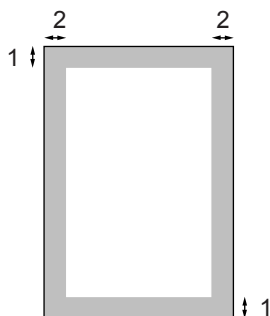


Unprintable area when printing from a computer

When using the printer driver the printable area is smaller than the paper size, as shown below.

Portrait

Landscape

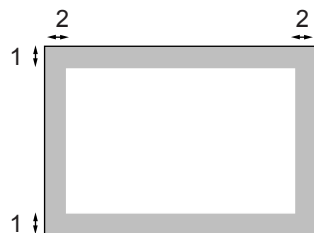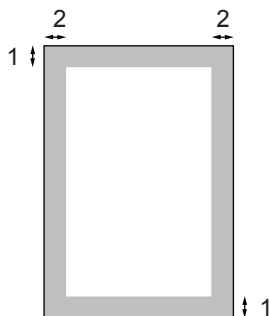


	Printer driver	
Portrait	1	4.23 mm
	2	6.01 mm
Landscape	1	4.23 mm
	2	5 mm

 **Note** The unprintable area shown above is for A4 size paper. The unprintable area changes with the paper size.

Unprintable area (Letter)

Unprintable area for copies

The printable area of your machine begins at approximately 0.12 in. (3 mm) from the top and bottom and 0.16 in. (4 mm) from both sides of the paper.

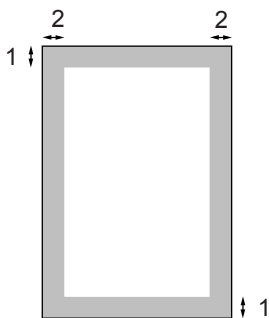

1 0.12 in. (3 mm)

2 0.16 in. (4 mm)




Note

This unprintable area shown above is for a single copy or a 1 in 1 copy using Letter size paper. The unprintable area changes with the paper size.


Unprintable area when printing from a computer

When using the driver the printable area is smaller than the paper size, as shown below.

Portrait

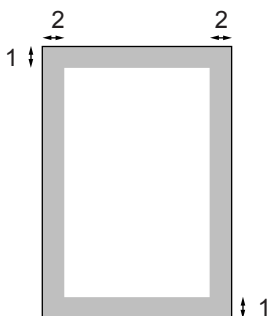

Landscape

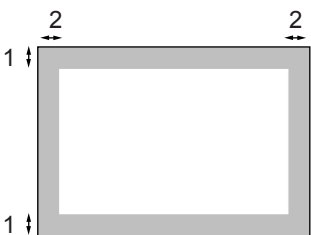

		Windows® printer driver and Macintosh® printer driver	BRScript Driver for Windows® and Macintosh® (MFC-7840W only)
Portrait	1	0.16 in. (4.23 mm)	0.16 in. (4.23 mm)
	2	0.25 in. (6.35 mm)	0.16 in. (4.23 mm)
Landscape	1	0.16 in. (4.23 mm)	0.16 in. (4.23 mm)
	2	0.2 in. (5.08 mm)	0.16 in. (4.23 mm)



Note

The unprintable area shown above is for Letter size paper. The unprintable area changes with the paper size.

Acceptable paper and other print media

Print quality may vary according to the type of paper you are using.

You can use the following types of print media: plain paper, bond paper, recycled paper, transparencies, labels or envelopes.

For best results, follow the instructions below:

- Use paper made for plain paper copying.
- Use paper that is 75 to 90 g/m².
- Use labels and transparencies which are designed for use in laser machines.
- Do not put different types of paper in the paper tray at the same time because it may cause paper jams or misfeeds.
- For correct printing, you must choose the same paper size from your software application as the paper in the tray.
- Avoid touching the printed surface of the paper immediately after printing.
- When you use transparencies remove each sheet immediately to prevent smudging or paper jams.
- Use long grain paper with a neutral Ph value, and a moisture content of approx 5%.

Recommended paper and print media (for EU)

To get the best print quality, we suggest using the following paper.

Paper Type	Item
Plain Paper	Xerox Premier 80 g/m ²
	Xerox Business 80 g/m ²
Recycled Paper	Xerox Recycled Supreme 80g/m ²
Transparency	3M CG3300
Labels	Avery laser label L7163
Envelope	Antalis River series (DL)

Recommended paper and print media (For USA and Canada)

To get the best print quality, we suggest using the following paper.

Paper Type	Item
Plain paper	Xerox 4200DP 20 lb
	Hammermill Laser Print (24 lb=90 g/m ²)
Recycled Paper	No specific brand recommended
Transparency	3M CG3300
Labels	Avery laser labels white #5160
Envelope	No specific brand recommended

Type and size of paper

The machine loads paper from the installed standard paper tray or manual feed slot.

Standard paper tray

Since the standard paper tray is a universal type, you can use any of the paper sizes (one paper type and size at a time) listed in the table in *Paper capacity of the paper trays* on page 17. The standard paper tray can hold up to 250 sheets of Letter/A4, legal or folio size paper (20 lb or 80 g/m²). Paper can be loaded up to the maximum paper mark on the sliding paper width guide.

Manual Feed Slot

The manual feed slot can hold a sheet with a size of 76.2 to 220 mm wide and 116 to 406.4 mm long. You can use the manual feed slot if you are using special paper, envelopes or labels.

Paper capacity of the paper trays

	Paper size	Paper types	No. of sheets
Paper Tray	A4, Letter, Legal ¹ , Executive, A5, A6, B5, B6 and Folio ²	Plain paper and recycled paper	up to 250 [20 lb (80 g/m ²)]
		Transparency	up to 10
Manual Feed Slot	Width: 3 to 8.66 in. (76.2 to 220 mm) Length: 4.57 to 16 in. (116 to 406.4 mm)	Plain paper, recycled paper, bond paper, envelopes, labels and transparencies	1

¹ Legal and Folio size is for USA, Canada and Asia.

² Folio size is 8 in. x 13 in. (215.9 mm x 330.2 mm)

Recommended paper specifications

The following paper specifications are suitable for this machine.

Basis weight	75-90 g/m ²
Thickness	80-110 µm
Roughness	Higher than 20 sec.
Stiffness	90-150 cm ³ /100
Grain direction	Long grain
Volume resistivity	10e ⁹ -10e ¹¹ ohm
Surface resistivity	10e ⁹ -10e ¹² ohm-cm
Filler	CaCO ₃ (Neutral)
Ash content	Below 23 wt%
Brightness	Higher than 80 %
Opacity	Higher than 85 %

Handling and using special paper

The machine is designed to work well with most types of xerographic and bond paper. However, some paper variables may have an effect on print quality or handling reliability. Always test samples of paper before purchasing to ensure desirable performance. Store paper in its original packaging and keep it sealed. Keep the paper flat and away from moisture, direct sunlight and heat.

Some important guidelines when selecting paper are:

- Do not use inkjet paper because it may cause a paper jam or damage your machine.
- Preprinted paper must use ink that can withstand the temperature of the machine's fusing process (200 degrees centigrade).
- If you use bond paper, paper having a rough surface or paper that is wrinkled or creased, the paper may exhibit degraded performance.


Types of paper to avoid

! CAUTION

Some types of paper may not perform well or may cause damage to your machine.

DO NOT use paper:

- that is highly textured
- that is extremely smooth or shiny
- that is curled or warped

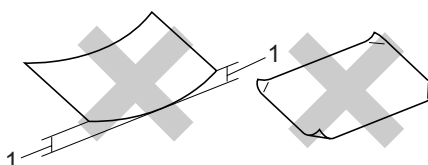

1 2 mm

- that is coated or has a chemical finish
- that is damaged, creased or folded
- that exceeds the recommended weight specification in this guide
- with tabs and staples
- with letterheads using low temperature dyes or thermography
- that is multipart or carbonless
- that is designed for inkjet printing

If you use any of the types of paper listed above, they may damage your machine. This damage is not covered under any of our warranty or service agreement.


Envelopes

Most envelopes will be suitable for your machine. However, some envelopes may have feed and print-quality problems because of the way they have been made. A suitable envelope should have edges with straight, well-creased folds and the leading edge should not be thicker than two sheets of paper. The envelope should lie flat and not be of baggy or flimsy construction. You should buy quality envelopes from a supplier who understands that you will be using the envelopes in a laser machine.

Envelopes can be fed from the manual feed slot one at a time. We recommend that you print a test envelope to make sure the print results are what you want before you print or purchase a large quantity of envelopes.

Check the following:

- Envelopes should have a lengthwise sealing flap.
- The sealing flaps should be folded crisply and correctly (irregularly cut or folded envelopes may cause paper jams).
- Envelopes should consist of two layers of paper in the area circled in figure below.

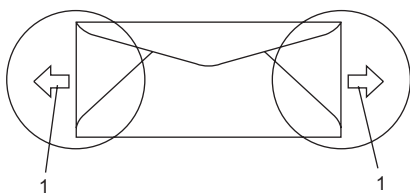

1 Feeding direction


- Envelope joints that are sealed by the manufacturer should be secure.
- We recommend that you do not print within 15 mm of the edges of envelopes.

Types of envelopes to avoid


! CAUTION

DO NOT use envelopes:


- that are damaged, curled, wrinkled or an unusual shape
- that are extremely shiny or textured
- with clasps, staples, snaps or tie strings
- with self-adhesive closures
- that are of a baggy construction
- that are not sharply creased
- that are embossed (have raised writing on them)
- that were previously printed by a laser machine
- that are pre-printed on the inside
- that cannot be arranged neatly when stacked
- that are made of paper that weighs more than the paper weight specifications for the machine
- with edges that are not straight or consistently square
- with windows, holes, cut-outs or perforations
- with glue on surface as shown in figure below

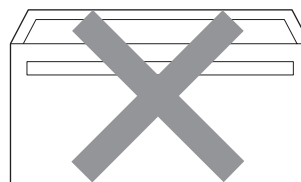


- with double flaps as shown in figure below

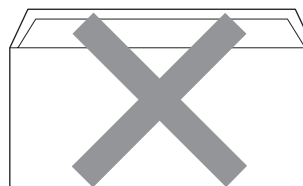

- with sealing flaps that have not been folded at purchase
- with sealing flaps as shown in figure below

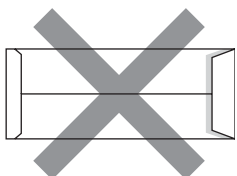

- with each side folded as shown in figure below

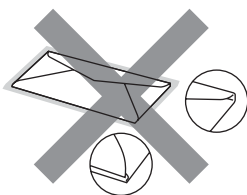

If you use any of the types of envelopes listed above, they may damage your machine. This damage is not covered under any our warranty or service agreement.

Occasionally you may experience paper feed problems caused by the thickness, size and flap shape of the envelopes you are using.

Labels

The machine will print on most types of labels designed for use with a laser machine. Labels should have an adhesive that is acrylic-based since this material is more stable at the high temperatures in the fuser unit. Adhesives should not come in contact with any part of the machine, because the label stock may stick to the drum unit or rollers and cause jams and print quality problems. No adhesive should be exposed between the labels. Labels should be arranged so that they cover the entire length and width of the sheet. Using labels with spaces may result in labels peeling off and causing serious jams or print problems.

All labels used in this machine must be able to withstand a temperature of 392 degrees Fahrenheit (200 degrees centigrade) for a period of 0.1 seconds.

Label sheets should not exceed the paper weight specifications described in this User's Guide. Labels exceeding this specification may not feed or print correctly and may cause damage to your machine.

Labels can be fed from the manual feed slot only.

Types of labels to avoid

Do not use labels that are damaged, curled, wrinkled or an unusual shape.



CAUTION

DO NOT feed part used label sheets. The exposed carrier sheet will damage your machine.

Loading documents

Using the automatic document feeder (ADF)

The ADF can hold up to 35 pages and feeds each sheet individually. Use standard 80 g/m² paper and always fan the pages before putting them in the ADF.

Recommended environment

Temperature: 20 to 30° C
 Humidity: 50% - 70%
 Paper: Xerox Premier 80 g/m² or Xerox Business 80 g/m²

! CAUTION

DO NOT leave thick documents on the scanner glass. If you do this, the ADF may jam.

DO NOT use paper that is curled, wrinkled, folded, ripped, stapled, paper-clipped, pasted or taped.

DO NOT use cardboard, newspaper or fabric.


To avoid damaging your machine while using the ADF, DO NOT pull on the document while it is feeding.

To scan non-standard documents see *Using the scanner glass* on page 22.

- Make sure documents written with ink are completely dry.

- Documents to be faxed must be from 148 to 215.9 mm wide and from 148 to 355.6 mm long, and of a standard weight (80 g/m²).


- 1 Unfold the ADF document output support flap (1) and the ADF support flap (2).

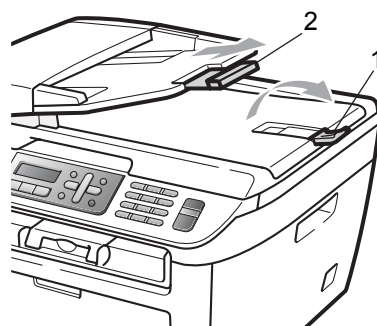

Note

For legal paper, close the ADF document output support flap (1), and then take each individual sheet off the ADF output tray after scanning.

- 2 Fan the pages well.
- 3 Place your document, face up top edge first, in the ADF until you feel it touch the feed roller.
- 4 Adjust the paper guides (1) to fit the width of your document.

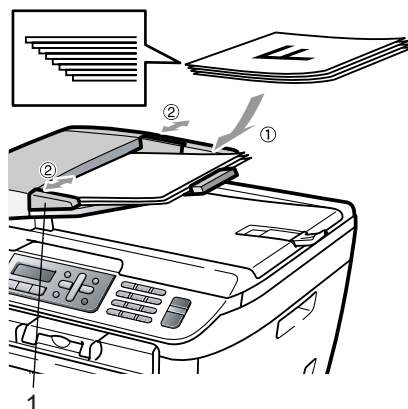

Using the scanner glass

You can use the scanner glass to fax, copy or scan pages of a book or one page at a time. Documents can be up to 215.9 mm wide and 297 mm long.



Note


To use the scanner glass, the ADF must be empty.



CAUTION

If the document is a book or is thick do not slam the cover or press on it.

- 1 Lift the document cover.
- 2 Using the document guidelines on the left, centre the document face down on the scanner glass.

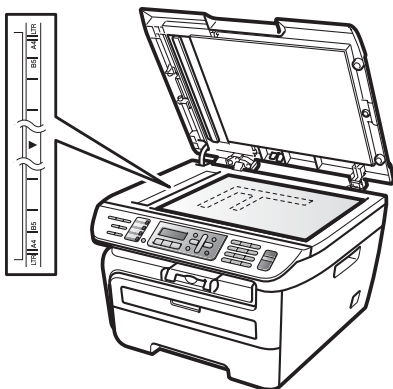


- 3 Close the document cover.

Mode timer

The machine has three mode keys on the control panel: **Fax**, **Scan**, and **Copy**.

You can set how much time the machine takes after the last Copy or Scan operation to return to Fax mode. If you choose **Off**, the machine will stay in the mode you used last.

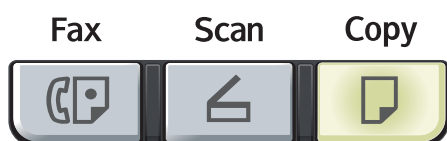

- 1 Press **Menu**, 1, 1.
- 2 Press **▲** or **▼** to choose 0 Sec, 30 Secs, 1 Min, 2 Mins, 5 Mins or Off.
Press **OK**.
- 3 Press **Stop/Exit**.

Paper settings

Paper type

Set up the machine for the type of paper you are using. This will give you the best print quality.

- 1 Press **Menu**, 1, 2.
- 2 Press **▲** or **▼** to choose Thin, Plain, Thick, Thicker, Transparency or Recycled Paper.
Press **OK**.
- 3 Press **Stop/Exit**.

Paper size

(For EU and Oceania)

You can use seven sizes of paper for printing copies: A4, Letter, Executive, A5, A6, B5 and B6 and two sizes for printing faxes: A4 or Letter.

(For USA, Canada and Asia)

You can use nine sizes of paper for printing copies: A4, Letter, Legal, Executive, A5, A6, B5, B6 and Folio and four sizes for printing faxes: A4, Letter, Legal or Folio (8"x13").

When you change the size of paper in the tray, you will also need to change the setting for paper size at the same time so your machine can fit the document or an incoming fax on the page.

- 1 Press **Menu**, 1, 3.
- 2 (For EU and Asia)
Press **▲** or **▼** to choose A4, Letter, Executive, A5, A6, B5 or B6.
Press **OK**.
(For USA, Canada and Asia)
Press **▲** or **▼** to choose A4, Letter, Legal, Executive, A5, A6, B5, B6 or Folio.
Press **OK**.
- 3 Press **Stop/Exit**.



Note

If you chose Transparency as the paper type (**Menu**, 1, 2) you will only be able to choose Letter or A4 (Legal or Folio for USA, Canada and Asia) size paper in Step 2.

Volume settings

Ring volume

You can choose a ring volume level from a range of settings, from **High** to **Off**.

While in Fax mode press or to adjust the volume level. The LCD will show the current setting, and each key press will change the volume to the next level. The machine will keep the new setting until you change it.

You can also change the ring volume through the menu:

- 1 Press **Menu, 1, 4, 1.**
- 2 Press or to choose **Off, Low, Med** or **High**.
Press **OK**.
- 3 Press **Stop/Exit.**

Beeper volume

When the beeper is on, the machine will beep when you press a key, make a mistake, or after you send or receive a fax. You can choose a range of volume levels, from **High** to **Off**.

- 1 Press **Menu, 1, 4, 2.**
- 2 Press or to choose **Off, Low, Med** or **High**.
Press **OK**.
- 3 Press **Stop/Exit.**

Speaker volume

You can choose a range of speaker volume levels, from **High** to **Off**.

- 1 Press **Menu, 1, 4, 3.**
- 2 Press or to choose **Off, Low, Med** or **High**.
Press **OK**.

- 3 Press **Stop/Exit.**

You can also adjust the speaker volume with the control panel keys.

- 1 Press **(Fax).**
- 2 Press **Hook.**
- 3 Press or .
This setting will stay until you change it again.
- 4 Press **Hook.**

Automatic daylight savings time

You can set the machine to change automatically for Daylight Savings Time. It will set itself forward one hour in the Spring, and back one hour in the Autumn.

- 1 Press  **Menu 1, 5.**
- 2 Press  or  to choose **On** or **Off**. Press **OK**.
- 3 Press  **Stop/Exit.**

Ecology features

Toner Save

You can save toner using this feature. When you set Toner Save to **On**, prints appear lighter. The default setting is **Off**.

- 1 Press  **Menu, 1, 6, 1.**
- 2 Press  or  to choose **On** or **Off**. Press **OK**.
- 3 Press  **Stop/Exit.**



Note

We do not recommend Toner Save for printing Photo or Greyscale images.

Sleep time

Setting the sleep time reduces power consumption by turning off the fuser while the machine is idle.

You can choose how long the machine must be idle (from 00 to 99 minutes) before it goes into sleep mode. When the machine receives a fax, computer data, or makes a copy, the timer will be reset. The default setting is 05 minutes.

While the machine is in sleep mode the LCD will display **Sleep**. When printing or copying in sleep mode, there will be a short delay while the fuser warms up.

- 1 Press  **Menu 1, 6, 2.**
- 2 Enter the length of time the machine is idle before entering sleep mode (00 to 99). Press **OK**.
- 3 Press  **Stop/Exit.**



Note

To turn *off* sleep mode, press  **Start** and  **Options** at the same time in 2. Press  or  to choose **Off**. Press **OK**.

LCD contrast

You can change the contrast to make the LCD look lighter or darker.

- 1 Press  **Menu, 1, 7.**
- 2 Press  to make the LCD darker. Or, press  to make the LCD lighter. Press **OK**.
- 3 Press  **Stop/Exit.**

Dial prefix (For USA, Canada and Asia only)

The dial prefix setting will automatically dial a predefined number before every fax number you dial. For example: If your telephone system requires a 9 to dial an outside number use this setting to automatically dial 9 for every fax you send.

Setting up the prefix number

- 1 (For USA and NewZealand)
Press  **Menu, 0, 5.**
(For Canada and Asia)
Press  **Menu, 0, 6.**
- 2 Enter the prefix number (up to 5 digits) on the dial pad.
Press **OK**.



Note

- You can use the numbers 0 to 9, #, * and !. (Press  **Hook** to display “!”.)

You cannot use ! with any other numbers or characters.

If your telephone system requires a timed break recall (hookflash), press  **Hook** to enter the break.

- (Canada only) If the pulse dialing mode is on, # and * are not available to use.

- 3 Press  **Stop/Exit.**

Changing the prefix number

- 1 (For USA and NewZealand)
Press  **Menu, 0, 5.**
(For Canada and Asia)
Press  **Menu, 0, 6.**
- 2 Do one of the following:
 - To change the prefix number, press **1**.
 - To exit without making a change, press **2** and go to 4.
- 3 Enter a new prefix number using the dial pad (up to 5 digits),
press **OK**.
- 4 Press  **Stop/Exit.**

Security

You can set up your machine with multiple levels of security using Memory Security and Setting Lock. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent even if you turn on Memory Security, so they will not be lost.

Memory Security

Memory Security lets you prevent unauthorized access to the machine. You will not be able to continue to schedule Delayed Faxes or Polling jobs. However, any pre-scheduled Delayed Faxes will be sent even if you turn on Memory Security, so they won't be lost.

While Memory Security is on, the following operations are available:

- Receiving faxes into memory (limited by memory capacity)
- Fax Forwarding (if Fax Forwarding was already on)
- Remote Retrieval (if Fax Storage was already on)

While Memory Security is on, the following operations are NOT available:

- Sending faxes
- Printing received faxes
- Copying
- PC printing
- Scanning
- PC Fax Receive



Note

- To print the faxes in memory, turn off Memory Security.
- You must turn off PC Fax Receive before you can turn on Memory Security. (See *Turning off remote fax options* on page 72.)
- To print the faxes in memory, turn off Memory Security.

Setting up the password



Note

- If you have already set the password and want to change it, please see *Changing the Memory Security password* below.
- When you forget the password, contact your sales or service representative.

- 1 Press **Menu**, **1**, **8**, **1**.

1.Mem Security
- 2 Enter a four-digit number for the password.
 Press **OK**.
 If you are entering the password for the first time, the LCD shows *Verify*.
- 3 Re-enter the password.
 Press **OK**.
- 4 Press **Stop/Exit**.

Changing the Memory Security password

- 1 Press  **Menu**, **1**, **8**, **1**.

1.Mem Security
- 2 Press **▲** or **▼** to select **Set Password**. Press **OK**.
- 3 Enter the registered four-digit password. Press **OK**.
- 4 Enter a four-digit number for the new password. Press **OK**.
- 5 If the LCD shows **Verify:**, re-enter the new password. Press **OK**.
- 6 Press  **Stop/Exit**.

Setting lock

Setting Lock lets you set a password to stop other people from accidentally changing your machine settings.

Make a careful note of your password. If you forget it, please call your dealer.

While Setting Lock is **On**, you cannot change the following settings without a password:

- Date/Time
- Station ID
- Quick Dial settings
- Mode Timer
- Paper Type
- Paper Size
- Volume
- Auto Daylight
- Ecology
- LCD Contrast
- Setting Lock
- Dial Restriction
- Memory Security

Setting up the password

- 1 Press  **Menu**, **1**, **8**, **2**.
- 2 Enter a four-digit number for the password using numbers 0-9. Press **OK**.
- 3 Re-enter your password when the LCD shows **Verify:**. Press **OK**.
- 4 Press  **Stop/Exit**.

Changing your setting lock password

- 1 Press  **Menu**, 1, 8, 2.
- 2 Press **▲** or **▼** to choose **Set Password**. Press **OK**.
- 3 Enter your four-digit password. Press **OK**.
- 4 Enter a four-digit number for the new password. Press **OK**.
- 5 Re-enter your new password when the LCD shows **Verify:**. Press **OK**.
- 6 Press  **Stop/Exit**.

Turning setting lock on/off

If you enter the wrong password when following the instructions below, the LCD will show **Wrong Password**. Re-enter the correct password.

Turning setting lock on

- 1 Press  **Menu**, 1, 8, 2.
- 2 Press **▲** or **▼** to choose **On**. Press **OK**.
- 3 Enter your four-digit password. Press **OK**.
- 4 Press  **Stop/Exit**.

Turning setting lock off

- 1 Press  **Menu**, 1, 8, 2.
- 2 Enter your four-digit password. Press **OK** twice.
- 3 Press  **Stop/Exit**.

Restricting dialling

This feature is to prevent users from sending a fax or call to a wrong number by mistake. You can set the machine to restrict dialling by using the dial pad, One Touch and Speed Dial.

If you choose **Off**, the machine does not restrict the dialling method.

If you choose **Enter # twice**, the machine will prompt you to re-enter the number, and then if you re-enter the same number correctly, the machine will start dialling. If you re-enter the wrong number, the LCD will show an error message.

If you choose **On**, the machine will restrict all fax sending and outbound calls for that dialling method.

Dial pad restriction

- 1 Press  **Menu**, 2, 6, 1.
- 2 Press **▲** or **▼** to choose **Off**, **Enter # twice** or **On**. Press **OK**.
- 3 Press  **Stop/Exit**.

One Touch restriction

- 1 Press  **Menu**, 2, 6, 2.
- 2 Press **▲** or **▼** to choose **Off**, **Enter # twice** or **On**. Press **OK**.
- 3 Press  **Stop/Exit**.

Speed Dial restriction

- 1 Press  **Menu**, **2**, **6**, **3**.
- 2 Press **▲** or **▼** to choose **Off**,
Enter # twice or **On**.
Press **OK**.
- 3 Press  **Stop/Exit**.



Note

- The **Enter # twice** setting will not work if you lift an external handset before entering the number. You will not be asked to re-enter the number.
 - The machine cannot restrict dialling from the  **Redial/Pause** key.
 - If you chose **On** or **Enter # twice**, you cannot use the **Broadcasting** feature and cannot combine quick dial numbers when dialling.
-



Fax

Sending a fax	32
Receiving a fax	39
Telephone and external devices	44
Dialling and storing numbers	63
Remote fax options	69
Polling	76
Printing reports	80

5

Sending a fax

How to fax

Entering fax mode

To enter fax mode press  **Fax**, and the key will glow green.

Sending a fax from the ADF

Using the ADF to send your faxes is the easiest way. To cancel a fax in progress press  **Stop/Exit**.

- 1 Make sure you are in Fax mode .
- 2 Place your document *face up* in the ADF.
- 3 Dial the fax number. (See *How to dial* on page 63.)
- 4 Press  **Start**.
The machine scans the pages into memory and then sends the document.



Note

If the **Out of Memory** message appears while scanning a document into memory, press  **Stop/Exit** to cancel or  **Start** to send the scanned pages.

Sending a fax from the scanner glass

You can use the scanner glass to fax the pages of a book, or a single page at a time. The documents can be up to Letter or A4 size. Press  **Stop/Exit** to cancel a fax in progress.

- 1 Make sure you are in Fax mode .
- 2 Place your document *face down* on the scanner glass.
- 3 Dial the fax number. (See *How to dial* on page 63.)
- 4 Press  **Start**.
The machine starts scanning the first page.
- 5 After the machine scans the page, the LCD will prompt you to choose one of the options below:

Next Page?
1.Yes 2.No(Send)

■ Press **1** to send another page.
Go to 6.

■ Press **2** or  **Start** to send the document. Go to 7.

- 6 Place the next page on the scanner glass, press **OK**. Repeat 5 and 6 for each additional page.

Set Next Page
Then Press OK

- 7 Your machine will automatically send the fax.

**Note**

When faxing multiple pages from the scanner glass, real time transmission should be set to **Off**. (See *Real time transmission* on page 36.)

Cancelling a fax in progress

Press  **Stop/Exit** to cancel the fax. If you press  **Stop/Exit** while the machine is dialling or sending, the LCD will show
1. **Clear** 2. **Exit**, press **1** to cancel the fax.

Broadcasting

Broadcasting lets you send the same fax message to more than one fax number. You can include Groups, One Touch, Speed Dial numbers and up to 50 manually dialled numbers in the same broadcast.

You can broadcast up to 258 different numbers. This will depend on how many groups, access codes or credit card numbers you have stored, and on how many delayed or stored faxes in memory.

**Note**

Use the  **Search/Speed Dial** to help you choose numbers easily.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Enter a number.
Press **OK**.
You can use either a One Touch, Speed Dial, a Group number, or a number manually entered using the dial pad. (See *How to dial* on page 63.)
- 4 Repeat 3 until you have entered all the fax numbers you want to broadcast to.

- 5 Press  **Start**.

After the broadcast is finished the machine will print a broadcast report to let you know the results.

Cancelling a broadcast in progress

While broadcasting you can cancel the fax currently being sent or the whole broadcast job.

- 1 Press  **Menu**, **2**, **7**.
The LCD will display the fax being dialled (for example, #001 0123456789) and the broadcast job number (for example, Broadcast#001).
- 2 Press **▲** or **▼** to choose the job number you want to cancel.
Press **OK**.
- 3 Press **1** to clear the job number or **2** to exit.
If you chose to only cancel the fax currently being sent in 2, the machine will ask you if you want to cancel the broadcast. Press **1** to clear the whole broadcast job or **2** to exit.
- 4 Press  **Stop/Exit**.

Additional sending operations

Sending faxes using multiple settings

Before you send a fax, you can change any combination of these settings: contrast, resolution, overseas mode, delayed fax timer, polling transmission, real time transmission or cover page settings.

- 1 Make sure you are in Fax mode . After each setting is accepted, the LCD asks if you want to enter more settings.

Next
1.Yes 2.No

- 2 Do one of the following:
 - To choose more settings, press **1**. The LCD returns to the **Setup Send** menu so you can choose another setting.
 - If you have finished choosing settings, press **2** and go to the next step for sending your fax.

Electronic cover page

This feature will *not* work unless you have already programmed your Station ID. (See *the Quick Setup Guide*.)

You can automatically send a cover page with every fax. Your cover page includes your Station ID, a comment, and the name (or number) stored in the One Touch or Speed Dial memory.

By choosing **Next Fax: On** you can also display the number of pages on the cover page.

You can choose one of the following preset comments.

- 1.Comment Off
- 2.Please Call
- 3.Urgent
- 4.Confidential

Instead of using one of the preset comments, you can enter two personal messages of your own, up to 27 characters long. Use the chart on page 165 for help entering characters.

(See *Composing your own comments* on page 34.)

- 5.(User Defined)
- 6.(User Defined)

Composing your own comments

You can set up two comments of your own.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 2, 8**.
- 3 Press **▲** or **▼** to choose 5 or 6 to store your own comment.
Press **OK**.
- 4 Enter your own comment using the dial pad.
Press **OK**.

Use the chart on page 165 for help entering characters.

Send a cover page for the next fax

If you want to send a cover page only for the next fax, your machine will ask you to enter the number of pages you are sending so it can be printed on the cover page.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press  **Menu, 2, 2, 7.**
- 4 Press $\blacktriangle$ or $\blacktriangledown$ to choose **Next Fax:On** (or **Next Fax:Off**). Press **OK**.
- 5 Press $\blacktriangle$ or $\blacktriangledown$ to choose a comment. Press **OK**.
- 6 Enter two digits to show the number of pages you are sending. Press **OK**.
For example, enter **0, 2** for 2 pages or **0, 0** to leave the number of pages blank. If you make a mistake, press $\blacktriangleleft$ or **C/↶ Clear/Back** to back up and re-enter the number of pages.

Send a cover page for all faxes

You can set the machine to send a cover page whenever you send a fax.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 2, 7.**
- 3 Press $\blacktriangle$ or $\blacktriangledown$ to choose **On** (or **Off**). Press **OK**.
- 4 Press $\blacktriangle$ or $\blacktriangledown$ to choose a comment. Press **OK**.

Using a printed cover page

If you want to use a printed cover page that you can write on, you can print the sample page and attach it to your fax.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 2, 7.**
- 3 Press $\blacktriangle$ or $\blacktriangledown$ to choose **Print Sample**. Press **OK**.
- 4 Press  **Start**.
- 5 After the machine prints a copy of your cover page, press  **Stop/Exit**.

Contrast

For most documents the default setting of **Auto** will give the best results. It automatically chooses the suitable contrast for your document.

If your document is very light or dark, changing the contrast may improve the quality of the fax.

Use **Dark** to make the faxed document lighter.

Use **Light** to make the faxed document darker.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press  **Menu, 2, 2, 1.**
- 4 Press $\blacktriangle$ or $\blacktriangledown$ to choose **Auto, Light** or **Dark**. Press **OK**.



Note

Even if you choose **Light** or **Dark**, the machine will send the fax using the **Auto** setting if you choose **Photo** as the Fax Resolution.

Changing fax resolution

The quality of a fax can be improved by changing the fax resolution. Resolution can be changed for the next fax *or* for all faxes.

To change the fax resolution for the next fax

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press  **Resolution**, then ▲ or ▼ to choose the resolution. Press **OK**.

To change the default fax resolution

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu**, **2**, **2**, **2**.
- 3 Press ▲ or ▼ to choose the resolution you want. Press **OK**.



Note

You can choose four different resolution settings.

Standard:

Suitable for most typed documents.

Fine:

Good for small print and transmits a little slower than Standard resolution.

S.Fine:

Good for small print or artwork and transmits slower than Fine resolution.

Photo:

Use when the document has varying shades of grey or is a photograph. This has the slowest transmission time.

Dual access

You can dial a number, and start scanning the fax into memory—even when the machine is sending from memory, receiving faxes or printing PC data. The LCD will show the new job number.

The number of pages you can scan into the memory will vary depending on the data that is printed on them.



Note

If you get an **Out of Memory** message while scanning the first page of a fax, press  **Stop/Exit** to cancel scanning. If you get an **Out of Memory** message while scanning a subsequent page, you can press  **Start** to send the pages scanned so far, or press  **Stop/Exit** to cancel the operation.

Real time transmission

When you are sending a fax, the machine will scan the documents into the memory before sending. Then, as soon as the telephone line is free, the machine will start dialling and sending.

If the memory is full, the machine will send the document in real time (even if **Real Time TX** is set to **Off**).

Sometimes, you may want to send an important document immediately, without waiting for memory transmission. You can set **Real Time TX** to **On** for all documents or **Next Fax:On** for the next fax only.



Note

In **Real Time Transmission**, the automatic redial feature does not work when using the scanner glass.

Sending in real time for all faxes

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 2, 5.**
- 3 Press **▲** or **▼** to choose **On.**
Press **OK.**

Sending in real time for the next fax only

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 2, 5.**
- 3 Press **▲** or **▼** to choose **Next Fax:On.**
Press **OK.**

Not sending in real time for the next fax only

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 2, 5.**
- 3 Press **▲** or **▼** to choose **Next Fax:Off.**
Press **OK.**

Overseas mode

If you are having difficulty sending a fax overseas due to a bad connection, then turning on the overseas mode may help.

This is a temporary setting, and will only be active for your next fax.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press  **Menu, 2, 2, 9.**
- 4 Press **▲** or **▼** to choose **On or Off.**
Press **OK.**

Delayed fax

You can store up to 50 faxes in the memory to be sent within a twenty four hour period.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press  **Menu, 2, 2, 3.**
- 4 Enter the time you want the fax to be sent (in 24-hour format).
(For example, enter 19:45 for 7:45 PM)
Press **OK.**



Note

The number of pages you can scan into the memory depends on the amount of data printed on each page.

Delayed batch transmission

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time.

All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 2, 4.**
- 3 Press **▲** or **▼** to choose **On or Off.**
Press **OK.**
- 4 Press  **Stop/Exit.**

Checking and cancelling waiting jobs

Check which jobs are still waiting in the memory to be sent. If there are no jobs, the LCD will show **No Jobs Waiting**. You can cancel a fax job that is stored and waiting in the memory.

- 1 Press  **Menu**, **2**, **7**.
The number of jobs still to be sent will be displayed.
- 2 Do one of the following:
 - Press **▲** or **▼** to scroll through the waiting jobs, press **OK** to choose a job, and then press **1** to cancel it.
 - Press **2** to exit without cancelling.
- 3 When you have finished, press  **Stop/Exit**.

Sending a fax manually

Manual transmission

Manual transmission lets you hear the dialling, ringing and fax-receiving tones while sending a fax.

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Pick up the handset of an external telephone and listen for a dial tone.
- 4 Dial the fax number you want to call.
- 5 When you hear the fax tone, press  **Start**.
 - If you are using the scanner glass, press **1** to send a fax.
- 6 If you picked up the handset of an external telephone, replace it.

Out of memory message

If you get an **Out of Memory** message while scanning the first page of a fax, press

 **Stop/Exit** to cancel the fax.

If you get an **Out of Memory** message while scanning a subsequent page, you will have the option to press  **Start** to send the pages scanned so far, or to press

 **Stop/Exit** to cancel the operation.




Note

If you get an **Out of Memory** message while faxing and you do not want to delete your stored faxes to clear the memory, you can send the fax in real time. (See *Real time transmission* on page 36.)

Receive modes

You must choose a receive mode depending on the external devices and telephone services you have on your line. The diagrams below will help you choose the correct mode. (For more detailed information about the receive modes, see *Using receive modes* on page 40.)

Choosing the receive mode

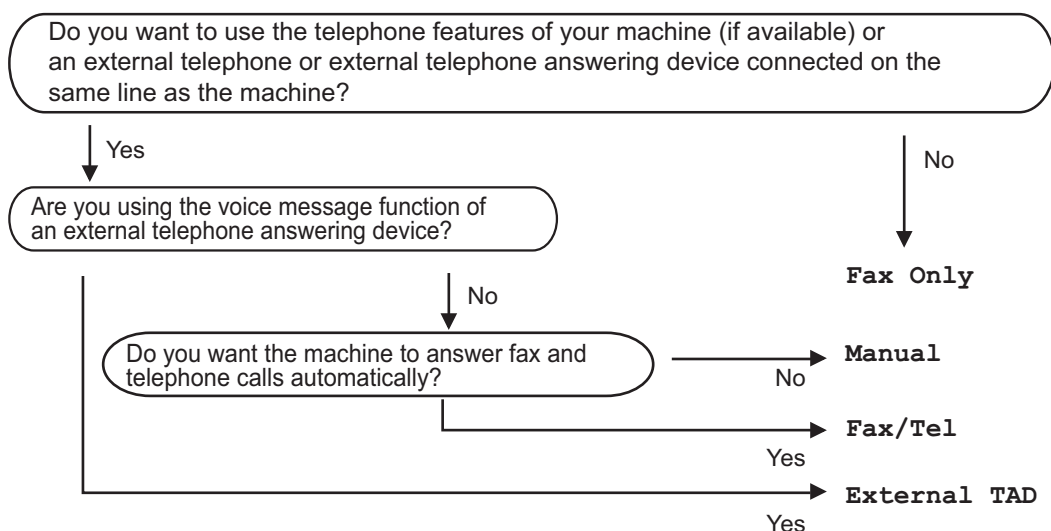

To set the receive mode follow the instructions below.

- 1 Press **Menu**, **0**, **1**.
- 2 Press **▲** or **▼** to choose the receive mode.
Press **OK**.
- 3 Press **Stop/Exit**.

The LCD will display the current receive mode.

Using receive modes

Some receive modes answer automatically (**Fax Only** and **Fax/Tel**). You may want to change the ring delay before using these modes. (See *Ring delay* on page 41.)

Fax Only

Fax Only mode will automatically answer every call as a fax.

Fax/Tel

Fax/Tel mode helps you automatically manage incoming calls, by recognising whether they are fax or voice calls and dealing with them in one of the following ways:

- Faxes will be automatically received.
- Voice calls will start the F/T ring to tell you to pick up the line. The F/T ring is a fast double ring made by your machine.

(Also see *F/T ring time (Fax/Tel mode only)* on page 41 and *Ring delay* on page 41.)

Manual

Manual mode turns off all automatic answering functions unless you are using the BT Call sign ¹ feature or the Distinctive Ring feature.

¹ BT Call Sign is for U.K. only.

To receive a fax in **Manual** mode press

 **Start** when you hear fax tones (short repeating beeps). You can also use the Fax Detect feature to receive faxes by lifting a handset on the same line as the machine.

(Also see *Fax Detect (Easy Receive)* on page 41.)

External TAD

External TAD mode lets an external answering device manage your incoming calls. Incoming calls will be dealt with in the following ways:

- Faxes will be automatically received.
- Voice callers can record a message on the external TAD.

(For more information see *Connecting an external TAD* on page 55.)

Receive mode settings

Ring delay

The ring delay sets the number of times the machine rings before it answers in **Fax Only** and **Fax/Tel** modes.

If you have external or extension telephones on the same line as the machine choose the maximum number of rings. (See *Operation from extension telephones* on page 57 and *Fax Detect (Easy Receive)* on page 41.)

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 1, 1.**
- 3 Press **▲** or **▼** to choose how many times the line rings before the machine answers.
Press **OK**.
- 4 Press  **Stop/Exit.**

F/T ring time (Fax/Tel mode only)

When somebody calls your machine, you and your caller will hear the normal telephone ring sound. The number of rings is set by the ring delay setting.

If the call is a fax, then your machine will receive it; however, if it is a voice call the machine will sound the F/T ring (a fast double-ring) for the time you have set in the F/T ring time setting. If you hear the F/T ring it means that you have a voice caller on the line.

Because the F/T ring is made by the machine, extension and external telephones will *not* ring; however, you can still answer the call on any telephone. (For more information see *Using remote codes* on page 62.)

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 1, 2.**

- 3 Press **▲** or **▼** to choose how long the machine will ring to alert you that you have a voice call (20, 30, 40 or 70 seconds).
Press **OK**.

- 4 Press  **Stop/Exit.**

Fax Detect (Easy Receive)

Turning Fax Detect (Easy Receive) **On** allows the machine to receive fax calls automatically if you lift any handset on the same line as the machine.

When you see **Receiving** on the LCD or when you hear 'chirps' through the handset you are using, just replace the handset and your machine will receive the fax.

If this feature is set to **On**, but your machine does not connect a fax call when you lift the handset of an extension or external telephone, press ***51** on the external or extension phone. (See *Operation from extension telephones* on page 57.)



Note

- You need to turn the Remote Codes setting to **on** to use the Remote Activation code ***51**. (See *Using remote codes* on page 62.)
- If you use a modem, or send faxes from a computer, on the same line and your machine intercepts them, set **Fax Detect to Off**.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 1, 3.**
- 3 Press **▲** or **▼** to choose **On** or **Off**.
Press **OK**.
- 4 Press  **Stop/Exit.**

Setting the print density

You can adjust the print density to make your printed pages darker or lighter.

- 1 Make sure you are in Fax mode .
- 2 (for EU and Asia/Oceania)
Press  **Menu, 2, 1, 7.**
(for USA and Canada)
Press  **Menu, 2, 1, 6.**
- 3 Press **▲** to make the print darker.
Or, press **▼** to make the print lighter.
Press **OK**.
- 4 Press  **Stop/Exit.**

Additional receiving operations

Printing a reduced incoming fax

If you choose **On**, the machine automatically reduces each page of an incoming fax to fit on one page of A4 or Letter size paper.

The machine calculates the reduction ratio by using the page size of the fax and your Paper Size setting ( **Menu, 1, 3**).

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 1, 5.**
- 3 Press **▲** or **▼** to choose **On** or **Off**.
Press **OK**.
- 4 Press  **Stop/Exit.**

Setting the fax receive stamp

You can set the machine to print the received date and time in the top centre of each received fax page.

- 1 Make sure you are in Fax mode .
- 2 (for EU and Asia/Oceania)
Press  **Menu, 2, 1, 9.**
(for USA and Canada)
Press  **Menu, 2, 1, 8.**
- 3 Press **▲** or **▼** to choose **On** or **Off**.
Press **OK**.
- 4 Press  **Stop/Exit.**



Note

Make sure you have set the current date and time in the machine.

Receiving a fax at the end of a conversation

At the end of a conversation you can ask the other party to send you a fax before you both hang up.

- 1 Ask the other party to place the document in their machine and to press the Start or Send key.
- 2 When you hear the CNG tones (slowly repeating beeps), press  **Start**.
- 3 Press **2** to receive a fax.
- 4 Replace the external handset.

Receiving faxes into memory

As soon as the paper tray becomes empty during fax reception, the screen will display **No Paper**, asking you to put paper in the paper tray. (See *Loading paper and print media* on page 9.) If you are unable to put paper in the paper tray the following will happen:

If Memory Receive is On:

The machine will carry on receiving the fax, with the remaining pages being stored in memory, if enough memory is available. Further incoming faxes will also be stored into memory until the memory is full. When the memory is full the machine will stop automatically answering calls. To print the faxes, put fresh paper in the tray.

If Memory Receive is Off:

The machine will carry on receiving the fax, with the remaining pages being stored in memory, if enough memory is available. The machine will then stop automatically answering calls until fresh paper is put in the paper tray. To print the last fax you received, put fresh paper in the tray.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 1, 6**.
- 3 Use **▲** or **▼** to choose **On** or **Off**. Press **OK**.
- 4 Press  **Stop/Exit**.



Note

For USA and Canada, Memory Receive is always on.

Printing a fax from the memory

If you are using the Fax Storage feature ( **Menu, 2, 5, 1**), you can still print a fax from the memory when you are at your machine. See *Fax storage* on page 70.

- 1 Press  **Menu, 2, 5, 3**.
- 2 Press  **Start**.
- 3 Press  **Stop/Exit**.

Telephone Service for U.K.

Caller ID

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the LCD will show the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the LCD, but the call information stays stored in the Caller ID memory.

- You will see the number (or name) on the LCD.
- The ID `Unknown` message means the call originated outside your Caller ID service area.
- The ID `Withheld` message means the caller has intentionally blocked transmission of information.

You can print a list of the Caller ID information received by your machine. (See *Printing the Caller ID List* on page 44.)



Note

- The Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.
- This feature may not be available in some countries.

Setting the Caller ID to On

If you have Caller ID on your line, then this function should be set to `On` to display the caller's phone number on the LCD as the telephone rings.

- 1 Press **Menu**, **2**, **0**, **3**.
- 2 Press **▲** or **▼** to choose `On` (or `Off`). Press **OK**.
- 3 Press **Stop/Exit**.

Viewing the Caller ID List

Your machine stores information for the last thirty calls in the Caller ID list. You can view or print this list. When the thirty-first call comes in to the machine, it replaces information about the first call.

- 1 Press **Menu**, **2**, **0**, **3**.
- 2 Press **▲** or **▼** to choose `Display ID`. Press **OK**.
The Caller ID of the last call will appear on the display. If no ID is stored, the beeper will sound and `No Caller ID` will appear on the display.
- 3 Press **▲** or **▼** to scroll through the Caller ID memory to choose the Caller ID you want to view, and then press **OK**.
The LCD will show the caller's number and the date and time of the call.
- 4 To finish viewing, press **Stop/Exit**.

Printing the Caller ID List

- 1 Press **Menu**, **2**, **0**, **3**.
- 2 Press **▲** or **▼** to choose `Print Report`. Press **OK**.
If no ID is stored, the beeper will sound and `No Caller ID` will appear on the LCD.

- 3 Press  **Start**.
- 4 After printing has finished, press  **Stop/Exit**.

Setting the telephone line type

If you are connecting the machine to a line that features a PBX or ISDN to send and receive faxes, it is necessary to change the Telephone Line Type accordingly by completing the following steps. If you are using a line that features a PBX, you can set your machine to always gain access to an outside line, or not.

- 1 Press  **Menu**, 0, 6.
- 2 Press  or  to choose **PBX**, **ISDN** (or **Normal**). Press **OK**.
- 3 Do one of the following:
 - If you chose **ISDN** or **Normal**, go to 7.
 - If you chose **PBX**, go to 4
- 4 Do one of the following:
 - If you want to change the current prefix number, press 1 and go to 5.
 - If you do not want to change the current prefix number, press 2 and go to 7.
- 5 Enter the prefix number (up to 5 digits) on the dial pad. Press **OK**.



Note

- You can use the numbers 0 to 9, #, * and !.

(Press  **Hook** to display “!”.)

You cannot use ! with any other numbers or characters.

If your telephone system requires a timed break recall, press  **Hook** to enter the break.

- If the pulse dialling mode is on, # and * are not available to use.



- 6 Press  or  to choose **On** or **Always**. Press **OK**.



Note

- If you choose **On**, pressing  **Hook** (the screen displays “!”.) will let you access an outside line.
- If you choose **Always**, you can access an outside line without pressing  **Hook**.



- 7 Press  **Stop/Exit**.

PBX and TRANSFER

The machine is initially set to **Normal**, which lets the machine connect to a standard PSTN (Public Switched Telephone Network) line. However, many offices use a central telephone system or Private Branch Exchange (PBX). Your machine can be connected to most types of PBX. The machine's recall feature supports timed break recall only (TBR). TBR will work with most PBX systems allowing you to gain access to an outside line, or transfer calls to another extension. The feature works when  **Hook** is pressed.

BT call sign (U.K. only)

The BT Call Sign subscriber service is a way to have a separate number for your machine, it allows you to have at least two separate telephone numbers on one phone line. Each phone number has its own distinctive ringing pattern.

You can set up your machine so that it only responds to the second number.

When you set the BT Call Sign feature to ON, the receive mode is set to **Manual** automatically. **Manual** mode will not respond to incoming telephone calls, since the number you use for telephone calls will use the normal ring pattern. If you turn the feature off, your receive mode will remain on **Manual**.

To enable the machine to work with BT Call Sign

This feature will only work with your external phone.

- 1 Press  **Menu**, **2**, **0**, **2**.
The screen displays the current setting.
- 2 Press **▲** or **▼** to choose **On** or **Off**.
Press **OK**.
- 3 Press  **Stop/Exit**.

Telephone Service for USA and Canada

Voice Mail

If you have Voice Mail on the same telephone line as your machine, Voice Mail and the machine will conflict with each other when receiving incoming calls.

For example, if your Voice Mail is set to answer after 4 rings and your machine is set to answer after 2 rings, then your machine will answer first. This will prevent callers from being able to leave a message in your Voice Mail.

Similarly, if your machine is set to answer after 4 rings and your Voice Mail is set to answer after 2 rings, then your Voice Mail will answer first. This will prevent your machine from being able to receive an incoming fax, since Voice Mail cannot transfer the incoming fax back to the machine.

To avoid conflicts between your machine and your Voice Mail service, do one of the following:

Get the Distinctive Ring service from your telephone company. Distinctive Ring is a feature of your machine that allows a person with one line to receive fax and voice calls through two different telephone numbers on that one line. We use the term 'Distinctive Ring,' but telephone companies market the service under a variety of names, such as Custom Ringing, Personalized Ring, Smart Ring, RingMaster, Ident-A-Ring, Ident-A-Call, Data Ident-A-Call, Teen Ring, and SimpleBiz Fax & Alternate Number Ringing. This service establishes a second telephone number on the same line as your existing telephone number, and each number has its own ring pattern. Typically, the original number rings with the standard ring pattern and is used for receiving voice calls, and the second number rings with a different ring pattern and is used for receiving faxes. (See *Voice Mail* on page 46.)

OR

Set your machine's Receive Mode to "Manual". Manual Mode requires that you answer every incoming call if you want to be able to receive a fax. If the incoming call is a telephone call, then complete the call as you normally would. If you hear fax sending tones you must transfer the call to the machine. (See *Using external and extension telephones* on page 57.) Unanswered fax and voice calls will go to your Voice Mail. (To set the machine in **MANUAL** Mode, see *Receive modes* on page 39.)

Distinctive Ring

We use the term 'Distinctive Ring' but different telephone companies may have other names for this service such as Custom Ringing, Personalized Ring, RingMaster, Smart Ring, Teen Ring, Ident-A-Call, Data Ident-A-Call, Ident-A-Ring, SimpleBiz Fax & Alternate Number Ringing.

What does your telephone company's 'Distinctive Ring' do?

Your telephone company's Distinctive Ring service allows you to have more than one number on the same telephone line. **If you need more than one telephone number, it is cheaper than paying for an extra line.** Each telephone number has its own distinctive ring pattern, so you will know which telephone number is ringing. This is one way you can have a separate telephone number for your machine.

**Note**

Please call your telephone company for availability and rates.

What does the 'distinctive ring' do?

The machine has a Distinctive Ring feature that allows you to use your machine to take full advantage of the telephone company's Distinctive Ring service. The new telephone number on your line can just receive faxes.

**Note**

You must pay for your telephone company's Distinctive Ring service before you program the machine to work with it.

Do you have Voice Mail?

If you have Voice Mail on the telephone line that you will install your new machine on, *there is a strong possibility that Voice Mail and the machine will conflict with each other while receiving incoming calls.* **However, the Distinctive Ring feature allows you to use more than one number on your line, so both Voice Mail and the machine can work together without any problems.** If each one has a separate telephone number, neither will interfere with the other's operations.

If you decide to get the Distinctive Ring service from the telephone company, you will need to follow the directions below to 'register' the new Distinctive Ring pattern they give you. This is so your machine can recognize its incoming calls.

**Note**

You can change or cancel the Distinctive Ring pattern at any time. You can switch it off temporarily, and turn it back on later. When you get a new fax number, make sure you reset this feature.

Before you choose the ring pattern to register

You can only register one Distinctive Ring pattern with the machine. Some ring patterns cannot be registered. The ring patterns below are supported by your machine. Register the one your telephone company gives you.

Ring Pattern	Rings	
1	long-long	
2	short-long-short	
3	short-short-long	
4	very long (normal pattern)	



Note

- Ring Pattern #1 is often called Short-Short and is the most commonly used.
- If the ring pattern you received is not on this chart, **please call your telephone company and ask for one that is shown.**

- The machine will only answer calls to its registered number.
- The first two rings are silent on the machine. This is because the fax must <<listen>> to the ring pattern (to compare it to the pattern that was 'registered'). (Other telephones on the same line will ring.)
- If you program the machine properly, it will recognize the registered ring pattern of the 'fax number' within 2 ring patterns and then answer with a fax tone. When the 'voice number' is called, the machine will not answer.

Registering the distinctive ring pattern Very important!

After you have set the Distinctive Ring feature to On, your Distinctive Ring number will receive faxes automatically. The receive mode is automatically set to **Manual** and you cannot change it to another receive mode while Distinctive Ring is set to On. This ensures the machine will only answer the Distinctive Ring number and not interfere when your main telephone number is called.

- 1 Press  **Menu, 2, 0, 2.**

Miscellaneous
2.Distinctive

- 2 Press **▲** or **▼** to choose **Set**.
- 3 Press **OK**.
- 4 Press **▲** or **▼** to choose the prestored ring pattern you want to use.
Press **OK**.
- 5 (You will hear each pattern as you scroll through the four patterns. Make sure you choose the pattern that the telephone company gave you.)
- 6 Press  **Stop/Exit**.
Distinctive Ring is now set to On.

Turning off distinctive ring

- 1 Press **Menu, 2, 0, 2.**

Miscellaneous
2.Distinctive

- 2 Press **▲** or **▼** to choose **Off**.
Press **OK**.
- 3 Press  **Stop/Exit**.

**Note**

If you do not want to receive faxes on your Distinctive Ring number, you can turn off Distinctive Ring. The machine will stay in Manual receive mode so you will need to set the Receive Mode again. (See *Receive modes* on page 39.)

Caller ID

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the LCD will show the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the LCD, but the call information stays stored in the Caller ID memory.

- You will see the first 16 characters of the number (or name) on the LCD.
- The # *Unavailable* message means the call originated outside your Caller ID service area.
- The *Private Call* message means the caller has intentionally blocked transmission of information.

You can print a list of the Caller ID information received by your machine. (See *Printing the Caller ID List* on page 49.)

**Note**

- This feature may not be available in certain areas of the USA and Canada.
- The Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.

Viewing the Caller ID List

Your machine stores information for the last thirty calls in the Caller ID list. You can view or print this list. When the thirty-first call comes in to the machine, it replaces information about the first call.

- 1 Press **Menu, 2, 0, 3.**

```
Miscellaneous
3.Caller ID
```

- 2 Press **▲** or **▼** to choose *Display#*. Press **OK**.
The Caller ID of the last call will appear on the display. If no ID is stored, the beeper will sound and *No Caller ID* will appear on the display.
- 3 Press **▲** or **▼** to scroll through the Caller ID memory to choose the Caller ID you want to view, and then press **OK**.
The LCD will show the caller's number or name and the date and time of the call.
- 4 To finish viewing, press **Stop/Exit**.

Printing the Caller ID List

- 1 Press **Menu, 2, 0, 3.**

```
Miscellaneous
3.Caller ID
```

- 2 Press **▲** or **▼** to choose *Print Report*. Press **OK**.
If no ID is stored, the beeper will sound and *No Caller ID* will appear on the LCD.
- 3 Press **Start**.
- 4 After printing has finished, press **Stop/Exit**.

Telephone Service for Australia

Features like Voice Mail, Call Waiting, Call Waiting/Caller ID, RingMaster, answering services, alarm systems or other custom features on one telephone line may create problems with the operation of your machine.

Do you have Voice Mail?

If you have Voice Mail on the telephone line that you will install your new **Machine** on, there is a strong possibility *that Voice Mail and the Machine will conflict with each other while receiving incoming calls. However, the Distinctive Ring feature allows you to use more than one number on your line, so both Voice Mail and the Machine can work together without any problems.* If each one has a separate telephone number, neither will interfere with the other's operations.

If you decide to get the Distinctive Ring service from the telephone company, you will need to follow the directions to 'register' the new Distinctive Ring pattern they give you. This is so your Machine can recognize its incoming calls.

Telstra® FaxStream® Duet® (Distinctive Ringing)

Telstra® FaxStream® Duet® is an enhanced Public Switched Telephone Service (PSTS) offered by Telstra® that allows you to have an additional number on one telephone line, with its own distinctive ring pattern. Telstra®

FaxStream® Duet® is a call handling feature that helps users distinguish voice and facsimile calls. With FaxStream® Duet®, incoming calls to a fax number are announced by a different, distinctive ring signal. Only one call can be answered (or made) at any one time and while this call is in progress, incoming calls to either number will be presented with a busy tone.

Your machine has a Distinctive Ringing function, allowing you to dedicate one telephone number just for receiving faxes.



Note

After you have set the Distinctive Ring feature to **On**, the receive mode is set to **Manual** automatically. Your Distinctive Ring Number does not allow Voice Calls - only Faxes. You cannot change the receive mode from **Manual** mode while the Distinctive Ring is set to **on**.

What is the Advantage of using Telstra® FaxStream® Duet® Function?

Using Telstra® FaxStream® Duet® is the most efficient way to receive both fax and telephone calls on the same line. When the voice call comes in, all telephones (extension and external) and the fax machine will ring to alert you to pick it up. If a fax call comes in, the fax machine will answer automatically without ringing, whereas the extension and external telephones will ring twice with a distinctive ring pattern. It is also a more efficient way of operating a Fax machine with an extension telephone as you do not have to use the remote activation codes. It gives you two independent numbers without the higher cost of a second line.


How does Telstra® FaxStream® Duet® Work?

Incoming calls to the voice number, will have the standard ring pattern of long, long tone, followed by a pause, repeated, while the new fax number will have a different ring pattern of three short bursts of ring, repeated at regular intervals.

When FaxStream® Duet® is On and you receive a voice call all extension and external telephones will ring with a standard ring pattern. The fax machine will ring on the third ring with a standard ring pattern. All external and the extension telephones will continue to ring, until you or a telephone answering device can answer the voice number.

When FaxStream® Duet® is On and you receive a fax call on the Duet® number the Fax machine will answer and automatically receive the fax message without ringing. On the other hand, all extension and external telephones will ring twice with a distinctive ring pattern. Do not answer the telephone as you are receiving a fax message.

Flowchart Sequence of Incoming call

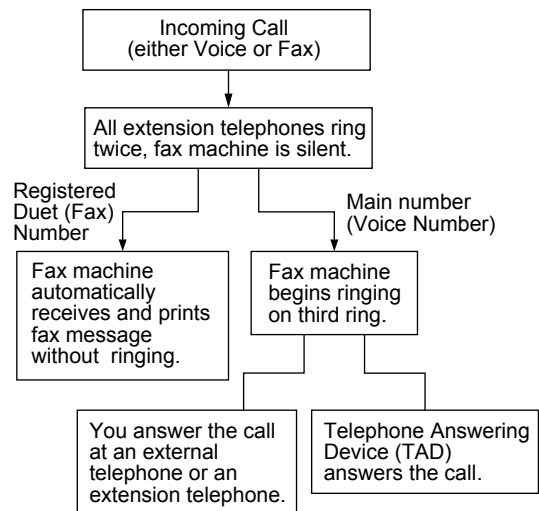

Set the Distinctive Ring to ON

Very important!

After you have set the Distinctive Ring feature to ON, the receive mode is set to **Manual** automatically. Your Distinctive Ring Number does not allow Voice Calls - only Faxes. You cannot change the receive mode to another mode while the Distinctive Ring is set to on.

- 1 Press  **Menu, 2, 0, 2.**
- 2 Press ▲ or ▼ to choose **On.**
- 3 Press **OK.**
- 4 Press  **Stop/Exit.** Distinctive Ring is now set to on.

Turning off Distinctive Ring

- 1 Press  **Menu, 2, 0, 2.**
- 2 Press ▲ or ▼ to choose **Off.**
- 3 Press **OK.**
- 4 Press  **Stop/Exit.**



Note

If you turn off Distinctive Ring, the machine will stay in **Manual** receive mode. You will need to set the Receive Mode again. (See *Choosing the receive mode* on page 39.)

Telephone Service for Some Countries

Features like Voice Mail, Call Waiting, Call Waiting/Caller ID, RingMaster, answering services, alarm systems or other custom features on one telephone line may create problems with the operation of your machine.

Do you have Voice Mail?

If you have Voice Mail on the telephone line that you will install your new **Machine** on, there is a strong possibility *that Voice Mail and the Machine will conflict with each other while receiving incoming calls. However, the Distinctive Ring feature allows you to use more than one number on your line, so both Voice Mail and the Machine can work together without any problems.* If each one has a separate telephone number, neither will interfere with the other's operations.

If you decide to get the Distinctive Ring service from the telephone company, you will need to follow the directions to 'register' the new Distinctive Ring pattern they give you. This is so your Machine can recognize its incoming calls.

Distinctive Ringing (For Singapore and Hong Kong)

This machine feature lets you use the Distinctive Ringing subscriber service offered by some telephone companies, which allows you to have several telephone numbers on one telephone line. Each telephone number has its own Distinctive Ringing pattern, so you will know which telephone number is ringing. This is one way you can have a separate telephone number for your machine.

Your machine has a Distinctive Ringing function, allowing you to dedicate one telephone number just for receiving faxes. You will need to set Distinctive Ringing to **On.**

**Note**

You can switch it off temporarily, then turn it back on. When you get a new fax number, make sure you reset this function.

- The machine will answer only calls to the Distinctive Ringing number.

**Note**

After you have set the Distinctive Ring feature to **On**, the receive mode is set to **Manual** automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, **Manual** mode means you must answer all the call yourself. You can not change the receive mode to the other mode while the Distinctive Ring is set to **On**.

Registering the Distinctive Ring pattern

Very important!

After you have set the Distinctive Ring feature to **ON**, the receive mode is set to **Manual** automatically. Unless you have a TAD or Voice Mail set up on the Distinctive Ring number, **Manual** mode means you must answer all the calls yourself. You can not change the receive mode to another mode while the Distinctive Ring is set to on.

- 1 Press **Menu, 2, 0, 2**.
- 2 Press **▲** or **▼** to choose **On**.
- 3 Press **OK**.
- 4 Press **Stop/Exit**. Distinctive Ring is now set to on.

7

Turning off Distinctive Ring

- 1 Press **Menu, 2, 0, 2**.
- 2 Press **▲** or **▼** to choose **Off**.
- 3 Press **OK**.
- 4 Press **Stop/Exit**.

**Note**

If you turn off Distinctive Ring, the machine will stay in **Manual** receive mode. You will need to set the Receive Mode again. (See *Choosing the receive mode* on page 39.)

Caller ID

The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. Call your telephone company for details. This service shows the telephone number, or name if it is available, of your caller as the line rings.

After a few rings, the LCD will show the telephone number of your caller (and name, if available). Once you answer a call, the Caller ID information disappears from the LCD, but the call information stays stored in the Caller ID memory.

- You will see the number (or name) on the LCD.
- The ID Unknown message means the call originated outside your Caller ID service area.
- The ID Withheld message means the caller has intentionally blocked transmission of information.

You can print a list of the Caller ID information received by your machine. (See *Printing the Caller ID List* on page 54.)



Note

The Caller ID service varies with different carriers. Call your local telephone company to find out about the kind of service available in your area.

- 3 Press ▲ or ▼ to scroll through the Caller ID memory to choose the Caller ID you want to view, and then press **OK**. The LCD will show the caller's number and the date and time of the call.
- 4 To finish viewing, press **Stop/Exit**.

Printing the Caller ID List

- 1 Press **Menu, 2, 0, 3**.
- 2 Press ▲ or ▼ to choose **Print Report**. Press **OK**.
If no ID is stored, the beeper will sound and **No Caller ID** will appear on the LCD.
- 3 Press **Start**.
- 4 After printing has finished, press **Stop/Exit**.

Viewing the Caller ID List

Your machine stores information for the last thirty calls in the Caller ID list. You can view or print this list. When the thirty-first call comes in to the machine, it replaces information about the first call.

- 1 Press **Menu, 2, 0, 3**.
- 2 Press ▲ or ▼ to choose **Display ID**. Press **OK**.
The Caller ID of the last call will appear on the display. If no ID is stored, the beeper will sound and **No Caller ID** will appear on the display.

Connecting an external TAD

You can connect an external Telephone Answering Device (TAD) to the same line as your machine. When the TAD answers a call, your machine will “listen” for the CNG (fax calling) tones sent by a sending fax machine. If it hears them it will take over the call and receive the fax. If it does not hear them, it will let your TAD take a voice message and the display will show **Telephone**.

The external TAD must answer within four rings (we recommend you set it to two rings). This is because your machine cannot hear the CNG tones until the external TAD has picked up the call. The sending machine will send CNG tones for only eight to ten seconds longer. We do not recommend using the toll saver feature on your external TAD if it needs more than four rings to activate it.



Note


If you have problems receiving faxes, reduce the ring delay setting on your external TAD.

Connections

You can connect a TAD to your machine as shown in the diagram below in accordance with your country.

Type A

For the countries such as USA, Canada, Spain, Netherlands, Portugal, Poland, Hungary, Czech, Norway, Asia, Oceania and etc.

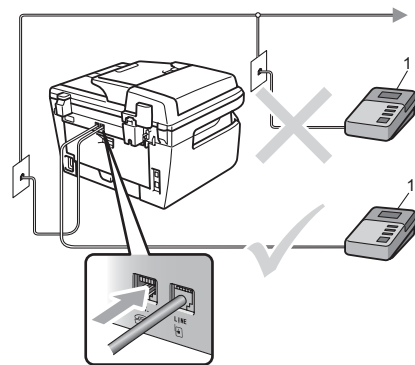

1 TAD




Note

(For USA and Canada)

Unless you are using Distinctive Ring, the TAD must be connected to the EXT. jack of the machine.

Type B


For the countries such as UK, France, Italy, Belgium, Sweden, Denmark and Finland.

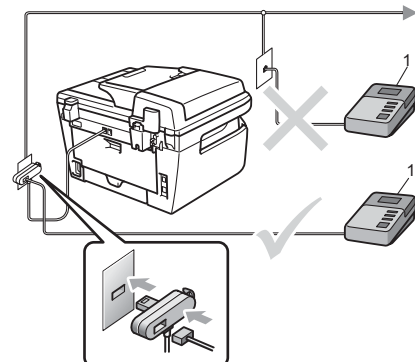

1 TAD

Type C


For Germany

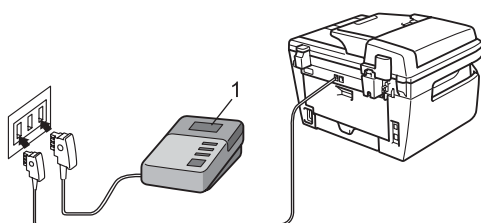

1 TAD

Type D

For Switzerland

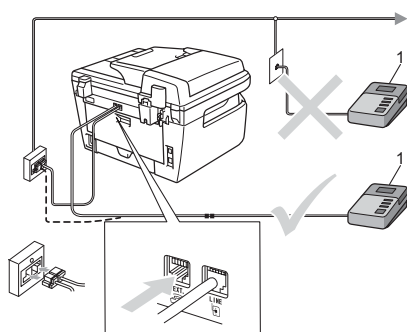

1 TAD

- 1 Set your external TAD to one or two rings. (The machine's Ring Delay setting does not apply.)
- 2 Record the outgoing message on your external TAD.
- 3 Set the TAD to answer calls.
- 4 Set the Receive Mode to External TAD. (See *Receive modes* on page 39.)

Recording an outgoing message (OGM)

- 1 Record 5 seconds of silence at the beginning of your message. This allows your machine time to listen for fax tones.
- 2 Limit your speaking to 20 seconds.
- 3 End your 20-second message by giving your Remote Activation code for people sending manual faxes. For example: "After the beep, leave a message or send a fax by pressing *51 and Start."



Note

- You need to turn the Remote Codes setting to on to use the Remote Activation code *51. (See *Using remote codes* on page 62.)
- We recommend beginning your OGM with an initial 5 second silence because the machine cannot hear fax tones over a loud voice. You may try leaving out this pause, but if your machine has trouble receiving, then you should re-record the OGM to include it.

Multi-line connections (PBX)

We suggest you ask the company who installed your PBX to connect your machine. If you have a multi line system we suggest you ask the installer to connect the unit to the last line on the system. This prevents the machine being activated each time the system receives telephone calls. If all incoming calls will be answered by a switchboard operator we recommend that you set the Receive Mode to `Manual`.

We cannot guarantee that your machine will operate properly under all circumstances when connected to a PBX. Any difficulties with sending or receiving faxes should be reported first to the company who handles your PBX.

External and extension telephones



Note

You need to turn the Remote Codes setting to on to use the Remote Activation code *51 and Remote Deactivation code #51. (See *Using remote codes* on page 62.)

Operation from extension telephones

If you answer a fax call on an extension telephone, or an external telephone that is correctly connected to the machine into the correct socket on the machine, you can make your machine take the call by using the Remote Activation code. When you press the Remote Activation code *51 the machine starts to receive the fax.

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press *51 and wait for the chirp or until the machine's LCD shows *Receiving*, and then hang up.



Note

You can also use the Fax Detect feature to make your machine tactically take the call. (See *Fax Detect (Easy Receive)* on page 41.)

Using external and extension telephones

Using extension telephones

If you answer a fax call at an extension telephone, you can make your machine receive the fax by pressing the Fax Receive Code *51. If the machine answers a voice call and pseudo/double-rings for you to take over, you can take the call at an extension telephone by pressing the Telephone Answer Code *51. (See *F/T ring time (Fax/Tel mode only)* on page 41.)

Using an external telephone (connected to the EXT. jack of the machine.)

If you answer a fax call at the external telephone, you can make the machine receive the fax by pressing  **Start**. If the machine answers a voice call and pseudo/double-rings for you to take over, you can take the call at the external telephone by pressing  **Hook**.

If you answer a call and no one is on the line:

You should assume that you're receiving a manual fax.

Press *51 and wait for the chirp or until the machine's LCD shows *Receiving*, and then hang up.



Note

You can also use the Easy Receive feature to make your machine automatically take the call. (See *Fax Detect (Easy Receive)* on page 41.)

For Fax/Tel mode only

When the machine is in Fax/Tel mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

Lift the external telephone's handset, and then press **Hook** to answer.


If you are at an extension telephone, you will need to lift the handset during the F/T Ring Time and then press **#51** between the pseudo/double rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing ***51**.

Connecting an external or extension telephone

You can connect a separate telephone to your machine as shown in the diagram below in accordance with your country.

Type A


For the countries such as USA, Canada, Spain, Netherlands, Portugal, Poland, Hungary, Czech, Norway, Asia, Oceania and etc.

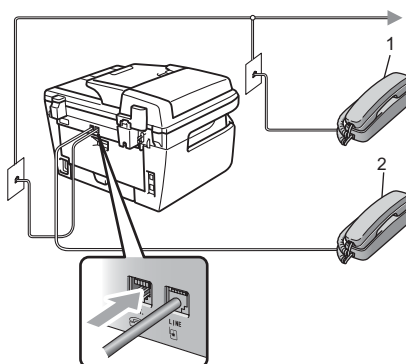

- 1 Extension telephone
- 2 External telephone

Type B


For the countries such as UK, France, Italy, Belgium, Sweden, Denmark and Finland.

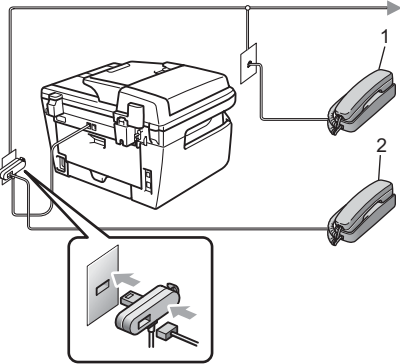

- 1 Extension telephone
- 2 External telephone

Type C


For Germany

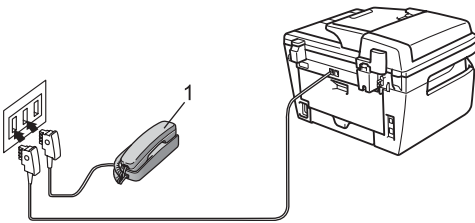

- 1 Extension telephone

Type D

For Switzerland

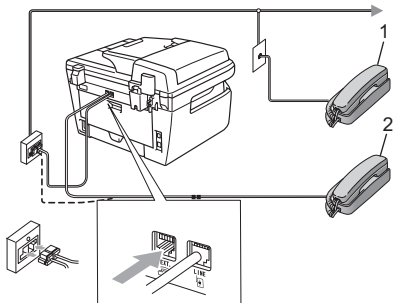

- 1 Extension telephone
- 2 External telephone

When you are using an external telephone, the LCD shows Telephone.

Special line considerations for U.K.

Using extension telephones (U.K. only)

Your premises may already be wired with parallel extension telephones (those connected to sockets in other rooms in the building), or perhaps you intend to add extension telephones to your line. While the simplest arrangement is a parallel connection, there are some reasons why this arrangement may cause problems.


The most common problem, is someone picking up an extension telephone while the machine is trying to send a fax.

Such problems can easily be eliminated, if you arrange modification of your extension wiring circuit, such that extension devices are connected “downstream” of your machine, in a master/slave configuration (see figure 2). In such a configuration, this machine can always detect whether a telephone is in use, so it will not attempt to seize the line during that time. This is known as “telephone off-hook detection”.

The inadvisable configuration is shown in figure 1, and the recommended master/slave configuration is shown in figure 2.


This new connection configuration can be arranged by contacting BT, Kingston upon Hull Telecommunications, your PBX maintainer or a qualified telephone installation company as appropriate. Simply explained, the extension telephone circuit should be terminated on a normal modular plug (BT 431A style), which in turn should be inserted into the modular socket of the white “T”-shaped connector provided as part of the line cord assembly.

Figure 1:

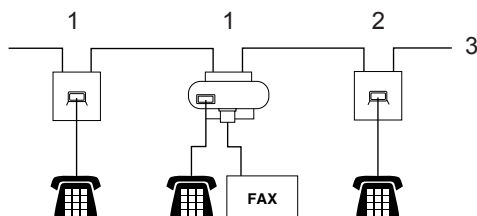

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

Figure 2: Recommended connection of extension sockets

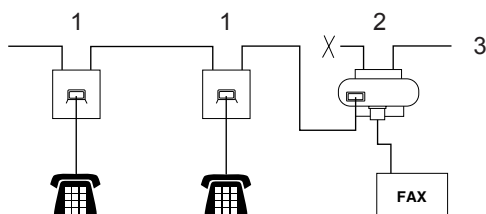

- 1 Extension socket
- 2 Master socket
- 3 Incoming line

These phones are now connected as *external devices* as shown on page 58, because they are connected to the fax machine via the T-connector.

Special line considerations for USA and Canada

Roll over telephone lines

A roll over telephone system is a group of two or more separate telephone lines that pass incoming calls to each other if they are busy. The calls are usually passed down or “rolled over” to the next available telephone line in a preset order.

Your machine can work in a roll over system as long as it is the last number in the sequence, so the call cannot roll away. Do not put the machine on any of the other numbers; when the other lines are busy and a second fax call is received, the fax call would be transferred to a line that does not have a fax machine. **Your machine will work best on a dedicated line.**


Two-line telephone system

A two-line telephone system is nothing more than two separate telephone numbers on the same wall outlet. The two telephone numbers can be on separate jacks (RJ11) or combined into one jack (RJ14). Your machine must be plugged into an RJ11 jack. RJ11 and RJ14 jacks may be equal in size and appearance and both may contain four wires (black, red, green, yellow). To test the type of jack, plug in a two-line telephone and see if it can access both lines. If it can, you must separate the line for your machine. (See *Fax Detect (Easy Receive)* on page 41.)

Converting telephone wall outlets

There are three ways to convert to an RJ11 jack. The first two ways may require assistance from the telephone company. You can change the wall outlets from one RJ14 jack to two RJ11 jacks. Or, you can have an RJ11 wall outlet installed and slave or jump one of the telephone numbers to it.

The third way is the easiest: Buy a triplex adapter. You can plug a triplex adapter into an RJ14 outlet. It separates the wires into two separate RJ11 jacks (Line 1, Line 2) and a third RJ14 jack (Lines 1 and 2). If your machine is on Line 1, plug the machine into L1 of the triplex adapter. If your machine is on Line 2, plug it into L2 of the triple adapter.

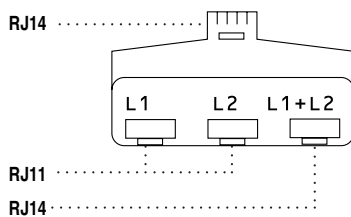

Installing machine, external two-line TAD and two-line telephone


When you are installing an external two-line telephone answering device (TAD) and a two-line telephone, your machine must be isolated on one line at both the wall jack and at the TAD. The most common connection is to put the machine on Line 2, which is explained in the following steps. The back of the two-line TAD must have two telephone jacks: one labeled L1 or L1/L2, and the other labeled L2. You will need at least three telephone line cords, the one that came with your machine and two for your external two-line TAD. You will need a fourth line cord if you add a two-line telephone.

Place the two-line TAD and the two-line telephone next to your machine.

Plug one end of the telephone line cord for your machine into the L2 jack of the triplex adapter. Plug the other end into the LINE jack on the back of the machine.

Plug one end of the first telephone line cord for your TAD into the L1 jack of the triplex adapter. Plug the other end into the L1 or L1/L2 jack of the two-line TAD.

Plug one end of the second telephone line cord for your TAD into the L2 jack of the two-line TAD. Plug the other end into the EXT. jack on the left side of the machine.

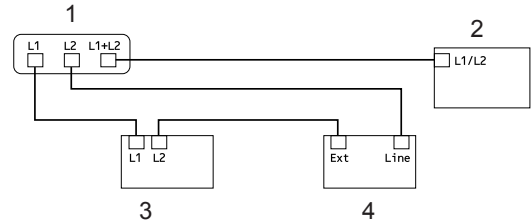

- 1 **Triplex Adapter**
- 2 **Two Line Telephone**
- 3 **External Two Line TAD**
- 4 **Machine**

You can keep two-line telephones on other wall outlets as always. There are two ways to add a two-line telephone to the machine's wall outlet. You can plug the telephone line cord from the two-line telephone into the L1+L2 jack of the triplex adapter. Or, you can plug the two-line telephone into the TEL jack of the two-line TAD.

Using a cordless external handset

If your cordless telephone is connected to the telephone line cord (see page 58) and you typically carry the cordless handset elsewhere, it is easier to answer calls during the Ring Delay.

If you let the machine answer first, you will have to go to the machine so you can press

Hook to transfer the call to the cordless handset.

Using remote codes

Remote Activation code

If you answer a fax call on an extension or external telephone, you can tell your machine to receive it by pressing the Remote Activation code *51. Wait for the chirping sounds then replace the handset. (See *Fax Detect (Easy Receive)* on page 41.) Your caller will have to press start to send the fax.

Remote Deactivation code

If you receive a voice call and the machine is in F/T mode, it will start to sound the F/T (double-ring) after the initial ring delay. If you pick up the call on an extension telephone you can turn the F/T ring off by pressing #51 (make sure you press this *between* the rings).

Turning on the remote codes

You need to turn the Remote Codes setting to on to use the Remote Activation code and Remote Deactivation code.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu 2, 1, 4.**
- 3 Press  or  to choose **On**.
- 4 If you do not want to change the Remote Activation code, press **OK**.
- 5 If you do not want to change the Remote Deactivation code, press **OK**.
- 6 Press  **Stop/Exit**.

Changing the remote codes

The preset Remote Activation code is *51. The preset Remote Deactivation code is #51. If you are always disconnected when accessing your external TAD, try changing the three-digit remote codes, for example ### and 555.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu 2, 1, 4.**
- 3 Press  or  to choose **On** (or **Off**). Press **OK**.
- 4 If you chose **On** in 3, enter the new Remote Activation code. Press **OK**.
- 5 Enter the new Remote Deactivation code. Press **OK**.
- 6 Press  **Stop/Exit**.

How to dial

You can dial in any of the following ways.


Manual dialling

Use the dial pad to enter all the digits of the telephone or fax number.



One touch dialling

Press the One Touch key that stores the number you want to call. (See *Storing one touch dial numbers* on page 65.)

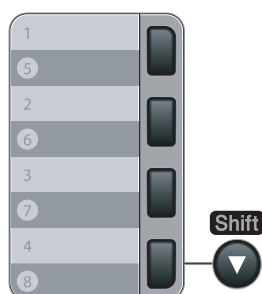

To dial One Touch numbers 5 to 8, hold down  **Shift** as you press the One Touch key.

Speed dialling

Press  **Search/Speed Dial**, and then the three digit Speed Dial number. (See *Storing speed dial numbers* on page 65.)



Note

If the LCD shows **Not Registered** when you enter a One Touch or a Speed Dial number, it means that a number is not stored there.

Search

You can search alphabetically for names you have stored in the One Touch and Speed Dial memories. (See *Storing one touch dial numbers* on page 65 and *Storing speed dial numbers* on page 65.)

- 1 Press  **Search/Speed Dial**.
- 2 Press .
- 3 Press the dial pad key for the first few letters of the name. (Use the chart on *Entering text* on page 165 to help you enter letters.) Press **OK**.
- 4 Press  or  to scroll until you find the name you are looking for. Press **OK**.
- 5 Press  **Start**.

**Note**

- If you do not enter a letter and press **OK** in , all registered names will appear. Press **▲** or **▼** to scroll until you find the name you are looking for.
- If the LCD shows **No Contact Found** when you enter the first few letters of the name, it means that a name for the letter is not stored.

Fax redial

If you are sending a fax automatically and the line is busy, the machine will automatically redial up to three times at five minute intervals.

If you are sending a fax manually and the line is busy, press  **Redial/Pause**, wait for the other fax machine to answer, and then press  **Start** to try again. If you want to make a second call to the last number dialled, you can save time by pressing  **Redial/Pause** and  **Start**.

 **Redial/Pause** only works if you dialled from the control panel.

Storing numbers

You can set up your machine to do the following types of easy dialling: One Touch, Speed Dial and Groups for Broadcasting faxes. You can also specify the default resolution for each One Touch and Speed Dial number. When you dial a quick dial number, the LCD shows the name, if you stored it, or the number. A scan profile can also be stored along with the fax number.

If you lose electrical power, the quick dial numbers stored in the memory will not be lost.


A scan profile is the resolution and other scan settings that you choose when you store a number.

Storing a pause

Press  **Redial/Pause** to insert a 2.8-second pause between numbers. You can press  **Redial/Pause** as many times as needed to increase the length of the pause.

Storing one touch dial numbers

Your machine has 4 One Touch keys where you can store 8 fax or telephone numbers for automatic dialling. To access numbers 5 to 8, hold down  **Shift** as you press the One Touch key.

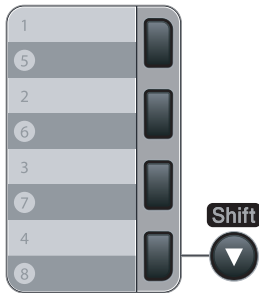

- 1 Press  **Menu, 2, 3, 1.**
- 2 Press the One Touch key where you want to store a number.
- 3 Enter the number (up to 20 characters). Press **OK**.
- 4 Do one of the following:
 - Enter the name using the dial pad (up to 15 characters). Press **OK**.
 - Press **OK** to store the number without a name.
- 5 Do one of the following:
 - If you want to save a fax resolution along with the number, Press **▲** or **▼** to choose Std, Fine, S.Fine or Photo. Press **OK**.
 - Press **OK** if you do not want to change the default resolution.
- 6 Do one of the following:
 - To store another One Touch number go to 2.
 - To finish storing One Touch numbers press  **Stop/Exit**.

Storing speed dial numbers

You can store your frequently used numbers as Speed Dial numbers, so that when you dial you will only have to press a few keys ( **Search/Speed Dial**, the three-digit number and  **Start**). The machine can store 200 Speed Dial numbers (001 - 200).

- 1 Press  **Menu, 2, 3, 2.**
- 2 Use the dial pad to enter a three-digit Speed Dial location number (001-200). Press **OK**.
- 3 Enter the number (up to 20 characters) Press **OK**
- 4 Do one of the following:
 - Enter the name using the dial pad (up to 15 characters). Press **OK**.
 - Press **OK** to store the number without a name.
- 5 Do one of the following:
 - If you want to save a fax resolution along with the number, Press **▲** or **▼** to choose Std, Fine, S.Fine or Photo. Press **OK**.
 - Press **OK** if you do not want to change the default resolution.
- 6 Do one of the following:
 - To store another Speed Dial number go to 2.
 - To finish storing Speed Dial numbers press  **Stop/Exit**.



Note

When you do a broadcast and you have saved a scan profile along with the number, the scan profile of the One Touch, Speed Dial or Group number you chose first will be applied to the broadcast.

Changing one touch and speed dial numbers

If you try to store a One Touch or Speed Dial number over an existing number, the LCD will show the name or number already stored there. If your machine has a scheduled job or you have set a fax forwarding number, the LCD will ask you if you want to change the number.

- 1 Do one of the following:
 - To change the stored number, press **1**.
 - To exit without making a change, press **2**.

#005:MIKE
 1.Change 2.Exit

- 2 Enter a new number or character.
Press **OK**.
- 3 Press **◀** or **▶** to position the cursor under the character you want to change, and then press **C/↶** **Clear/Back** to delete it. Repeat for each character you want to delete.

Setting up groups for broadcasting

If you often want to send the same fax message to many fax numbers you can set up a group.

Groups are stored on a One Touch key or a Speed Dial number. Each group uses up a One Touch key or a Speed Dial location. You can then send the fax message to all the numbers stored in a group just by pressing a One Touch key or entering a Speed Dial number, and then pressing **Start**.

Before you can add numbers to a group, you need to store them as One Touch or Speed Dial numbers. You can have up to 8 small groups, or you can assign up to 207 numbers to one large group.

- 1 Press **Menu**, **2**, **3**, **3**.
- 2 Choose an empty location where you want to store the group in one of the following ways:
 - Press a One Touch key.
 - Press **Search/Speed Dial** and then enter the three-digit Speed Dial location.
Press **OK**.
- 3 Use the dial pad to enter a group number (01 to 08).
Press **OK**.

4 To add One Touch or Speed Dial numbers follow the instructions below:

- For One Touch numbers, press the One Touch keys one after the other.
- For Speed Dial numbers, press  **Search/Speed Dial**, and then enter the three-digit Speed Dial location.

The LCD will display your chosen One Touch numbers with a * and Speed Dial numbers with a # (for example *006, #009).

5 Press **OK** when you have finished adding numbers.

6 Do one of the following:

- Enter the name using the dial pad (up to 15 characters). Use the chart on *Entering text* on page 165 to help you enter letters.
Press **OK**.
- Press **OK** to store the group without a name.

7 Do one of the following:

- If you want to save a fax resolution along with the number, Press ▲ or ▼ to choose Std, Fine, S.Fine or Photo.
Press **OK**.
- Press **OK** if you do not want to change the default resolution.

8 Do one of the following:

- To store another group for broadcasting, press **OK**. Go to ②.
- To finish storing groups for broadcasting, press  **Stop/Exit**.

Combining quick dial numbers

You can combine more than one Quick Dial number when you dial. This feature may be useful if you need to dial an access code for a cheaper rate from another long distance carrier.

For example, you might have stored '555' on Speed Dial #003 and '7000' on Speed Dial #002. You can use them both to dial '555-7000' if you press the following keys:

Press  **Search/Speed Dial, 003.**

Press  **Search/Speed Dial, 002** and

 **Start.**

Numbers can be added manually by entering them on the dial pad:

Press  **Search/Speed Dial, 003, 7001**

(on the dial pad), and  **Start.**

This would dial '555-7001'. You can also add a pause by pressing the

 **Redial/Pause** key.

Pause

Press  **Redial/Pause** to insert a 3.5-second pause between numbers. You can

press  **Redial/Pause** as many times as needed to increase the length of the pause.

Tone or pulse

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below. If you have Touch Tone service, you will not need this feature to send tone signals.

- 1 Lift the handset of the external telephone.
- 2 Press # on the machine's control panel. Any digits dialled after this will send tone signals.
When you hang up, the machine will return to the Pulse dialling service.

Tone or pulse (not available in USA and New Zealand)

If you have a Pulse dialling service, but need to send Tone signals (for example, for telephone banking), follow the instructions below. If you have Touch Tone service, you will not need this feature to send tone signals.

- 1 Press  Hook.
- 2 Press # on the machine's control panel. Any digits dialed after this will send tone signals.
When you hang up, the machine will return to the Pulse dialing service.

Remote fax options let you receive faxes while you are away from the machine.

You can use *only one* remote fax option at a time.

Fax forwarding

The fax forwarding feature lets you automatically forward your received faxes to another machine. If you choose Backup Print On, the machine will also print the fax.

- 1 Press  **Menu, 2, 5, 1.**
- 2 Press  or  to choose **Fax Forward**. Press **OK**.
The LCD will ask you to enter the fax number you want your faxes to be forwarded to.
- 3 Enter the forwarding number (up to 20 digits). Press **OK**.
- 4 Press  or  to choose **On** or **Off**. Press **OK**.

Backup Print
On

- 5 Press  **Stop/Exit**.



Note

If you choose Backup Print On, the machine will also print the fax at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine. The SP 1200SF can store faxes to up to 4 days if there is a power failure.

Paging (For USA and Canada only)

When Paging is chosen, your machine dials the pager number you have programmed, and then dials your Personal Identification Number (PIN). This activates your pager so you will know that you have a fax message in the memory.

- 1 Press  **Menu, 2, 5, 1.**

Remote Fax Opt
1.Fwd/Page/Store
- 2 Press  or  to choose **Paging**. Press **OK**.
- 3 Enter your pager telephone number followed by ## (up to 20 digits). Press **OK**.
Do not include the area code if it is the same as that of your machine. For example, press
1 8 0 0 5 5 5 1 2 3 4 # #.
- 4 Do one of the following:
 - If your pager needs a PIN, enter the PIN, press #, press  **Redial/Pause**, enter your fax number followed by ##.
Press **OK**.
(For example, press:
1 2 3 4 5 #  Redial/Pause 1 8 0 0 5 5 5 6 7 8 9 # #)
 - If you do not need a PIN, press **OK**.
- 5 Press  **Stop/Exit**.



Note

- You cannot change a Paging number or PIN remotely.
 - If you have set Paging, a backup copy will automatically be printed at the machine.
-

Fax storage

The fax storage feature lets you store your received faxes in the machine's memory. You can retrieve stored fax messages from a fax machine at another location using the remote retrieval commands, see *Retrieving fax messages* on page 74. Your machine will automatically print a copy of the stored fax.

- 1 Press  **Menu**, **2**, **5**, **1**
- 2 Press **▲** or **▼** to choose **Fax Storage**. Press **OK**.
- 3 Press  **Stop/Exit**.

PC fax receive

If you turn on the PC Fax Receive feature your machine will store received faxes in memory and send them to your PC automatically. You can then use your PC to view and store these faxes.

Even if you have turned off your PC (at night or on the weekend, for example), your machine will receive and store your faxes in its memory. The LCD will show the number of stored faxes received, for example:

PC Fax Msg:001

When you start your PC and the PC Fax Receiving software runs, your machine transfers your faxes to your PC automatically.

To transfer the received faxes to your PC you must have the PC-FAX Receiving software running on your PC. (For details, see *PC-FAX receiving* in the Software User's Guide on the CD-ROM.)

- 1 Press  **Menu, 2, 5, 1.**
- 2 Press  or  to choose PC Fax Receive.
Press **OK**.
- 3 Press  or  to choose <USB>.

Select   or OK
 <USB>

 Press **OK**.
- 4 Press  or  to choose On or Off.

Backup Print
 Off

 Press **OK**.
- 5 Press  **Stop/Exit.**



Note

- Before you can set up PC Fax Receive you must install the Multi-Function Suite software on your PC. Make sure your PC is connected and turned on. (For details see *PC-FAX Receiving* in the Software User's Guide on the CD-ROM.)
- If your machine has a problem and is unable to print faxes in memory, you can use this setting to transfer your faxes to a PC. (For details, see *Error and maintenance messages* on page 127.)
- If you choose Backup Print On, the machine will also print the fax at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine. The SP 1200SF can store faxes to up to 4 days if there is a power failure.
- PC Fax Receive is not supported in Mac OS. (See *PC Fax receiving* in the Software User's Guide on the CD-ROM)

Changing remote fax options

If received faxes are left in your machine's memory when you change to another remote fax option, the LCD will ask you the following message:

Erase All Doc?
1.Yes 2.No

or

Print All Fax?
1.Yes 2.No

- If you press **1**, faxes in the memory will be erased or printed before the setting changes. If a backup copy has already been printed it will not be printed again.
- If you press **2**, faxes in the memory will not be erased or printed and the setting will be unchanged.

If received faxes are left in the machine's memory when you change to PC Fax Receive from another remote fax option (Fax Forward or Fax Storage), the LCD will ask you the following message:

Send Fax to PC?
1.Yes 2.No

- If you press **1**, faxes in the memory will be sent to your PC before the setting changes.
- If you press **2**, faxes in the memory will not be erased or transferred to your PC and the setting will be unchanged.



Note

If you choose Backup Print On, the machine will also print the fax at your machine so you will have a copy. This is a safety feature in case there is a power failure before the fax is forwarded or a problem at the receiving machine. The SP 1200SF can store faxes to up to 4 days if there is a power failure.

Turning off remote fax options

- 1 Press **Menu**, **2**, **5**, **1**.
- 2 Press **▲** or **▼** to choose **Off**. Press **OK**.



Note

The LCD will give you options if there are received faxes still in your machine's memory. (See *Changing remote fax options* on page 72.)

- 3 Press **Stop/Exit**.

Remote retrieval

The remote retrieval feature lets you retrieve your stored fax messages when you are not at the machine. You can call your machine from any touch tone phone or fax machine, then use the Remote Access Code to retrieve your messages.

Setting a remote access code

The remote access code lets you access the remote retrieval features when you are away from your machine. Before you use the remote access and retrieval features, you have to set up your own code. The default code is an inactive code: --*.

- 1 Press  **Menu, 2, 5, 2.**
- 2 Enter a three-digit code using the numbers **0 – 9, * or #.**
Press **OK.**
- 3 Press  **Stop/Exit.**



Note

Do not use the same code used for your Remote Activation code (***51**) or Remote Deactivation code (**#51**). (See *Changing the remote codes* on page 62.)

You can change your code at any time. If you want to make your code inactive, press

C/↶ Clear/Back and **OK** in 2 to restore the default setting --*.

Using your remote access code

- 1 Dial your fax number from a telephone or another fax machine using touch tone.
- 2 When your machine answers, immediately enter your remote access code.
- 3 The machine signals if it has received messages:
 - **No beeps**
No messages received.
 - **1 long beep**
Fax message received.
- 4 The machine gives two short beeps to tell you to enter a command. The machine will hang up if you wait longer than 30 seconds before entering a command. If you enter an invalid command the machine will beep three times.
- 5 Press **9 0** to reset the machine when you have finished.
- 6 Hang up.



Note

If your machine is set to **Manual** mode, you can still access the remote retrieval features. Dial the fax number as normal and let the machine ring. After 2 minutes you will hear a long beep to tell you to enter the remote access code. You will then have 30 seconds to enter the code.

Retrieving fax messages

- 1 Dial your fax number from a telephone or another fax machine using touch tone.
- 2 When your machine answers, immediately enter your remote access code (3 digits followed by *). If you hear one long beep, you have messages.
- 3 When you hear two short beeps, use the dial pad to press **9 6 2**.
- 4 Wait for a long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent to, followed by **##** (up to 20 digits).
- 5 Hang up after you hear your machine beep. Your machine will call the other machine, which will then print your fax messages.



Note

You can insert a pause in a fax number by using the **#** key.

Changing the fax forwarding number

You can change the default setting of your fax forwarding number from another telephone or fax machine using touch tone.

- 1 Dial your fax number from a telephone or another fax machine using touch tone.
- 2 When your machine answers, enter your remote access code (3 digits followed by *). If you hear one long beep, you have messages.
- 3 When you hear two short beeps, use the dial pad to press **9 5 4**.
- 4 Wait for a long beep, and then use the dial pad to enter the new number of the remote fax machine where you want your fax messages forwarded, followed by **##** (up to 20 digits).
- 5 Press **9 0** to reset the machine when you have finished.
- 6 Hang up after you hear your machine beep.



Note

You can insert a pause in a fax number by using the **#** key.

Remote fax commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your Remote Access Code (3 digits followed by *), the system will give two short beeps and you must enter a remote command.

Remote commands		Operation details
95	Change the fax forwarding or fax storage settings	
	1 OFF	You can choose OFF after you have retrieved or erased all your messages.
	2 Fax forwarding	One long beep means the change is accepted. If you hear three short beeps, you cannot change because the conditions have not been met (for example, registering a fax forwarding number). You can register the maximum number of rings. (See <i>Changing the fax forwarding number</i> on page 74.) Once you have registered the number, fax forwarding will work.
	3 Paging (For USA and Canada only)	
	4 Fax forwarding number	
	6 Fax storage	
96	Retrieve a fax	
	2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> on page 74.)
	3 Erase faxes from the memory	If you hear one long beep, fax messages have been erased from the memory.
97	Check the receiving status	
	1 Fax	You can check whether your machine has received any faxes. If yes, you will hear one long beep. If no, you will hear three short beeps.
98	Change the receive mode	
	1 External TAD	If you hear one long beep, your change has been accepted.
	2 Fax/Tel	
	3 Fax Only	
90	Exit	Press 9 0 to exit remote retrieval. Wait for the long beep, then replace the handset.

10

Polling

Polling lets you set up your machine so other people can receive faxes from you, but they pay for the call. It also lets you call somebody else's fax machine and receive a fax from it, so you pay for the call. The polling feature needs to be set up on both machines for this to work. Not all fax machines support polling.

Polling receive

Polling receive lets you call another fax machine to receive a fax.

- 1 Make sure you are in Fax mode .
- 2 (for EU and Asia/Oceania)
Press  **Menu, 2, 1, 8.**
(for USA and Canada)
Press  **Menu, 2, 1, 7.**
- 3 (for EU and Asia/Oceania only)
Press  or  to choose *Standard*.
Press **OK**.
- 4 Enter the fax number you are polling.
Press  **Start**.

Secure polling (for EU and Asia/Oceania)

Secure Polling lets you restrict who can get the documents you set up to be polled. Secure Polling only works with **SP 1200SF** fax machines. If you want to get a fax from a secured **SP 1200SF Fax** machine, you have to enter the secure code.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 1, 8.**
- 3 Press  or  to choose *Secure*.
Press **OK**.

- 4 Enter a four-digit secure code.
Press **OK**.
This is the security code of the fax machine you are polling.
- 5 Enter the fax number you are polling.
- 6 Press  **Start**.

Delayed polling (for EU and Asia/Oceania)

Delayed polling lets you set the machine to begin polling receive at a later time. You can only set up *one* delayed polling operation.

- 1 Make sure you are in Fax mode .
- 2 Press  **Menu, 2, 1, 8.**
- 3 Press  or  to choose *Timer*.
Press **OK**.
- 4 Enter the time (in 24-hour format) you want to begin polling.
Press **OK**.
For example, enter 21:45 for 9:45 PM.
- 5 Enter the fax number you are polling.
Press  **Start**.
The machine makes the polling call at the time you entered.

Sequential polling

Sequential polling lets you request documents from several fax machines in one operation.

- 1 Make sure you are in Fax mode .
- 2 (for EU and Asia/Oceania)
Press  **Menu**, **2**, **1**, **8**.
(for USA and Canada)
Press  **Menu**, **2**, **1**, **7**.
(for USA and Canada)
Go to 5.
- 3 (for EU and Asia/Oceania only)
Press **▲** or **▼** to choose *Standard*,
Secure or *Timer*.
Press **OK**.
- 4 (for EU and Asia/Oceania only)
Choose one of the options below.
 - If you choose *Standard* go to 5.
 - If you choose *Secure*, enter a four-digit number, press **OK**, go to 5.
 - If you chose *Timer*, enter the time (in 24-hours format) you want to begin polling and press **OK**, go to 5.
- 5 Specify the destination fax machines you want to poll by using One Touch, Speed Dial, Search, a Group or the dial pad. You must press **OK** between each location.
- 6 Press  **Start**.
The machine polls each number or group in turn for a document.

Press  **Stop/Exit** while the machine is dialling to cancel the polling process.

To cancel all sequential polling receive jobs, press  **Menu**, **2**, **7**. (See *Checking and cancelling waiting jobs* on page 38.)

Polled transmit

Polled transmit lets you set up your machine to wait with a document so another fax machine can call and retrieve it.

Setup for polled transmit (For EU, Asia and Oceania)

- 1 Make sure you are in Fax mode .
- 2 Load your document.
- 3 Press  **Menu**, **2**, **2**, **6**.
- 4 Press **▲** or **▼** to choose *Standard*.
Press **OK**.
- 5 Press **2** to choose *2*. No if you do not want to enter more settings when the LCD asks you the following message:

Next
1.Yes 2.No
- 6 Press  **Start**.
- 7 If you are using the scanner glass, the LCD will prompt you to choose one of the options below:

Next Page?
1.Yes 2.No(Send)

 - Press **1** to send another page.
Go to 8.
 - Press **2** or  **Start** to store the document.
- 8 Place the next page on the scanner glass, press **OK**. Repeat 7 and 8 for each additional page.
Your machine will automatically store the fax.

**Note**

The document will be stored and can be retrieved from any other fax machine until you delete the fax from memory.

To delete the fax from memory, press

Menu, 2, 7. (See *Checking and cancelling waiting jobs* on page 38.)

Setup for polled transmit (for USA and Canada)

- 1 Make sure you are in Fax mode .

- 2 Load your document.

- 3 Press **Menu, 2, 2, 6.**

```
Setup Send
6.Polled TX
```

- 4 Press **▲** or **▼** to choose On (or Off). Press **OK**.

- 5 Press **2** to choose 2.No if you do not want to enter more settings when the LCD asks you the following message:

```
Other Settings
1.Yes 2.No
```

- 6 Press **Start**.

- 7 If you are using the scanner glass, the LCD will prompt you to choose one of the options below:

```
Next Page?
1.Yes 2.No(send)
```

- Press **1** to send another page. Go to **8**.

- Press **2** or **Start** to store the document.

- 8 Place the next page on the scanner glass, press **OK**. Repeat **7** and **8** for each additional page. Your machine will automatically store the fax.

**Note**

The document will be stored and can be retrieved from any other fax machine until you delete the fax from memory.

To delete the fax from memory, press

Menu, 2, 7. (See *Checking and cancelling waiting jobs* on page 38.)

Setup for polled transmit with a secure code (for EU, Asia and Oceania)

Secure Polling lets you restrict who can get the documents you set up to be polled. Secure Polling only works with **SP 1200SF** fax machines. If another person wants to retrieve a fax from your machine they will have to enter the secure code.

- 1 Make sure you are in Fax mode .

- 2 Load your document.

- 3 Press **Menu, 2, 2, 6.**

- 4 Press **▲** or **▼** to choose Secure. Press **OK**.

- 5 Enter a four-digit number. Press **OK**.

- 6 Press **2** to choose 2.No if you do not want to enter more settings when the LCD asks you the following message:

```
Next
1.Yes 2.No
```

- 7 Press **Start**.

- 8 If you use the scanner glass, the LCD will prompt you to choose one of the options below:

Next Page?
1.Yes 2.No(Send)

- Press **1** to send another page.

Go to 9.

- Press **2** or  **Start** to store the document.

- 9 Place the next page on the scanner glass, press **OK**. Repeat 8 and 9 for each additional page.

Set Next Page
Then Press OK

Your machine will automatically store the fax.

Fax reports

Some fax reports (transmission verification and fax journal) can be printed automatically and manually.

Transmission verification report

You can use the transmission report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (shown as "OK"). If you choose **On** or **On+Image**, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again.

Choosing **On+Image** or **Off+Image** will print a section of the fax's first page on the report to help you remember.

When the verification report is turned **Off** or to **Off+Image**, the report will *only* print if there is a transmission error.

- 1 Press  **Menu, 2, 4, 1.**
- 2 Press **▲** or **▼** to choose **On**, **On+Image**, **Off** or **Off+Image**. Press **OK**.
- 3 Press  **Stop/Exit.**

Fax journal

You can set the machine to print a fax journal (activity report) at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). The default setting is **Every 50 Faxes**, this means that your machine will print the journal when the machine has stored 50 jobs.

If you set the interval to **Off**, you can still print the report by following the steps on the next page.

- 1 Press  **Menu, 2, 4, 2.**
- 2 Press **▲** or **▼** to choose an interval. Press **OK**.
If you choose 7 days, you will be asked to choose a day when you want the 7 day countdown to begin.
- 3 Enter the time to begin printing, in 24 hour format. Press **OK**.
For example: enter 19:45 for 7:45 PM.
- 4 Press  **Stop/Exit.**

If you choose 6, 12, 24 hours, 2 or 7 days, the machine will print the report at the selected time and then erase all jobs from its memory. If the machine's memory becomes full with 200 jobs before the time you chose has passed, the machine will print the journal early and then erase all jobs from memory.

If you want an extra report before it is due to print, you can print it manually without erasing the jobs from memory.

Reports

The following reports are available:

- 1 **XMIT Verify**
(For EU and Asia/Oceania)
Transmission
(for USA and Canada)

Displays the Transmission Verification Report for your last outgoing 200 faxes and prints the last report.
- 2 **Help List**

Prints a list of commonly used functions to help you program your machine.
- 3 **Tel Index List**

Prints a list of names and numbers stored in the One Touch and Speed Dial memory in numerical or alphabetical order.
- 4 **Fax Journal**

Prints a list of information about your last 200 incoming and outgoing faxes. (TX: transmit.) (RX: receive.)
- 5 **User Settings**

Print a list of your current settings.

How to print a report

- 1 Press  **Reports**.
- 2 Do one of the following:
 - Press **▲** or **▼** to choose the report you want.

Press **OK**.
 - Enter the number of the report you want to print. For example, press **2** to print the help list.
- 3 Press  **Stop/Exit**.



Copy

Making copies

84


12

Making copies

How to copy

Entering copy mode

Press  **Copy** to enter Copy mode.

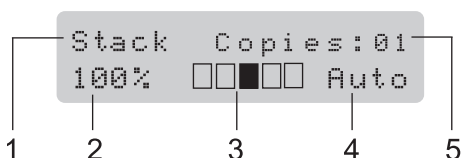

- 1 **Stack/Sort**
- 2 **Copy ratio and copy layout**
- 3 **Contrast**
- 4 **Quality**
- 5 **Number of copies**

Making a single copy

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Press  **Start**.

Making multiple copies

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press  **Start**.



Note

To sort your copies, see *Sorting copies using the ADF* on page 88.


Stop copying

To stop copying, press  **Stop/Exit**.

2 in 1 ID Copy

You can copy both sides of your identification card onto one page, keeping the original card size.

- 1 Make sure you are in Copy mode .
- 2 Place your identification card face down on the left side of the scanner glass.

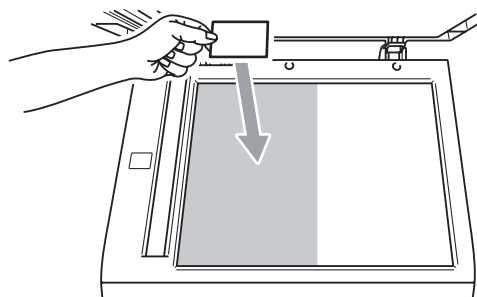

- Even if a document is placed on the ADF, the machine scans the data from the scanner glass.

- 3 Press  **Options**. LCD display 2 in 1 ID Copy.

- 4 Press **OK**.
- 5 Press **Start**.
After the machine scans the first side of the card, the LCD will display the following instruction.

Turn over the ID
Then Press Start
- 6 Turn over your identification card and place it at the left side of the scanner glass.
- 7 Press **Start**.

The machine scans the other side of the card and prints the page.



Note

When 2 in 1 ID Copy is chosen, the machine sets the quality to Photo and the contrast to +1 (-□□□■□+)

Copy options (temporary settings)

When you want to quickly change the copy settings temporarily for the next copy, use the temporary **Copy** keys. You can use different combinations.

(For US/Canada/ASIA/Oceania)

(For EU)



The machine returns to its default settings one minute after copying, unless you have set the Mode Timer to 30 seconds or less. (See *Mode timer* on page 23.)

Enlarging or reducing the image copied

You can choose the following enlargement or reduction ratios:

Press or	100%*
	97% LTR→A4
	94% A4→LTR
	91% Full Page
	85% LTR→EXE
	83%
	78%
	70% A4→A5
	50%
	Custom (25-400%)
	Auto
	200%
	141% A5→A4
	104% EXE→LTR

*The factory setting is shown in Bold with an asterisk.

When set to **Auto**, the machine calculates the reduction ratio that best fits the paper size the paper tray is set to. (See *Paper size* on page 23.)

Auto is only available when using the ADF.

Custom (25-400%) allows you to enter a ratio from 25% to 400%.

To enlarge or reduce the next copy follow the instructions below:

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press  **Enlarge/Reduce**.
- 5 Do one of the following:
 - Press **▲** or **▼** to choose the enlargement or reduction ratio you want.
Press **OK**.
 - Press **▲** or **▼** to choose **Custom (25-400%)**.
Press **OK**.
Use the dial pad to enter an enlargement or reduction ratio from 25% to 400%. (For example, press **5 3** to enter 53%.)
Press **OK**.
- 6 Press  **Start**.



Note

Page Layout Options 2 in 1(P), 2 in 1(L), 4 in 1(P) or 4 in 1(L) are *not* available with Enlarge/Reduce.

Using the Options key

Use the **Options** key to quickly set the following copy settings temporarily for the next copy.

Press	Menu selections	Options	Page
 or 	Press ▲ or ▼, then press OK  → 	Press ▲ or ▼, then press OK  → 	
	2 in 1 ID Copy	-	84
	Quality	Auto* Text Photo	88
	Stack/Sort (appears when the document is in the ADF)	Stack* Sort	88
	Contrast	▼-□□□□+▲ ▼-□□□□+▲ ▼-□□□□+▲* ▼-□□□□+▲ ▼-□□□□+▲	89
	Page Layout	Off(1 in 1) * 2 in 1 (P) 2 in 1 (L) 4 in 1 (P) 4 in 1 (L)	89
 The factory settings are shown in Bold with an asterisk.			

Improving copy quality

You can choose from a range of quality settings. The default setting is *Auto*.

■ Auto

Auto is the recommended mode for ordinary printouts. Suitable for documents that contain both text and photographs.

■ Text

Suitable for documents containing only text.

■ Photo

Suitable for copying photographs.

To *temporarily* change the quality setting, follow the steps below:

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press  **Options**.
Press  or  to choose *Quality*.
Press **OK**.
- 5 Press  or  to choose *Auto*, *Text* or *Photo*.
Press **OK**.
- 6 Press  **Start**.

To change the *default* setting, follow the steps below:

- 1 Press  **Menu**, **3**, **1**.
- 2 Press  or  to choose the copy quality.
Press **OK**.
- 3 Press  **Stop/Exit**.

Sorting copies using the ADF

You can sort multiple copies. Pages will be stacked in the order 1 2 3, 1 2 3, 1 2 3, and so on.

- 1 Make sure you are in Copy mode .
- 2 Load your document in the ADF.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press  **Options** and  or  to choose *Stack/Sort*.
Press **OK**.
- 5 Press  or  to choose *Sort*.
Press **OK**.
- 6 Press  **Start**.

Adjusting contrast

Contrast

Adjust the contrast to help an image look sharper and more vivid.

To *temporarily* change the contrast setting, follow the steps below:

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press  **Options**.
Press  or  to choose **Contrast**.
Press **OK**.
- 5 Press  or  to increase or decrease the contrast.
Press **OK**.
- 6 Press  **Start**.

To change the *default* setting follow the steps below:

- 1 Press  **Menu**, **3**, **2**.
- 2 Press  or  to increase or decrease the contrast.
Press **OK**.
- 3 Press  **Stop/Exit**.

Making N in 1 copies (page layout)

You can reduce the amount of paper used when copying by using the N in 1 copy feature. This allows you to copy two or four pages onto one page, which lets you save paper.

Important

- Please make sure the paper size is set to Letter or A4.
- (P) means Portrait and (L) means Landscape.
- You cannot use the Enlarge/Reduce setting with the N in 1 feature.

- 1 Make sure you are in Copy mode .
- 2 Load your document.
- 3 Use the dial pad to enter the number of copies (up to 99).
- 4 Press  **Options**.
- 5 Press  or  to choose **Page Layout**.
Press **OK**.
- 6 Press  or  to choose **2 in 1 (P)**, **2 in 1 (L)**, **4 in 1 (P)**, **4 in 1 (L)** or **Off (1 in 1)**.
Press **OK**.
- 7 Press  **Start** to scan the page.
If you placed the document in the ADF, the machine scans the pages and starts printing.
If you are using the scanner glass, go to 8.
- 8 After the machine scans the page, press **1** to scan the next page.

Next Page?
 1.Yes 2.No

- 9 Put the next page on the scanner glass. Press **OK**. Repeat 8 and 9 for each page of the layout.
- 10 After all the pages have been scanned, press **2** in 8 to finish.

 
If you are copying from the ADF:

Insert your document face up in the direction shown below:

■ 2 in 1 (P)




■ 2 in 1 (L)



■ 4 in 1 (P)



 
■ 4 in 1 (L)




If you are copying from the scanner glass:

Insert your document face down in the direction shown below:

 ■ 2 in 1 (P)




■ 2 in 1 (L)

 

■ 4 in 1 (P)



 ■ 4 in 1 (L)



Out of memory message

If the memory becomes full while you are making copies, the LCD message will guide you through the next step.

If you get an **Out of Memory** message while scanning a subsequent page, you will have the option to press **Start** to copy the pages scanned so far, or to press

Stop/Exit to cancel the operation.

To gain extra memory, you can do the following:

- Print the faxes that are in the memory. (See *Printing a fax from the memory* on page 43.)
- You can turn off Fax Storage. (See *Turning off remote fax options* on page 72.)



Note

When you get an **Out of Memory** message, you may be able to make copies if you first print incoming faxes in the memory to restore the memory to 100%.



Software

Software features

92

The User's Guide on the CD-ROM includes **Quick Setup Guide**, **User's Guide** and **Software User's Guide** for features available when connected to a computer (for example, printing and scanning). These guides have easy to use links that, when clicked, will take you directly to a particular section.

You can find information on these features:

- Printing
- Scanning
- ControlCenter3
- Remote Setup
- Faxing from your computer

**Note**

See *Accessing the Software User's Guide* on page 2.

How to read PDF User's Guide

This is a quick reference for using the PDF User's Guide.

**Note**

If you have not installed the software, see *Chapter 1*.

- 1 From the **Start** menu, point to **SP1200 series, TYPE 1200SF Documentation**, from the program group, and then click **User's Guides**.
- 2 Click on the manual you want (**Quick Setup Guide**, **User's Guide**, **Software User's Guide**) from the top menu.





Appendixes

Safety and legal	94
Troubleshooting and routine maintenance	115
Menu and features	154
Specifications	167
Glossary	176

Choosing a location

Place your machine on a flat, stable surface that is free of vibration. Put the machine near a telephone socket and a standard, grounded electrical socket. Choose a location where the temperature remains between 10° C and 32.5° C and the humidity is between 20% to 80% (without condensation).

- Make sure cables leading to the machine do not constitute a trip hazard.
- Avoid placing your machine on the carpet.
- Do not place near heaters, air conditioners, water, chemicals or refrigerators.
- Do not expose the machine to direct sunlight, excessive heat, moisture or dust.
- Do not connect your machine to electrical sockets controlled by wall switches or automatic timers, or to the same circuit as large appliances that might disrupt the power supply.
- Avoid sources of interference, such as speakers or the base units of cordless phones.

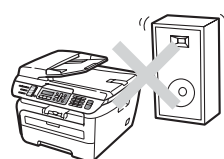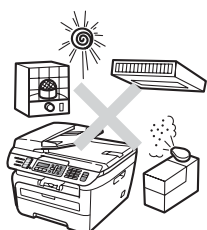

Important information

Safety precautions

Please read these instructions before attempting any maintenance, and keep them for later reference. When using your telephone equipment, follow basic safety precautions to reduce the risk of fire, electric shock or personal injury.


- DO NOT use this product near water, or in a damp environment.
- Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.
- We DO NOT advise using an extension lead.
- Never install telephone wiring during a lightning storm. Never install a telephone wall socket in a wet location.
- If any cables become damaged, disconnect your machine, and contact your dealer.
- DO NOT place any objects on the machine, or obstruct the air vents.
- This product should be connected to an adjacent grounded AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. If you are not sure, contact a qualified electrician.
- DO NOT dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.




WARNING



Before cleaning the inside of the machine, first unplug the telephone line cord, and then the power cord from the electrical socket.

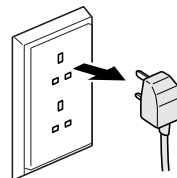


DO NOT handle the plug with wet hands. Doing this might cause an electrical shock.

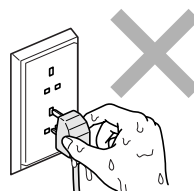


Always make sure the plug is fully inserted.




After you have just used the machine, some internal parts of the machine will be extremely hot. When you open the front or back cover of the machine, DO NOT touch the shaded parts shown in the illustration.

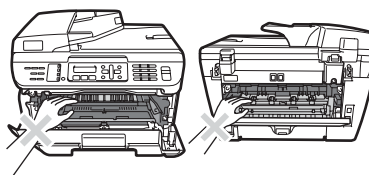

To prevent injuries, be careful not to put your hands on the edge of the machine under the document cover or scanner cover as shown in the illustrations.

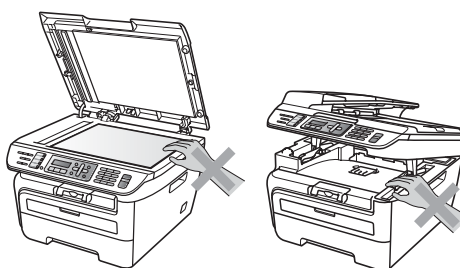

To prevent injuries, DO NOT put your fingers in the areas shown in the illustrations.

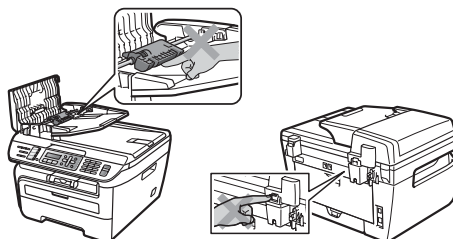



DO NOT use a vacuum cleaner to clean up scattered toner. Doing this might cause the toner dust to ignite inside the vacuum cleaner, potentially starting a fire. Please carefully clean the toner dust with a dry, lint-free cloth and dispose of it according to local regulations.



If moving your machine, use the handholds provided. First making sure to disconnect any cables.



DO NOT use any flammable substances, spray or organic solvent/liquids containing alcohol/ammonia to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock. Refer to *Routine maintenance* on page 137 for how to clean the machine.




Plastic bags are used in the packaging of your machine. To avoid the danger of suffocation, keep these bags away from babies and children.



Note

The fuser unit is marked with a caution label. Please DO NOT remove or damage the label.

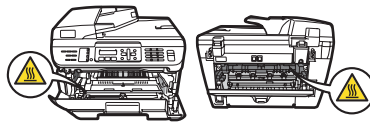

CAUTION

Be sure to disconnect the plug from the wall outlet and clean the prongs and the area around the prongs at least once a year. Allowing dust to build up on the plug constitutes a fire hazard.

Certification

Declaration of conformity



Notice to Users in EU Countries

This product complies with the essential requirements and provisions of Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Notice to Users Accessing Analog PSTN in EU Countries

This product is designed to be able to access analog PSTN in all EU countries. Local PSTN compatibility is dependent on software switch settings. Please contact your service representative if relocating this product to another country. In the event of problems, please contact your service representative in the first instance.

SP 1200SF: The CE declaration of Conformity is available on the Internet at URL :

http://www.ricoh.co.jp/fax/ce_doc

CE Marking Traceability Information (For EU Countries Only.)

Manufacturer:

Ricoh Co., Ltd.

3-6 Nakamagome 1-chome, Ohta-ku, Tokyo, 143-8555 Japan

Authorized representative:

Ricoh Europe PLC

20 Triton Street, London, NW1 3BF, U.K.

Symbols for the main power switch


In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

-  means POWER ON.
-  means POWER OFF.



Note

When you move the machine, grasp the side handholds that are under the scanner. Do NOT carry the machine by holding it at the bottom.

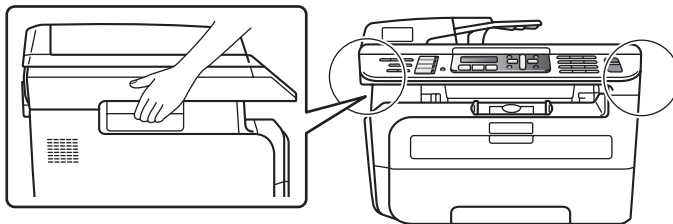

IEC 60825-1:2007 Specification

This machine is a Class 1 laser product as defined in IEC 60825-1:2007 specifications. The label shown below is attached in countries where required.

This machine has a Class 3B Laser Diode which emits invisible laser radiation in the Scanner Unit. The Scanner Unit should not be opened under any circumstances.



Internal laser radiation

Wave length: 780 - 800 nm

Output: 10 mW max.

Laser Class: Class 3B



WARNING

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

Disconnect device

This product must be installed near an electrical socket that is easily accessible. In case of emergencies, you must disconnect the power cord from the electrical socket to shut off power completely.

Wiring information (U.K. only)

If you need to replace the plug fuse, fit a fuse that is approved by ASTA to BS1362 with the same rating as the original fuse.

Always replace the fuse cover. Never use a plug that does not have a cover. If in any doubt, call a qualified electrician.

Warning - This printer must be earthed.

The wires in the mains lead are coloured in line with the following code:


- Green and Yellow: Earth
- Blue: Neutral
- Brown: Live

Radio interference

This product complies with EN55022 (CISPR Publication 22)/Class B. When connecting the machine to a computer, ensure that you use the following interface cables.

A USB cable which must not exceed 2.0 metres in length.

Recycling information in accordance with the WEEE (2002/96/EC) and Battery (2006/66/EC) Directives

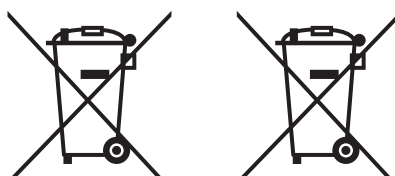

Product mark

Battery mark

European Union only

The product/battery is marked with one of the above recycling symbols. It indicates that at the end of the life of the product/battery, you should dispose of it separately at an appropriate collection point and not place it in the normal domestic waste stream.

For products with user replaceable batteries please refer to the users guide for replacement instructions.

All Other Users

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

International ENERGY STAR® Qualification Statement

The purpose of the International ENERGY STAR® Program is to promote the development and popularization of energy-efficient office equipment.

As an ENERGY STAR® Partner, Ricoh Co. Ltd., has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.



Important safety instructions for EU

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall socket before cleaning inside of the machine. DO NOT use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 DO NOT place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6 Slots and openings in the casing at the back or bottom are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless adequate ventilation is provided.
- 7 This product should be connected to an AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. If you are not sure, contact a qualified electrician.
- 8 This product is equipped with a 3-wire grounded plug. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. DO NOT defeat the purpose of the grounded plug.
- 9 Use only the power cord supplied with this machine.
- 10 DO NOT allow anything to rest on the power cord. DO NOT place this product where people can walk on the cord.
- 11 The power cord, including extensions should be no longer than 5 metres.

DO NOT share the same power circuit with other high powered appliances, such as an air conditioner, copier, shredder or similar devices. If you cannot avoid using the printer with these appliances, we recommend that you use a high-frequency noise filter.

Use a voltage regulator if the power source is not stable.
- 12 DO NOT place anything in front of the machine that will block received faxes. DO NOT place anything in the path of received faxes.
- 13 Wait until pages have exited the machine before picking them up.
- 14 Unplug this product from the power socket and refer all servicing to Ricoh Authorized Service Personnel under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.

- If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the casing has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

15 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).

16 To reduce the risk of fire, electric shock and injury to people, note the following:

- DO NOT use this product near appliances that use water, a swimming pool or in a wet basement.
- DO NOT use the machine during an electrical storm (there is the remote possibility of an electrical shock) or to report a gas leak in the vicinity of the leak.

Important information (for USA and Canada)

Standard telephone and FCC notices

These notices are in effect on models sold and used in the United States only.

When programming emergency numbers or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- Perform these activities in the off-peak hours, such as early morning or late evening.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the backside of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

You may safely connect this equipment to the telephone line by means of a standard modular jack, USOC RJ11C.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. (See installation instructions for details.)

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 06 is a REN of 0.6). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact Ricoh Americas Corporation CUSTOMER SUPPORT DEPT. at 1-800-FASTFIX. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, call your telephone company or a qualified installer.

If you are not able to solve a problem with your machine, please contact RICOH CORP. CUSTOMER SUPPORT DEPT. at 1-800-FASTFIX.

**WARNING**

For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.

Ricoh cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.

This machine has been certified to comply with FCC standards, which are applied to the USA only. A grounded plug should be plugged into a grounded AC power outlet after checking the rating of the local power supply for the machine to operate properly and safely.

Federal Communications Commission (FCC) Declaration of Conformity (USA only)

Responsible Party: Ricoh Americas Corporation
Address: 5 Dedrick Place, West Caldwell,
NJ 07006 Telephone number: 973-882-2000

declares, that the products

Product Name:
Laser Multi Function

Model Number:
SP 1200SF

comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Call the dealer or an experienced radio/TV technician for help.
- This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important—about the interface cable

A shielded interface cable should be used to ensure compliance with the limits for a Class B digital device.

Industry Canada Compliance Statement (Canada only)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Laser safety

This equipment is certified as a Class 1 laser product as defined in IEC60825-1+A2:2001 under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the equipment does not produce hazardous laser radiation.

Since radiation emitted inside the equipment is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

FDA regulations

U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. One of the following labels on the back of the machine indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

Manufactured:

RICOH COMPANY LTD,

3-6, Naka-magome 1-Chome Ohta-ku, Tokyo 143-8555, Japan

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.



WARNING

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous invisible radiation exposure.

Internal laser radiation

Max. Radiation Power: 10 mW

Wave Length: 780 – 800 nm

Laser Class: Class 3B

Important safety instructions (for USA and Canada)

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall outlet before cleaning inside of the machine. DO NOT use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 DO NOT place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 6 Slots and openings in the cabinet at the back or bottom are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 7 This product should be connected to an AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. If you are not sure, contact a qualified electrician.

- 8 This product is equipped with a 3-wire grounded plug. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. DO NOT defeat the purpose of the grounded plug.
- 9 Use only the power cord supplied with this machine.
- 10 DO NOT allow anything to rest on the power cord. DO NOT place this product where people can walk on the cord.
- 11 If an extension cord is used with this product, make sure that the total ampere ratings on the products plugged into the extension cord DO NOT exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the AC power outlet does not exceed 15 amperes (US only).
- 12 The power cord, including extensions, should be no longer than 16.5 feet (5 meters).
DO NOT share the same power circuit with other high powered appliances, such as an air conditioner, copier, shredder, and so on. If you cannot avoid using the printer with these appliances, we recommend that you use a voltage transformer or a high-frequency noise filter.
Use a voltage regulator if the power source is not stable.
- 13 DO NOT place anything in front of the machine that will block received faxes. DO NOT place anything in the path of received faxes.
- 14 Wait until pages have exited the machine before picking them up.
- 15 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product. DO NOT attempt to service this product yourself because opening or removing covers may expose you to dangerous voltage points and other risks and may void your warranty. If you are not able to solve a problem with your machine, please contact RICOH CORP. CUSTOMER SUPPORT DEPT. at 1-800-FASTFIX.
- 16 Unplug this product from the AC power outlet and refer all servicing to our Authorized Service Personnel under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed.
Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
- 17 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).
- 18 To reduce the risk of fire, electric shock and injury to people, note the following:
 - DO NOT use this product near appliances that use water, a swimming pool or in a wet basement.
 - DO NOT use the machine during an electrical storm (there is the remote possibility of an electrical shock). If you have connected a telephone DO NOT use it to report a gas leak in the vicinity of the leak.

Important Information for Australia

IMPORTANT-For Your Safety

To ensure safe operation the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively grounded through the normal household wiring.

Extension cords used with the equipment must be three-conductor and be correctly wired to provide connection to ground. Incorrectly wired extension cords are a major cause of fatalities.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, consult a qualified electrician.

Important safety instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall socket before cleaning the outside of the machine and the scanner glass. DO NOT use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 DO NOT use this product near water.
- 6 DO NOT place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 7 Slots and openings in the casing at the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless adequate ventilation is provided.
- 8 This product should be connected to an AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. If you are not sure, contact a qualified electrician.
- 9 This product is equipped with a 3-wire grounded plug, a plug having a third (grounded) pin. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. DO NOT defeat the purpose of the grounded plug.
- 10 DO NOT place anything on top of the power cord including this machine. DO NOT allow the power cord to be stepped on.
- 11 DO NOT place anything in front of the machine that will block received faxes. DO NOT place anything in the path of received faxes.
- 12 DO NOT touch a document during printing.

- 13 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- 14 DO NOT attempt to service this product yourself, because opening or removing covers may expose you to dangerous voltage points and/or other risks. Refer all servicing to service personnel.
- 15 Wait until pages have exited the machine before picking them up.
- 16 Unplug this product from the wall outlet and refer servicing to Authorised Service Personnel under the following conditions:
 - When the power cord is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the casing has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.

Important Information for Some Countries

Important Safety Instructions

- 1 Read all of these instructions.
- 2 Save them for later reference.
- 3 Follow all warnings and instructions marked on the product.
- 4 Unplug this product from the wall outlet before cleaning the outside of the machine and the scanner glass. DO NOT use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5 DO NOT place this product near water.
- 6 DO NOT place this product on an unstable cart, stand, or table. The product may drop, causing serious damage to the product.
- 7 Slots and openings in the casing at the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or on a radiator or heater. This product should never be placed in a built-in installation unless adequate ventilation is provided.
- 8 This product should be connected to an AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. If you are not sure, contact a qualified electrician.
- 9 This product is equipped with a 2-wire grounding type plug or a 3-wire grounding type plug (Only for Singapore, Malaysia, Hong Kong and India), a plug having two or three pins. This plug will only fit into only a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. DO NOT defeat the purpose of the grounding-type plug.
- 10 DO NOT place anything on top of the power cord including this machine. DO NOT allow the power cord to be stepped on.
- 11 If an extension cord is used with this product, make sure that the total ampere ratings on the products plugged into the extension cord DO NOT exceed the extension cord ampere rating.
- 12 DO NOT place anything in front of the machine that will block received faxes. DO NOT place anything in the path of received faxes.
- 13 DO NOT touch a document during printing.
- 14 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product.
- 15 DO NOT attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points and/or other risks, and may void your warranty. Please refer all servicing to our Authorized Service Personnel.

16 Unplug this product from the wall outlet and refer servicing to Authorized Service Personnel under the following conditions:

- If the power cord is damaged or frayed.
- If the product has been spilled by liquid.
- If the product has been exposed to rain or water.
- If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the casing has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

17 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).



WARNING

For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.

Ricoh cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.

Legal limitations for copying

It is an offence to make reproductions of certain items or documents with the intent to commit fraud. This memorandum is intended to be a guide rather than a complete list. We suggest you check with relevant legal authorities if in doubt about a particular item or document.

The following are examples of documents which should not be copied:

- Money
- Bonds or other certificates of debt
- Certificates of Deposit
- Armed Forces Service or Draft papers
- Passports
- Postage Stamps (cancelled or uncanceled)
- Immigration Papers
- Welfare documents
- Cheques or Drafts drawn by Governmental Agencies
- Identification Documents, badges or insignias
- Licences and Certificates of Title to motor vehicles

Copyrighted works cannot be copied. Sections of a copyrighted work can be copied for 'fair dealing'. Multiple copies would indicate improper use.

Works of art should be considered the equivalent of copyrighted works.

Trademarks

Windows Vista is either a registered trademark or a trademark of Microsoft Corporation in the United States and other countries.

Microsoft, Windows and Windows Server are registered trademarks of Microsoft Corporation in the United States and/or other countries.

PostScript is a registered trademark and PostScript 3 is a trademark of Adobe Systems Incorporated.

Nuance, the Nuance logo, PaperPort and ScanSoft are trademarks or registered trademarks of Nuance Communications, Inc. or its affiliates in the United States and/or other countries.

Presto! PageManager is a registered trademark of NewSoft Technology Corporation.

BROADCOM, SecureEasySetup and the SecureEasySetup logo are trademarks or registered trademarks of Broadcom Corporation in the United States and/or other countries.

AOSS is a trademark of Buffalo Inc.

Wi-Fi, WPA and WPA2 are registered trademarks and Wi-Fi Protected Setup is a trademark of Wi-Fi Alliance.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

Each company whose software title is mentioned in this manual has a Software Licence Agreement specific to its proprietary programs.

All brand and product names mentioned in this manual are registered trademarks of their respective companies.

Troubleshooting

If you think there is a problem with your machine, check the chart below and follow the troubleshooting tips.

Most problems can be easily resolved by yourself.

If you are having difficulty with your machine

If you think there is a problem with the way your faxes look, make a copy first. If the copy looks good, the problem may not be your machine. Check the chart below and follow the troubleshooting tips.

Printing or receiving faxes

Difficulties	Suggestions
■ Condensed print ■ Horizontal streaks ■ Top and bottom sentences are cut off ■ Missing lines	Usually this is caused by a poor telephone connection. If your copy looks good, you probably had a bad connection, with static or interference on the telephone line. Ask the other party to send the fax again.
Poor print quality	See <i>Improving the print quality</i> on page 120.
Vertical black lines when receiving	The corona wire for printing may be dirty. Clean the corona wire. (See <i>Cleaning the corona wire</i> on page 141.)
	The sender's scanner may be dirty. Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine.
	If the problem continues, call your dealer for service.
Received faxes appear as split or blank pages.	If the received faxes are divided and printed on two pages or if you get an extra blank page, your paper size setting may not be correct for the paper you are using. (See <i>Paper size</i> on page 23.)
	Turn on auto reduction. (See <i>Printing a reduced incoming fax</i> on page 42.)

Telephone line or connections

Difficulties	Suggestions
Dialling does not work.	Check for a dial tone.
	Change Tone/Pulse setting. (See <i>the Quick Setup Guide</i> .)
	Check all line cord connections.
	Check that the machine is plugged in and switched on.
	If an external phone is connected to the machine, send a manual fax by lifting the handset of the external telephone and dialling the number. Wait to hear fax receiving tones before pressing  Start .

Telephone line or connections (continued)

Difficulties	Suggestions
The machine does not answer when called.	Make sure the machine is in the correct receive mode for your setup. (See <i>Receiving a fax</i> on page 39.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. If you do not hear ringing when you call your machine, ask your telephone company to check the line.

Sending faxes

Difficulties	Suggestions
Poor sending quality.	Try changing your resolution to <i>Fine</i> or <i>S.Fine</i> . Make a copy to check your machine's scanner operation. If the copy quality is not good, clean the scanner. (See <i>Cleaning the scanner glass</i> on page 138.)
Transmission Verification Report says 'RESULT:ERROR'.	There is probably temporary noise or static on the line. Try sending the fax again. If you are sending a PC Fax message and get 'RESULT:ERROR' on the Transmission Verification Report, your machine may be out of memory. To free up extra memory, you can turn off fax storage (see <i>Turning off remote fax options</i> on page 72), print fax messages in memory (see <i>Printing a fax from the memory</i> on page 43) or cancel a delayed fax or polling job (see <i>Checking and cancelling waiting jobs</i> on page 38). If the problem continues, ask the telephone company to check your telephone line. If you often get transmission errors due to possible interference on the telephone line, try changing the Compatibility setting to <i>Normal</i> or <i>Basic</i> (for VoIP). (See <i>Telephone line interference</i> on page 126.)
Vertical black lines when sending.	Black vertical lines on faxes you send are typically caused by dirt or correction fluid on the glass strip. (See <i>Cleaning the scanner glass</i> on page 138.)

Handling incoming calls

Difficulties	Suggestions
The machine 'Hears' a voice as a CNG Tone.	If Fax Detect is set to on, your machine is more sensitive to sounds. It may mistakenly interpret certain voices or music on the line as a fax machine calling and respond with fax receiving tones. Deactivate the machine by pressing  Stop/Exit . Try avoiding this problem by turning Fax Detect to off. (See <i>Fax Detect (Easy Receive)</i> on page 41.)
Sending a Fax Call to the machine.	If you answered on an external or extension telephone, press your Remote Activation code [default setting is (* 51)]. When your machine answers, hang up.
Custom features on a single line.	If you have Call Waiting, Call Waiting/Caller ID, Caller ID, Voice Mail, an answering machine, an alarm system or other custom feature on a single telephone line with your machine, it may create a problem sending or receiving faxes. For Example: If you subscribe to Call Waiting or some other custom service and its signal comes through the line while your machine is sending or receiving a fax, the signal can temporarily interrupt or disrupt the faxes. ECM feature should help overcome this problem. This condition is related to the telephone system industry and is common to all devices that send and receive information on a single, shared line with custom features. If avoiding a slight interruption is crucial to your business, a separate line with no custom features is recommended.

Menu access difficulties

Difficulties	Suggestions
The machine beeps when you try to access the Setup Receive and Setup Send menus.	If the  Fax key is not illuminated, press it to turn on Fax mode. The Setup Receive setting ( Menu, 2, 1) and Setup Send setting ( Menu, 2, 2) are available only when the machine is in Fax mode.

Copy quality difficulties

Difficulties	Suggestions
Vertical black line appears in copies.	Black vertical lines on copies are typically caused by dirt or correction fluid on the glass strip, or the corona wire for printing is dirty. (See <i>Cleaning the scanner glass</i> on page 138 and <i>Cleaning the corona wire</i> on page 141.)

Printing difficulties

Difficulties	Suggestions
No printout.	■ Check that the machine is plugged in and the power switch is turned on. ■ Check that the toner cartridge and drum unit are installed correctly. (See <i>Replacing the drum unit</i> on page 149.) ■ Check the interface cable connection on both the machine and your computer. (See <i>the Quick Setup Guide</i>.) ■ Check that the correct printer driver has been installed and chosen. ■ Check to see if the LCD is showing an error message. (See <i>Error and maintenance messages</i> on page 127.) ■ Check the machine is online: (For Windows Vista®) Click the  Start button, Control Panel, Hardware and Sound, and then Printers. Right-click TYPE SP 1200SF Printer. Make sure that Use Printer Offline is unchecked. (For Windows® XP and Windows Server® 2003) Click the  Start button and choose Printers and Faxes. Right-click TYPE SP 1200SF Printer. Make sure that Use Printer Offline is unchecked. (For Windows® 2000) Click the  Start button and choose Settings and then Printers. Right-click TYPE SP 1200SF Printer. Make sure that Use Printer Offline is unchecked.
The machine prints unexpectedly or it prints garbage.	■ Pull out the paper tray and wait until the machine stops printing. Then turn off the machine and disconnect from the power for several minutes. (The SP 1200SF can be turned off for up to 4 days without losing faxes stored in the memory.) ■ Check the settings in your application to make sure it is set up to work with your machine.

Printing difficulties (continued)

Difficulties	Suggestions
The machine prints the first couple of pages correctly, then some pages have text missing.	■ Check the settings in your application to make sure that it is set up to work with your machine. ■ Your computer is not recognising the machine's input buffer's full signal. Make sure that you connected the interface cable correctly. (See <i>the Quick Setup Guide</i>.)
The headers or footers appear when the document displays on the screen but they do not show up when it is printed.	There is an unprintable area on the top and bottom of the page. Adjust the top and bottom margins in your document to allow for this.

Scanning difficulties

Difficulties	Suggestions
TWAIN errors appear while scanning.	Make sure that the TWAIN driver is chosen as the primary source. In PaperPort™ 11SE, click File, Scan or Get Photo and choose the TYPE TWAIN driver .
OCR does not work.	Try increasing the scanning resolution.

Software difficulties

Difficulties	Suggestions
Cannot install software or print.	Run the Repair Multi-Function Suite program on the CD-ROM. This program will repair and reinstall the software.
Cannot perform '2 in 1' or '4 in 1' printing.	Check that the paper size setting in the application and in the printer driver are the same.
The machine does not print from Adobe Illustrator.	Try to reduce the print resolution. (See <i>Advanced tab in the Software User's Guide on the CD-ROM</i> .)



Paper handling difficulties




Difficulties	Suggestions
The machine does not load paper. The LCD shows No Paper or a Paper Jam message.	■ If there is no paper, load a new stack of paper into the paper tray. ■ If there is paper in the paper tray, make sure it is straight. If the paper is curled, you should straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray. ■ Reduce the amount of paper in the paper tray, and then try again. ■ If the LCD shows Paper Jam message and you still have a problem, see <i>Paper jams</i> on page 133.
How do I print on envelopes?	You can load envelopes from the manual feed slot. Your application must be set up to print the envelope size you are using. This is usually done in the Page Setup or Document Setup menu of your application. (See your application's manual for more information.)
Which paper can I use?	You can use plain paper, recycled paper, transparency and labels that are made for laser machines. (For details, see <i>Acceptable paper and other print media</i> on page 16.)
There is a paper jam.	(See <i>Paper jams</i> on page 133.)




Print quality difficulties



Difficulties	Suggestions
Printed pages are curled.	■ Low quality thin or thick paper or not printing on the recommended side of the paper could cause this problem. Try turning over the stack of paper in the paper tray. ■ Make sure that you choose the Paper Type that suits the print media type you are using. (See <i>Acceptable paper and other print media</i> on page 16.)
Printed pages are smeared.	The Paper Type setting may be incorrect for the type of print media you are using, or the print media may be too thick or have a rough surface. (See <i>Acceptable paper and other print media</i> on page 16 and <i>Basic tab in the Software User's Guide on the CD-ROM</i> .)
Printouts are too light.	■ If this problem occurs when making copies or printing received faxes, set Toner Save mode to off in the machine menu settings. (See <i>Toner Save</i> on page 25.) ■ Set Toner Save mode to off in the Advanced tab in the printer driver. (See <i>Advanced tab in the Software User's Guide on the CD-ROM</i>.)




Improving the print quality

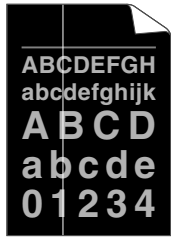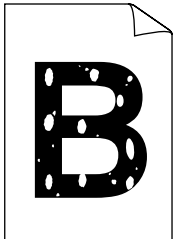
Examples of poor print quality	Recommendation
 White lines across the page	■ Make sure that you use paper that meets our specifications. A rough surfaced paper or thick print media can cause the problem. (See <i>Acceptable paper and other print media</i> on page 16.) ■ Make sure that you choose the appropriate media type in the printer driver or in the machine's Paper Type menu setting. (See <i>Acceptable paper and other print media</i> on page 16 and <i>Basic tab in the Software User's Guide on the CD-ROM</i>.) ■ The problem may disappear by itself. Print multiple pages to clear this problem, especially if the machine has not been used for a long time. ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.)
 White lines down the page	■ Wipe the laser scanner windows with a soft cloth. (See <i>Cleaning the laser scanner window</i> on page 139.) ■ Make sure that a torn sheet of paper is not inside the machine covering the scanner window. ■ The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing a toner cartridge</i> on page 146.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.)
 Hollow print	■ Make sure that you use paper that meets our specifications. (See <i>Acceptable paper and other print media</i> on page 16.) ■ Choose Thick paper mode in the printer driver, choose Thick in the machine's Paper Type menu setting or use thinner paper than you are currently using. (See <i>Paper type</i> on page 23 and <i>Basic tab in the Software User's Guide on the CD-ROM</i>.) ■ Check the machine's environment. Conditions such as high humidity can cause hollow print. (See <i>Choosing a location</i> on page 94.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.)
 Grey background	■ Make sure that you use paper that meets our specifications. (See <i>Acceptable paper and other print media</i> on page 16.) ■ Check the machine's environment. Conditions such as high temperatures and high humidity can increase the amount of background shading. (See <i>Choosing a location</i> on page 94.) ■ The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing a toner cartridge</i> on page 146.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.)

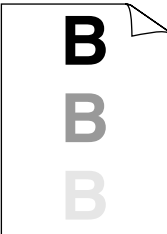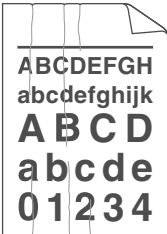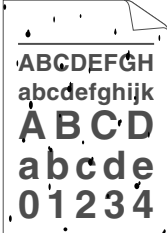Examples of poor print quality	Recommendation
 Page skewed	■ Make sure that the paper or other print media is loaded correctly in the paper tray and that the guides are not too tight or too loose against the paper stack. ■ Set the paper guides correctly. (See <i>Loading paper in the paper tray</i> on page 9.) ■ The paper tray may be too full. ■ If you are using the manual feed slot, see <i>Loading paper in the manual feed slot</i> on page 11. ■ Check the paper type and quality. (See <i>Acceptable paper and other print media</i> on page 16.)
 Ghost	■ Make sure that you use paper that meets our specifications. Rough-surfaced paper or thick paper may cause the problem. (See <i>Acceptable paper and other print media</i> on page 16.) ■ Make sure that you choose the correct media type in the printer driver or in the machine's Paper Type menu setting. (See <i>Acceptable paper and other print media</i> on page 16 and <i>Basic tab in the Software User's Guide on the CD-ROM</i>.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.) ■ The fuser unit may be contaminated. Call your dealer for service.
 Wrinkles or creases	■ Check the paper type and quality. (See <i>Acceptable paper and other print media</i> on page 16.) ■ Make sure that paper is loaded correctly. (See <i>Loading paper in the paper tray</i> on page 9.) ■ Turn over the stack of paper in the tray or rotate the paper 180° in the input tray.
 Poor fixing	■ Choose Improve Toner Fixing mode in the printer driver. (See <i>Device Options in the Software User's Guide on the CD-ROM</i>.) If you print only a few pages, change the printer driver setting in Media Type to a thin setting.

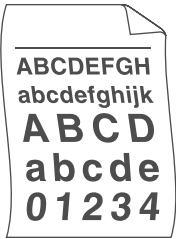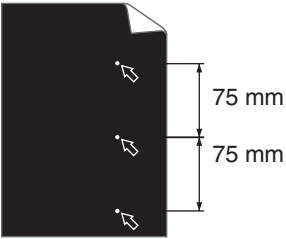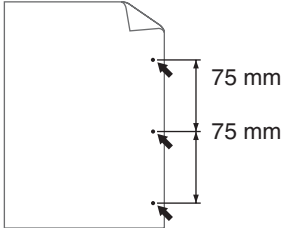Examples of poor print quality	Recommendation
 Curled or wavy	■ Check the paper type and quality. High temperatures and high humidity will cause paper to curl. ■ If you do not use the machine often, the paper may have been in the paper tray too long. Turn over the stack of paper in the paper tray. Also, fan the paper stack and then rotate the paper 180° in the paper tray.
 White Spots on black text and graphics at 75 mm intervals  Black Spots at 75 mm intervals	■ Make ten copies of a blank, white sheet of paper. (See <i>Making multiple copies</i> on page 84.) If the problem is not solved, the drum unit may have glue from a label stuck on the OPC drum surface. Clean the drum unit. (See <i>Cleaning the drum unit</i> on page 143.) ■ The drum unit may be damaged. Put in a new drum. (See <i>Replacing the drum unit</i> on page 149.)

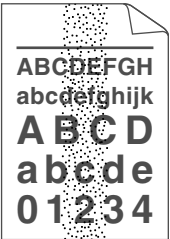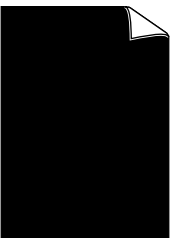Examples of poor print quality	Recommendation
 Faint	■ Check the machine's environment. Conditions such as humidity, high temperatures, and so on, may cause this print fault. (See <i>Choosing a location</i> on page 94.) ■ If the whole page is too light, Toner Save mode may be on. Turn off Toner Save mode in the machine menu settings or Toner Save mode in the printer Properties of the driver. (See <i>Toner Save</i> on page 25 or <i>Advanced tab in the Software User's Guide on the CD-ROM</i>.) ■ Clean the scanner window and the corona wire of the drum unit. (See <i>Cleaning the laser scanner window</i> on page 139 and <i>Cleaning the corona wire</i> on page 141.) ■ The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing a toner cartridge</i> on page 146.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.)
 Toner specks	■ Make sure that you use paper that meets our specifications. Rough-surfaced paper may cause the problem. (See <i>Acceptable paper and other print media</i> on page 16.) ■ Clean the corona wire and the drum unit. (See <i>Cleaning the corona wire</i> on page 141 and <i>Cleaning the drum unit</i> on page 143.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.) ■ The fuser unit may be contaminated. Call your dealer for service.
 All black	■ Clean the corona wire inside the drum unit by sliding the blue tab. Be sure to return the blue tab to the home position (▲). (See <i>Cleaning the corona wire</i> on page 141.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.) ■ The fuser unit may be contaminated. Call your dealer for service.

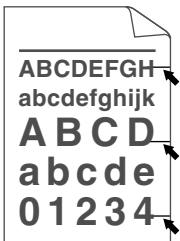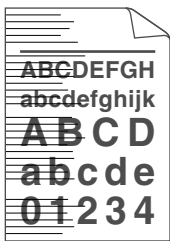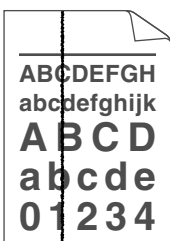Examples of poor print quality	Recommendation
 Black toner marks across the page	■ Make sure that you use paper that meets our specifications. (See <i>Acceptable paper and other print media</i> on page 16.) ■ If you use label sheets for laser machines, the glue from the sheets may sometimes stick to the OPC drum surface. Clean the drum unit. (See <i>Cleaning the drum unit</i> on page 143.) ■ Do not use paper that has clips or staples because they will scratch the surface of the drum. ■ If the unpacked drum unit is in direct sunlight or room light, the unit may be damaged. ■ The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing a toner cartridge</i> on page 146.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.)
 Line across the page	■ Clean the laser scanner window and the corona wire inside the drum unit. (See <i>Cleaning the laser scanner window</i> on page 139 and <i>Cleaning the corona wire</i> on page 141.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.)
 Black lines down the page Printed pages have toner stains down the page	■ Clean the corona wire inside the drum unit by sliding the blue tab. Be sure to return the blue tab to the home position (▲). (See <i>Cleaning the corona wire</i> on page 141.) ■ The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing a toner cartridge</i> on page 146.) ■ The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 149.) ■ The fuser unit may be smudged. Call your dealer for service.

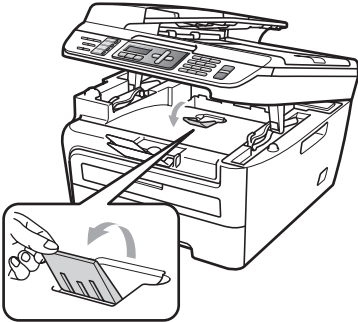Examples of poor print quality	Recommendation
 Curled	■ Choose Reduce Paper Curl mode in the printer driver when you do not use our recommended paper. (See <i>Device Options in the Software User's Guide on the CD-ROM.</i>) ■ Turn the paper over in the paper tray, and print again. (Excluding Letterhead paper) ■ Lift up the output tray support flap.  ■ Replace the paper in the paper tray with paper from a freshly opened ream. ■ Make sure you are using paper that is recommended for your machine. (See <i>Acceptable paper and other print media</i> on page 16.)

Setting dial tone detection

When you send a fax automatically, by default your machine will wait for a fixed amount of time before it starts to dial the number. By changing the Dial Tone setting to **Detection** you can make your machine dial as soon as it detects a dial tone. This setting can save a small amount of time when sending a fax to many different numbers. If you change the setting and start having problems with dialling you should change back to the default **No Detection** setting.

- 1 Press  **Menu, 0, 5.**
- 2 Press **▲** or **▼** to choose **Detection** or **No Detection**. Press **OK**.
- 3 Press  **Stop/Exit.**

Telephone line interference

If you are having difficulty sending or receiving a fax due to possible interference on the telephone line, we recommend that you adjust the Equalization for compatibility to reduce the modem speed for fax operations.

- 1 Press  **Menu, 2, 0, 1.**
- 2 Press **▲** or **▼** to choose **Basic (for VoIP)** or **Normal** or **High**.

- **Basic (for VoIP)** cuts the modem speed to 9600 bps. and turns the error correction mode (ECM) off.

For a standard telephone line: If you regularly experience interference on your standard telephone line try this setting.

If you are using VoIP: VoIP service providers offer fax support using various standards. If you regularly experience fax transmission errors try this setting.

- **Normal** sets the modem speed at 14400 bps.
- **High** sets the modem speed at 33600 bps.

Press **OK**.

- 3 Press  **Stop/Exit.**



Note

When you change the compatibility to **Basic (for VoIP)**, the ECM feature is not available.

Error and maintenance messages

As with any sophisticated office product, errors may occur and consumable items may need to be replaced. If this happens, your machine identifies the error or required routine maintenance and shows the appropriate message. The most common error and maintenance messages are shown below.

You can clear most errors and routine maintenance messages by yourself.

Error Message	Cause	Action
BT Call Sign On (U.K. only)	BT Call Sign is set to On. You cannot change the Receive Mode from Manual to another mode.	Set BT Call Sign to Off. (See <i>BT call sign (U.K. only)</i> on page 46.)
Cartridge Error	The toner cartridge is not installed correctly.	Pull out the drum unit, take out the toner cartridge that is indicated on the LCD, and put it back into the drum unit again.
Drum End Soon	The drum unit is near the end of its life.	Use the drum unit until you have a print quality problem; then replace the drum unit with a new one. (See <i>Replacing the drum unit</i> on page 149.)
Size mismatch	The paper in the tray is not the correct size.	Load the correct size of paper in the tray and set the "Paper Size" ( Menu, 1, 3 (See <i>Paper size</i> in Chapter 3)).
Comm.Error	Poor telephone line quality caused a communication error.	Try sending the fax again or try connecting the machine to another telephone line. If the problem continues, call the telephone company and ask them to check your telephone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Check the other fax machine's polling setup.
Cooling Down Wait for a while	The temperature of the drum unit or toner cartridge is too hot. The machine will pause its current print job and go into cooling down mode. During the cooling down mode, you will hear the cooling fan running while the LCD shows Cooling Down, and Wait for a while.	Make sure that you can hear the fan in the machine spinning and that the exhaust outlet is not blocked by something. If the fan is spinning, remove any obstacles that surround the exhaust outlet, and then leave the machine turned on but do not use it for several minutes. If the fan is not spinning do one of the following: Disconnect the machine from the power for several minutes, then reconnect it. (The machine can be turned off for up to 4 days without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 131.
Cover is Open Close the Front Cover.	The front cover is not closed completely.	Close the front cover of the machine.

Error Message	Cause	Action
Cover is Open Close the Fuser Cover.	The fuser cover is not closed completely.	Close the fuser cover of the machine.
Cover is Open Open the Back Cover and remove the jammed paper, or close the Fuser Cover.	The fuser cover is not closed completely or paper was jammed in the back of the machine when you turned on the power.	Make sure paper is not jammed inside the back of the machine, and then close the fuser cover and press  Start .
Disconnected	The other person or other person's fax machine stopped the call.	Try to send or receive again.
Document Jam	The document was not inserted or fed correctly, or the document scanned from the ADF was too long.	See <i>Document jams</i> on page 132 or <i>Using the automatic document feeder (ADF)</i> on page 21.
Drum Error	The corona wire on the drum unit needs to be cleaned.	Clean the corona wire on the drum unit. (See <i>Cleaning the corona wire</i> on page 141.)
	The drum unit has reached the end of its life.	Replace the drum unit. (See <i>Replacing the drum unit</i> on page 149.)
Fuser Error	The temperature of fuser unit does not rise at a specified temperature within specified time.	Do one of the following: Turn the power switch off, wait a few seconds, and then turn it on again. Leave the machine for 15 minutes with the power on. The machine can be turned off for up to 4 days without losing faxes stored in the memory. (See <i>Transferring your faxes or Fax Journal report</i> on page 131.)
	The fuser unit is too hot.	
Init Unable XX	The machine has a mechanical problem.	Do one of the following: Disconnect the machine from the power for several minutes, then reconnect it. (The machine can be turned off for up to 4 days without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 131.)
Jam Rear	The paper is jammed in the back of the machine.	(See <i>Paper jams</i> on page 133.)
Jam Inside	The paper is jammed inside the machine.	(See <i>Paper jams</i> on page 133.)
Jam Tray	The paper is jammed in the paper tray of the machine.	(See <i>Paper jams</i> on page 133.)

Error Message	Cause	Action
No Paper	The machine is out of paper or paper is not correctly loaded in the paper tray.	Do one of the following: ■ Refill the paper in the paper tray, and then press  Start. ■ Remove the paper and load it again, and then press  Start.
No Response/Busy	The number you dialled does not answer or is busy.	Verify the number and try again.
Not Registered	You tried to access a One Touch or Speed Dial number that is not programmed.	Set up the One Touch or Speed Dial number. (See <i>Storing one touch dial numbers</i> on page 65 and <i>Storing speed dial numbers</i> on page 65.)
Out of Memory	The machine's memory is full.	Fax sending or copy operation in progress Do one of the following: ■ Press  Start to send or copy the scanned pages. ■ Press  Stop/Exit and wait until the other operations in progress finish, and then try again. ■ Clear the data from the memory. (See <i>Out of memory message</i> on page 38 or page 90.) Print operation in process Do one of the following: ■ Reduce print resolution. (See <i>Advanced tab in the Software User's Guide on the CD-ROM</i>.) ■ Clear the faxes from the memory. (See <i>Out of memory message</i> on page 90.)
Print Unable XX	The machine has a mechanical problem.	Do one of the following: Disconnect the machine from the power for several minutes, then reconnect it. (The machine can be turned off for up to 4 days without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 131.)

Error Message	Cause	Action
Scan Unable XX	The machine has a mechanical problem.	Do one of the following: Disconnect the machine from the power for several minutes, then reconnect it. (The machine can be turned off for up to 4 days without losing faxes stored in the memory. See <i>Transferring your faxes or Fax Journal report</i> on page 131.)
Toner Life End	The drum unit and toner cartridge assembly is not installed correctly, or the toner cartridge is used up and printing is not possible.	Do one of the following: ■ Re-install the toner cartridge and drum unit assembly. ■ Replace the empty toner cartridge with a new one. (See <i>Replacing a toner cartridge</i> on page 146.)
Toner Low	If the LCD shows Toner Low, you can still print; however, the machine is telling you that the toner cartridge is near the end of its life and the toner will soon need replacing.	Order a new toner cartridge now.

Transferring your faxes or Fax Journal report

If the LCD shows:

- Init Unable XX
- Print Unable XX
- Scan Unable XX

We recommend transferring your faxes to another fax machine or to your PC. (See *Transferring faxes to another fax machine* on page 131 or *Transferring faxes to your PC* on page 131.)

You can also transfer the Fax Journal report to see if there are any faxes you need to transfer. (See *Transferring Fax Journal report to another fax machine* on page 131.)



Note

If there is an error message on the machine's LCD, after the faxes have been transferred, disconnect the machine from the power source for several minutes, and then reconnect it.

Transferring faxes to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Setting your station ID in the Quick Setup Guide*.)

- 1 Press **Menu, 9, 0, 1.**
- 2 Do one of the following:
 - If the LCD shows **No Data**, there are no faxes left in the machine's memory.
Press **Stop/Exit.**
 - Enter the fax number to which faxes will be forwarded.
- 3 Press **Start.**

Transferring faxes to your PC

You can transfer the faxes from your machine's memory to your PC.

- 1 Make sure that you have installed **Multi-Function Suite** on your PC, and then turn on **PC-Fax Receiving** on the PC. (For details about PC Fax Receive, see *PC-FAX receiving in the Software User's Guide on the CD-ROM*.)
- 2 Make sure that you have set **PC Fax Receive** on the machine. (See *PC fax receive* on page 71.)
If faxes are in the machine's memory when you set up PC Fax Receive, the LCD will ask if you want to transfer the faxes to your PC.
- 3 Do one of the following:
 - To transfer all faxes to your PC, press **1**. You will be asked if you want a backup print.
 - To exit and leave the faxes in the memory, press **2**.
- 4 Press **Stop/Exit.**

Transferring Fax Journal report to another fax machine

If you have not set up your Station ID, you cannot enter fax transfer mode. (See *Setting your station ID in the Quick Setup Guide*.)

- 1 Press **Menu, 9, 0, 2.**
- 2 Enter the fax number to which the Fax Journal report will be forwarded.
- 3 Press **Start.**

Document jams

If the document is jammed, follow the steps below.




Note

After removing a jammed document, check that no paper scraps are left in the machine that could cause another jam.

Document is jammed in the top of the ADF unit


- 1 Take out any paper from the ADF that is not jammed.
- 2 Open the ADF cover.
- 3 Pull the jammed document out to the left.

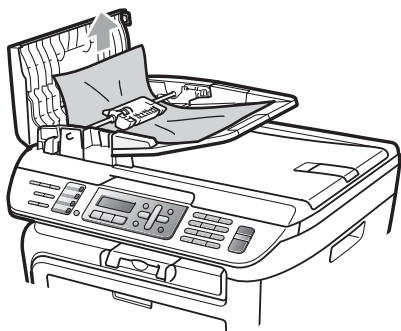

- 4 Close the ADF cover.
- 5 Press  **Stop/Exit**.

Document is jammed under the document cover


- 1 Take out any paper from the ADF that is not jammed.
- 2 Lift the document cover.
- 3 Pull the jammed document out to the right.

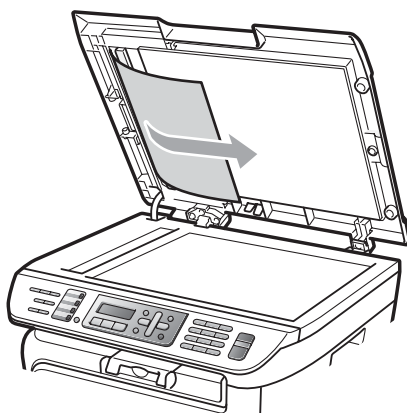

- 4 Close the document cover.
- 5 Press  **Stop/Exit**.

Document is jammed at the output tray

- 1 Pull the jammed document out to the right.

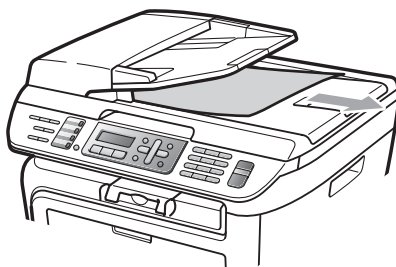

- 2 Press  **Stop/Exit**.

Paper jams

To clear paper jams, please follow the steps in this section.



Note

- Please confirm that you have installed both a toner cartridge and a drum unit in the machine. If you have not installed a drum unit or have installed the drum unit incorrectly, then this may cause a paper jam in your machine.
- If the error message remains, open and close the front cover and fuser cover firmly to reset the machine.





WARNING




HOT SURFACE

After you have just used the machine, some internal parts of the machine will be extremely hot. To prevent injury, when you open the front or back cover (back output tray) of the machine, DO NOT touch the shaded parts shown in the illustration.

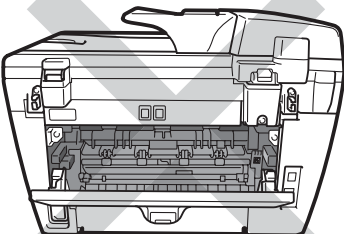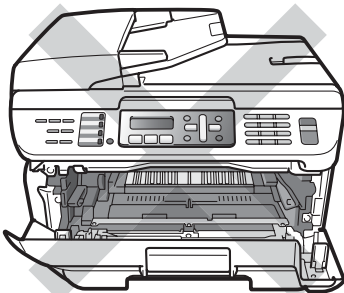

CAUTION

To prevent damage to the machine caused by static electricity, DO NOT touch the electrodes shown in the illustration.

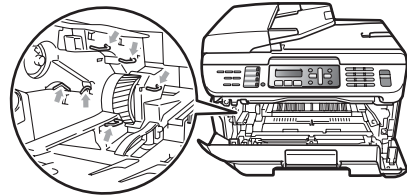

Paper is jammed inside the machine


1

Open the front cover.



2


Slowly take out the drum unit and toner cartridge assembly. The jammed paper will be pulled out with the toner cartridge and drum unit assembly.

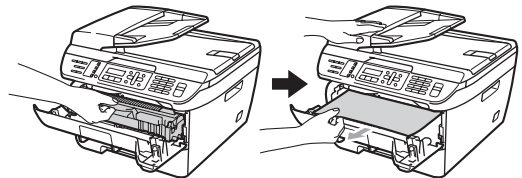


! CAUTION

We recommend that you place the drum unit and toner cartridge assembly on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.

- 3 If you cannot remove the drum unit and toner cartridge assembly easily, do not use extra force. Instead, lift the scanner cover.

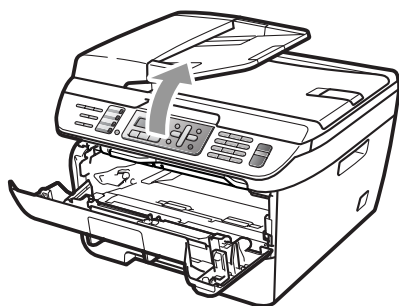


Use both hands to carefully pull the jammed paper up and out of the output tray opening.

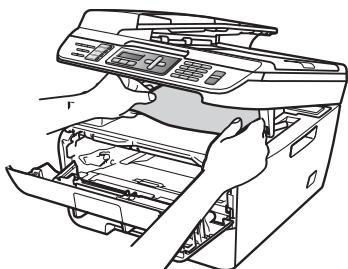


- 4 Close the scanner cover.


- 5 If you cannot pull the jammed paper out of the output tray opening, take the paper tray completely out of the machine.

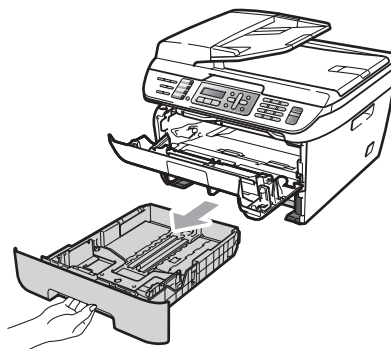

- 6 Pull the jammed paper out of the paper tray opening.

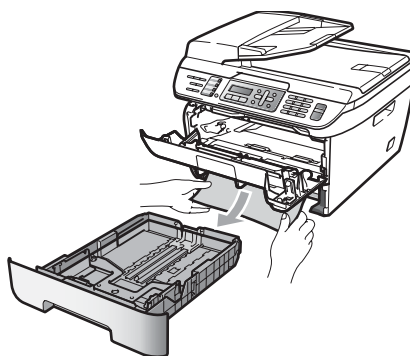


- 7 Put the drum unit and toner cartridge assembly back in the machine.

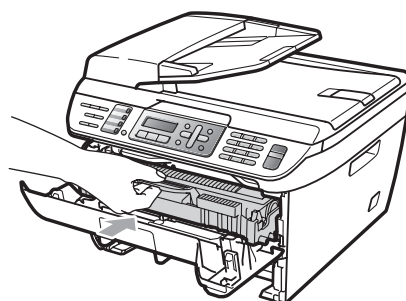


- 8 Put the paper tray back in the machine.
9 Close the front cover.

Paper is jammed at the back of the machine

- 1 Open the front cover.

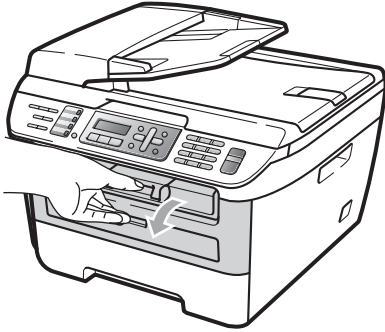


- 2 Slowly take out the drum unit and toner cartridge assembly.

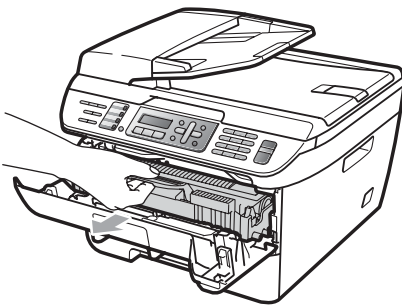


! CAUTION

We recommend that you place the drum unit and toner cartridge assembly on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.


- 3 Open the back cover (back output tray).

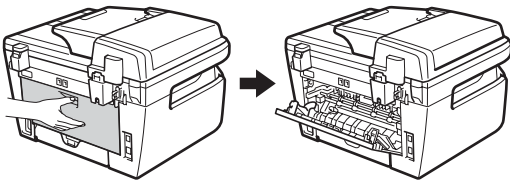

- 4 Pull the tabs toward you to open the fuser cover (1).

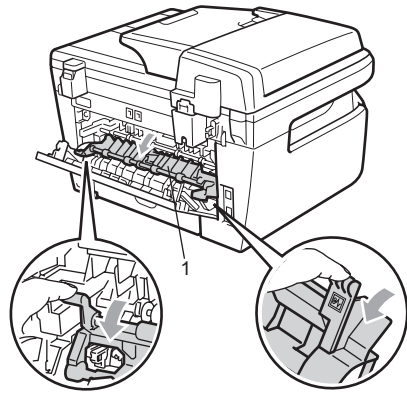


- 5 Pull the jammed paper out of the fuser unit.

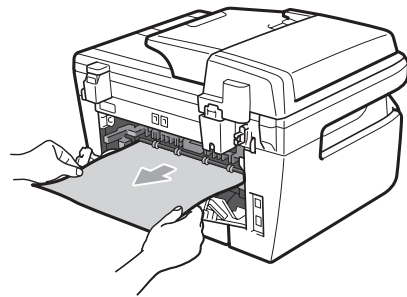

- 6 Close the back cover (back output tray).

- 7 Put the drum unit and toner cartridge assembly back in the machine.

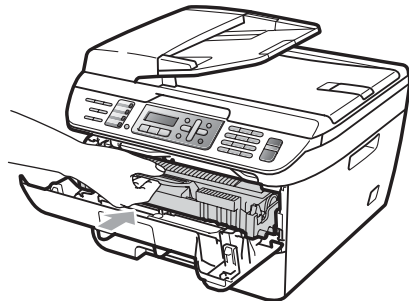


- 8 Close the front cover.

Paper is jammed inside the drum unit and toner cartridge assembly

- 1 Open the front cover.




- 2 Slowly take out the drum unit and toner cartridge assembly.

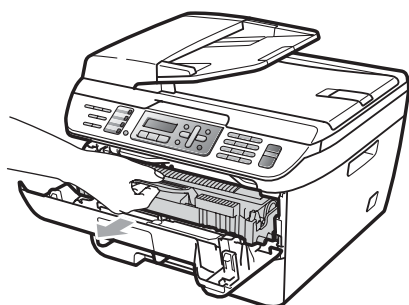

! CAUTION

We recommend that you place the drum unit and toner cartridge assembly on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.


- 3 Push down the green lock lever and take the toner cartridge out of the drum unit.

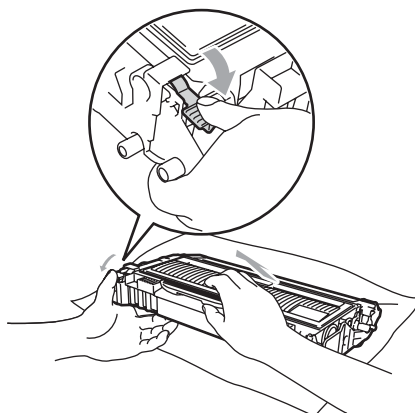

! CAUTION


Handle the toner cartridge carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.

To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations below.

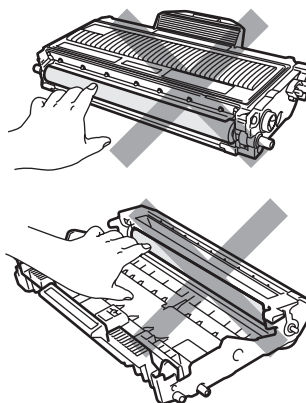


- 4 Clear the jammed paper if there is any inside the drum unit.

- 5 Put the toner cartridge back into the drum unit until you hear it lock into place. If you put it in correctly, the green lock lever will lift automatically.

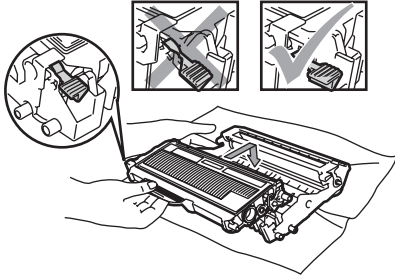

- 6 Put the drum unit and toner cartridge assembly back in the machine.

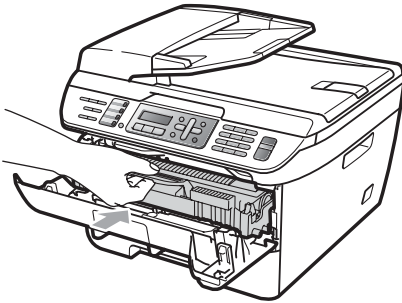

- 7 Close the front cover.

Routine maintenance

WARNING

Use neutral detergents.


DO NOT use any flammable substances, spray or organic solvent/liquids containing alcohol/ammonia to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock. For more information see *Important safety instructions for EU* on page 102.

CAUTION


The drum unit contains toner, so handle it carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.

Cleaning the outside of the machine

- 1 Turn off the machine. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the electrical socket.
- 2 Pull the paper tray completely out of the machine.

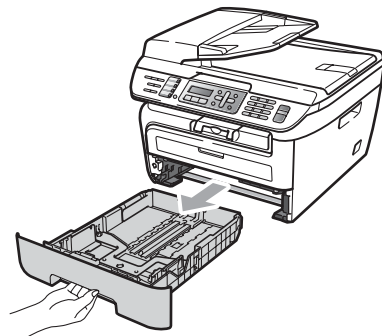


- 3 Wipe the outside of the machine with a soft cloth to remove dust.

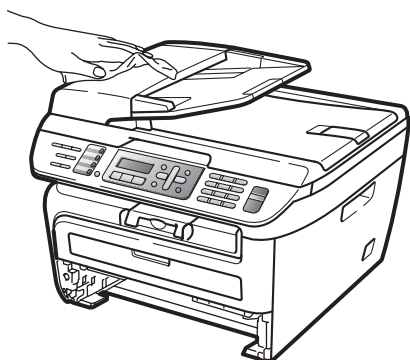

- 4 Remove any paper that is in the paper tray.

- 5 Wipe the inside and the outside of the paper tray with a soft cloth to remove dust.

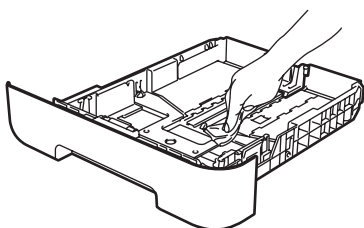


- 6 Re-load the paper and put the paper tray firmly back in the machine.


- 7 Plug the machine's power cord back into the electrical socket first, and reconnect all cables and telephone line cord. Turn on the machine.

Cleaning the scanner glass

- 1 Turn off the machine. Unplug the telephone line cord first, disconnect all cables and then unplug the power cord from the electrical socket.
- 2 Lift the document cover (1). Clean the white plastic surface (2) and scanner glass (3) underneath it with a soft lint-free cloth moistened with water.

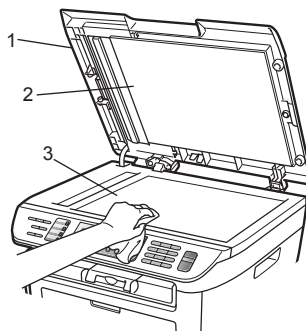

- 3 In the ADF unit, clean the white bar (1) and the scanner glass strip (2) underneath it with a soft lint-free cloth moistened with water.

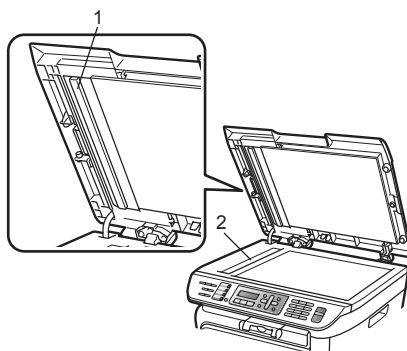

- 4 Plug the machine's power cord back into the electrical socket first, and reconnect all cables and telephone line cord. Turn on the machine.



Note

In addition to cleaning the scanner glass and glass strip with a soft lint-free cloth moistened with water, run your finger tip over the glass to see if you can feel anything on it. If you feel dirt or debris, clean the glass again concentrating on that area. You may need to repeat the cleaning process three or four times. To test, make a copy after each cleaning.

Cleaning the laser scanner window



WARNING

Use neutral detergents.

DO NOT use any flammable substances, spray or organic solvent/liquids containing alcohol/ammonia to clean the inside or outside of the machine. Doing this may cause a fire or electrical shock. For more information see Important safety instructions on page 102 (for EU), page 104 (for USA and Canada), page 109 (for Australia) or page 111 (for other countries) according to your country.




CAUTION

DO NOT touch the laser scanner window with your fingers.

- 1 Before you clean the inside of the machine, turn off the machine. Unplug the telephone line cord first, and then unplug the power cord from the electrical socket.
- 2 Open the front cover and slowly take out the drum unit and toner cartridge assembly.




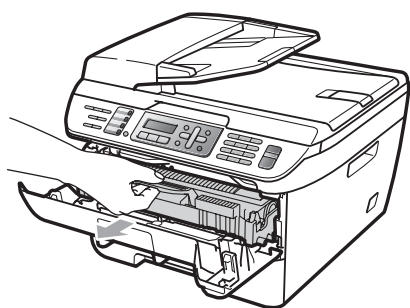


! WARNING




HOT SURFACE

After you have just used the machine, some internal parts of the machine will be extremely hot. To prevent injury, when you open the front or back cover (back output tray) of the machine, DO NOT touch the shaded parts shown in the illustration.

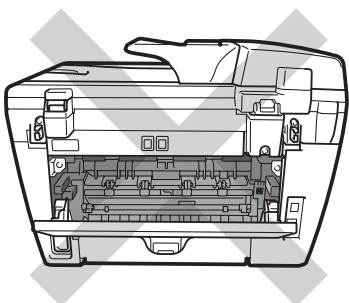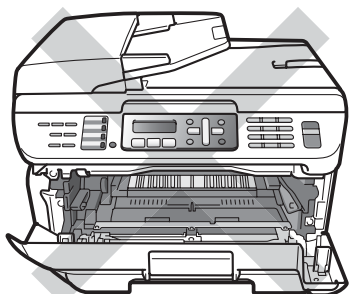



! CAUTION

To prevent damage to the machine caused by static electricity, DO NOT touch the electrodes shown in the illustration.

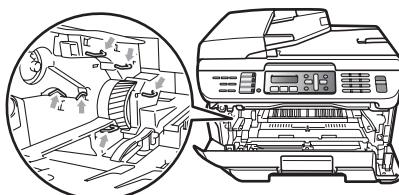


We recommend that you place the drum unit on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.

- 3 Wipe the laser scanner window by wiping it with a clean soft, dry lint-free cloth.

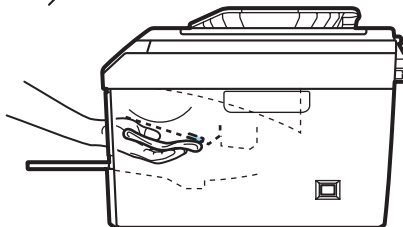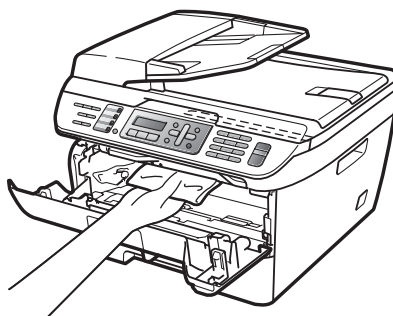

- 4 Put the drum unit and toner cartridge assembly back in the machine.

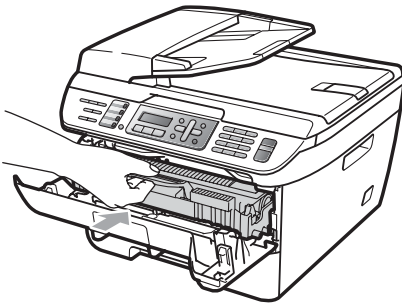


- 5 Close the front cover.
- 6 Plug the machine's power cord back into the electrical socket first, and then plug in the telephone line cord. Turn on the machine.


Cleaning the corona wire

If you have print quality problems, clean the corona wire as follows:

- 1 Turn off the machine. Unplug the telephone line cord first, disconnect all cables, and then unplug the power cord from the electrical socket.
- 2 Open the front cover.

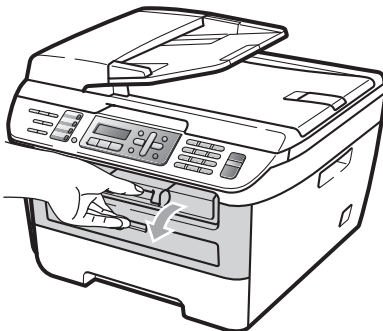

- 3 Slowly take out the drum unit and toner cartridge assembly.

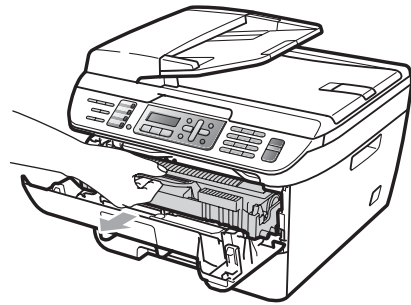


! CAUTION


We recommend that you place the drum unit and toner cartridge assembly on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.

Handle the toner cartridge carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.

To prevent damage to the machine caused by static electricity, DO NOT touch the electrodes shown in the illustration.

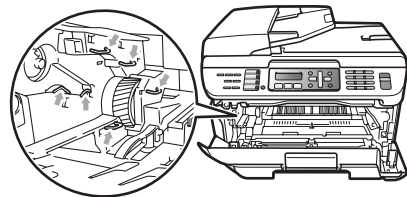


- 4 Clean the corona wire inside the drum unit by gently sliding the blue tab from right to left and left to right several times.

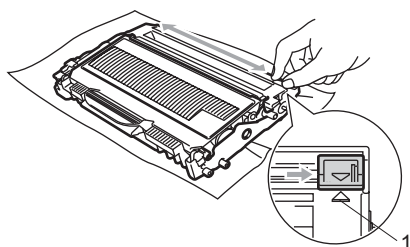

! CAUTION

Be sure to return the blue tab to the home position (▲) (1). If you do not, printed pages may have a vertical stripe.


- 5 Put the drum unit and toner cartridge assembly back in the machine.

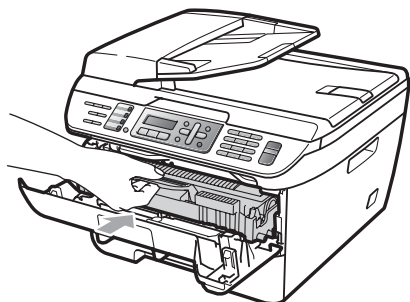

- 6 Close the front cover.
- 7 Plug the machine's power cord back into the electrical socket first, and then reconnect all cables and telephone line cord. Turn on the machine.

! CAUTION


To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations below.

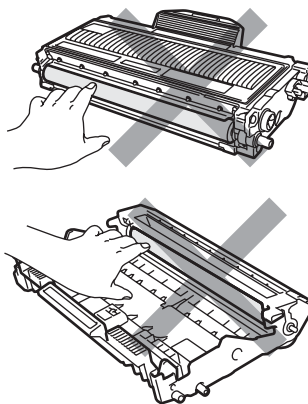


Cleaning the drum unit

If you have print quality problems, clean the drum unit as follows.

- 1 Turn off the machine. Unplug the telephone line cord first, and then unplug the power cord from the electrical socket.
- 2 Open the front cover.

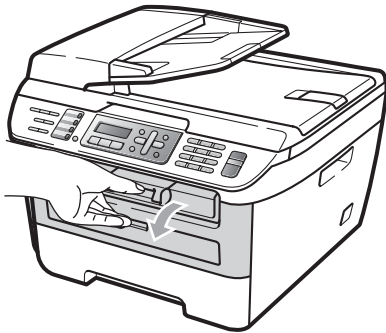


- 3 Slowly take out the drum unit and toner cartridge assembly.

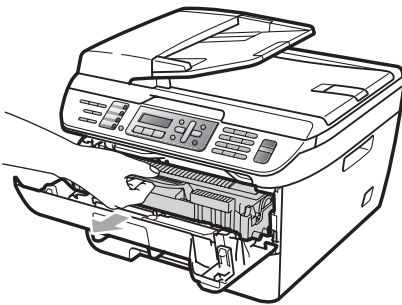

! CAUTION

We recommend that you put the drum unit and toner cartridge assembly on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.

To prevent damage to the machine caused by static electricity, DO NOT touch the electrodes shown in the illustration.

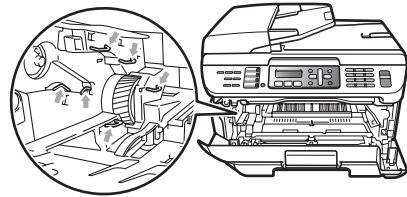


- 4 Push down the green lock lever and take the toner cartridge out of the drum unit.


! CAUTION

Handle the toner cartridge carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.


To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations below.

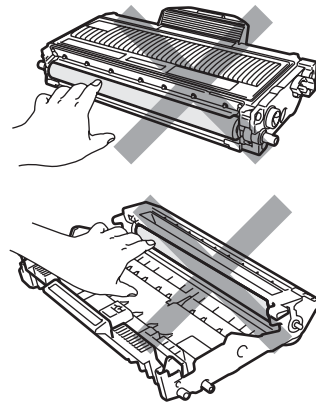


- 5 Put the print sample in front of the drum unit, and find the exact position of the poor print.

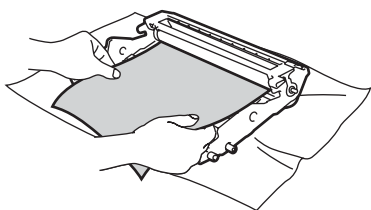


- 6 Turn the drum unit gear by hand while looking at the surface of the OPC drum (1).

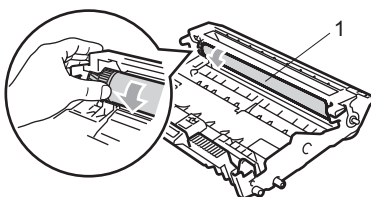


- 7 When you have found the mark on the drum that matches the print sample, wipe the surface of the OPC drum with a dry cotton swab until the dust or glue on the surface comes off.

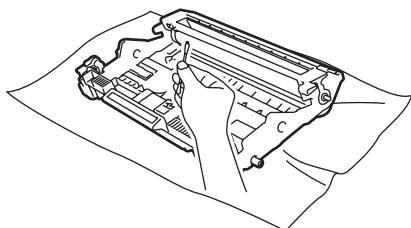

- 8 Put the toner cartridge back into the drum unit until you hear it lock into place. If you put the cartridge in correctly, the green lock lever will lift automatically.

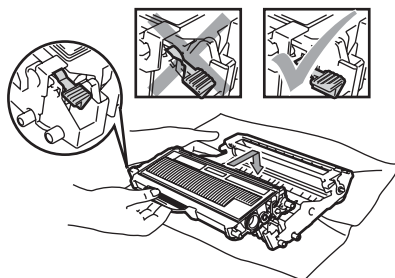

- 9 Put the drum unit and toner cartridge assembly back in the machine.

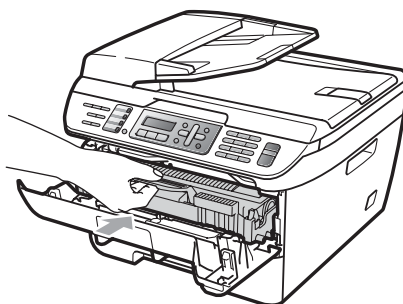

- 10 Close the front cover.

- 11 Plug the machine's power cord back into the electrical socket first, and then reconnect all cables and telephone line cord. Turn on the machine.

! CAUTION



The drum is photosensitive so DO NOT touch it with your fingers.

DO NOT clean the surface of the photosensitive drum with a sharp object.

DO NOT use excessive force when cleaning the drum unit.

Replacing the consumable items

You will need to replace the consumable items when the machine indicates that the life of the consumable is over.

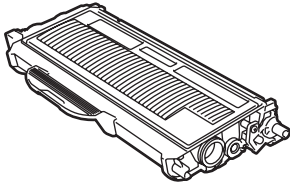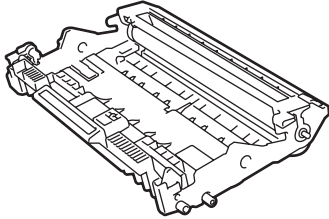Toner cartridge	Drum unit
	
Print Cartridge SP 1200E (for Europe) Print Cartridge SP 1200A (USA and Canada) Print Cartridge SP 1200S (for Asia)	Drum Unit SP 1200 (Approx. 12,000 pages A4/Letter pages)

¹ Approx. cartridge yield is declared in accordance with ISO/IEC 19752.



Note

- Discard used consumable items according to local regulations. (See *Recycling information in accordance with the WEEE (2002/96/EC) and Battery (2006/66/EC) Directives* on page 101.) If you have questions, call your local waste disposal office. Be sure to reseal the consumable items tightly so that the material inside does not spill.
- We recommend placing used consumable items on a sheet of paper to prevent accidentally spilling or scattering the material inside.
- If you use paper that is not a direct equivalent for the recommended paper, the life of consumable items and machine parts may be reduced.

Replacing a toner cartridge

The toner cartridges can print approximately 2,600 pages¹. Actual page count will vary depending on your average type of document (i.e., standard letter, detailed graphics). When a toner cartridge is running low, the LCD shows **Toner Low**.

¹ Approx. cartridge yield is declared in accordance with ISO/IEC 19752.



Note

It is a good idea to keep a new toner cartridge ready for use when you see the **Toner Low** warning.





WARNING



HOT SURFACE


After you have just used the machine, some internal parts of the machine will be extremely hot. To prevent injury, when you open the front or back cover (back output tray) of the machine, **DO NOT** touch the shaded parts shown in the illustration.

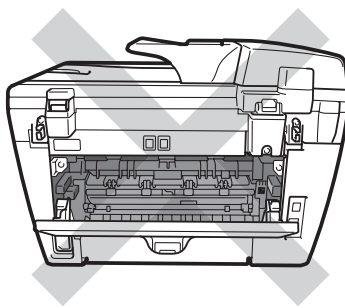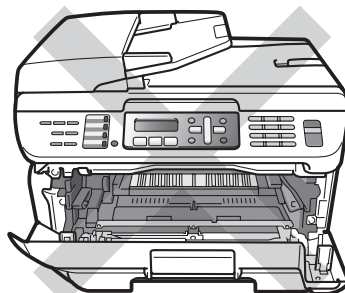

- 1 Open the front cover.




- 2 Slowly take out the drum unit and toner cartridge assembly.

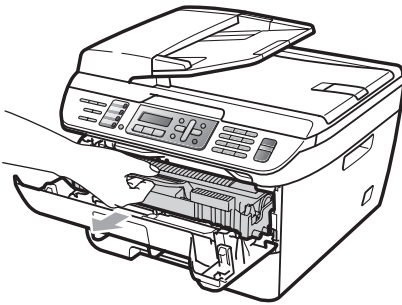

! CAUTION

We recommend that you put the drum unit and toner cartridge assembly on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.

To prevent damage to the machine caused by static electricity, DO NOT touch the electrodes shown in the illustration.

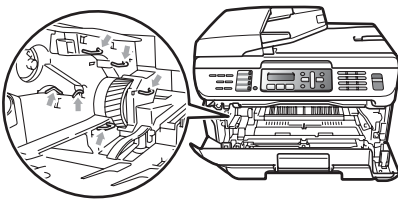

- 3 Push down the green lock lever and take the used toner cartridge out of the drum unit.


! WARNING

DO NOT put a toner cartridge into a fire. It could explode, resulting in injuries.

! CAUTION

Handle the toner cartridge carefully. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.

To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

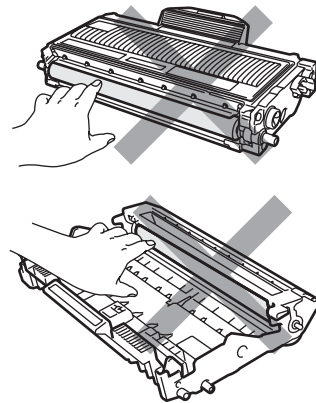

This machines are designed to work with toner of a particular specification and will work to a level of optimum performance when used with genuine toner cartridges (SP 1200E (for Europe), SP1200A (for USA and Canada), SP 1200S (for Asia)). We cannot guarantee this optimum performance if toner or toner cartridges of other specifications are used. We does not therefore recommend the use of cartridges other than genuine cartridges with this machine, or the refilling of empty cartridges with toner from other sources. If damage is caused to the drum unit or other parts of this machine as a result of the use of toner or toner cartridges other than genuine products due to the incompatibility or lack of suitability of those products with this machine, any repairs required as a result may not be covered by the warranty.


Unpack the toner cartridge just before you put it in the machine. If a toner cartridge is left unpacked for a long time, the toner life will be shortened.




Note

Be sure to seal up the used toner cartridge tightly in a suitable bag so that toner powder does not spill out of the cartridge.


- 4 Unpack the new toner cartridge. Hold the cartridge level with both hands and gently rock it from side to side five or six times to spread the toner evenly inside the cartridge.

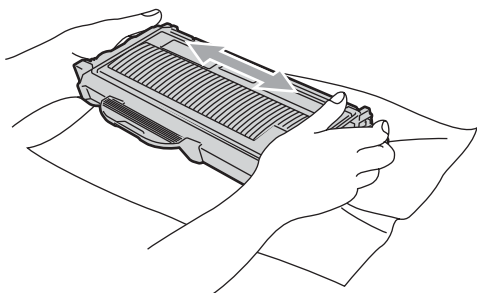

- 5 Pull off the protective cover.

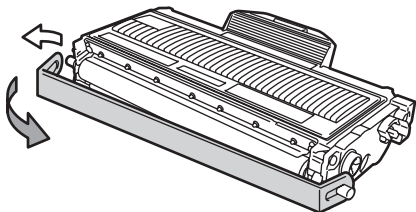


- 6 Put the new toner cartridge firmly into the drum unit until you hear it lock into place. If you put it in correctly, the lock lever will lift automatically.

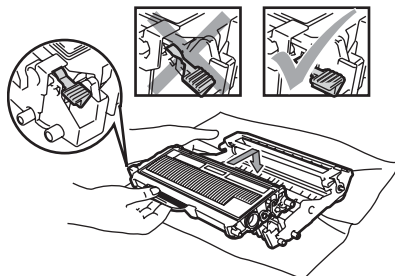

! CAUTION

Make sure that you put in the toner cartridge correctly or it may separate from the drum unit.


- 7 Clean the corona wire of the drum unit by gently sliding the blue tab from right to left and left to right several times.

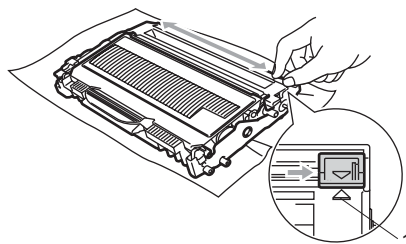

! CAUTION

Be sure to return the blue tab to the home position (▲) (1). If you do not, printed pages may have a vertical stripe.

- 8 Put the drum unit and toner cartridge assembly back in the machine.

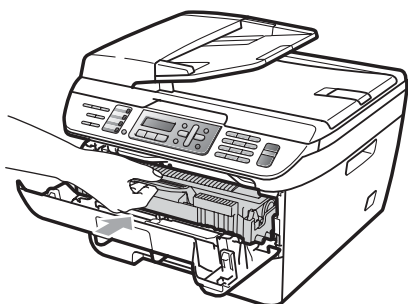

- 9 Close the front cover.

! CAUTION

DO NOT turn off the machine or open the front cover until the LCD returns to the standby state.

Replacing the drum unit

The machine uses a drum unit to create print images on paper. If the LCD shows **Drum End Soon**, the drum unit is near the end of its life and it is time to buy a new one. Even if the LCD shows **Drum End Soon**, you may be able to continue printing without having to replace the drum unit for a while. However, if there is a noticeable deterioration in the output print quality (even before **Drum End Soon** appears), then the drum unit should be replaced. You should clean the machine when you replace the drum unit. (See *Cleaning the laser scanner window* on page 139.)

! CAUTION

While removing the drum unit, handle it carefully because it may contain toner. If toner scatters on your hands or clothes, wipe or wash it off with cold water at once.



Note

The drum unit is a consumable item, and it is necessary to replace it periodically. There are many factors that determine the actual drum life, such as temperature, humidity, type of paper and how much toner you use for the number of pages per print job. The estimated drum life is approximately 12,000 pages¹. The actual number of pages your drum will print may be significantly less than this estimate. Because we have no control over the many factors that determine the actual drum life, we cannot guarantee a minimum number of pages that will be printed by your drum.

¹ Drum yield is approximate, and may vary by type of use.





WARNING



HOT SURFACE

After you have just used the machine, some internal parts of the machine will be extremely hot. To prevent injury, when you open the front or back cover (back output tray) of the machine, DO NOT touch the shaded parts shown in the illustration.

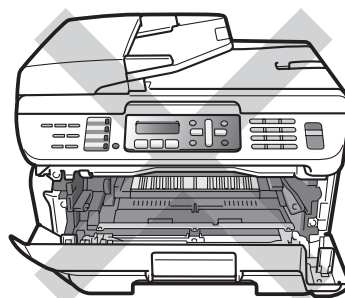


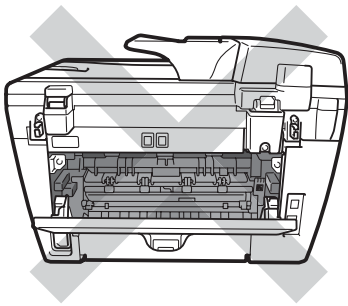

- 1 Open the front cover.




- 2 Slowly take out the drum unit and toner cartridge assembly.

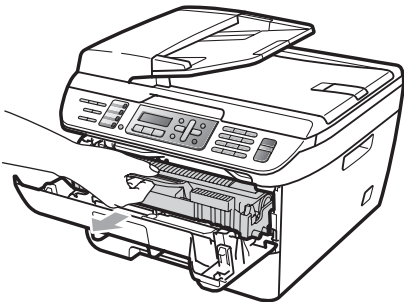

! CAUTION

We recommend that you put the drum unit and toner cartridge assembly on a clean, flat surface with a sheet of disposable paper or cloth underneath it in case you accidentally spill or scatter toner.



To prevent damage to the machine caused by static electricity, DO NOT touch the electrodes shown in the illustration.

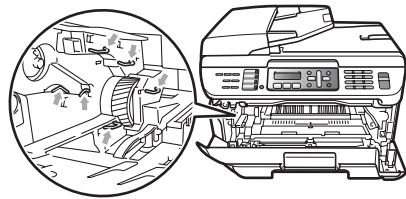

- 3 Push down the green lock lever and take the toner cartridge out of the drum unit.

! CAUTION

To avoid print quality problems, DO NOT touch the shaded parts shown in the illustrations.

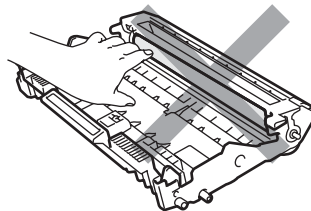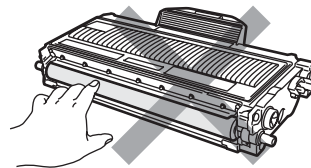

Wait to unpack a new drum unit until immediately before you put it in the machine. Exposure to direct sunlight or room light may damage the drum unit.



Note


Be sure to seal up the used drum unit tightly in a bag so that toner powder does not spill out of the unit.

4

Unpack the new drum unit.

5

Put the toner cartridge firmly into the new drum unit until you hear it lock into place. If you put the cartridge in correctly, the green lock lever will lift automatically.

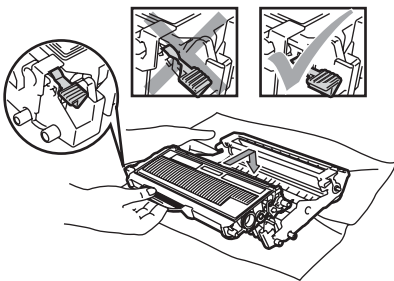


CAUTION

Make sure that you put in the toner cartridge correctly or it may separate from the drum unit.

6

Clean the corona wire of the drum unit by gently sliding the blue tab from right to left and left to right several times.

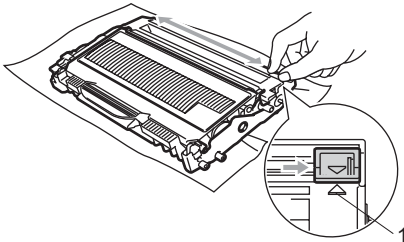


CAUTION

Be sure to return the blue tab to the home position (▲) (1). If you do not, printed pages may have a vertical stripe.

7

Put the new drum unit and toner cartridge assembly in the machine.

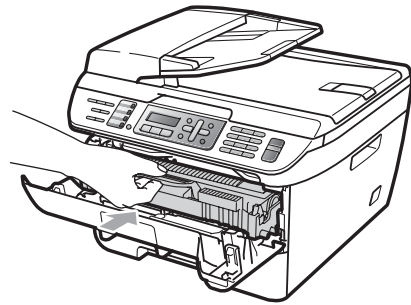

8

Press **C/↶ Clear/Back**.

To confirm you are installing a new drum, press 1.

9

When the LCD shows *Accepted*, close the front cover.

Machine information

Checking the serial number

You can see the machine's serial number on the LCD.

- 1 Press  **Menu**, **5**, **1**.
- 2 Press  **Stop/Exit**.

Checking the page counters

You can see the machine's page counters for copies, printed pages, reports and lists, faxes or a summary total.

- 1 Press  **Menu**, **5**, **2**.
- 2 Press **▲** or **▼** to choose **Total**, **Fax/List**, **Copy** or **Print**.
You can see the machine's page count.
- 3 Press  **Stop/Exit**.

Checking the Drum life

You can see the machine's drum life on the LCD.

- 1 Press  **Menu**, **5**, **3**.
- 2 Press **OK**.
You can see the remaining percentage of drum life.
- 3 Press  **Stop/Exit**.

Packing and shipping the machine


CAUTION

Make sure that the machine has fully cooled down by leaving it disconnected from the power for at least 30 minutes before packing.

When you transport the machine, use the packing materials that came with your machine. If you do not pack the machine correctly, you could void your warranty.

- 1 Turn off the machine.
- 2 Unplug the machine from the telephone wall socket.
- 3 Unplug all the cables and AC power cord from the machine.
- 4 Open the front cover.
- 5 Remove the drum unit and toner cartridge assembly. Leave the toner cartridge installed in the drum unit.
- 6 Place the drum unit and toner cartridge assembly into the plastic bag and seal the bag.
- 7 Close the front cover.
- 8 Wrap the machine in the plastic bag and place it in the original carton with the original packing material.

- 9 Pack the drum unit and toner cartridge assembly, AC cord and printed materials in the original carton as shown below:

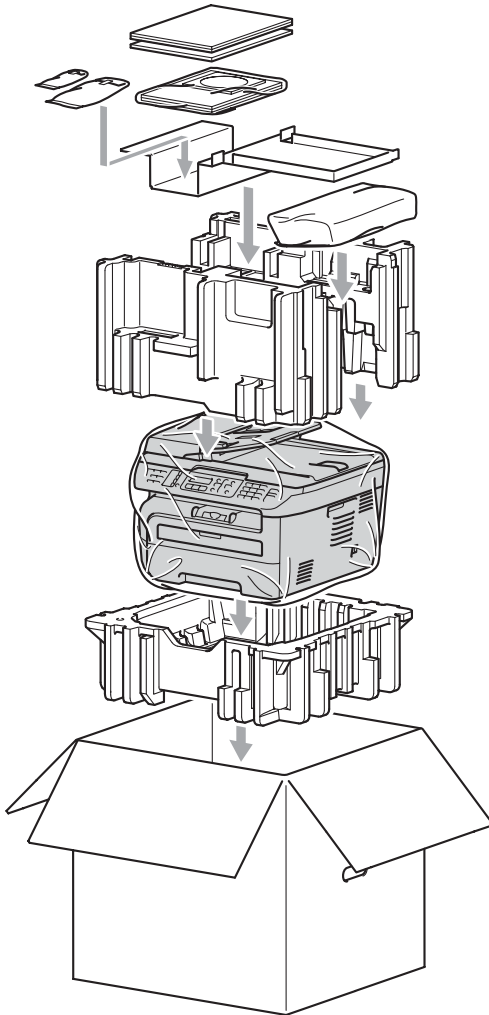

- 10 Close the carton and tape it shut.

On-screen programming

Your machine has been designed to be easy to use. The LCD provides on-screen programming using the menu keys.

We have created step by step on-screen instructions to help you program your machine. Simply follow the steps as they guide you through the menu selections and programming options.

Menu table

You can program your machine by using the *Menu table* on page 156. These pages list the menu selections and options.

Press  **Menu** followed by the menu numbers to program your machine.

For example, to set *Beeper* volume to *Low*:

- 1 Press  **Menu**, **1**, **4**, **2**.
- 2 Press  or  to choose *Low*.
- 3 Press **OK**.

Memory storage

Your menu settings are stored permanently, and in the event of a power failure will *not* be lost. Temporary settings (for example, Contrast, Overseas Mode) *will* be lost. The SP 1200SF can store the date and time up to 4 days.

Menu keys

(For EU)	(For US/Canada/ASIA/Oceania)
	
	
	
	
	
or	
	
	
or	
	
	
	
	

Access the menu.

Go to the next menu level.

Accept an option.

Exit the menu by pressing repeatedly.

Go back to the previous menu level.

Scroll through the current menu level.

Go back to the previous menu level or forward to the next menu level.


Exit the menu.

How to access the menu mode

- 1 Press  **Menu**.
 - 2 Choose an option.
 - Press **1** for General Setup menu.
 - Press **2** for Fax menu.
 - Press **3** for Copy menu.
 - Press **4** for Printer menu.
 - Press **5** for Machine Info. menu.
 - Press **9** for Service menu.¹
 - Press **0** for Initial Setup.
- ¹ This will appear only when the LCD shows an error message.
- You can also scroll through each menu level by pressing **▲** or **▼** for the direction you want.
- 3 Press **OK** when the option you want appears on the LCD.
The LCD will then show the next menu level.
 - 4 Press **▲** or **▼** to scroll to your next menu selection.
 - 5 Press **OK**.
When you have finished setting an option, the LCD will show *Accepted*.
 - 6 Press  **Stop/Exit** to exit Menu mode.

Menu table

The factory settings are shown in Bold with an asterisk.

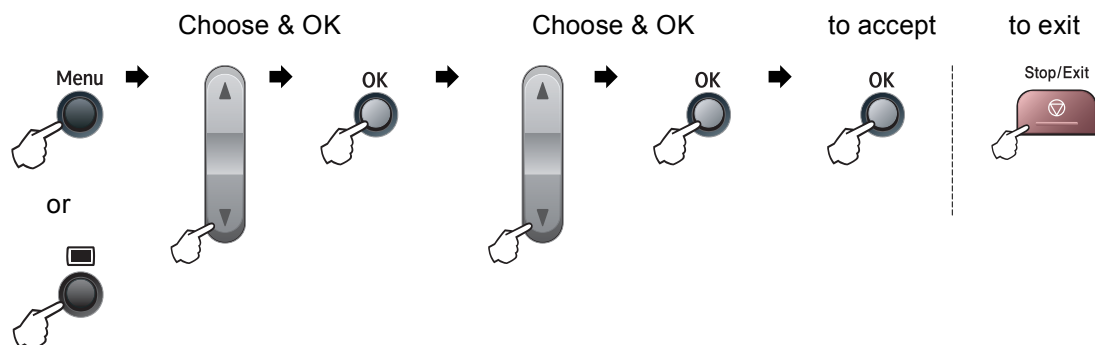

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1.General Setup	1.Mode Timer	—	0 Sec 30 Secs 1 Min 2 Mins* 5 Mins Off	Sets the time to return to Fax mode and the time the machine will change from individual user to public user when using Secure Function Lock.	23
	2.Paper Type	—	Thin Plain* Thick Thicker Transparency Recycled Paper	Sets the type of paper in the paper tray.	23
	3.Paper Size	—	A4*¹ Letter*¹ Executive Legal*² A5 A6 B5 B6 Folio*²	Sets the size of the paper in the paper tray.	23



The factory settings are shown in Bold with an asterisk.

¹ Factory setting for paper size A4 (for EU and Asia/Oceania) Letter (for USA and Canada)

² Legal and Folio (for USA, Canada and Asia only)

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1. General Setup (continued)	4. Volume	1. Ring	Off Low Med* High	Adjusts the ring volume.	24
		2. Beeper	Off Low Med* High	Adjusts the volume level of the beeper.	24
		3. Speaker	Off Low Med* High	Adjusts the speaker volume.	24
	5. Auto Daylight	—	On* (only for EU) Off* (for USA/Canada/ Asia and Oceania)	Changes for Daylight Savings Time automatically.	25
	6. Ecology	1. Toner Save	On Off*	Increases the page yield of the toner cartridge.	25
		2. Sleep Time	(00-99) 05Min*	Conserves power.	25
	7. LCD Contrast	—	▼ -■■■■■+ ▲ ▼ -■■■□+ ▲ ▼ -■■□□+ ▲* ▼ -■□□□+ ▲ ▼ -■■□□+ ▲	Adjusts the contrast of the LCD.	25
	8. Security	1. Memory Security	—	Prohibits most operations except receiving faxes.	27
		2. Setting Lock	—	Stops unauthorized users from changing the machine's current settings.	28
2. Fax	1. Setup Receive (In Fax mode only)	1. Ring Delay	00 - 08 02 - 10 (for Asia/Oceania) (02 for EU and Asia/ Oceania) (04 for USA and Canada)	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	41
 The factory settings are shown in Bold with an asterisk.					

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2. Fax (continued)	1.Setup Receive (continued)	2.F/T Ring Time	70 Secs 40 Secs 30 Secs* 20 Secs (20 Sec for USA and Canada)	Sets the pseudo/double-ring time in Fax/Tel mode.	41
		3.Fax Detect (for EU and Asia/Oceania) 3.Easy Receive (USA and Canada only)	On* Off	Receives fax messages without pressing  Start.	41
		4.Remote Codes	On (*51, #51) Off*	Allows you to answer all calls at an extension or external phone and use codes to turn the machine on or off. You can personalize these codes.	62
		5.Auto Reduction	On* Off	Cuts the size of incoming faxes.	42
		6.Memory Receive (for EU and Asia/Oceania)	On* Off	Automatically stores any incoming faxes in its memory if it runs out of paper.	43
		7.Print Density (for EU and Asia/Oceania) 6.Print Density (USA and Canada only)	▼ -□□□■+ ▲ ▼ -□□■□+ ▲ ▼ -□□■□+ ▲* ▼ -□■□□+ ▲ ▼ -■□□□+ ▲	Makes printouts darker or lighter.	42
		8.Polling RX (for EU and Asia/Oceania)	Standard* Secure Timer	Sets up your machine to poll another fax machine.	76
		7.Polling RX (USA and Canada only)	—		
		9.Fax Rx Stamp (for EU and Asia/Oceania) 8.Fax Rx Stamp (USA and Canada only)	On Off*	Prints the received time and date on the top of the received faxes.	42

 The factory settings are shown in Bold with an asterisk.

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2.Fax (continued)	2.Setup Send (In Fax mode only)	1.Contrast	Auto* Light Dark	Changes the lightness or darkness of faxes you send.	35
		2.Fax Resolution	Standard* Fine S.Fine Photo	Sets the default resolution for outgoing faxes.	36
		3.Delayed Fax	—	Sets the time of day in 24 hour format that the delayed faxes will be sent.	37
		4.Batch TX	On Off*	Combines delayed faxes going to the same fax number at the same time of day into one transmission.	37
		5.Real Time TX	Next Fax:On Next Fax:Off On Off*	Sends a fax without using the memory.	36
		6.Polled TX (for EU and Asia/ Oceania)	Standard* Secure	Sets up your machine with a document to be retrieved by another fax machine.	77
		6.Polled TX (for USA and Canada)	—		
		7.Coverpg Setup	Next Fax:On Next Fax:Off On Off* Print Sample	Automatically sends a cover page you have programmed.	34
		8.Coverpage Note (for EU and Asia/ Oceania)	—	Sets up your own comments for the fax cover page.	34
		8.Coverpage Msg (for USA and Canada)			
		9.Overseas Mode	On Off*	If you are having difficulty sending faxes overseas, set this to on.	37
	3.Set Quick Dial	1.One Touch Dial	—	Stores up to 8 One Touch Dial numbers, so you can dial by pressing one key (and  Start).	65



The factory settings are shown in Bold with an asterisk.

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2.Fax (continued)	3.Set Quick Dial (continued)	2.Speed Dial	—	Stores up to 200 Speed Dial numbers, so you can dial by pressing only a few keys (and  Start).	65
		3.Setup Groups	—	Sets up to 8 Group numbers for Broadcasting.	66
	4.Report Setting	1.XMIT Report (for EU) 1.Transmission (for USA, Canada and Asia/Oceania)	On On+Image Off* Off+Image	Sets initial setup for Transmission Verification Report.	80
		2.Journal Period	Off Every 50 Faxes* Every 6 Hours Every 12 Hours Every 24 Hours Every 2 Days Every 7 Days	Sets the interval for automatic printing of the Fax Journal.	80
	5.Remote Fax Opt	1.Forward/Store (for EU and Asia/Oceania) (Backup Print)	Off* Fax Forward Fax Storage PC Fax Receive	Sets the machine to forward fax messages, to call your pager, to store incoming faxes in the memory (so you can retrieve them while you are away from your machine), or to send faxes to your PC. If you chose Fax Forward or PC Fax Receive, you can turn on the safety feature Backup Print.	69
		1.Forward/Page/Store (for USA and Canada) (Backup Print)	Off* Fax Forward Paging Fax Storage PC Fax Receive		
		2.Remote Access	---*	Sets your own code for Remote Retrieval.	73
		3.Print Document (for EU and Asia/Oceania) 3.Print Fax (for USA and Canada)	—	Prints incoming faxes stored in the memory.	43



The factory settings are shown in Bold with an asterisk.

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2.Fax (continued)	6.Dial Restrict.	1.Dial Pad	Off* Enter # twice On	You can set the machine to restrict dialling when using the dial pad.	29
		2.One Touch Dial	Off* Enter # twice On	You can set the machine to restrict the dialling of One Touch numbers.	29
		3.Speed Dial	Off* Enter # twice On	You can set the machine to restrict the dialling of Speed Dial numbers.	29
	7.Remaining Jobs	—	—	You can check which jobs are in the memory and lets you cancel scheduled jobs.	38
	0.Miscellaneous	1.Compatibility	High Normal* Basic (for VoIP)	Adjusts the equalization for transmission difficulties. VoIP service providers offer fax support using various standards. If you regularly experience fax transmission errors, choose Basic (for VoIP).	126
		2.BT Call Sign (U.K. only)	On Off*	Used with BT Call Sign.	46
		2.Distinctive (for USA, Canada and Asia/Oceania)	Off* Set (On)	Uses the Telephone Company's Distinctive Ring subscriber service to register the ring pattern with the machine.	
		3.Caller ID (for EU)	On* Off Display ID Print Report	View or print a list of the last 30 Caller IDs stored in the memory.	44
		3.Caller ID (for USA, Canada and Asia/Oceania)	Display#* Print Report		



The factory settings are shown in Bold with an asterisk.

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Copy	1.Quality	—	Auto* Text Photo	You can choose the Copy resolution for your type of document.	88
	2.Contrast	—	▼ -□□□■+ ▲ ▼ -□□■□+ ▲ ▼ -□□■□+ ▲* ▼ -□■□□+ ▲ ▼ -■□□□+ ▲	Adjusts the contrast for copies.	89
4.Printer	1.Emulation	—	Auto* HP LaserJet BR-Script 3	Chooses the emulation mode.	See Software User's Guide on the CD-ROM.
	2.Print Options	1.Internal Font	—	Prints a list of the machine's internal fonts.	
		2.Configuration	—	Prints a list of the machine's printer settings.	
		3.Test Print	—	Prints a test page.	
	3.Reset Printer	—	—	Restores the printer settings to the original factory default settings.	
5.Machine Info.	1.Serial No.	—	—	You can check the serial number of your machine.	152
	2.Page Counter	—	Total Fax/List Copy Print	You can check the number of total pages the machine has printed during its life.	152
	3.Drum Life	—	—	You can check the percentage of Drum life that remains available.	152



The factory settings are shown in Bold with an asterisk.

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
0.Initial Setup (for EU)	1.Receive Mode	—	Fax Only* Fax/Tel External TAD Manual	You can choose the receive mode that best suits your needs.	39
	2.Date&Time	—	—	Puts the date and time on the LCD and in headings of faxes you send.	See Quick Setup Guide.
	3.Station ID	—	Fax: Tel: Name:	Program your name and fax number to appear on each page you fax.	
	4.Tone/Pulse	—	Tone* Pulse	Selects the dialing mode.	
	5.Dial Tone	—	Detection No Detection*	You can shorten the dialling tone detect pause.	126
	6.Phone Line Set	—	Normal* ISDN PBX	Select the phone line type.	45
	7. Country	—	UK/ Deutschland/ France/ Italia/ España/ Nederland/ België/ Belgique/ Portugal/ Switzerland/ Sverige/ Danmark/ Norge/ Suomi/ Magyarország/ Türkiye/ South Africa/ Israel/ General 1/ General 2	Select the country. ¹ General2 is for future modification. (same to General1 at present)	See Quick Setup Guide.
	0.Local Language	—	English/ Français/ Deutsch/ Italiano/ Español/ Português/ Nederlands/ Dansk/ Norsk/ Svenska/ Suomi/ POLSKI/ Magyar/ Cesky	Select the language.	



The factory settings are shown in Bold with an asterisk.

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
0. Initial Setup (for USA, Canada and Asia)	1. Receive Mode	—	Fax Only* Fax/Tel External TAD Manual	You can choose the receive mode that best suits your needs.	39
	2. Date&Time	—	—	Puts the date and time on the LCD and in headings of faxes you send.	See Quick Setup Guide.
	3. Station ID	—	Fax: Tel: Name:	Program your name and fax number to appear on each page you fax.	
	4. Tone/Pulse (Not available in USA, Singapore and New Zealand)	—	Tone* Pulse	Selects the dialing mode.	
	5. Dial Tone	—	Detection No Detection*	You can shorten the dialling tone detect pause.	126
	6. Dial Prefix	—	—	Sets a prefix number that will always be added before the fax number every time you dial.	26
	7. Country	—	(For USA and Canada) United States/ Canada (For Asia) Asia/ Singapore/ Others (For Oceania) Australia/ New Zealand	Select the country.	See Quick Setup Guide.
	0. Local Language (Not available in Oceania)	—	(For USA and Canada) English/ Français/ Español/ Português (For Asia) English/ Español/ Português	Allows you to change the LCD language for your country.	



The factory settings are shown in Bold with an asterisk.

Entering text

When setting certain menu selections, such as the Station ID, you will need to type text characters. The dial pad keys have letters printed on them. The keys: **0**, **#** and ***** do not have printed letters because they are used for special characters.

Press the appropriate dial pad key the number of times shown in this reference table to access the character you want.

Press Key	one time	two times	three times	four times	five times	six times	seven times	eight times	nine times
1	@	.	/	1	@	.	/	1	@
2	a	b	c	A	B	C	2	a	b
3	d	e	f	D	E	F	3	d	e
4	g	h	i	G	H	I	4	g	h
5	j	k	l	J	K	L	5	j	k
6	m	n	o	M	N	O	6	m	n
7	p	q	r	s	P	Q	R	S	7
8	t	u	v	T	U	V	8	t	u
9	w	x	y	z	W	X	Y	Z	9

For menu selections that do not allow lower case character selection, please use this reference table:

Press Key	one time	two times	three times	four times	five times
2	A	B	C	2	A
3	D	E	F	3	D
4	G	H	I	4	G
5	J	K	L	5	J
6	M	N	O	6	M
7	P	Q	R	7	P
8	T	U	V	8	T
9	W	X	Y	9	W

Inserting spaces

To enter a space in a fax number, press **►** once between numbers. To enter a space in a name, press **►** twice between characters.

Making corrections

If you entered a letter incorrectly and want to change it, press **◄** to move the cursor to the incorrect character, and then press **C/↶ Clear/Back**.

Repeating letters

To enter a character on the same key as the previous character, press ► to move the cursor right before pressing the key again.

Special characters and symbols

Press *, # or 0, then press ◀ or ▶ to move the cursor to the symbol or character you want.

Press **OK** to choose it. The symbols and characters below will appear depending on your menu selection.


Press *	for	(space) ! " # \$ % & ' () * + , - . / €
Press #	for	: ; < = > ? @ [] ^ _ ¥ ~ ' { }
Press 0	for	Ä Æ Ö Ü À Ç È É 0

General

Printer Type	Laser
Print Method	Electrophotography by semiconductor laser beam scanning
Memory Capacity	32 MB
LCD (liquid crystal display)	16 characters × 2 lines
Power Source	220 - 240V AC 50/60Hz (For EU and Asia/Oceania) 110 - 120V AC 50/60Hz (For USA and Canada)
Power Consumption	Peak: 1056 W Copying: Average 320 W ¹ Sleep: Average 11 W Standby: Average 75 W

¹ When making a copy from one sheet

Dimensions

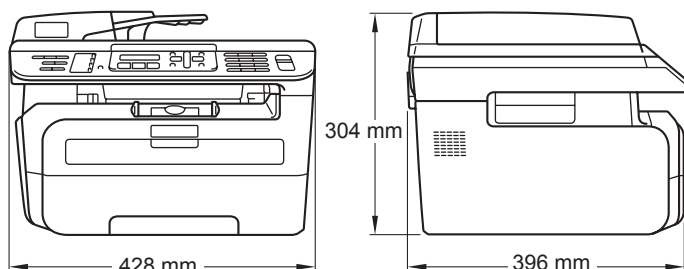

Weight	Without Drum/Toner Unit: 10 kg
---------------	--------------------------------

Noise level	Sound power
	Operating (Copying): LWAd = 6.2 Bell
	Standby: LWAd = 4.4 Bell
	Sound pressure
	Operating (Copying): LpAm = 53 dBA
	Standby: LpAm = 32 dBA

Temperature	Operating: 10 to 32.5°C (50°F to 90.5°F)
--------------------	--

Storage: 5 to 35°C (41°F to 95°F)

Humidity	Operating: 20 to 80% (without condensation)
	Storage: 10 to 90% (without condensation)

ADF (automatic document feeder)

Up to 35 pages (Staggered) (80 g/m²)

Recommended Environment for Best Results:

Temperature: 20 to 30°C (68°F to 86°F)

Humidity: 50% - 70%

Paper: Xerox Premier 80 g/m² or Xerox Business
80 g/m²

Xerox 4200 (20 lb/Letter)

Paper Tray

250 Sheets (80 g/m²) (20 lb)

Print media

Paper Input

Paper Tray

- Paper Type: Plain paper, Transparencies ¹ or Recycled paper
- Paper Size: A4, Letter, Executive, A5, A6, B5 and B6, (Legal and Folio for USA, Canada and Asia) ²
- Paper Weight: 60 to 105 g/m² (16 to 28 lb)
- Maximum paper tray capacity: Up to 250 sheets of 80 g/m² (20 lb) plain paper

Manual Feed Slot

- Paper Type: Plain paper, Recycled paper, Transparencies, Bond paper, Envelopes or Labels
- Paper Size: Width: 76.2 to 220 mm (3.0 to 8.66 in.)
Length: 116 to 406.4 mm (4.57 to 16 in.)
- Paper Weight: 60 to 163 g/m² (16 to 43 lb)
- Maximum manual feed slot capacity: One sheet at a time

¹ For transparencies or labels, we recommend removing printed pages from the output paper tray immediately after they exit the machine to avoid the possibility of smudging.

² Legal paper cannot be stacked on the output paper tray.

Paper Output Up to 100 sheets (with 80 g/m² (20 lb) paper, A4/LT size)

Fax

Compatibility	ITU-T Group 3
Coding System	MH/MR/MMR/JBIG
Modem Speed	Automatic Fallback: 33,600 bps
Document Size	ADF Width: 148 to 215.9 mm (5.8 to 8.5 in.) ADF Length: 148 to 355.6 mm (5.8 to 14 in.) Scanner Glass Width: Max. 215.9 mm (8.5 in.) Scanner Glass Length: Max. 297 mm (11.7 in.)
Scanning Width	Max. 208 mm (8.2 in.)
Printing Width	Max. 208 mm (8.2 in.)
Greyscale	256 levels
Polling Types	Standard, Secure, Timer, Sequential
Contrast Control	Automatic/Light/Dark (manual setting)
Resolution	Horizontal: 8 dot/mm (203 dot/inch) Vertical ■ Standard: 3.85 line/mm (98 line/in.) ■ Fine: 7.7 line/mm (196 line/in.) ■ Photo: 7.7 line/mm (196 line/in.) ■ Superfine: 15.4 line/mm (392 line/in.)
One Touch Dial	8 (4 × 2)
Speed Dial	200 stations
Groups	Up to 8
Broadcasting	258 stations
Automatic Redial	3 times at 5 minute intervals
Ring Delay	0, 1, 2, 3, 4, 5, 6, 7 or 8 rings (For UK, USA and Canada) 2, 3, 4, 5, 6, 7, 8, 9 or 10 (for Australia) 0, 1, 2, 3, 4, 5, 6, 7, 8, 9 or 10 (for some countries)
Communication Source	Public switched telephone network
Memory Transmission	Up to 600 ¹ /500 ² pages
Out of Paper Reception	Up to 600 ¹ /500 ² pages

¹ 'Pages' refers to the 'Standard Chart No. 1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

² 'Pages' refers to the 'ITU-T Test Chart #1' (a typical business letter, Standard resolution, MMR code). Specifications and printed materials are subject to change without prior notice.

Copy

Colour/Monochrome	Monochrome	
Document Size	ADF Width:	148 to 215.9 mm (5.8 to 8.5 in.)
	ADF Length:	148 to 355.6 mm (5.8 to 14 in.)
	Scanner Glass Width:	Max. 215.9 mm (8.5 in.)
	Scanner Glass Length:	Max. 297 mm (11.7 in.)
	Copy Width:	Max. 210 mm (8.26 in.)
Multiple Copies	Stacks or Sorts up to 99 pages	
Reduce/Enlarge	25% to 400% (in increments of 1%)	
Resolution	Up to 600 × 600 dpi	
First Copy Out Time	Less than 15 seconds ¹ (from READY mode)	

¹ The first copy out time may vary depending on scanner lamp warm up time.



Scan

Colour/Monochrome	Yes
TWAIN Compliant	Yes (Windows® 2000 Professional/XP/ XP Professional x64 Edition/Windows Vista®/Windows® 7)
WIA Compliant	Yes (Windows® XP/Windows Vista®/Windows® 7)
Colour Depth	24 bit colour
Resolution	Up to 19200 × 19200 dpi (interpolated) ¹ Up to 600 × 2400 dpi (optical) ¹ (From Scanner Glass) Up to 600 × 600 dpi (optical) ¹ (From ADF)
Document Size	ADF Width: 148.0 to 215.9 mm (5.8 to 8.5 in.) ADF Length: 148.0 to 355.6 mm (5.8 to 14 in.) Scanner Glass Width: Max. 215.9 mm (8.5 in.) Scanner Glass Length: Max. 297 mm (11.7 in.)
Scanning Width	Max. 210 mm (8.26 in.)
Greyscale	256 levels

¹ Maximum 1200 × 1200 dpi scanning with the WIA driver in Windows® XP/7/Windows Vista® (resolution up to 19200 × 19200 dpi can be chosen by using the Ricoh scanner utility)

Print

Emulations	PCL6, BR-Script3 (PostScript®3)
Printer Driver	Host-Based Driver for Windows® 2000 Professional/ XP/XP Professional x64 Edition/Windows Vista® BR-Script3 (PPD file) for Windows® 2000 Professional
Resolution	HQ1200 (2400 × 600 dpi), 600, 300 dpi
Print Speed	Up to 22 pages/minute (A4 size) ¹
First Print Out Time	Less than 10 seconds. (from the Ready state and the standard tray)

¹ The print speed may change depending on the type of document you print.

Interfaces

USB	Use a USB 2.0 interface cable that is no longer than 2.0 m. ¹ ²
------------	---

¹ Your machine has a Full-Speed USB 2.0 interface. The machine can also be connected to a computer that has a USB 1.1 interface.

² Third party USB ports are not supported.

Computer requirements

Minimum System Requirements and Supported PC Software Functions								
Computer Platform & Operating System Version		Supported PC Software Functions	PC Interface	Processor Minimum Speed	Minimum RAM	Recommended RAM	Hard Disk Space to install	
							For Drivers	For Applications
Windows® Operating System ¹	Windows® 2000 Professional ³	Printing, PC Fax, Scanning	USB	Intel® Pentium II® or equivalent	64 MB	256 MB	150 MB	310 MB
	Windows® XP Home® ^{2 3} Windows® XP Professional ^{2 3}				128 MB			
	Windows® XP Professional x64 Edition ²			64-bit (Intel®64 or AMD64) supported CPU	256 MB	512 MB		
	Windows Vista® ²			Intel® Pentium® ⁴ or equivalent	512 MB	1 GB		
	Windows® 7	Printing, Scanning, PC-FAX ⁴ , Removable Disk ⁵		64-bit (Intel®64 or AMD64) supported CPU	1GB (32-bit) 2GB (64-bit)	1GB (32-bit) 2GB (64-bit)	650 MB	530 MB

¹ Microsoft® Internet Explorer 5.5 or greater.

² For WIA, 1200x1200 resolution. Scanner Utility enables to enhance up to 19200 x 19200 dpi.

³ PaperPort™ 11SE supports Microsoft® SP4 or higher for Windows® 2000 and SP2 or higher for XP.

⁴ PC FAX supports black and white faxing only.

⁵ Removable disk is a function of PhotoCapture Center®.

Consumable items

Toner Cartridge Life	Print Cartridge SP 1200E (for Europe)	
	Print Cartridge SP 1200A (USA and Canada)	
	Print Cartridge SP 1200S (for Asia)	Approx. 2,600 pages (A4) ¹
Drum Unit	Drum Unit SP 1200	Approx. 12,000 pages A4/ Letter pages

¹ Approx. cartridge yield is declared in accordance with ISO/IEC 19752.

² Drum yield is approximate, and may vary by type of use.



This is a comprehensive list of features and terms that appear in this manual. Availability of these features depends on the model you purchased.

ADF (automatic document feeder)

The document can be placed in the ADF and scanned one page at a time automatically.

Auto Reduction

Reduces the size of incoming faxes.

Automatic fax transmission

Sending a fax without picking up the handset of the external telephone.

Automatic Redial

A feature that enables your machine to redial the last fax number after five minutes if the fax did not go through because the line was busy.

Backup Print

Your machine prints a copy of every fax that is received and stored in memory. This is a safety feature so you will not lose messages during a power failure.

Batch Transmission

As a cost saving feature, all delayed faxes to the same fax number will be sent as one transmission.

Beeper Volume

Volume setting for the beep when you press a key or make an error.

Broadcasting

The ability to send the same fax message to more than one location.

BT Call Sign

A subscriber service purchased from the telephone company in the U.K. that gives you another phone number on an existing phone line. The machine uses the new number to simulate a dedicated fax line.

Cancel Job

Cancels a programmed print job and clears the machine's memory.

CNG tones

The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that a fax machine is calling.

Coding method

Method of coding the information contained in the document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JBIG, if the receiving machine has the same capability.

Communication error (or Comm. Error)

An error during fax sending or receiving, usually caused by line noise or static.

Compatibility group

The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

Contrast

Setting to compensate for dark or light documents, by making faxes or copies of dark documents lighter and light documents darker.

Delayed Fax

Sends your fax at a specified later time that day.

Dual Access

Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax or receiving or printing an incoming fax.

ECM (Error Correction Mode)

Detects errors during fax transmission and resends the pages of the fax that had an error.

Extension telephone

A telephone on the fax number that is plugged into a separate wall socket.

External phone

A TAD (telephone answering device) or telephone that is connected to your machine.

F/T Ring Time

The length of time that the machine pseudo/double-rings (when the Receive Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

Fax Detect

Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

Fax Forwarding

Sends a fax received into the memory to another pre-programmed fax number.

Fax Journal

Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

Fax Storage

You can store faxes in the memory.

Fax tones

The signals sent by sending and receiving fax machines while communicating information.

Fax/Tel

You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAD).

Fine resolution

Resolution is 203 × 196 dpi. It is used for small print and graphs.

Greyscale

The shades of grey available for copying and faxing photographs.

Group number

A combination of One Touch and Speed Dial numbers that are stored on a One Touch key or in a Speed Dial location for Broadcasting.

Help list

A printout of the complete Menu table that you can use to program your machine when you do not have the User's Guide with you.

Journal Period

The pre-programmed time period between automatically printed Fax Journal Reports. You can print the Fax Journal on demand without interrupting the cycle.

LCD (liquid crystal display)

The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Manual fax

When you lift the handset of your external telephone so you can hear the receiving fax machine answer before you press

 **Start** to begin transmission.

Menu mode

Programming mode for changing your machine's settings.

OCR (optical character recognition)

The bundled ScanSoft™ PaperPort™ 11SE with OCR or Presto!® PageManager® software application converts an image of text to text you can edit.

One Touch

Keys on the machine's control panel where you can store numbers for easy dialling. You can store a second number on each key if you press **Shift** and the One Touch key together.

Out of Paper Reception

Receives faxes into the machine's memory when the machine is out of paper.

Overseas Mode

Makes temporary changes to the fax tones to accommodate noise and static on overseas telephone lines.

Pause

Allows you to place a 2.8 second delay in the dialling sequence while you are dialling using the dial pad or while you are storing One Touch and Speed Dial numbers. Press   **Redial/Pause** as many times as needed for longer pauses.

Polling

The process of a fax machine calling another fax machine to retrieve waiting fax messages.

Pulse

A form of rotary dialling on a telephone line.

Real Time Transmission

When memory is full, you can send faxes in real time.

Remaining jobs

You can check which programmed fax jobs are waiting in the memory and cancel the jobs individually.

Remote Access Code

Your own four-digit code (— — —*) that allows you to call and access your machine from a remote location.

Remote Activation code

Press this code (* 5 1) when you answer a fax call on an extension or external telephone.

Remote Retrieval Access

The ability to access your machine remotely from a touch tone telephone.

Resolution

The number of vertical and horizontal lines per inch.

Ring Delay

The number of rings before the machine answers in Fax Only and Fax/Tel modes.

Ring Volume

Volume setting for the machine's ring.

Scanning

The process of sending an electronic image of a paper document into your computer.

Search

An electronic, alphabetical listing of stored One Touch, Speed Dial and Group numbers.

Speed Dial

A pre-programmed number for easy dialling. You must press

  **Search/Speed Dial**, then enter the three-digit Speed Dial location and press  **Start** to begin the dialling process.

Station ID

The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

TAD (telephone answering device)

You can connect an external TAD to your machine.

Tel Index List

A listing of names and numbers stored in One Touch and Speed Dial memory, in numerical order.

Temporary settings

You can choose certain options for each fax transmission and copy without changing the default settings.

Tone

A form of dialling on the telephone line used for Touch Tone telephones.

Transmission

The process of sending faxes over the telephone lines from your machine to the receiving fax machine.

User Settings List

A printed report that shows the current settings of the machine.

Xmit Report (Transmission Verification Report)

A listing for each transmission, that shows its date, time and number.

A

ADF (automatic document feeder)	
faxing	32
using	21
Answering machine (TAD)	
connecting	55
Automatic	
fax receive	40
easy receive	41
Fax Detect	41
fax redial	64

B

Broadcasting	33
cancelling	33
setting up groups for	66

C

Cancelling	
broadcast in process	33
fax jobs in memory	38
jobs awaiting redial	38
print jobs	6, 8
remote fax options	72
Cleaning	
corona wire	141
drum unit	143
laser scanner window	139
scanner glass	138
Connecting	
external TAD (answering machine)	55
external telephone	58
two-line external TAD or telephone	61
Consumable items	145
Control panel overview	7

Copy

contrast	84, 89
Enlarge/Reduce key	85
enter copy mode	84
keys	6, 8, 85
multiple	84
N in 1 (page layout)	89
out of memory	90
quality	88
single	84
sort (ADF only)	88
temporary settings	85
using ADF	88
using scanner glass	89
Cordless telephone	61
Cover page	34
custom comments	34
for all faxes	35
for next fax only	35
printed form	35
Custom Ringing	47

D

Data Ident-A-Call	47
Delayed batch transmission	37
Dialing	
dial prefix	26
Dialling	
a pause	64
automatic fax redial	64
groups (broadcasting)	33
manual	63
one touch	63
restricting dialling	29
speed dial	63
using the Search key	63
Distinctive Ring	52, 53
Distinctive ring	47
choosing ring pattern	48
setting ring pattern	48
turning off	48
Document	
how to load	21, 22
jam	132

Drum unit	
checking (remaining life)	152
cleaning	141, 143
replacing	149
Dual access	36

E

Enlarge/Reduce key	85
Envelopes	9, 16, 17, 19
how to load	12
Equalization	126
Error messages on LCD	127
Comm. Error	127
Init Unable XX	128
No Paper	129
Not Registered	63
Out of Memory	129
Print Unable XX	129
Scan Unable XX	130
Extension telephone, using	57, 59, 62
External telephone, connecting	58

F

Fax codes	
changing	62, 73
fax receive code	57, 62
remote access code	73
telephone answer code	57, 62
Fax forwarding	
changing remotely	74, 75
programming a number	69
Fax storage	70
printing from memory	43
turning off	72
turning on	70

Fax, stand-alone	
receiving	
easy receive	41
fax forwarding	75
fax receive stamp	42
FaxStream® Duet®	50, 51
from extension telephone	57, 62
from external telephone	57
paging	69
polling receive	76
reducing to fit on paper	42
retrieving from a remote site	74, 75
ring delay, setting	41
sequential polling	77
telephone line interference	126
sending	23, 32
broadcasting	33
cancelling from memory	38
contrast	35
delayed batch	37
delayed fax	37
from ADF	32
from memory (dual access)	36
from scanner glass	32
manual	38
overseas	37
polled transmit	77
real time transmission	36
resolution	36
telephone line interference	126

Fax/Tel mode	
answering at extension	
telephones	57, 62
easy receive	41
F/T ring time (double-ring)	41
fax receive code	57, 62
receiving faxes	58
ring delay	41
telephone answer code	57, 62

G

Greyscale	177
Groups for broadcasting	66

H

HELP	81
Help List	81
LCD messages	154
Menu Table	154, 156
using menu keys	154
Hook key	6, 8

I

Ident-A-Call	47
Ident-A-Ring	47

J

Jacks	
convert to RJ11 jack	
triplex adapter	60, 61
Jams	
document	132
paper	133
Job Cancel key	6, 8

L

Labels	16, 17, 20
LCD (liquid crystal display)	6, 8, 154
contrast	25
Help List	81

M

Machine information	
checking remaining life of drum	
unit	152
page counts	152
Maintenance, routine	137
checking the remaining life of drum	
unit	152
replacing	
drum unit	149
toner cartridge	146
Manual	
dialling	63
receive	40
transmission	38
Memory	
storage	154

Menu Table	154, 156
using menu keys	154
Mode, entering	
copy	84
fax	32
scan	6, 8
Multi-line connections (PBX)	56

N

N in 1 (page layout)	89
----------------------------	----

O

One touch	
changing	66
setting up	65
using	63
Out of Memory message	38, 90, 129

P

Packing and shipping the machine	152
Page layout (N in 1)	89
paging	69
programming your pager number	69
Paper	16, 169
how to load	9
jam	133
recommended	16
size	17
size of document	171, 172
size of paper	170
tray capacity	17
type	17, 23
Personalized Ring	47
Polling	
polled transmit	77
polling receive	76
sequential polling	77
Power failure	154

Print	
difficulties	115, 117
drivers	173
fax from memory	43
Job Cancel key	6, 8
keys	6, 8
paper jams	133
quality	119, 120
reports	81
resolution	173
specifications	173
Programming your machine	154

Q

Quality	
copying	88
printing	119, 120
Quick dial	65
broadcasting	33
using groups	33
group dial	
changing	66
setting up groups for	
broadcasting	66
one touch dial	
changing	66
custom scan profile	65
setting up	65
using	63
search	63
speed dial	
changing	66
custom scan profile	65
setting up	65
using	63

R

Redial/Pause key	64
Reducing	
copies	85
incoming faxes	42
Remote retrieval	73
access code	73
commands	75
getting your faxes	74
Replacing	
drum unit	149
toner cartridge	146

Reports	80, 81
Fax Journal	80, 81
journal period	80
Help List	81
how to print	81
Tel Index List	81
Transmission Verification	80
User Settings	81
Resolution	
copy	171
fax (standard, fine, superfine,	
photo)	36, 170
print	173
scan	172
setting for next fax	36
Resolution key	6, 8, 36
Ring delay, setting	41
RingMaster	47

S

Safety instructions	102, 107
Scanner glass	
faxing	32
using	22
Search/Speed Dial key	63, 66
Security	
restricting dialling	29
Setting lock	28
Shipping the machine	152
SimpleBiz Fax & Alternate Number	
Ringing	47
Sleep time	25
Smart Ring	47
Sort	88
Speed dial	
changing	66
setting up	65
using	63

T

TAD (telephone answering device),	
external	40, 61
connecting	55
recording OGM	56
with two-line jack	61
Teen Ring	47

Telephone line	
connections	55
difficulties	115
interference	126
multi-line (PBX)	56
roll over lines	60
two-line telephone system	60, 61
Telstra® FaxStream® Duet®	50
Temporary copy settings	85
Text, entering	165
Toner cartridge, replacing	146
Toner save	25
Transparency	11, 16
Troubleshooting	115
document jam	132
error messages on LCD	127
if you are having difficulty	
copy quality	117
incoming calls	116
paper handling	118
print quality	119, 120
printing	115, 117
scanning	118
software	118
telephone line	126
maintenance messages on LCD	127
paper jam	133
Two-line telephone system	60, 61

V

Voice mail	46
Volume, setting	
beeper	24
ring	24
speaker	24

This machine is approved for use in the country of purchase only.