

Philips GoGear audio player **EN**

SA018

# Quick start guide



**PHILIPS**



## Charge

- 1 Open Windows Explorer (SA018 appears as a mass storage device).
- 2 Drag and drop your MP3 files into SA018.



## Get started

- 1 Connect earphones
- 2 Press  for 4 sec. to turn SA018 on/off. (Power LED flashes once.)



## Select source / mode

**Radio:** FM

**Repeat all:** 

**Shuffle:** 

## LED indicators

### Response when pressing a button....

|         |                                                                                    |                                        |
|---------|------------------------------------------------------------------------------------|----------------------------------------|
| Result: |  | = action successful                    |
|         |  | = action unsuccessful (buttons locked) |

### Battery info (when turning on SA018):

|                                                                                   |                   |
|-----------------------------------------------------------------------------------|-------------------|
|  | > 40 % charged    |
|  | 10 - 40 % charged |
|  | < 10 % charged    |
|  | recharge player   |

### Important notifications:

|        |                                                                                    |                           |
|--------|------------------------------------------------------------------------------------|---------------------------|
| Alert: |  | = no audio files on SA018 |
| Error: |  | = restore software        |



## Play music

- 1 Select
- 2 Press to toggle play/pause.
  - Press and hold to go to first track on SA018.
- 3 Select to play music tracks in random order.

## Listen to FM radio

- 1 Select **FM**
  - (First-time use: SA018 scans frequencies and stops at first stronger signal.)
- 2 Press and hold to scan down/up for next stronger signal.
  - Press to skip to previous/next frequency.
- 3 Press and hold to save frequency to preset.
  - Press twice to skip to previous/next preset.



## While you listen

- Press to skip to previous / next title.
- Press and hold to skip faster.
- Press twice to skip to previous / next folder (if available).
- Press to increase / decrease the volume. Press together to activate / deactivate FullSound™ ( / modes only)



## Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on [www.philips.com/welcome](http://www.philips.com/welcome) so we can inform you as soon as new free upgrades become available.

## Need help?

### User Manual

See the user manual stored on this player.

### Online

Go to [www.philips.com/welcome](http://www.philips.com/welcome)



**Be responsible**  
**Respect copyrights**



Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2009 Koninklijke Philips Electronics N.V.  
All rights reserved. [www.philips.com](http://www.philips.com)

## Disposal of your old product and the integrated battery

All our products are designed and manufactured with high quality materials and components, which can be recycled and reused.



The crossed-out wheel bin symbol on a product means that the product is subject to the European Directive 2002/96/EC. This symbol can also be used in combination with a chemical symbol, which means that the product complies with the environmental directive for that chemical.

Never dispose of your product with other household waste. Inform yourself or ask your dealer about local environmentally safe recycling regulations. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.



Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

To safeguard the functionality and safety of your product, always bring your product to an official collection point or service centre where a professional can remove / replace the battery as shown in user manual.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



Printed in China  
SA018\_00\_QSG\_V1.1  
wk9194