

What's in the box



Wireless Modem Router




Wireless USB adapter




Quick start guide



Power adapter

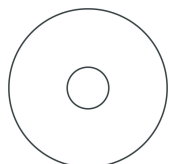

Installation CDROM

 

Ethernet cable



Line cord

What else will you need

ADSL filter adapted to your telephone plug



A desktop or a laptop with free USB port



A web browser



An Internet connection


1 Install your wireless modem router

A Insert installation CD




- Insert the installation CD into the PC's CD ROM (or DVDROM) drive
- > The installation program will start automatically
- Follow instructions on the screen

If for some reason the installation does not start automatically:

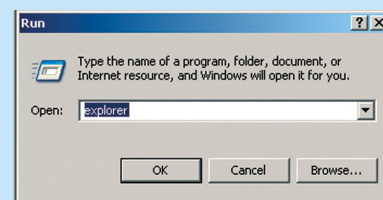

- Click on Windows START and then RUN
- Type explorer and navigate to the CD ROM (or DVDROM) drive
- Double-click on Setup.exe


B Choose your language

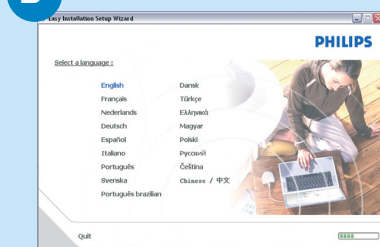

By default, the language of your operating system will be chosen, but you have 10 seconds if you want to select another one.

- Click on the required language
- > The next screen will be displayed automatically


C Select your product

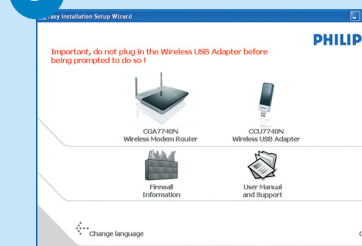

DO NOT PLUG IN YOUR CCU7740N WIRELESS USB ADAPTER BEFORE BEING INSTRUCTED !

- Click on the picture of the CGA7740N Wireless Modem Router
- > The next screen will be displayed automatically
- Follow instructions on the screen for the connection of your gateway

D Enter Internet Service Provider settings

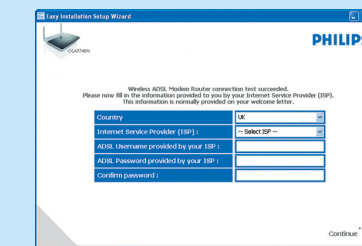


- Select your country and Internet Service Provider (ISP) using the information provided by your ISP

If your ISP is not in the default list, please select "Other".

- Click on Continue
- > A progress bar screen will be displayed, your settings will be saved and you will be connected to Internet
- > The next screen will be displayed

E Connected to Internet

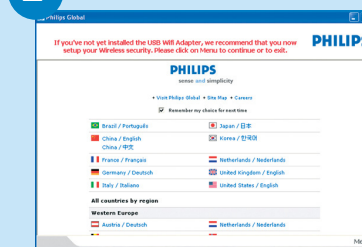


Once the installation completed, the following screen will be displayed.

- Click on Menu in order to install the wireless USB adapter

2 Install your wireless USB adapter


A Select your product

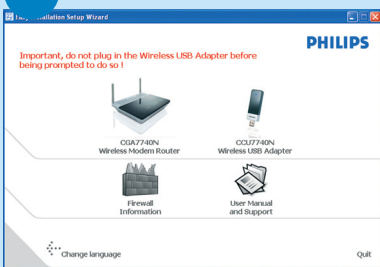

- Click on the picture of the CCU7740N Wireless USB adapter
- The next screen will be displayed automatically


DO NOT PLUG IN YOUR CCU7740N WIRELESS USB ADAPTER BEFORE BEING INSTRUCTED !

B Agree software licence

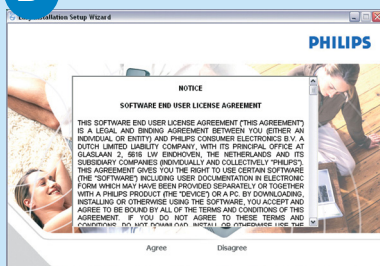


- The software end user licence agreement screen is displayed
- Read carefully and click on Agree
- The next screen will be displayed

C Connect your wireless USB adapter

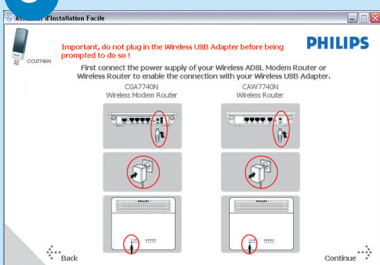

- Click on Continue
- A progress bar screen will be displayed and you will be invited to connect your wireless USB adapter
- Connect your CCU7740N wireless USB adapter
- The installation will go on and an information screen with Encryption details is displayed

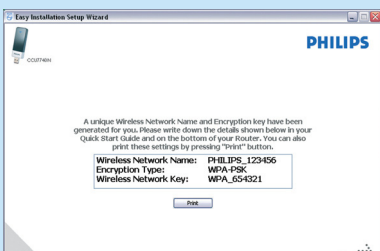

- Note or print the information by clicking on the Print button on the displayed screen.
- Click on Next> to continue
- A progress bar screen is displayed
- A confirmation of installation screen is displayed

3 Enjoy

A Open Internet browser



B Open Internet address



- Enter Internet address
For example: www.philips.com
- Select GO

Wireless freedom

Enjoy the freedom of wireless networking. Your computer is now ready for full use anywhere in your home.

Important information

Microfilters must be plugged in between the wall socket and all devices connected to your telephone line. This includes extension telephones, ADSL modem router and Set up box. Absence of a filter may result in a failure to connect to broadband, interference such as buzzing noises that affect normal telephone calls, or reduced broadband speed and performance.

Welcome to Philips!

Register your product and get support at www.philips.com/welcome



CKA7740N

Quick Start Guide

- 1 Install your wireless modem router
- 2 Install your wireless USB adapter
- 3 Enjoy

PHILIPS