

Quick start guide




Step A **Connect**

Step B **Setup**


Step C **Enjoy**

What's in the Box?


You should find these items upon opening the box.

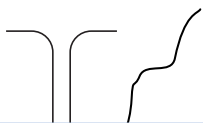

FM antenna
AM antenna

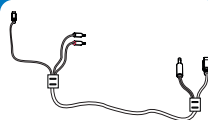


Docking cable

 


Remote Control

 
Pull out the plastic protective sheet before use.



 1 X Docking cradle
8 X iPod dock adaptors



User Manual
Quick Start Guide

 

Control cable

PHILIPS

Step A *Connect*

1

Connect the speaker cables.

2

Connect the FM and AM antennas.

3



Connect the control cable.

4

Connect the docking cradle.

5

Connect the power cord of the system.

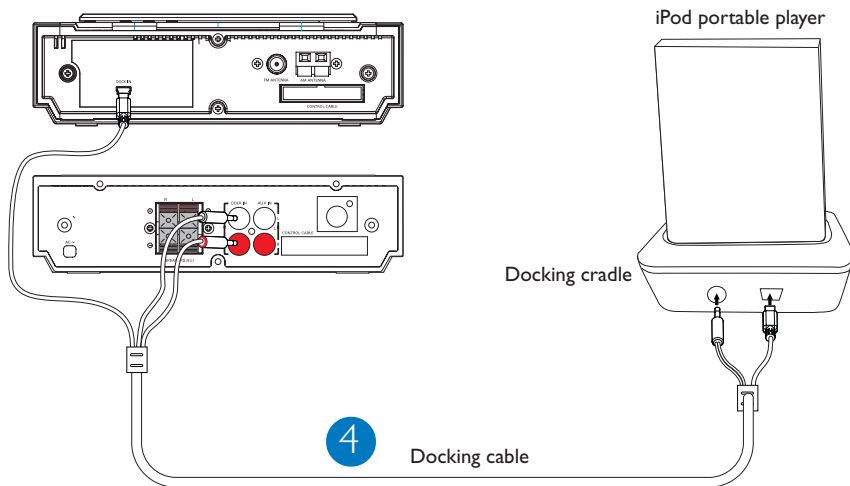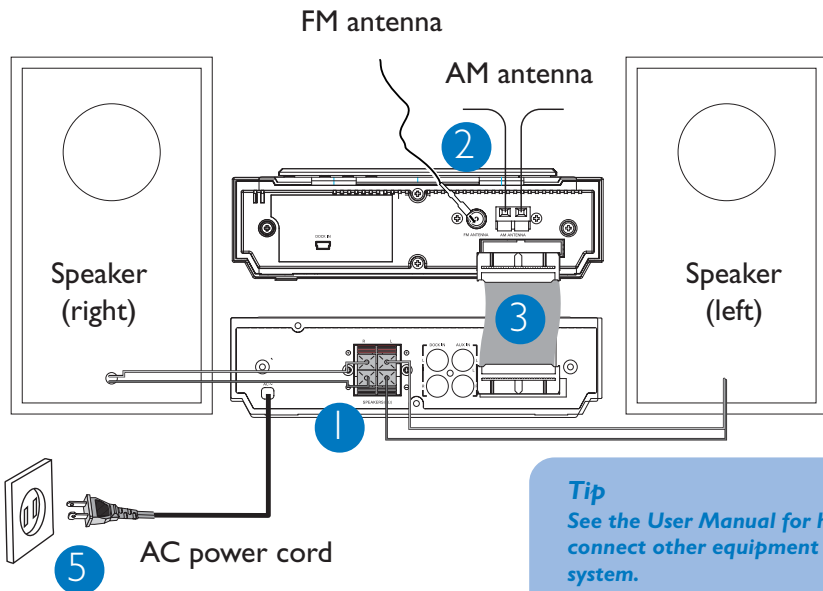


Step B Setup

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold ECO POWER/STANDBY-ON  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.


- 1 In standby mode, press and hold **CLOCK** on the remote.
- 2 When the hour digits flash, turn **VOLUME-/+** on the system or press **VOL+/-** on the remote to set the hours.
- 3 Press **CLOCK** again and the minute digits flash. Then turn **VOLUME-/+** on the system or press **VOL+/-** on the remote to set the minutes.
- 4 Press **CLOCK** again to confirm the time setting.

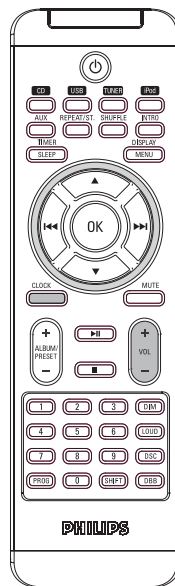

Step C Enjoy

Playing a disc

- 1 Press **SOURCE** on the top of the system to select DISC or press **CD** on the remote.
- 2 Press  to open the CD compartment.
- 3 Insert a disc with the printed side facing up. Press  again to close the compartment.
- 4 Playback will start automatically.
- 5 To stop playback, press .

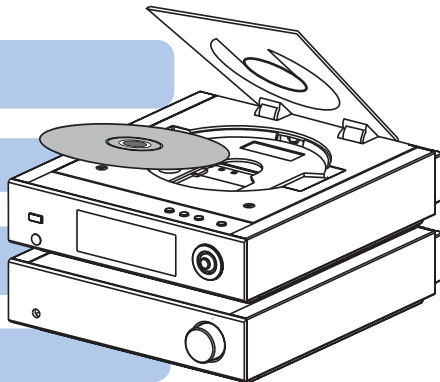

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Playing Apple iPod using MCM704D

- 1 Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.
- 2 Correctly place the compatible iPod player into the dock.
- 3 Press **SOURCE** on the system repeatedly or **iPod** on the remote control to select the iPod source.
- 4 Power on your iPod player.
- 5 Select and play your favourite songs stored in the iPod player.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

