



KM0832 Matrix KVM Switch Quick Start Guide

© Copyright 2011 ATEN® International Co., Ltd. www.aten.com
Altusen and the Altusen logo are trademarks of ATEN International Co., Ltd.
All rights reserved. All other trademarks are the property of their respective owners.
This product is RoHS compliant PAPE-1214-K00G Printing Date: 11/2011

Patent No.
CN ZL 01124239.6 CN ZL 200420007513.7 FR 0500514 TW 183765 TW M253187 US 7532998
CN ZL 02122202.9 CN ZL 200430123744.X GB 2412456 TW 0108320 US 6160543 US 7584309
CN ZL 200410098850.2 DE 102004017843 JP 3917598 TW 0237762 US 6489854 US 7613854
CN ZL 200410031699.0 DE 102004019107 JP 4160235 TW 0433890 US 6909609 US 7640229
CN ZL 200410042771.3 DE 102004058233 JP 4456936 TW 0269992 US 7386584
CN ZL 200410042772.8 DE 202004095910.4 TW 150098 TW 0276953 US 7415552

All information, documentation, and specifications contained in this media are subject to change without prior notification by the manufacturer.
Please visit our website to find the most up to date version.

Online Registration

International:

• <http://support.aten.com>

North America:

• http://www.aten-usa.com/product_registration

Technical Phone Support

International:

• 886-2-8692-6959

China:

• 86-10-5255-0110

Japan:

• 81-3-5615-5811

Korea:

• 82-2-467-6789

North America:

• 1-888-959-ATEN Ext: 4968


United Kingdom:

• 44-8-4481-58923



3

The KM0832 (Front View)

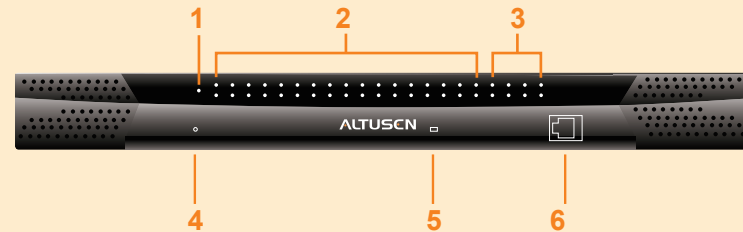


1. Power LED
2. Port LEDs
3. User Port LEDs

4. Reset Button
5. User Port 1 Switch
6. User Port 1

6

Single Stage Installation Diagram

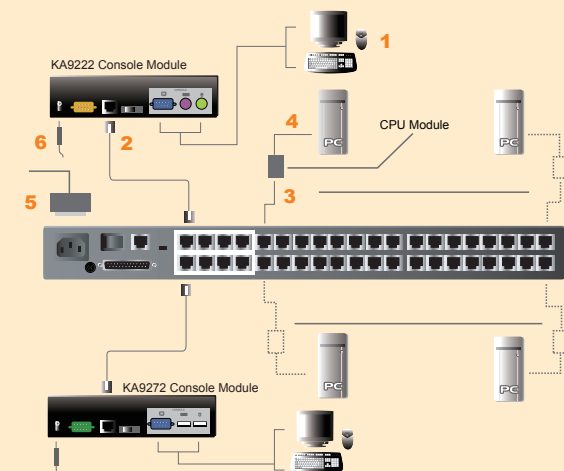

1


Package Contents

The complete KM0832 package consists of:

- 1 KM0832 Matrix KVM Switch
- 1 Power Cord
- 1 Rack Mount Kit (Brackets and Philips hex head screws M3 x 8)
- 1 Foot Pad Set (4 pcs.)
- 1 User Instructions

4

The KM0832 (Rear View)

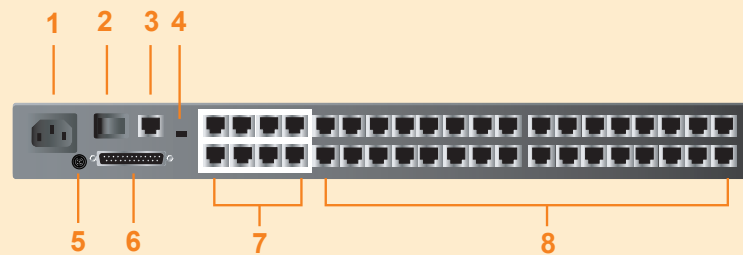

1. Power Socket
2. Power Switch
3. Configuration Port
4. Firmware Upgrade Switch


5. Grounding Terminal
6. Chain Out Port
7. User Port
8. KVM Ports

7

Cascaded Installation

Up to two additional levels of KM0832 Matrix KVM switches may be cascaded from the KM0832's CPU ports.

1. Make sure that power to all the devices you will be connecting up has been turned off.
2. Use Cat 5 cable to connect any 8 CPU Ports on the First Stage KM0832 unit to the User Ports on the Second Stage KM0832 unit.
Note: 1. The distance between the First and Third Stage KM0832 units must not exceed 300m (1000').
2. We strongly recommend that you use Cat 5 shielded twisted pair (STP) cable.
3. Use CPU Modules to connect any available CPU Port on the KM0832 to the keyboard, video and mouse ports of the computers you are installing.
4. Plug the Second Stage unit's power cable into an AC source; plug the power adapter cable into the unit's Power Socket.
5. Repeat steps 2 - 4 for any other Second Stage units you wish to install.
6. Repeat steps 2 - 5 for any Third Stage units you wish to install.
7. Turn on the power for the First Stage unit. Wait one minute.
8. Turn on the power for the Second Stage units. Wait one minute.
9. After all the Stations are on, power on the computers.

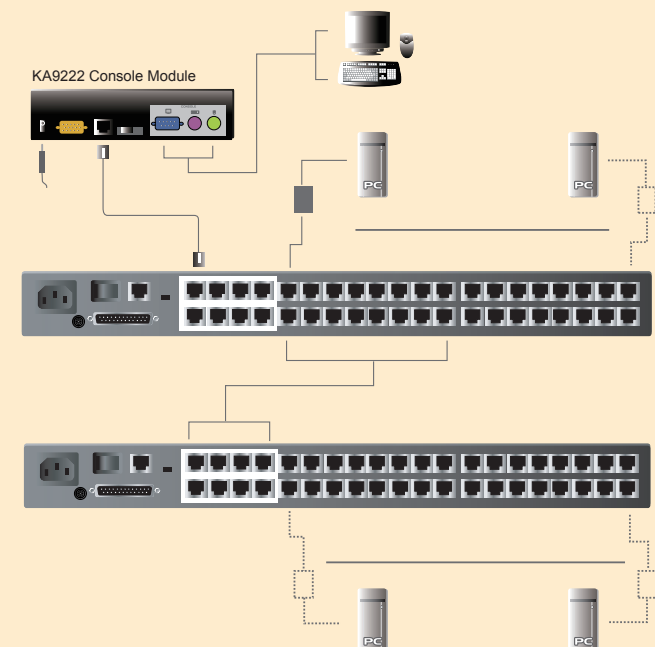

2

Requirements

Console

- A VGA, SVGA, or Multisync monitor capable of the highest resolution that you will be using on any computer in the installation.
- Either a PS/2 or a USB keyboard and mouse.

Computers

- An HDB-15 video port or, for legacy Sun systems, a Sun 13W3 video port.
- Either a PS/2 style (6 pin mini-DIN) mouse port and PS/2 style keyboard port; or USB ports (for a USB keyboard and USB mouse); or, for legacy Sun systems, a Sun style keyboard port (8 pin mini-DIN).

5

Single Stage Installation


1. Connect the Console (keyboard, monitor and mouse) to the Console Module.
2. Connect the Console Module to a User Port on the KM0832.
3. Connect the CPU Module to the KM0832 using Cat 5 cable.
Note: 1. The distance between any Console Module and any CPU Module must not exceed 300m (1000').
2. We strongly recommend that you use Cat 5 shielded twisted pair (STP) cable.
4. Connect the CPU Module to the computer. Repeat steps 1 - 4 for all consoles and computers that you wish to connect.
5. After all the computers have been connected, plug the female end of the power cord into the KM0832's Power Socket; plug the male end into an AC power source.
6. For each Console Module, plug its power adapter into an AC power source; plug the power adapter cable into the unit's power jack.
7. Turn on the power to the KM0832.
8. Turn on the power to the computers.

8

Daisy Chained Installation


Note: If the daisy chain feature is not operative on your unit, you will need a newer version of the firmware. Contact your dealer for details.

1. Make sure that power to all the devices you will be connecting up has been turned off.
2. Use a daisy chain cable set to connect the Chain Out port of the parent KM0832 unit to the Chain In port of the child KM0432 unit.
3. If you wish to install any consoles on this switch, follow the procedure described for the Single Stage Installation.
4. Use CPU Modules to connect any available CPU Port on the KM0432 to the keyboard, video and mouse ports of the computers you are installing.
5. Repeat the above steps for any additional KM0432 units you wish to add to the chain.
6. Plug the power cord into an AC power source and into the KM0832's power socket.
7. Switch on the power for the KM0832. Wait one minute for the unit to ascertain its position.
8. Switch on the power for each KM0432 Station on the installation in turn. In each case, wait for the Station ID to be ascertained and displayed on the current station before powering on the next one.
9. After all the Stations are up, power on the computers.

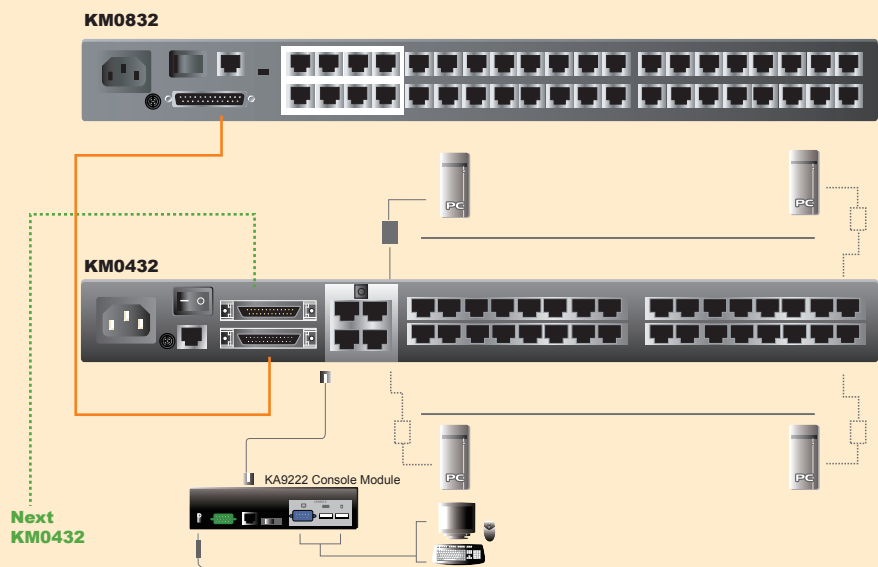

9

KM0832 Administrator Utility 1

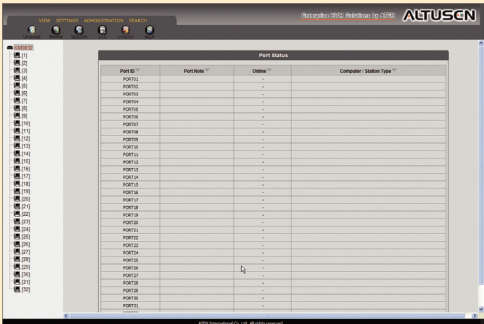

The KM0832 Administrator Utility is a browser-based application that enables administrators to manage users, groups, stations, and ports; configure network settings; upgrade firmware; and backup and restore configurations. Users can change their account passwords and configure personal profile preferences. The default IP Address to connect to the KM0832 Administrator Utility is 192.162.0.10

10

KM0832 Administrator Utility 2

The menu items at the top of the main screen are used to search for, and configure the KM0832 stations and ports, as well as manage user accounts.

The function of each menu item is described in the following table:

Menu Item			Description
VIEW			Click to open the View page and set screen viewing options.
SETTINGS			Click to open the Settings page, which allows users to change account passwords and set other OSD preferences.
ADMINISTRATION	Account Management	User Management	Administrators can Add, Modify, or Delete user accounts; or, select a user from the list to change the user's password, group membership, and user type.
		Group Management	Administrators can Add, Modify, or Delete group accounts.
	Port Management		Click to open the Port Select page. Administrators can click on a Port ID to configure the port.
	Station Management		Click to open the Station Management page, which allows administrators to change the station name and set the Webpage Session Timeout.
	Super Adm Configuration	Set Network	Click to open the Network Settings page, which allows the Super Administrator to change DHCP, SMTP server, and network settings.
		Date & Time	Click to open the Date & Time page, which allows the Super Administrator to set the date and time of the KM0832.
System Information		Click to open the System Information page, which displays general system settings.	
SEARCH			Click to open the Search page. Users can search the KM0832 station and attached computer names by inputting key strings.

The icons on the bar at the top of the screen are for use only by administrators (except for the Logout icon). The function of each icon is described in the following table:

Icon	Description
UPGRADE	Click to open the Firmware Upgrade page, which allows the Super Administrator to upgrade the firmware version.
BACKUP	Click to open the Backup and Restore Settings page. It allows administrators to backup the system configuration to a local computer, or to restore a system configuration to the station.
SESSION	Administrators can click to view all active sessions. Select a session and click End Session to force a user logout.
LOG	Administrators can click to open the Event Log dialog box. To view log data, enter a date range in the From and To fields, and click OK.
LOGOUT	Click to logout from the KM0832 and close the session.
HELP	Click to open the KM0832 help file.

11

Hotkey Operation

Invoking Hotkey Mode (HKM)

1. Press and hold down the **Num Lock** key.
2. Press and release the **Minus** key.
3. Release the **Num Lock** key.

[Num Lock]+[-]

Hotkey Summary

[Num Lock] + [-]	[Port ID] [Enter]	The switch accesses the computer that corresponds to that Port ID.
	[T] [n] [Enter]	Sets the Auto Scan interval to n seconds – where n is a number from 1-255
	[A]	Invokes Auto Scan Mode. When Auto Scan Mode is in effect, [P] or left clicking the mouse pauses Auto Scanning. When Auto Scanning is paused, press any key or Left Click the mouse to resume Auto Scanning.
	←	Skips from the current port to the first previous accessible port.
	→	Skips from the current port to the next accessible port.
	[B]	Toggles the Beeper On or Off.

12

OSD Operation

Basics:

1. Tap the [Scroll Lock] key twice to bring up the OSD Main Screen.
2. When the login screen appears, key in a valid username and password, and then press [Enter].
Note: The first time that the OSD is run, or if the password function has not been set, simply press [Enter].
3. The OSD always starts in List view, with the highlight bar at the same position it was in the last time it was closed. The simplest way to access a port is to either double-click it, or move the highlight bar to it, and then press [Enter].

OSD Main Screen Headings:

Heading	Explanation
PN	This column lists the Port ID numbers (Station Number – Port Number) for all the CPU ports on the installation. The simplest method to access a particular computer is to move the Highlight Bar to it, and then to press Enter
TYPE	Lists the type of CPU Module used to attach the computer.
NOTE	If a port has been given a name, its name appears in this column.

OSD Navigation:

- To dismiss the Main Screen, and deactivate the OSD, Click the X at the upper right corner of the OSD Window; or press [Esc].
- To Logout, press [F8] on the keyboard, or click F8 on the OSD menu bar.
- To move up or down through the list one line at a time, Click the Up and Down Triangle symbols or use the Up and Down Arrow Keys.
- To move up or down through the list one screen at a time, click the Up and Down Arrow symbols or use the [Pg Up] and [Pg Dn] keys.
- To activate a port, double-click on it, or move the Highlight Bar to it, and then press [Enter]. After performing any of the above mentioned actions, you automatically return to the previous menu.

OSD Functions:

Function	Name	Description
F1	HELP	Displays information about the user and briefly describes each OSD function.
F2	VIEW	VIEW allows you to broaden or narrow the scope of which ports the OSD displays (lists) on the main Screen.
F3	SET	SET allows the Administrator and Users to set up their own working environments. A separate profile for each is stored by the OSD and is activated according to the Username that was provided during Login.
F4	ADM	ADM is an Administrator Only function that allows the Administrator to configure and control the overall operation of the OSD.
F5	SCH	Please refer to the SEARCH function under <i>Browser Operation</i> .
F7	SCAN	SCAN allows you to automatically switch among the available computers at regular intervals so that you can monitor their activity without having to take the trouble of switching yourself.
F8	LOUT	LOUT is used to log out of your current OSD session.

13

Specifications

Function		KM0832
Computer Connections	Direct	32
	Max.	8,000 (via Cascade)
Console Connections		8
Port Selection		OSD, Hotkey
Connectors	Console Ports	8 x RJ-45 Female (Black)
	KVM Ports	32 x RJ-45 Female (Black)
	Daisy Chain Out Ports	1 x HPDB-50 Female (Black)
	Configuration	1 x RJ-45 Female (Black)
	Maintenance	1 x RJ-45 Female (Black)
	Power	1 x 3-prong AC Socket
Switches	Reset	1 x Semi-recessed Pushbutton
	Power	1 x Rocker
	F/W Upgrade	1 x Slide
	User Port 1	1 x Slide
LEDs	On Line (Console Port)	8 (Green)
	On Line/Selected (KVM Port)	32 Dual Colored (Green/Red)
	Power	1 (Blue)
Emulation	Keyboard/ Mouse	PS/2; USB (PC, Mac, Sun); Serial
Video		1024x768@60Hz (300m)
Scan Interval		1–240 seconds
I/P Rating		100–240VAC, 50/60Hz; 1A
Power Consumption		120V/19W; 230V/20W
Environment	Operating Temp.	0–50°C
	Storage Temp.	–20–60°C
	Humidity	0–80% RH, Non-condensing
Physical Properties	Housing	Metal
	Weight	4.90 kg
	Dimensions (L x W x H)	43.36 x 38.00 x 4.40 cm (19"1U)