

Philips GoGear audio player

SA1915 SA1918
SA1925 SA1926
SA1927 SA1928
SA1929 SA1945
SA1946 SA1947
SA1948 SA1949

Quick start guide



- 1 Install
- 2 Connect and Charge
- 3 Transfer
- 4 Enjoy

PHILIPS

Need help?

Please visit

www.philips.com/welcome

where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

2	Is there a manual?
2	Register your product
2	Don't forget about upgrades
3	What's in the box
4	Overview of controls and connections
5	Install
5	Connect and charge
5	Connect to PC
6	Read the battery level indication of your player
6	Transfer
6	Transfer music
7	Enjoy
7	Turn on and play
7	Main menu
8	Navigate the menu
8	Music mode
9	Radio*
9	Auto tune
9	Play a preset radio station
9	Record from FM radio* when the radio is playing
10	Recordings
10	Make recordings
10	Play back recordings
11	Troubleshooting
11	How do I reset my player?
12	Need help?
12	Disposal of your old product

* Radio: This feature is only available for some regions.

FM radio recording: This feature is only available for some regions.

Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: www.philips.com/support

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free updates of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

What's in the box



Headphones



USB cable



CD-ROM



Quick start guide


What else you'll need.



Computer

A computer with:
 Windows 2000, XP or Vista
 Pentium III 800MHz processor or higher
 CD-ROM drive
 128 MB RAM
 500MB Hard Disk space
 USB Port
 Internet connection (preferable)
 Microsoft Internet Explorer 6.0 or later

Overview of controls and connections

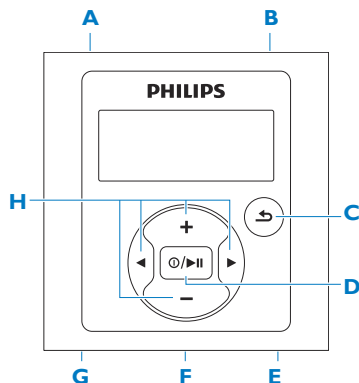

A	Headphone jack
B MIC	Microphone
C	Back one level (hold to return to root menu)
D	On / Off Play/Record / Pause Confirm selection
E slider	Hold slider to lock/unlock all keys (except + / -)
F RESET	
G	USB connector
H	Skip back (hold to quick skip)
	Skip forward (hold to quick skip)
+/-	In menus: scroll up/down (hold to quick scroll) In playscreen: increase / decrease Volume (hold to increase / decrease fast)

I Install

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the on-screen instructions to complete the installation of **Philips Device Manager**.

2 Connect and charge

A Connect to PC

When you connect the player to the PC, it automatically charges.



- 1 Before you use the player for the first time, charge it for at least 5 hours.
 - > The battery has a 100% charge after 4 hours and an 80% charge after 2 hours.
- 2 Connect the supplied USB cable to the mini USB port at the bottom of the player, the other end to your PC.
 - > The player will start to charge as soon as it is connected to your PC.

B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:



Full



Two-thirds full



Half full



Low



Empty

Note When the batteries are almost empty, the low battery screen  blinks. The player saves all settings and unfinished recordings and switches off in less than 60 seconds.

3 Transfer

The player appears as a USB mass storage device in **Windows Explorer**. You can organize files, and transfer music to your player during USB connection.

A Transfer music

- 1 Click and highlight one or more songs to transfer between your player and your computer.
- 2 Use drag and drop actions to complete your transfer.

Tip To transfer music CDs to the player use software such as Windows Media Player, rip (convert) the songs on your music CD into MP3/WMA files. Copy the files into the digital audio player via Windows Explorer. Free versions of these programs can be downloaded from the internet.

4 Enjoy

A Turn on and play

To turn on, press  until the display shows the **Philips** logo.
To turn off, press and hold  until the display shows 'bye'.

Tip If the player is idle and no button is pressed for 10 minutes, it switches off automatically.

B Main menu

 Music	Play your digital music tracks
 Radio*	Listen to FM radio
 Recording	Create or listen to recordings
 Folder view	View files in folders
 Settings	Customize the settings of your player

* Radio: This feature is only available for some regions.

Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations.

Goal	Action
Return to previous menu	Press 
Return to main menu	Press and hold 
Browse through menus	Press  or 
Scroll through a list	Press + or -
Selection an option	Press 

Music mode (also play mode for recordings)

The player offers the following music mode options:

Goal	Action
Play / Pause music	Press 
Skip to next audio file	Press 
Return to previous audio file	Press 
Fast forward	Press and hold 

Goal	Action
Fast rewind	Press and hold 
Return to browsing menu	Press  key
Increase volume	Press +
Decrease volume	Press -

Radio*

From the main menu, select  to enter radio mode.

Connect the headphones

The supplied headphones serve as a radio antenna. Ensure you connect the headphones properly for an optimal reception.

Auto tune

- 1 From the Radio menu , select **Auto tune**.
 - > *The radio automatically tunes radio stations and saves the frequencies to presets.*
 - The radio can store up to 20 radio station to presets.*

Play a preset radio station

- 1 From the Radio menu , select **Presets**.
 - 2 Press **+/-** to select preset, **▶||** to start playing.
 - 3 Press **◀▶** to change to another preset.
- To exit radio, long press .

Record from FM radio* when the radio is playing

- 1 Press  one or more times to enter Radio menu .
- 2 Select **Start FM Recording**.
- 3 Press **▶||** to start recording.
 - To stop recording, press .
- 4 Press **▶||** to save the recording.
- 5 To exit radio, long press .

* *Radio: This feature is only available for some regions.*

FM radio recording: This feature is only available for some regions.

Recordings

You can record audio with the player.

Make recordings

- 1 From the main menu, select  > **Start voice recording.**



- > The player records and shows the recording display.
- 2 Press  to pause.
 - 3 Press  to stop.
 - 4 Press  to save the recording or press  to cancel.
 - > Recordings will be saved on the player. (Filename format: VOICEXXX.WAV where XXX is the recording number which will be automatically generated.)
 - 5 You can find this file under  > **Recording library** > **Voice.**

TIP You can pause and restart a recording anytime with .

Note To record FM radio*, see section **Radio.**

Play back recordings

From the main menu, select  > **Recording library** > **Voice** or **FM radio***.

- 1 Select the recording you want to hear.
- 2 Press  to confirm.

* FM radio recording: This feature is only available for some regions.

Troubleshooting

How do I reset my player?

Insert a small pin or other sharp object into the reset hole located at the bottom of the player. Hold until the player shuts down.

If none of the above works, then you may have to use the Device Manager to recover your player:

- 1 Launch the **Philips Device Manager** at **Start > Programs > Philips Digital Audio Player > SA19XX > Philips SA19XX Device Manager** on your PC.
- 2 Press and hold the  button while your player is connecting to the PC.
- 3 Keep holding the key until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
- 4 Click the **Repair** button and follow the instructions given by the **Device Manager**.
- 5 After the player has been repaired, disconnect it from your PC and re-start.

Need help?

User Manual

See the user manual that came with your player.

Online

Go to www.philips.com/welcome

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

■ Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Batteries (including built-in rechargeable batteries) contain substances that may pollute the environment. Always hand the appliance in at an official collection point to remove any built-in batteries before you discard the appliance. All batteries must be disposed of at an official collection point.

AUSTRALIA - Philips Manufacturers Warranty for Australia only

These Warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

1 YEAR Free Repair Service – at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television
DVD/VCR Combo, DVD Recorders with Hard Drive, LCD Projector's Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

1 YEAR Free Replacement – at your Retailer

MP3 Infotainment products, Video Cassette Recorders DVD Players, DVD/VCR Combo Players, DVD Recorder without HDD & Portable DVD/LCD players.

Conditions of Repair Warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
3. If a replacement product is supplied under the repair policy, it is warranted for the remainder of the warranty period of the original purchased product only.
4. Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen sizes less than 67 cms and all other product types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
5. This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics Products if used in commercial applications.
6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
7. Product accessories are covered by the same warranty period. Please contact the Philips Technology Care Centre for free replacement of faulty accessories.
8. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

This warranty does not cover:

- a) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.

c) Product failures caused by misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.

- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.
- f) Replacement of worn or used batteries or other consumables.
- g) Consumer products used in commercial applications (This warranty is limited to 3 months only)
- h) Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Philips Consumer Electronics a division of Philips Electronics Australia Limited

ABN 24 008 445 743, Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

Authorised Service Centre Network

1300 361 392

Customer support is provided in Australia by our trained call centre staff For assistance with product features and specifications, please call

UTechnology Care Centre

1300 363 391

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim

Model number:

Serial number:

Date of purchase:

Retailer:

NEW ZEALAND - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller

Philips New Zealand Ltd.

✉ **P.O. Box 41.021**

Auckland

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or
their respective owners
© 2008 Koninklijke Philips Electronics N.V.
All rights reserved.
www.philips.com



Printed in China
wk8173