

5 Press **▲/▼/◀/▶** and **OK** to set the time/date, and then press **OK** to confirm.

Tip

- When the reminder alerts, you can press any button once to stop the reminder. To stop the snooze function, press the same button twice.

Set on/off a reminder

1 In the main menu, select [Setup] and then press **OK** to confirm.

2 Select [Event Reminder], and then press **OK** to confirm.

3 Select a reminder, and then press **OK** to confirm.

4 Select [Set], and then press **OK** to confirm.

- Select [On] to set the reminder on, and then press **OK** to confirm.
- To set the reminder off, select [Off] and then press **OK** to confirm.

Set display auto on/off by time

You can configure the time for the PhotoFrame to turn on or off the display automatically.

Note

- Ensure that you set the current time and date of the PhotoFrame before you set the auto on/off function.

1 In the main menu, select [Setup] and then press **OK** to confirm.

2 Select [Smart power], and then press **OK** to confirm.

3 Select [Set time], and then press **OK** to confirm.

4 Select [Weekday] / [Weekend], and then press **OK** to confirm.

5 Select [Auto on] / [Auto off], and then press **OK** to confirm.

- To cancel [Auto on] / [Auto off], select [Set On/Off] > [Off].

6 Press **▲/▼/◀/▶** and **OK** to set the time for auto-on/auto-off function, and then press **OK** to confirm.

Tip

- Weekday: Monday 00:00 to Friday 23:59
- Weekend: Saturday 00:00 to Sunday 23:59

PHILIPS

Set Time

Set the auto on/off time

PHILIPS

Frequently asked questions

Is the LCD screen touch-enabled?
The LCD screen is not touch-enabled. Use the buttons on the back to control the PhotoFrame.

Will the LCD be damaged, if I keep showing the same photo for a long time?
No. The PhotoFrame can display the same photo continuously for 72 hours without any damage to the LCD screen.

Why does my PhotoFrame not show some of my photos?
The PhotoFrame supports only JPEG photos. Ensure that these JPEG photos are not damaged.

Why does the PhotoFrame not go into auto-off status after I set it?
Ensure that you set the current time, auto-off time, and auto-on time correctly. The PhotoFrame automatically turns off its display exactly at the auto-off time. If the time has already passed for the day, it starts to enter auto-off status at the specified time from the next day.

The PhotoFrame is ON but the PhotoFrame does not respond anymore. What can I do?
Ensure that the PhotoFrame is turned on. Then, use a pin to trigger the **RESET** button located on the back to restore the system.

Register your product and get support at www.philips.com/welcome

© Royal Philips Electronics N.V. 2009

All rights reserved.

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

QSG_V2.0

Printed in China

PHILIPS

PHILIPS

PHILIPS

PhotoFrame

SPF2017

SPF2027

SPF2047

Quick start guide

1 Get started

2 Play

3 Setup

PHILIPS

ENG

What's in the box

PhotoFrame

Stand

AC-DC power adaptor

CD-ROM (Digital User Manual)

Quick Start Guide

(For SPF2047)
Extra silver frame with design

 
1 Get started

Control buttons

Button Function

	Turn on/off the PhotoFrame
	Play slideshow Toggle between slideshow mode, browse mode, and calendar mode
	Select the previous/next/right/left item
	Confirm a selection
	Enter the main menu Enter/Exit photo menu

- 1 Connect the power cord to the DC socket of the PhotoFrame.



- 2 Connect the power cord to a power supply socket.

Turn on the PhotoFrame

Note

- You can only turn off the PhotoFrame after all copy and save actions are complete.

Install the stand

To place the PhotoFrame on a flat surface, you need install the supplied stand at the back of the PhotoFrame.

- 1 Insert the stand into the PhotoFrame.



- 2 Screw the stand into the stand hole firmly.

Connect power

Note

- When you position the PhotoFrame, ensure that the power plug and outlet are easily accessible.

For the first time use:

- 1 Press and hold  for more than 1 second.
 - ↳ The language setting menu is displayed.
- 2 Select a language, and press OK to confirm.
 - ↳ Help message for control keys is displayed.



- 3 Press any button to exit the help message.

↳ Photos are displayed in slideshow mode.

For other times:

- 1 Press and hold  for more than 1 second.



↳ Help message for control keys is displayed.

- 2 Press any button to exit the help message.
 - ↳ Photos are displayed in slideshow mode.
- To turn off the PhotoFrame, press and hold .

Connect a storage device

Caution


- Do not remove a storage device from the PhotoFrame when files are transferring from or to the storage device.

You can play JPEG photos in one of the following storage device which is connected to the PhotoFrame:

- Secure Digital (SD)
- Secure Digital (SDHC)
- Multimedia Card
- xD card
- Memory Stick
- Memory Stick Pro (with adaptor)
- USB memory drive

However, we do not guarantee the operations for all types of memory card media.

 - 1 Insert a storage device firmly.



Photos in the storage device are displayed in slideshow mode.

- To remove a storage device, pull it out from the PhotoFrame.

2 Play

Display photos

Note

- You can play only JPEG photos on the PhotoFrame.

- 1 In the main menu, select [Photos] and then press OK to confirm.



- 2 Select a photo source, and then press OK to confirm.



- 3 Select an album, and then press OK to confirm.
 - ↳ Photos in the album are displayed in thumbnail mode.

- 4 Press  to start slideshow play.
 - In slideshow mode, press  to display the next/previous photo.
 - In slideshow mode, press  to toggle between slideshow, browse, and calendar mode.

Tip

- In slideshow mode, the PhotoFrame displays all photos automatically.
- In browse mode, the PhotoFrame displays the current photo and you can press  to display the next/previous photo.
- In calendar mode, the PhotoFrame displays photos with the calendar.

Display collage photos

- 1 In the main menu, select [Slideshow] and then press OK to confirm.
- 2 Select [Collage], and then press OK to confirm.



- 3 Select [Multi], and then press OK to confirm.
- 4 Select a layout.
- 5 Press  (Right) to select [Photo 1].
- 6 Press  (Right) again to access the photo source options.
- 7 Select a photo from a photo source.
- 8 Repeat steps 5 to 7 until all photos are selected for the format.
- 9 Press  to start collage display.
 - To stop collage display, select [Slideshow] > [Collage] > [Single] and then press OK to confirm.

Tip

 
- If you select a collage layout, the PhotoFrame displays a static collage and the slideshow mode is deactivated.
- If you select [Random] format, the PhotoFrame automatically does the random collage base on the optimal layout of photos and displays the collages in slideshow mode.

3 Setup

Select on-screen language

- 1 In the main menu, select [Setup] and then press OK to confirm.
- 2 Select [Language], and then press OK to confirm.

- 3 Select [Language], and then press OK to confirm.

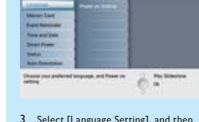

- 3 Select [Language Setting], and then press OK to confirm.
- 4 Select a language, and then press OK to confirm.

Select photo background

- 1 In the main menu, select [Slideshow] and then press OK to confirm.
- 2 Select [Background Color], and then press OK to confirm.
- 3 Select a background color / [Auto fit] / [RadiantColor], and then press OK to confirm.

- ↳ If you select a background color, the PhotoFrame displays a photo with a background color or black bar.



- ↳ If you select [Auto fit], the PhotoFrame extends a photo to fill the screen with picture distortion.



- ↳ If you select [RadiantColor], the PhotoFrame extends the color on the edges of a photo that is smaller than the full screen to fill the screen without black bars or aspect ratio distortion.



Set time and date

- 1 In the main menu, select [Setup] and then press OK to confirm.
- 2 Select [Time and Date], and then press OK to confirm.
- 3 Select [Set time] / [Set date], and then press OK to confirm.
- 4 Press  /  and OK to enter the current time/date, and then press OK to confirm.



- 3 Select [New reminder], and then press OK to confirm.
 - ↳ A keypad is displayed.

- 4 To enter the new name (up to 24 characters), select an alphabet/number and then press OK to confirm.
 - To switch between uppercase and lowercase, select [abc] on the displayed keypad and then press OK to confirm.

- 5 When the name is complete, select [Enter] and then press OK to confirm.

Set an event reminder

You can create a reminder for a special event, and you can also select a photo to be displayed at a selected time.

Tip

- Ensure that you set the current time and date of the PhotoFrame before you set an event reminder.

Set event time and date

Note

- Ensure that you set the current time and date of the PhotoFrame before you set time and date for an event reminder.

Create an event reminder

- 1 In the main menu, select [Setup] and then press OK to confirm.
- 2 Select [Event Reminder], and then press OK to confirm.
- 3 Select a reminder, and then press OK to confirm.
- 4 Select [Set time] / [Set date], and then press OK to confirm.