

Quick start guide




Step A *Connect*

Step B *Setup*


Step C *Enjoy*

What's in the Box?


You should find these items upon opening the box.

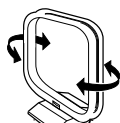

MW antenna

 

Remote Control

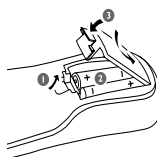

Quick Start Guide



User manual

PHILIPS


Step A *Connect*

1 Connect the speaker cables.

2 Connect the MW antenna.

3 Connect the power cable of the system.

Tip
See the User Manual for how to connect other equipment to this system.

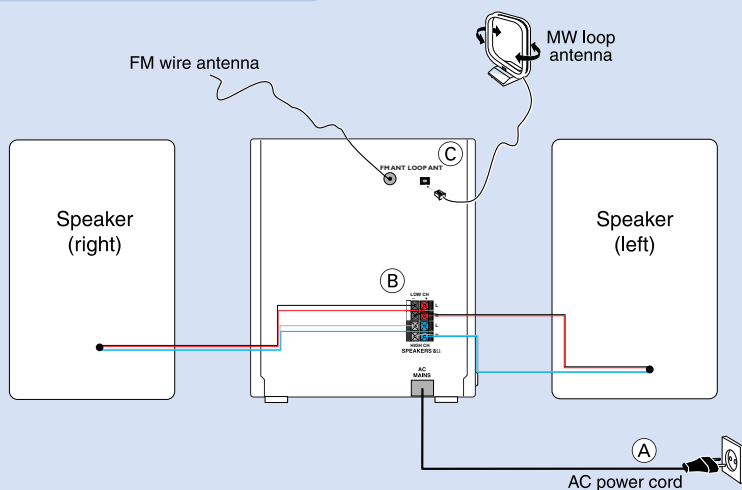

Step B *Setup*

Setting the clock


1 In standby mode, press and hold **CLOCK**. The clock digits for the hours flash.

2 Adjust the **VOLUME** control knob or press **VOLUME ▲/▼** on the remote control to set the hours.

3 Press **CLOCK** again. The clock digits for the minutes flash.


4 Adjust the **VOLUME** control knob or press **VOLUME ▲/▼** on the remote control to set the minutes.

5 Press **CLOCK** to confirm the time.

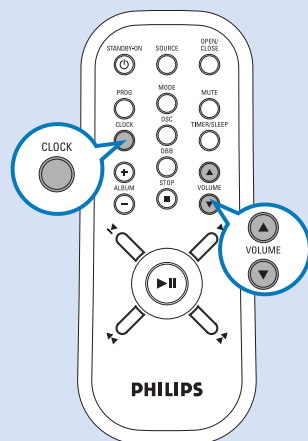

Playing a disc

- 1 Press **SOURCE** once or more to select **CD**.
- 2 Press **OPEN/CLOSE** on the system to open the CD compartment.
- 3 Insert a disc with the printed side facing up and press **OPEN/CLOSE** to close the CD door.
- 4 Press **▶II** to start playback.
- 5 Press **STOP ■** to stop playback.

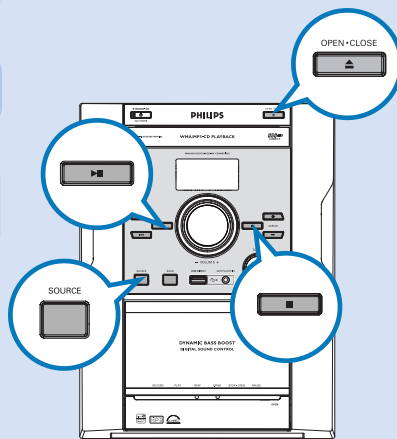

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Tip

Detailed playback features and additional functions are described in the accompany user manual.



© Royal Philips Electronics N.V. 2007
All rights reserved.

<http://www.philips.com>

