

**BenQ**

FP783/FP783<sup>+</sup>

LCD Color Monitor

17.0" (43.2 cm) LCD Panel Size

User's Manual

# Welcome

## **i** Copyright

Copyright © 2005 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

## **ii** Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BenQ Corporation to notify any person of such revision or changes.

Please follow these safety instructions for best performance, and long life for your monitor

## **iii** Power Safety

- The AC plug isolates this equipment from the AC supply.
- The power supply cord serves as a power disconnect device for pluggable equipment. The socket outlet should be installed near the equipment and be easily accessible.
- This product should be operated from the type of power indicated on the marked label. If you are not sure of the type of power available, consult your dealer or local power company.

## **iv** Care And Cleaning

- Cleaning. Always unplug your monitor from the wall outlet before cleaning. Clean the LCD monitor surface with a lint-free, non-abrasive cloth. Avoid using any liquid, aerosol or glass cleaners.
- Slots and openings on the back or top of the cabinet are for ventilation. They must not be blocked or covered. Your monitor should never be placed near or over a radiator or heat source, or in a built-in installation unless proper ventilation is provided.
- Never push objects or spill liquid of any kind into this product.

## **v** Servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltages or other risks. If any of the above mentioned misuse or other accident such as dropping or mishandling occurs, contact qualified service personnel for servicing.

## **i** Table of Contents

|                                                                |           |
|----------------------------------------------------------------|-----------|
| <b>Getting started .....</b>                                   | <b>5</b>  |
| <b>Getting to know your monitor .....</b>                      | <b>7</b>  |
| Front and right side views .....                               | 7         |
| Rear and left side views .....                                 | 7         |
| Locations of cable sockets and ports .....                     | 8         |
| <b>How to install the monitor hardware .....</b>               | <b>9</b>  |
| <b>Getting the most from your BenQ monitor .....</b>           | <b>12</b> |
| How to install the monitor on a new computer .....             | 13        |
| How to upgrade the monitor on an existing computer .....       | 14        |
| How to install on Windows XP systems .....                     | 15        |
| How to install on Windows 2000, ME, & 98 systems .....         | 16        |
| How to complete the Windows Upgrade Device Driver Wizard ..... | 17        |
| <b>How to adjust the screen resolution .....</b>               | <b>19</b> |
| <b>How to adjust the screen refresh rate .....</b>             | <b>20</b> |
| <b>How to set the picture optimization .....</b>               | <b>21</b> |
| <b>How to adjust the monitor .....</b>                         | <b>22</b> |
| Hot Key Mode .....                                             | 23        |
| Main Menu Mode .....                                           | 24        |
| <b>Troubleshooting .....</b>                                   | <b>32</b> |
| Frequently Asked Questions (FAQ) .....                         | 32        |
| Need More Help? .....                                          | 33        |
| <b>Supported operating modes .....</b>                         | <b>34</b> |
| <b>Specifications .....</b>                                    | <b>35</b> |



# 1 Getting started

When unpacking please check you have the following items. If any are missing or damaged, please contact the place of purchase for a replacement.

|                                                                           |                                                                                       |
|---------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| BenQ LCD Color Monitor                                                    |     |
| Quick Start Guide                                                         |   |
| CD-ROM Disk                                                               |  |
| Power Cable<br>(Picture may differ from product supplied for your region) |  |
| Power Adapter                                                             |  |
| USB Cable                                                                 |  |

|                                |                                                                                       |
|--------------------------------|---------------------------------------------------------------------------------------|
| Audio Cable                    |     |
| Signal Cable: D-Sub            |    |
| Signal Cable: DVI-D (optional) |    |
| Speaker Unit: SRS (optional)   |     |
| Web Camera Unit (optional)     |  |

## ② Getting to know your monitor


Front and right side views



Rear and left side views



## Locations of cable sockets and ports

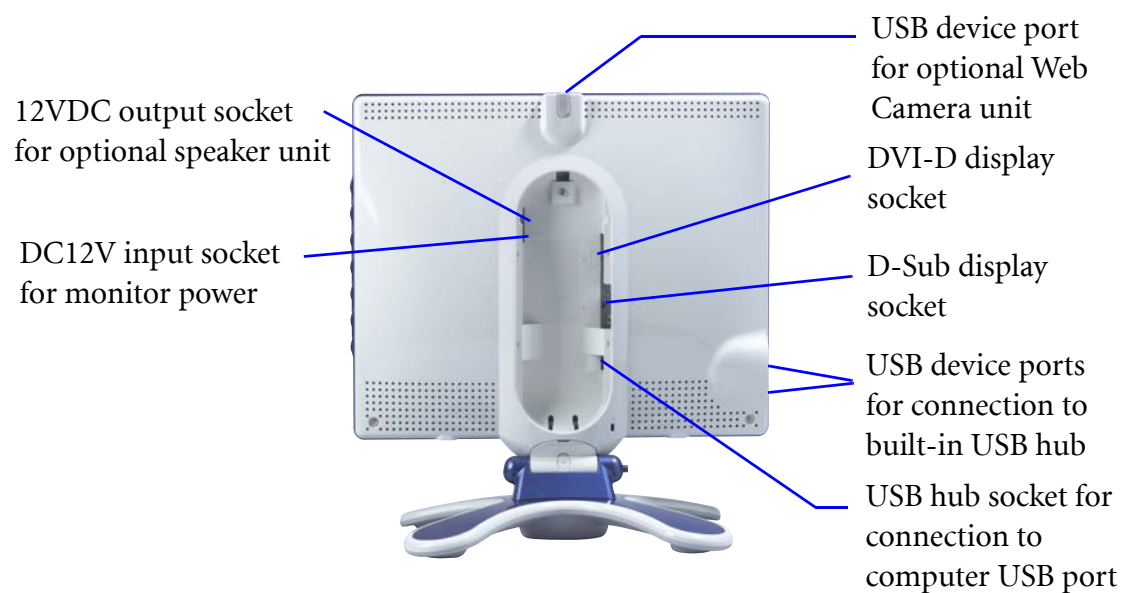



### ③ How to install the monitor hardware



**If the computer is turned on you must turn it off before continuing.  
Do not plug-in or turn-on the power to the monitor until instructed to do so.**

1. Adjust the viewing angle.  
Hold the base steady while pulling the screen upright.



**You should position the monitor and angle the screen to minimize unwanted reflections from other light sources.**



2. Remove the rear cable cover.

Press and hold the locking tab at the top of the cover whilst pulling it away from the screen.

Refer to the diagram on page 8 for socket locations.



3. Connect the video cable.

If you have the optional DVI-D cable and an appropriate DVI-D port on your computer, you should connect it between the monitor and the computer.



**The DVI-D format is used for direct digital connection between source video and digital LCD monitors or projectors. The digital video signals produce a superior quality picture than analog video signals.**



**DVI-D Cable (white plug)**

If you don't have an appropriate DVI-D port on your computer, you can use the standard video D-Sub cable.

Connect the plug of the D-Sub cable (at the end without the ferrite filter) to the monitor D-Sub socket. Connect the other plug of the D-Sub cable (at the end with the ferrite filter) to the computer video D-Sub socket.

Tighten all finger screws to prevent the plugs from accidentally falling out during use.



**VGA D-Sub Cable (blue plug)**

4. Connect the USB hub cable.

Connect the USB cable between the USB socket on the rear of the monitor and a USB port on your computer.



**USB Cable  
(square black plug to monitor)**

5. Connect the 12VDC power cable.

Take the 12VDC power adaptor cable and plug the end into the socket labelled 'POWER IN' on the rear of the monitor. Do not connect the power adapter to a power point just yet.



**Monitor showing all cables in place**

6. Fit the (optional) Speaker unit.

If you have the optional Speaker unit, install it now by following the Speaker Installation Guide.



7. Refit the cable cover.

Replace the cable cover over the cables.



**Monitor showing rear cover in place**

8. Connect-to and turn-on the power.

Plug the power cable into the power adaptor and into a power point and turn it on.

 **Picture may differ from product supplied for your region.**

Turn on the monitor by pressing the power button located at the top of the row of buttons on the right edge of the monitor.

Turn on the computer too, and follow the instructions in [Getting the most from your BenQ monitor](#) to install the monitor software.



## 4 Getting the most from your BenQ monitor

### Monitors and USB hubs

Your BenQ FP783/FP783<sup>+</sup> LCD Monitor is a modern state-of-the-art device. It not only utilizes the latest LCD display technology currently available – it contains a built-in 3 port USB 2.0 hub. Using only one USB 2.0 port on your computer (freeing the others up for other uses), the built-in hub provides close, handy, easy-to-use access for your USB devices.

You could use the USB hub to plug-in your USB keyboard, USB mouse, and USB web camera all at the same time if you wish. Or if you connect your keyboard and mouse directly to your computer, you could use the USB ports on the monitor for connection to your digital camera, digital video camera, USB reader, USB printer, USB memory stick, or any other USB device.

### What do I have to do?

All you have to do, is connect the monitor cables as instructed in [How to install the monitor hardware](#) of this User's Manual, turn the computer and monitor on, then you're ready to Plug-and-Play with USB, Windows, and your BenQ LCD Monitor's USB hub.

Windows 2000 and later comes with integrated USB support. It will automatically detect and identify your USB devices, and install the necessary drivers for them to work. If your USB device was accompanied by the manufacturer's driver or custom software for the device, you need only point Windows in the direction of that driver, and Windows will install it for you.

### How do I gain the most benefit from my new monitor?

To gain the most benefit from your new BenQ color LCD flat screen monitor, you should install the custom BenQ LCD Monitor driver software as provided on the BenQ LCD Monitor CD-ROM.

The circumstances under which you connect and install your BenQ LCD Monitor will determine which process you need to follow to successfully install the BenQ LCD Monitor driver software. These circumstances relate to which version of Microsoft Windows you are using, and whether you are connecting the monitor and installing the software onto a new computer (without existing monitor driver software), or whether you are upgrading an existing installation (which already has existing monitor driver software) with a newer monitor.

In either case however, the very next time you turn on your computer (after connecting the monitor to your computer), Windows will automatically recognise the new (or different) hardware, and will launch its **Found New Hardware** wizard.

Follow the wizard instructions until it asks you to select a monitor model. At that point, click the **Have Disk** button, insert the BenQ LCD Monitor CD-ROM and select the appropriate monitor model. Further details and step-by-step instructions for both an automatic (new) or upgrade (existing) installation follow. See:

- [How to install the monitor on a new computer.](#)
- [How to upgrade the monitor on an existing computer](#)

 **If you require a User Name and Password to login to your Windows computer, you must be logged on as an Administrator or as a member of the Administrators group in order to install the monitor driver software. Furthermore, if your computer is connected to a network which has security access requirements, network policy settings may prevent you from installing software on your computer.**

## How to install the monitor on a new computer

This instruction details the procedure for selecting and installing the BenQ LCD Monitor driver software on a new computer which has never had a monitor driver installed before. This instruction is only suitable for a computer which has never been used before, and for which the BenQ LCD Monitor is the first ever monitor to be connected to it.

 **If you are adding the BenQ LCD Monitor to an existing computer that has already had another monitor connected to it (and has monitor driver software installed), you should not be following these instructions. You should instead be following the instructions for How to upgrade the monitor on an existing computer.**

1. Follow the instructions in [How to install the monitor hardware](#).  
When Windows (2000 or later) starts, it will automatically detect the new monitor and launch the **Found New Hardware Wizard**. Follow the prompts until it displays the option to **Install Hardware Device drivers**.
2. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer.
3. Check **Search for a suitable driver for my device** option, and click **Next**.
4. Check the option for **CD-ROM drives** (uncheck all others) and click **Next**.
5. Look to confirm that the wizard has selected the correct name of your monitor as "BenQ FP783" and click **Next**.
6. Click **Finish**.  
Windows will continue installing other devices it finds. If you connected the USB 2.0 hub cable to a suitable USB 2.0 port on the computer, Windows will automatically detect it and install the appropriate drivers for it. You need not do anything more to get the hub to work for you.
7. Restart the computer.

## How to upgrade the monitor on an existing computer

This instruction details the procedure for manually updating the existing monitor driver software on your Microsoft Windows computer. It is currently tested as compatible (and recommended only) for Windows 98, Windows ME, Windows 2000, and Windows XP Operating System (OS).

 **The BenQ LCD Monitor driver for your model may well function perfectly with other versions of Windows, however, as at the time of writing, BenQ has done no testing of this driver on other versions of Windows and cannot guarantee its operation on those systems.**

Installing monitor driver software involves selecting an appropriate information file (.inf) on the BenQ LCD Monitor CD-ROM for the particular model monitor you have connected, and letting Windows install the corresponding driver files from the CD. You need only steer it in the right direction. Windows has an Upgrade Device Driver Wizard to automate the task and guide you through the file selection and installation process.

See:

- [How to install on Windows XP systems.](#)
- [How to install on Windows 2000, ME, & 98 systems.](#)



## How to install on Windows XP systems

### 1. Open **Display Properties**.

The quickest shortcut to **Display Properties** is through the Windows desktop. Right-click the desktop and select **Properties** from the popup menu.

Alternatively, the Windows menu to **Display Properties** is located in **Control Panel**.

In Windows XP version, **Control Panel** is located directly under the main **Start** menu item. The menu options displayed will depend upon which type of view is selected for your system.

- Under the Classic view, click **Start | Control Panel | Display**.
- Under the Category view, click **Start | Control Panel | Appearance and Themes | Change the screen resolution**.

The **Display Properties** window will display.

### 2. Click the **Settings** tab and the **Advanced** button.

The **Advanced Display Properties** window will display.

### 3. Click the **Monitor** tab and select the 'Plug and Play Monitor' from the list.

If there is only one monitor in the list, it will already be selected for you.

### 4. Click the **Properties** button.

The **Monitor Properties** window will display.

If the driver provider is listed as BenQ, and the model matches that of your new monitor, the proper drivers are already installed, and you need do nothing further. Cancel out of these property windows.

However, if BenQ is not listed as the manufacturer, or the correct model is not currently shown, you will need to continue with these instructions.

### 5. Click the **Driver** tab and the **Update Driver** button.

The **Hardware Update Wizard** will display. Follow the wizard instructions noting the steps below:

### 6. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer you attached the monitor to.

### 7. Check the option 'Install from a list or specific location' and click **Next**.

### 8. Check the option 'Search for the best driver in these locations' and also check 'Search removable media', then click **Next**.

Please wait while the wizard searches for drives and the BenQ LCD Monitor CD inserted in step 6. When complete, the wizard should have found and selected the BenQ driver on the CD appropriate to your monitor model, in this case 'BenQ FP783' in the location 'd:\driver\fp783.inf' or similar.

 **The drive letter for your CD drive may differ from the example above depending upon your system – it may be 'D:' or 'E:' or 'F:' etc.**

### 9. Select (single-click) the file named 'BenQ FP783' on the CD, and click the **Next** button.

This will copy and install the appropriate monitor driver files to your computer.

### 10. Click **Finish**.

This will close the wizard and return you to the **Monitor Properties** window, now renamed **BenQ FP783 Properties**.

### 11. Click **Close**, **OK**, and **OK**.

This will close the **Display Properties** windows. You do not need to restart Windows XP, as the BenQ LCD monitor drivers will operate immediately with no further action required by you.

## How to install on Windows 2000, ME, & 98 systems

 **You do not need to follow this instruction if you are installing onto a computer which has a Windows XP (or later) version system. In that case, see the instructions at [How to install on Windows XP systems](#).**

1. Open **Display Properties**.

The quickest shortcut to **Display Properties** is through the Windows desktop.

Right-click the desktop and select **Properties** from the popup menu.

Alternatively, the Windows menu to **Display Properties** is located in **Control Panel**.

In Windows 2000, ME, & 98 versions, **Control Panel** is located under the **Settings** menu item.

Click **Start | Settings | Control Panel | Display**.

The **Display Properties** window will display.

2. Click the **Settings** tab and the **Advanced** button.

The **Advanced Display Properties** window will display.

3. In Windows 2000, click the **Monitor** tab and the **Properties** button.

The **Monitor Properties** window will display.

Alternatively, on Windows ME or 98, click the **Monitor** tab and the **Change** button.

This will jump you directly to the **Upgrade Device Driver Wizard**, skipping the next step.

4. In Windows 2000, click the **Driver** tab and the **Update Driver** button.

The **Upgrade Device Driver Wizard** will display.

See [How to complete the Windows Upgrade Device Driver Wizard](#).



## How to complete the Windows Upgrade Device Driver Wizard

1. Load the BenQ LCD Monitor CD-ROM which came with your monitor.  
Insert the CD-ROM into a CD drive on the computer you attached the monitor to.  
The autorun User's Guide language selection page will display in your web browser.  
You can select a language and view the online version of this manual from the next window.  
You could then print it out for reference if you wish to work off-line. When you're ready, **Cancel** the browser as it is not required for the Windows **Upgrade Device Driver Wizard**.
2. Launch the Windows **Upgrade Device Driver Wizard** and click **Next**.  
For instructions, see [How to install on Windows 2000, ME, & 98 systems](#).
3. Check the option '**Display a list of known drivers ...**' and click **Next**.
4. Click the **Have Disk** button.  
The **Install From Disk** window will display.
5. Click the **Browse** button and navigate to the BenQ LCD Monitor CD-ROM.  
This is the CD you loaded in step 1 above. The CD Drive will have a Windows designated drive letter (like D: or E: or F:). Select the drive letter corresponding to the drive you put the CD into.
6. Double-click the folder labelled '**Driver**'.  
The contents of the 'Driver' folder will display.
7. Click the **Open** button.  
This will return you to the **Install from Disk** window, and it will have entered the address to the BenQ LCD Monitor CD 'Driver' folder into the field titled '**Copy manufacturer's files from:**'.  
The field will contain something like "D:\Driver", or "E:\Driver", or "F:\Driver".
8. Click the **OK** button.  
This will return you to the **Upgrade Device Driver Wizard**.
9. Select (single-click) the file named **BenQ FP783**, and click the **Next** button.
10. Click **Next**.  
This will copy the appropriate monitor driver files to your computer.
11. Click **Finish**.  
On Windows 2000, this will close the wizard and return you to the **Monitor Properties** window, now renamed '**BenQ FP783 Properties**'.  
Alternatively, on Windows ME and 98, this will return you to the **Advanced Display Properties** window, skipping the next step.  
Should you wish to do so, this is where you can change the screen refresh rate and other monitor properties to suit your needs. See [How to adjust the screen refresh rate](#) for details.
12. In Windows 2000, click **Close**.  
This will close the **BenQ FP783 Properties** window and return you to the **Advanced Display Properties** window.  
Should you wish to do so, this is where you can change the screen refresh rate and other monitor properties to suit your needs. See [How to adjust the screen refresh rate](#) for details.
13. In Windows 2000, click **OK**, or in Windows 98 or ME, click **Close**.  
This will close the **Advanced Display Properties** window, and return you to the **Display Properties** window.

Should you wish to do so, this is where you can change the screen resolution (area and color). See [How to adjust the screen resolution](#) for details.

14. Click **OK**.

This will close the **Display Properties** window, and if you made any changes to the screen resolution, Windows 2000 will prompt you for confirmation to effect the changes, and further confirmation to accept the changes. Click **OK** and **Yes** respectively.

Alternatively, Windows ME or 98 will ask you if want to make the changes and reboot or not reboot. You should select the reboot option as this causes Windows to load the new drivers when it next restarts.

## 5 How to adjust the screen resolution

Due to the nature of liquid crystal display (LCD) technology, the picture resolution is always fixed. The best possible picture for your FP783/FP783<sup>+</sup> is achieved with a resolution of 1280x1024. This is called “Native Resolution” or maximal resolution – that is, the clearest picture. Lower resolutions are displayed on a full screen through an interpolation circuit. However flaws do occur with the interpolated resolution.

 **To take full advantage of LCD technology you should select the native resolution setting of 1280x1024.**

1. Open **Display Properties** and select the **Settings** tab.

You can open **Display Properties** by right-clicking on the Windows desktop and selecting **Properties** from the pop-up menu.

2. Use the slider in the ‘Screen area’ section to adjust the screen resolution.

Select the recommended resolution of 1280x1024 then click **Apply**.



**If you select some other resolution, be aware that this other resolution is interpolated and may not accurately display the screen image as well as it could do at the native resolution setting.**

3. Click **OK** then **Yes**.
4. Close the **Display Properties** window.

## 6 How to adjust the screen refresh rate

You don't have to choose the highest possible refresh rate on an LCD display, because it is not technically possible for an LCD display to flicker. The best results are obtained by using the factory modes already set in your computer. There is a table with the factory modes in the specification section of this User's Manual.



**You can choose 60, 70 and 75 Hertz, (but not 72Hz) for the native resolution of 1280x1024.**

1. Double click the **Display** icon in **Control Panel**.
2. From the **Display Properties** window, select the **Settings** tab and click the **Advanced** button.
3. Select the **Adapter** tab, and select an appropriate refresh rate to match one of the applicable factory modes as listed in the specification table.
4. Click **Change**, **OK**, then **Yes**.
5. Close the **Display Properties** window.

## 7 How to set the picture optimization


The easiest way to obtain an optimal display is to use the *i*key function. Press the *i*key to optimize and adjust the screen settings automatically for you. Refer to [How to adjust the monitor](#) for button locations and functionality.

If you wish to, you can always adjust the screen settings manually using the buttons on the monitor panel. To assist you in this endeavour, BenQ has provided a screen test image utility which you can use to check for screen color, grayscale and line gradient display.

1. Run the test program auto.exe from CD-ROM. You could also use any other image, such as the desktop of your operating system. However, we recommend that you use auto.exe. As you run auto.exe, a test pattern displays.
2. Press the **Enter** key to access the monitor On-Screen Display (OSD) menu.
3. If you notice a vertical noise, press the **▲** or **▼** keys to select **Geometry** and press the **Enter** key. Then press the **▲** or **▼** keys to select **Pixel Clock** and press the **Enter** key again. Then, press the **▲** or **▼** key to adjust the monitor until the noise disappears.
4. If you notice a horizontal noise, press the **▲** or **▼** keys to select **Geometry** and press the **Enter** key. Then press the **▲** or **▼** keys to select **Phase** and press the **Enter** key again. Then, press **▲** or **▼** keys to adjust the monitor until the noise disappears.

To make sure the *i*key function performs well, you have to select one of the supported modes. If the *i*key does not work properly and the **NON PRESET MODE** message is on the OSD, it means you are not using one of the supported modes. Please set your monitor to use one of the supported modes as listed at the end of this manual.

## 8 How to adjust the monitor

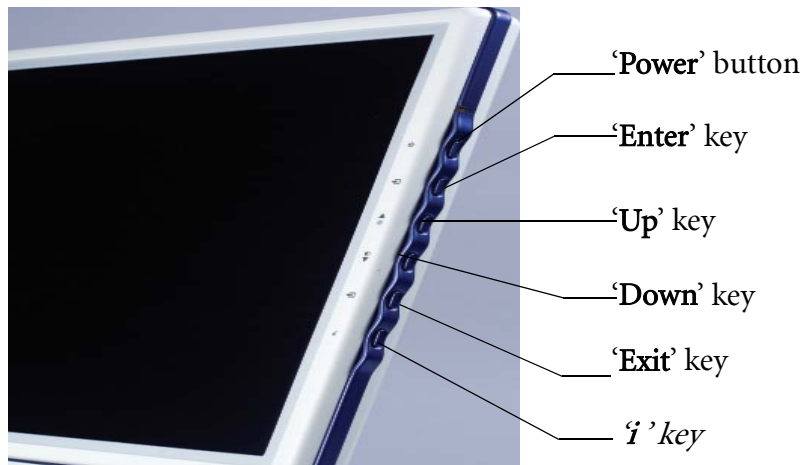

This topic describes how to adjust your BenQ LCD monitor using the push button (keys) on the monitor's edge, to access the monitor properties using the On-Screen Display (OSD).

1. **Power** button: Toggles the power ON or OFF.
2. **Enter** key: Activates the OSD, sub menus, select items, and confirms selection.
3. **▲ (Up)** key: For up/increasing adjustment. The **Up** key is also the hot key for Brightness setting.
4. **▼ (Down)** key: For down/decreasing adjustment. The **Down** key is also the hot key for Contrast setting.
5. **Exit** key: Exits the current menu selection and returns to the previous menu or exits OSD. The **Exit** key is also the hot key for Input settings.
6. **i** key: Adjusts vertical position, phase, horizontal position and pixel clock automatically.

## Hot Key Mode

### Brightness and Contrast hot keys

Press the **▲** key to enter the **Brightness** menu.  
Further press the **▲** or **▼** keys to adjust the degree of screen brightness.  
Then press the **Exit** key to exit the OSD.



Press the **▼** key to enter the **Contrast** menu.  
Further press the **▲** or **▼** keys to adjust the degree of screen contrast.  
Then press the **Exit** key to exit the OSD.



### Input hot key

Press the **Exit** key to enter the **Input Select** menu.  
Choose **D-sub** or **DVI-D** input source by pressing the **▲** or **▼** key and save your choice with "Enter".





## Main Menu Mode

Adjustable monitor functions available in Main Menu

### Main Menu



## Luminance sub menu



Press the ▲ or ▼ keys to adjust the degree of **Brightness**.

Press the **Exit** key to return to previous menu.




Press the ▲ or ▼ keys to adjust the degree of **Contrast**.


Press the **Exit** key to return to previous menu.




## Geometry sub menu

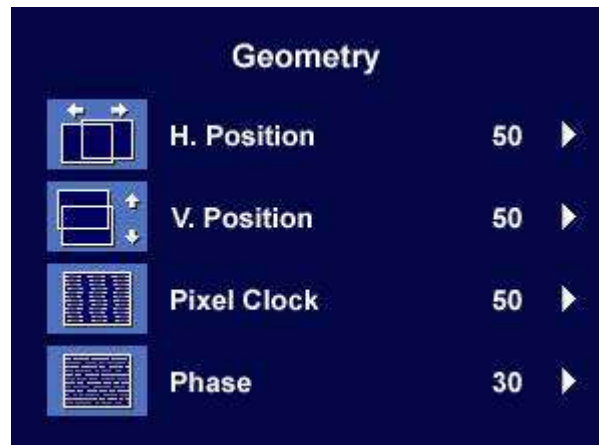


Press the ▲ or ▼ keys to adjust the display **Horizontal Position**.  
Press the **Exit** key to return to previous menu.

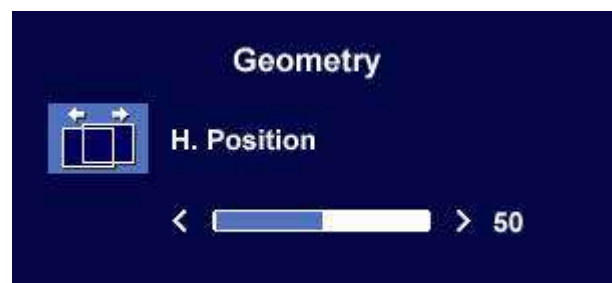


Press the ▲ or ▼ keys to adjust the display **Vertical Position**.  
Press the **Exit** key to return to previous menu.

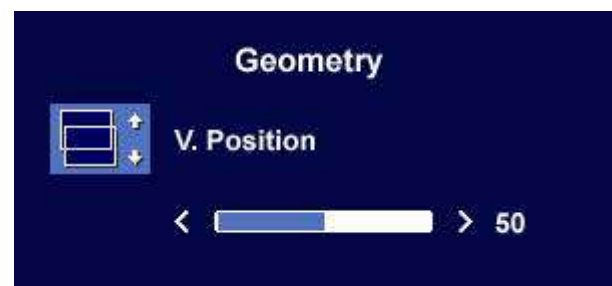


Press the ▲ or ▼ keys to adjust the monitor **Pixel Clock**.  
Press the **Exit** key to return to previous menu.

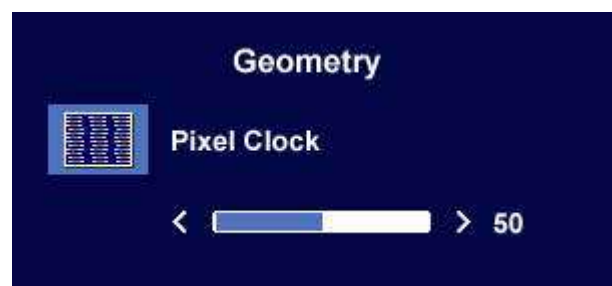

Press the ▲ or ▼ keys to adjust the degree of screen display **Phase**.  
Press the **Exit** key to return to previous menu.

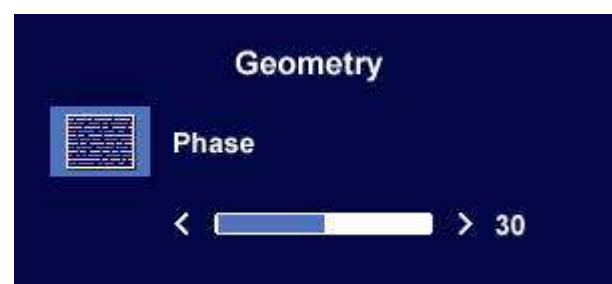

## Color sub menu

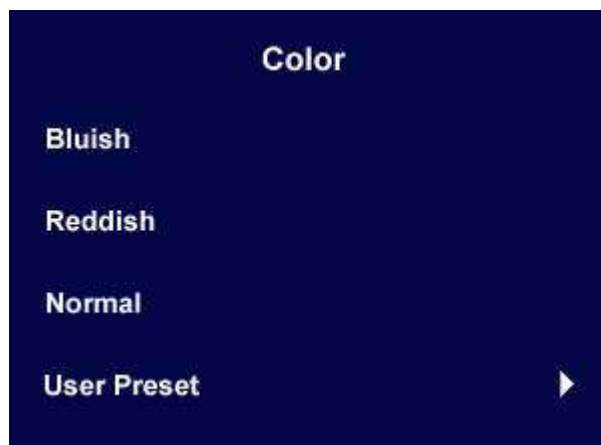

**Bluish** - applies a cool tint to the image and is factory pre-set to the PC industry standard white color.

**Reddish** - applies a warm tint to the image and is factory pre-set to the news print standard white color.

**Normal** - allows video and still photographs to be viewed with natural coloring. This is the factory default color.

### User Preset:


User Preset is provided so you can tailor the image color tint to suit your liking. The blend of the Red, Green and Blue primary colors can be altered to change the color tint of the image. The default start setting is 50. Decreasing one or more of the colors will reduce their respective influence on the color tint of the image. e.g. if you reduce the Blue level the image will gradually take on a yellowish tint. If you reduce Green, the image will become a magenta tint.



☞ To reset the defaults, see [Recall sub menu](#) for details.

## OSD sub menu

### On-Screen Display (OSD)

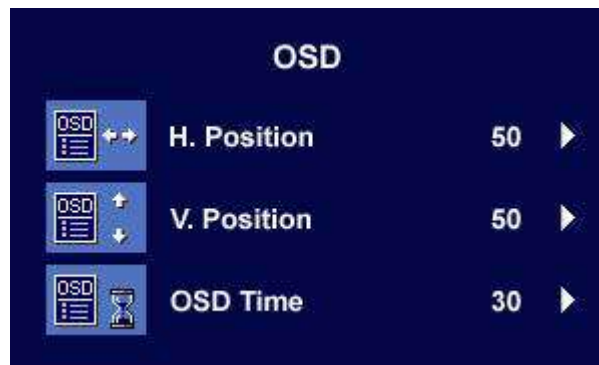

Press the ▲ or ▼ keys to adjust the **Horizontal Position** of the OSD.  
Press the **Exit** key to return to previous menu.



Press the ▲ or ▼ keys to adjust the **Vertical Position** of the OSD.  
Press the **Exit** key to return to previous menu.



Press the ▲ or ▼ keys to adjust the **display time** of the OSD.  
Press the **Exit** key to return to previous menu.




## Languages Sub menu




Press the ▲ or ▼ keys to select a language to have the OSD display menus in that language.  
Press the **Exit** key to return to previous menu.


## Recall sub menu

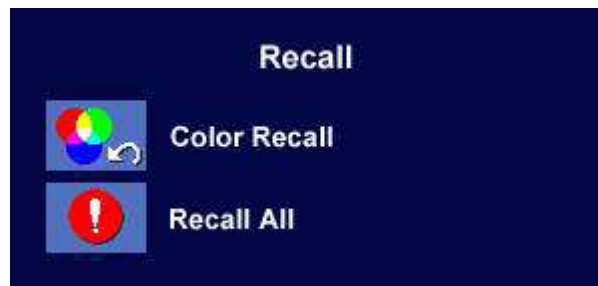

Press the **▲** or **▼** keys to select **Color Recall**.  
Press the **Enter** key to recall color settings, or  
press the **Exit** key to return to previous menu.

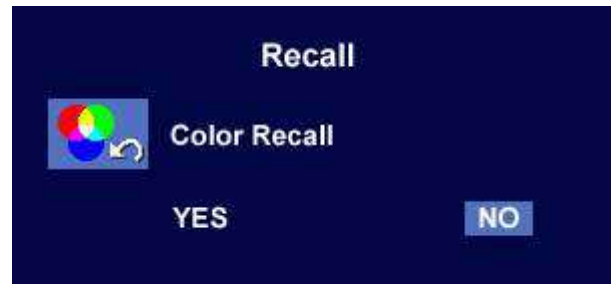


Press the **▲** or **▼** keys to select **Recall All**.  
Press the **Enter** key to recall position and color  
settings, or press the **Exit** key to return to  
previous menu.

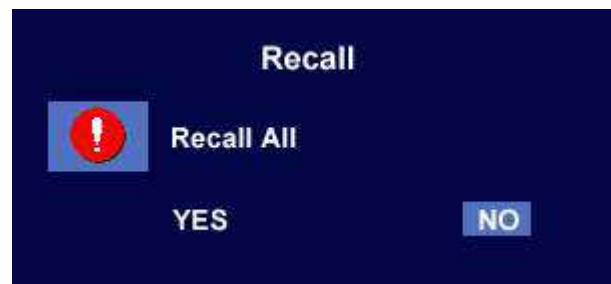



## Miscellaneous sub menu

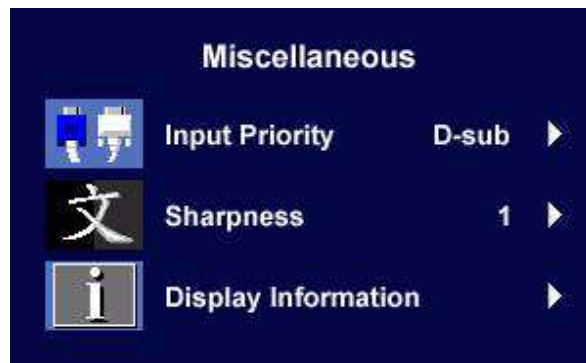


### Input Select:

Press **▲** or **▼** key to choose an input source.  
Press the **Exit** key to return to previous menu.



### Sharpness:

Press the **▲** or **▼** keys to adjust the degree of **Sharpness**.  
Press the **Exit** key to return to previous menu.

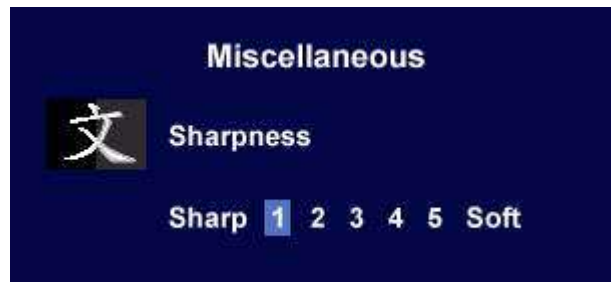

### Display Information:

Select **Display Information** to display the current monitor proerty settings.  
Press the **Exit** key to return to previous menu.



## 9 Troubleshooting

### Frequently Asked Questions (FAQ)

#### ② The image is blurred:

👉 Read the [How to adjust the screen resolution](#) section, and then select the correct resolution, refresh rate and make adjustments based on these instructions.

#### 👉 How do you use a VGA extension cable?

Remove the extension cable for the test. Is the image now in focus? If not, optimize the image by working through the instructions in the [How to adjust the screen refresh rate](#) section. It is normal for blurring to occur due to conduction losses in extension cables. You can minimize these losses by using an extension cable with better conduction quality or with a built-in booster.

#### 👉 Does the blurring only occur at resolutions lower than the native (maximum) resolution?

Read the [How to adjust the screen resolution](#) section. Select the native resolution.

#### ② Pixel errors can be seen:

👉 One of several pixels are permanently black, one or more pixels are permanently white, one or more pixels are permanently red, green, blue or another color.

- Clean the LCD screen.
- Cycle power on-off.
- These are pixels that are permanently on or off and is a natural defect that occurs in LCD technology.

#### ② The image has a faulty coloration:

👉 It has a yellow, blue or pink appearance.

On the monitor, press “Enter” key and press ▲ or ▼ key to move to the “Recall” icon and press “Enter” key to enter “Recall” sub menu. Press ▲ or ▼ key to select “Color Recall” and select “Yes” in “Color Recall” sub menu, then press “Enter” key to recall to factory settings. If the image is still not correct and the OSD also has faulty coloration, this means one of the three primary colors is missing in the signal input. Now check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.

#### ② No image can be seen:

👉 Is the prompt on the display illuminated in green?

If the LED is illuminated in green and there is a message “Out of Range” on the screen, this means you are using a display mode that this monitor does not support, please change the setting to one of the supported mode. Please read “[Supported operating modes](#)” section.

👉 Is the prompt on the display illuminated in orange?

If the LED is illuminated in orange, the power management mode is active. Press any button on the computer keyboard or move the mouse. If that does not help, check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.

👉 Is the prompt on the display not illuminated at all?

Check the power supply mains socket, the external power supply and the mains switch.

② The image is distorted, flashes or flickers:

☞ Read the [How to adjust the screen resolution](#) section and then select the correct resolution, refresh rate and make adjustments based on these instructions.

② The image is displaced in one direction:

☞ Read the [How to adjust the screen resolution](#) section and then select the correct resolution, refresh rate and make adjustments based on these instructions.

## Need More Help?

If your problems remain after checking this manual, please contact your place of purchase or e-mail us at: [Support@BenQ.com](mailto:Support@BenQ.com)

## 10 Supported operating modes

| Incoming display mode (Input timing) |                            |                         |                           |           | Multi-scan operation      |
|--------------------------------------|----------------------------|-------------------------|---------------------------|-----------|---------------------------|
| Resolution                           | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Dot Clock Frequency (MHz) | Remark    | Actual display resolution |
| 640x350                              | 31.47(P)                   | 70.08(N)                | 25.17                     | DOS       | 1280x943                  |
| 720x400                              | 31.47(N)                   | 70.08(P)                | 28.32                     | DOS       | full screen<br>1280x1024  |
| 640x480                              | 31.47(N)                   | 60.00(N)                | 25.18                     | DOS       |                           |
| 640x480                              | 35.00(N)                   | 67.00(N)                | 30.24                     | Macintosh |                           |
| 640x480                              | 37.86(N)                   | 72.80(N)                | 31.50                     | VESA      |                           |
| 640x480                              | 37.50(N)                   | 75.00(N)                | 31.50                     | VESA      |                           |
| 800x600                              | 35.16(P)                   | 56.25(P)                | 36.00                     | VESA      |                           |
| 800x600                              | 37.88(P)                   | 60.32(P)                | 40.00                     | VESA      |                           |
| 800x600                              | 48.08(P)                   | 72.19(P)                | 50.00                     | VESA      |                           |
| 800x600                              | 46.87(P)                   | 75.00(P)                | 49.50                     | VESA      |                           |
| 832x624                              | 49.72(N)                   | 74.55(N)                | 57.29                     | Macintosh |                           |
| 1024x768                             | 48.36(N)                   | 60.00(N)                | 65.00                     | VESA      |                           |
| 1024x768                             | 56.48(N)                   | 70.10(N)                | 75.00                     | VESA      |                           |
| 1024x768                             | 60.02(P)                   | 75.00(P)                | 78.75                     | VESA      |                           |
| 1152x864                             | 67.50(P)                   | 75.00(P)                | 108.00                    | VESA      |                           |
| 1152x870                             | 68.68(N)                   | 75.06(N)                | 100.00                    | Macintosh |                           |
| 1152x900                             | 61.80(N)                   | 66.00(N)                | 94.50                     | SUN 66    |                           |
| 1152x900                             | 71.81(N)                   | 76.14(N)                | 108.00                    | SUN       |                           |
| 1280x1024                            | 64.00(P)                   | 60.00(P)                | 108.00                    | VESA      |                           |
| 1280x1024                            | 75.83(N)                   | 71.53(N)                | 128.00                    | IBMI      |                           |
| 1280x1024                            | 80.00(P)                   | 75.00(P)                | 135.00                    | VESA      |                           |
| 1280x1024                            | 81.18(N)                   | 76.16(N)                | 135.09                    | SPARC2    |                           |

- Modes not listed in the table may not be supported. For an optimal picture, we recommended you choose a mode listed in the table above.
- There are 22 available modes that are compatible with Windows.
- Image disruption may occur as a result of signal frequency differences from VGA cards which do not correspond with the usual standard. This is not, however, an error. You may improve this situation by altering an automatic setting or by manually changing the phase setting and the pixel frequency from the “Geometry” menu.
- If you switch off the monitor, interference lines can occur on your screen. But do not be concerned about this, as it is normal.
- To extend the service life of the product, we recommend that you use your computer's power management function.

# 11 Specifications

BenQ FP783

| Model                               | FP783                                                                                                                                                                                     |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display type                        | 17.0" , active, TFT                                                                                                                                                                       |
| Viewable diagonal                   | 43.2 cm                                                                                                                                                                                   |
| Native (maximum) resolution         | 1,280X1,024                                                                                                                                                                               |
| Colors                              | 16.2 million                                                                                                                                                                              |
| Contrast / Brightness               | 500:1 / 300 cd/m <sup>2</sup>                                                                                                                                                             |
| Response time                       | 12 ms                                                                                                                                                                                     |
| Viewing angle (left/right, up/down) | 140, 140 (CR=10)<br>160, 160 (CR=5)                                                                                                                                                       |
| Line frequency                      | 31.47 - 81.18 kHz Multi- frequency monitor                                                                                                                                                |
| Image frequency                     | 60 - 76 Hz modes within these parameters                                                                                                                                                  |
| Image checks                        | Digital, <i>Screen</i> OSD Technology, <i>iKey</i> (automatic image setting)                                                                                                              |
| Controls                            | 5 buttons and <i>iKey</i> .                                                                                                                                                               |
| Functions                           | Contrast, brightness, vert. & hor. image position, phase, pixel clock, color balance, color palette, choice of language (8 language OSD), OSD position, status indicator, input selection |
| Power Management                    | VESA DPMS, EPA                                                                                                                                                                            |
| Max. power consumption              | 60 Watt                                                                                                                                                                                   |
| Power saving mode                   | < 3 Watt                                                                                                                                                                                  |
|                                     |  This product comply with ENERGY STAR® Program Requirements Computer Monitors. Version 4.0             |
| Input signal                        | RGB analog 0.7 Vpp/75 Ohm positive                                                                                                                                                        |
|                                     | Digital: DVI-D                                                                                                                                                                            |
| Synchronisation                     | TTL separate signal connection 15-pin mini D-sub cable                                                                                                                                    |
| Temperature (operating)             | 5 °C - 40 °C                                                                                                                                                                              |
| Air humidity (operating)            | 20% - 80%                                                                                                                                                                                 |
| Certifications                      | TCO 99, TÜV/Ergonomics, TÜV/ GS, FCC Class B, ISO 13406-2, VCCI, UL, CB Report, CE, C-Tick, BSMI, Fimko, GOST                                                                             |
| Operating voltage                   | 100-240 V,<br>50-60 Hz                                                                                                                                                                    |
| Dimensions (H x W x D)              | 387 x 398 x 250 mm                                                                                                                                                                        |
| Weight                              | 5.2 kg                                                                                                                                                                                    |

| Model                               | FP783 <sup>+</sup>                                                                                                                                                                        |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display type                        | 17.0" , active, TFT                                                                                                                                                                       |
| Viewable diagonal                   | 43.2 cm                                                                                                                                                                                   |
| Native (maximum) resolution         | 1,280X1,024                                                                                                                                                                               |
| Colors                              | 16.2 million                                                                                                                                                                              |
| Contrast / Brightness               | 500:1 / 300 cd/m <sup>2</sup>                                                                                                                                                             |
| Response time                       | 8 ms                                                                                                                                                                                      |
| Viewing angle (left/right, up/down) | 140, 130 (CR=10)<br>160, 160 (CR=5)                                                                                                                                                       |
| Line frequency                      | 31.47 - 81.18 kHz Multi- frequency monitor                                                                                                                                                |
| Image frequency                     | 60 - 76 Hz modes within these parameters                                                                                                                                                  |
| Image checks                        | Digital, <i>Screen OSD Technology, iKey</i> (automatic image setting)                                                                                                                     |
| Controls                            | 5 buttons and <i>iKey</i> .                                                                                                                                                               |
| Functions                           | Contrast, brightness, vert. & hor. image position, phase, pixel clock, color balance, color palette, choice of language (8 language OSD), OSD position, status indicator, input selection |
| Power Management                    | VESA DPMS, EPA                                                                                                                                                                            |
| Max. power consumption              | 60 Watt                                                                                                                                                                                   |
| Power saving mode                   | < 3 Watt                                                                                                                                                                                  |
|                                     |  This product comply with ENERGY STAR® Program Requirements Computer Monitors. Version 4.0             |
| Input signal                        | RGB analog 0.7 Vpp/75 Ohm positive                                                                                                                                                        |
|                                     | Digital: DVI-D                                                                                                                                                                            |
| Synchronisation                     | TTL separate signal connection 15-pin mini D-sub cable                                                                                                                                    |
| Temperature (operating)             | 5 °C - 40 °C                                                                                                                                                                              |
| Air humidity (operating)            | 20% - 80%                                                                                                                                                                                 |
| Certifications                      | TCO 99, TÜV/Ergonomics, TÜV/ GS, FCC Class B, ISO 13406-2, VCCI, UL, CB Report, CE, C-Tick, BSMI, Fimko, GOST                                                                             |
| Operating voltage                   | 100-240 V,<br>50-60 Hz                                                                                                                                                                    |
| Dimensions (H x W x D)              | 387 x 398 x 250 mm                                                                                                                                                                        |
| Weight                              | 5.2 kg                                                                                                                                                                                    |