

Register your product and get support at
www.philips.com/welcome

FWM613/55



EN User manual

PHILIPS

México



Es necesario que lea cuidadosamente su instructivo de manejo.

	PRECAUCIÓN - ADVERTENCIA No abrir, riesgo de choque eléctrico	
	ATENCIÓN Verifique que el voltaje de alimentación sea el requerido para su aparato	
Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado.		

Descripción: **Minisistema de Audio**
Modelo : **FWM613/55**
Alimentación: **110-127 / 220-240V~ ; 50/60 Hz**
Consumo: **130W**
Importador: **Philips Mexicana, S.A. de C.V.**
Domicilio: **Av. La Palma No.6**
Col. San Fernando La Herradura
Huixquilucan
Localidad y Tel: **Edo. de México C.P. 52784**
Tel.52 69 90 00
Exportador: **Philips Electronics HK, Ltd.**
País de Origen: **China**
N° de Serie: _____

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.**

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).*
- Cuando el aparato no haya sido operado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.*
- Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).*

Contents

1 Important	4
Safety	4
Notice	5

2 Your Mini Hi-Fi	6
Introduction	6
What's in the box	6
Overview of the main unit	7
Overview of the remote control	8

3 Connect	10
Connect FM antenna	10
Connect AM antenna	10
Connect speakers	10
Connect power	11

4 Get started	12
Prepare the remote control	12
Auto install radio stations	12
Set clock	13
Turn on	13

5 Play	14
Play disc	14
Play from USB	14

6 Play options	15
Repeat and random play	15
Program tracks	15
Display play information	15

7 Adjust volume level and sound effect	16
Adjust volume level	16
Mute sound	16
Boost loudness	16
Select a preset sound effect	16
Enhance bass	16
Virtual surround	16
Customize sound for room acoustics	16

8 Listen to radio	17
Tune to a radio station	17
Program radio stations automatically	17
Program radio stations manually	17
Select a preset radio station	17
Change AM tuning grid	17

9 USB record	18
Record to USB	18
Schedule radio-to-USB record	18

10 Other features	20
Set the alarm timer	20
Set the sleep timer	20
Listen to an external device	20
Delete files in the USB device	21
Karaoke	21
Adjust display brightness	21
Select button light display	21

11 Product information	22
Specifications	22
USB playability information	23
Supported MP3 disc formats	23
Maintenance	23

12 Troubleshooting	24
---------------------------	----

1 Important

Safety

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.

- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑰ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- ⑱ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this Mini Hi-Fi.
- Never lubricate any part of this Mini Hi-Fi.
- Never place this Mini Hi-Fi on other electrical equipment.
- Keep this Mini Hi-Fi away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside the Mini Hi-Fi.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the Mini Hi-Fi from the power.



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



**Be responsible
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Environmental information


All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

 This Mini Hi-Fi includes this label:

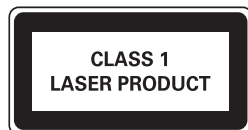

2 Your Mini Hi-Fi

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

Introduction

With this Mini Hi-Fi, you can enjoy audio from discs, USB devices, external devices, or radio stations.

For your convenience, you can load up to 3 discs at once.

To enrich sound, this Mini Hi-Fi offers you these sound effects:

- MAX sound for instant power boost
- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)
- Incredible surround (IS)
- Virtual Ambience-based Control (VAC)

The Mini Hi-Fi supports the following media formats:

 


What's in the box

Check and identify the contents of your package:

- Main unit x 1
- AC power cable x 1
- Power plug adaptor x 1
- Loudspeaker box x 2
- Subwoofer x 1
- Remote control with 2 AAA batteries
- FM wire antenna x 1
- AM loop antenna x 1
- MP3 link cable x 1

Overview of the main unit

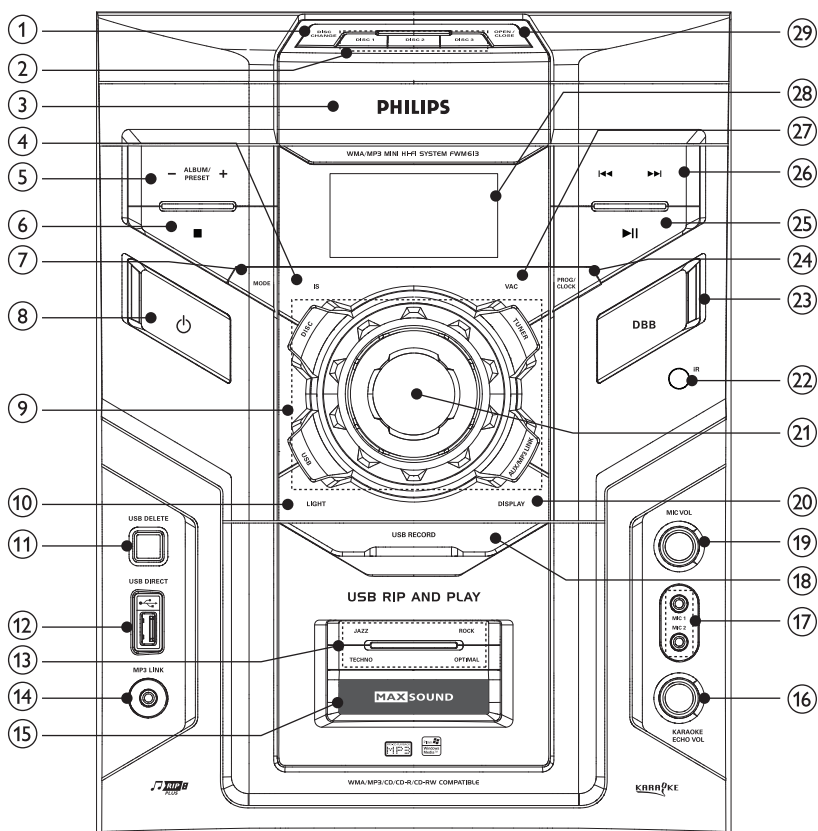

① DISC CHANGE

- Change a disc.

② DISC 1/2/3

- Select a disc.

③ Disc compartment door

④ IS

- Turn on or off incredible surround.

⑤ ALBUM/PRESET+/-

- Skip to the previous/next album.
- Select a preset radio station.
- Adjust time.
- Select 12 hour or 24 hour format.

⑥ ■

- Stop play or erase a program.

⑦ MODE

- Select repeat play or random play.

⑧ ⏻

- Turn on the Mini Hi-Fi, or switch to standby mode.

⑨ Source selection keys

- Select a source.


⑩ LIGHT

- Select a lighting effect for the main unit buttons.

- ⑪ **USB DELETE**
 - Delete audio files stored on a USB device.
- ⑫ **USB DIRECT**
 - Jack for a USB mass storage device.
- ⑬ **DSC**
 - Select a preset sound equalizer setting.
- ⑭ **MP3 LINK**
 - Audio input jack (3.5mm) for an external audio device.
- ⑮ **MAX SOUND**
 - Turn on or off instant power boost for sound.
- ⑯ **KARAOKE ECHO VOL**
 - Adjust echo level.
- ⑰ **MIC 1/2**
 - Jack for a microphone.
- ⑱ **USB RECORD**
 - Record from a disc or radio to a USB device.
- ⑲ **MIC VOL**
 - Adjust microphone volume.
- ⑳ **DISPLAY**
 - Select display information.
- ㉑ **VOLUME**
 - Adjust volume.
- ㉒ **iR**
 - Remote sensor.
- ㉓ **DBB**
 - Turn on or off dynamic bass enhancement.
- ㉔ **PROG/CLOCK**
 - Program tracks.
 - Program radio stations.
 - Set the clock.
- ㉕ **▶||**
 - Start or pause play.
- ㉖ **⏮⏭⏭⏭**
 - Skip to the previous/next track.
 - Search within a track/ disc/USB.
 - Tune to a radio station.
 - Adjust time.

- ㉗ **VAC**
 - Select an ambience-based equaliser setting.
- ㉘ **Display panel**
 - Show current status.
- ㉙ **OPEN/CLOSE**
 - Open or close the disc compartment.

 Overview of the remote control

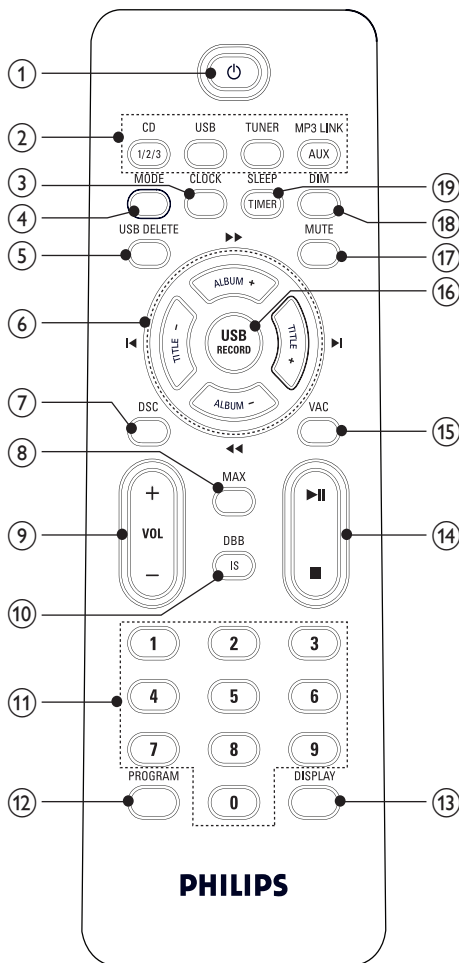

- ① 
 - Turn on the Mini Hi-Fi, or switch to standby mode.
- ② **Source selection keys**
 - Select a source.
- ③ **CLOCK**
 - Set the clock.
- ④ **MODE**
 - Select repeat play or random play.
- ⑤ **USB DELETE**
 - Delete audio files stored on a USB device.
- ⑥ **TITLE+/-◀▶**
 - Skip to the previous/next track.
 - Select a preset radio station.
 - Adjust time.

ALBUM +/-◀▶▶▶

 - Skip to the previous/next album.
 - Search within a track/ disc/USB.
 - Tune to a radio station.
 - Adjust time.
- ⑦ **DSC**
 - Select a preset sound equalizer setting.
- ⑧ **MAX**
 - Turn on or off instant power boost for sound.
- ⑨ **VOL +/-**
 - Adjust volume.
- ⑩ **DBB/IS**
 - Turn on or off dynamic bass enhancement.
 - Turn on or off incredible surround.
- ⑪ **Numeric keypad**
 - Select a track from a disc directly.
- ⑫ **PROGRAM**
 - Program tracks.
 - Program radio stations.
- ⑬ **DISPLAY**
 - Select display information.
- ⑭ 
 - Stop play or erase a program.

 


 - Start or pause play.
- ⑮ **VAC**
 - Select an ambience-based equaliser setting.
- ⑯ **USB RECORD**
 - Record to a USB device.
- ⑰ **MUTE**
 - Mute volume.
- ⑱ **DIM**
 - Select different levels of display brightness.
- ⑲ **SLEEP/TIMER**
 - Set the sleep timer.
 - Set the alarm timer.

3 Connect


Connect FM antenna

- 1 Connect the supplied FM antenna to the **FM** jack on the back of the main unit.

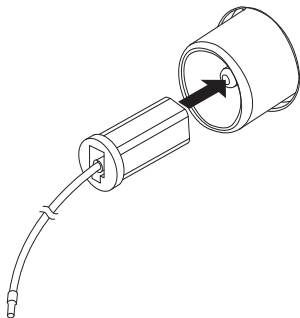


Connect AM antenna

 - 1 Assemble the AM loop antenna.

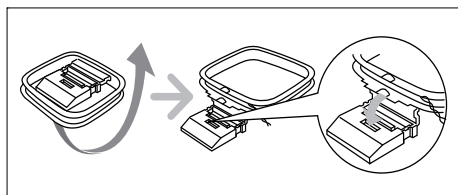

 - 2 Connect the AM loop antenna to the **AM** jack on the back of the main unit.

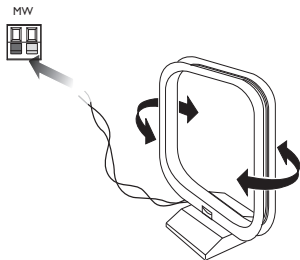


Connect speakers




Note

 - For optimal sound, use the supplied speakers only.
- Connect only speakers with impedance that is the same or higher than the supplied speakers. Refer to the Specifications section of this manual.

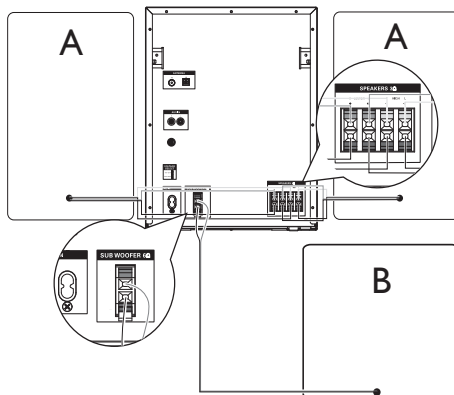

A: left/right speaker; B: Subwoofer

 - 1 For the right speaker, find the sockets on the main unit marked "R".
- 2 Insert the blue-black wires into a pair of blue-black (+/-) sockets, the blue wire into the blue (+) socket, the black wire into the black (-) socket.
- 3 Insert each speaker wire:
 - ① Hold down the socket flap.
 - ② Insert the stripped part of the wire completely.
 - ③ Release the socket flap.

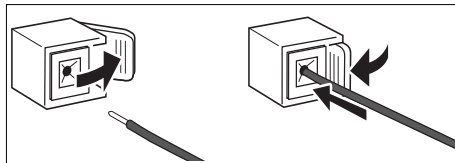


- 4 Insert the white-black wires into a pair of white-black (+/-) sockets, the white wire into the white (+) socket, the black wire into the black (-) socket.
- 5 For the left speaker, find the sockets on the main unit marked "L".
- 6 Repeat steps 2-4 to connect the left speaker.
- 7 For the subwoofer, find the sockets on the main unit marked "SUBWOOFER", the red wire into the red (+) socket, the black wire into the black (-) socket.
- 8 Repeat step 3 to connect the subwoofer.

Note

- The type plate is located on the back of the main unit.

- 1 If your power supply voltage is 110V-127V, adjust the voltage selector to 110V-127V.
- 2 Connect the AC power cable to:
 - the main unit.
 - the wall socket.

 Connect power

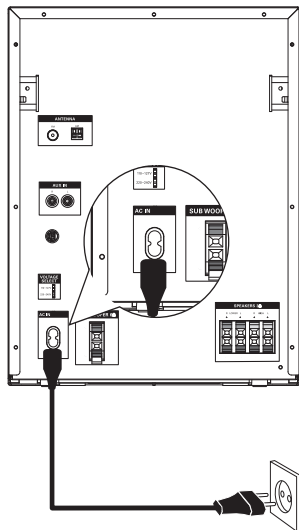

Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage set on the voltage selector on the back of the Mini Hi-Fi.
- Before connecting the AC power cord, ensure you have completed all other connections.

4 Get started

! Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your Mini Hi-Fi. The model number and serial number are on the back of your Mini Hi-Fi. Write the numbers here:

Model No. _____

Serial No. _____

 
Prepare the remote control

! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

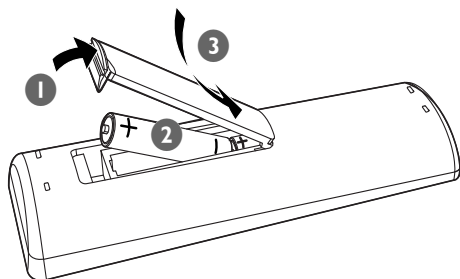

≡ Note

- If you are not going to use the remote control for a long time, remove the batteries.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Auto install radio stations

When you connect power and no radio stations are stored, the Mini Hi-Fi automatically begins to store radio stations.

- 1 Connect the Mini Hi-Fi to the power supply.
 - ↳ [AUTO INSTALL - PRESS PLAY] (auto install - press the PLAY button) is displayed.
- 2 Press ► on the main unit to start installation.
 - ↳ [AUTO] (auto) is displayed.
 - ↳ The Mini Hi-Fi automatically stores radio stations with sufficient signal strength.
 - ↳ When all the available radio stations are stored, the first preset radio station is broadcast automatically.

Set clock

- 1 In the standby mode, press **CLOCK** to activate the clock setting mode.
↳ The 12 hour or 24 hour format is displayed.
- 2 Press **ALBUM +/-◀▶** repeatedly to select 12 hour or 24 hour format.
- 3 Press **CLOCK** to confirm.
↳ The clock digits are displayed and begin to blink.
- 4 Press **ALBUM +/-◀▶** to set the hour.
- 5 Press **TITLE+/-◀▶** to set the minute.
- 6 Press **CLOCK** to confirm.



Tip

- To view the clock during play, press **CLOCK**.

Turn on

- 1 Press **⏻**.
↳ The Mini Hi-Fi switches to the last selected source.

 
Switch to standby

- 1 Press **⏻** to switch the Mini Hi-Fi to standby mode.
↳ The backlight on the display panel turns off.
↳ The clock (if set) appears on the display panel.

5 Play


Play disc

- 1 Press **CD 1/2/3** to select the disc source.
- 2 Press **OPEN/CLOSE** on the main unit to open the disc compartment.
- 3 Load up to two discs on the disc trays, with the printed side facing up
 - To load the third disc, press **DISC CHANGE** on the main unit to rotate to the disc tray.

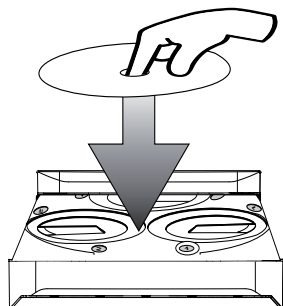

- 4 Press **OPEN/CLOSE** on the main unit to close the disc compartment.
- 5 Press **▶||** to start play.
 - To select a disc, press **CD 1/2/3**.
 - To pause/resume play, press **▶||**.
 - To stop play, press **■**.
 - To select another track, press **TITLE +/- ◀▶** or press a numeric button.
 - To select an folder, press **ALBUM +/- ◀▶▶**.
 - To search within a track, press and hold **ALBUM +/- ◀▶▶**, then release to resume normal play.

 Play from USB

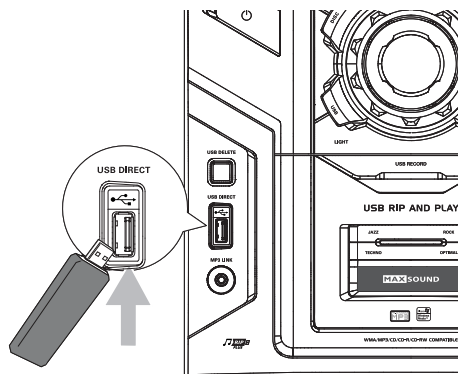

Note

- Ensure that the USB device contains playable audio contents for supported formats.

- 1 Insert the USB plug of the device into the  socket.
- 2 Press **USB** to select the USB source.
- 3 Press **ALBUM +/- ◀▶▶** to select a folder.
- 4 Press **TITLE +/- ◀▶▶** to select an audio file.
- 5 Press **▶||** to start play.
 - To pause/resume play, press **▶||**.
 - To stop play, press **■**.
 - To search within an audio file, press and hold **ALBUM +/- ◀▶▶**, then release to resume normal play.

6 Play options

Repeat and random play

- 1 Press **MODE** repeatedly to select:
 - : the current track is played repeatedly.
 - ALL: all tracks are played repeatedly.
 - ALL: all tracks are played randomly and repeatedly.
 - : all tracks are played randomly.
- 2 To return to normal play, press **MODE** repeatedly until play mode is no longer displayed.



Tip

- Shuffle play cannot be selected when you play programmed tracks.

Display play information

- 1 During play, press **DISPLAY** repeatedly to select different play information.

Program tracks

You can program a maximum of 40 tracks.

- 1 At CD/USB mode, in the stop position, press **PROGRAM** to activate the program mode.
 - ↳ [PROG] (program) blinks on the display.
- 2 For MP3/WMA tracks, press **ALBUM +/-**   to select an album.
- 3 Press **TITLE +/-**   to select a track number, then press **PROGRAM** to confirm.
- 4 Repeat steps 2 to 3 to select and store all tracks to program.
- 5 Press **▶||** to play the programmed tracks.
 - ↳ During play, [PROG] (program) is displayed.
 - To erase the program, in the stop position, press **■**.

7 Adjust volume level and sound effect



Note

- MAX sound and DSC (Digital Sound Control) cannot be activated at the same time.

Adjust volume level

- 1 During play, press **VOL +/-** to increase/decrease the volume level.

Mute sound

- 1 During play, press **MUTE** to mute/unmute sound.

Boost loudness

MAX gives an instant boost to the sound power .

- 1 Press **MAX** to turn on or off the instant power boost.
 - ↳ If MAX sound is activated, **MAX** is displayed.

Select a preset sound effect

The DSC (Digital Sound Control) enables you to enjoy special sound effects.

- 1 During play, press **DSC** repeatedly to select:
 - [JAZZ] (jazz)
 - [ROCK] (rock)
 - [TECHNO] (techno)
 - [OPTIMAL] (optimal)

Enhance bass

The best DBB (Dynamic Bass Enhancement) setting is generated automatically for each DSC selection. You can manually select the DBB setting that best suits your listening environment.

- 1 During play, press **DBB/IS** repeatedly to select:
 - DBB 1
 - DBB 2
 - DBB 3
 - DBB off
 - ↳ If DBB is activated, **DBB** is displayed.

Virtual surround

You can enhance audio with a virtual surround sound effect.

- 1 Press and hold **DBB/IS** to turn on or off the incredible surround.
 - On the main unit, press **IS**.
 - ↳ If the incredible surround is activated, [INC SURR] (incredible surround) is displayed.

Customize sound for room acoustics

- 1 During play, press **VAC** repeatedly to select a type of listening environment:
 - [HALL] (hall)
 - [CONCERT] (concert)
 - [CINEMA] (cinema)

8 Listen to radio

Tune to a radio station

- 1 Press **TUNER** repeatedly to select FM or AM.
- 2 Press and hold **ALBUM +/-◀▶▶▶** for more than 2 seconds.
 - ↳ [SEARCH] (search) is displayed.
 - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.
 - To tune to a weak station, press **ALBUM +/-◀▶▶▶** repeatedly until you find optimal reception.

Program radio stations automatically

You can program a maximum of 40 preset radio stations.

- 1 In the tuner mode, press and hold **PROGRAM** for more than 2 seconds to activate automatic program mode.
 - ↳ [AUTO] (auto) is displayed.
 - ↳ All available stations are programmed in the order of waveband reception strength.
 - ↳ The first programmed radio station is broadcast automatically.

Program radio stations manually

You can program a maximum of 40 preset radio stations.

- 1 Tune to a radio station. (see 'Tune to a radio station' on page 17)

- 2 Press **PROGRAM** to activate program mode.
 - ↳ [PROG] (program) blinks on the display.
- 3 Press **TITLE+/-◀▶▶▶** to allocate a number to this radio station, then press **PROGRAM** to confirm.
 - ↳ The preset number and the frequency of the preset station are displayed.
- 4 Repeat the above steps to program other stations.



Tip

- To overwrite a programmed station, store another station in its place.

Select a preset radio station

- 1 In tuner mode, press **TITLE+/-◀▶▶▶** to select a preset number.



Tip

- Position the antenna as far as possible from TV, VCR or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

Change AM tuning grid

In some countries, the AM radio frequency step between adjacent channels is 9 kHz (10 kHz in some areas).

- 1 Select the tuner source.
- 2 Press and hold **■** on the main unit for more than 5 seconds.
 - ↳ The frequency step is changed to 9 kHz or 10 kHz.
 - ↳ All preset stations are erased and need to be re-programmed.

9 USB record

Audio CD tracks, MP3 files, radio and audio from external devices are recorded in .mp3 format, and WMA files are recorded in .wma format. The first time you record to USB, a folder called 'PHILIPS' is automatically created in the USB device. Each time you record to USB, the recorded files are stored in a sub-folder in the 'PHILIPS' folder. Files and sub-folders are named numerically in the order in which they are created.

Record to USB

- 1 Plug the USB device into the  socket of this Mini Hi-Fi.
- 2 Prepare the source to record from.
 - Disc - load a disc (see 'Play disc' on page 14). You can select a track from which a recording starts.
 - Radio - tune to a radio station. (see 'Tune to a radio station' on page 17)
 - MP3 LINK/AUX - connect and start to play an external device. (see 'Listen to an external device' on page 20)
- 3 Press **USB RECORD** to start recording.
 - For discs, press **USB RECORD** repeatedly to select:
 - (A) [REC ONE] (record one): the first/ current track is recorded.
 - (B) [REC ALL] (record all): all tracks/the remaining tracks are recorded.
 - ↳ Disc play starts automatically from the beginning of the disc/the selected track, and the recording starts.
 - To stop recording, press **■**.



Note

- If the USB device does not have enough memory to store the audio files, [MEMORY FULL] (memory full) is displayed.

Schedule radio-to-USB record

Schedule radio recordings in advance and you can listen to your favorite programs at your convenience.



Note

- The maximum length of a recording is 12 hours.

- 1 Ensure that you have set the clock correctly. (see 'Set clock' on page 13)
- 2 Insert the USB plug of the device into the  socket.
- 3 Tune to a radio station. (see 'Tune to a radio station' on page 17)
- 4 Press **⏻** to switch to standby mode.
- 5 Press and hold **SLEEP/TIMER** for more than 2 seconds.
 - ↳ A prompt to select the source is displayed.
- 6 Press **TUNER** to select the tuner source.
- 7 Press **USB RECORD**.
 - ↳ The start timer digits are displayed and begin to blink.
- 8 Press **ALBUM +/-◀▶▶** to set the hour.
- 9 Press **TITLE+/-◀▶▶** to set the minute.
- 10 Press **SLEEP/TIMER** to confirm.
 - ↳ The end timer digits are displayed and begin to blink.
- 11 Press **ALBUM +/-◀▶▶** to set the hour.
- 12 Press **TITLE+/-◀▶▶** to set the minute.
- 13 Press **SLEEP/TIMER** to confirm.
 - ↳  is displayed.
 - ↳ At the scheduled times, the recording begins and ends automatically.
 - ↳ When the recording ends, the Mini Hi-Fi switches to standby mode.



Tip

- A recording is activated only in the standby mode.

To deactivate or re-activate a record timer

- 1 In the standby mode, press **SLEEP/TIMER** repeatedly.
 - ↳ If the timer is activated,  is displayed.
 - ↳ If the timer is deactivated,  disappears.

10 Other features

Set the alarm timer

This Mini Hi-Fi can be used as an alarm clock. The disc, radio or USB is activated to play at a preset time.



Note

- If you have set a record timer and an alarm timer, only the latest timer is activated.

- 1 Ensure that you have set the clock correctly. (see 'Set clock' on page 13)
- 2 Press **⏻** to switch to standby mode.
- 3 Press and hold **SLEEP/TIMER** for more than 2 seconds.
 - ↳ A prompt to select the source is displayed.
- 4 Press **CD 1/2/3**, or **TUNER** or **USB** to select a source.
- 5 Press **SLEEP/TIMER** to confirm.
 - ↳ The clock digits are displayed and begin to blink.
- 6 Press **ALBUM +/-◀▶** to set the hour.
- 7 Press **TITLE+/-◀▶** to set the minute.
- 8 Press **SLEEP/TIMER** to confirm.
 - ↳ The timer is set and activated.

To deactivate or re-activate a alarm timer

- 1 In the standby mode, press **SLEEP/TIMER** repeatedly.
 - ↳ If the timer is activated, **⌚** is displayed.
 - ↳ If the timer is deactivated, **⌚** disappears.



Tip

- In MP3 link or AUX mode, the alarm timer cannot be set.
- If disc or USB source is selected but no audio file can be played, radio is activated automatically.

Set the sleep timer

This Mini Hi-Fi can switch to standby automatically after a set period of time.

- 1 When the Mini Hi-Fi is turned on, press **SLEEP/TIMER** repeatedly to select a set period of time (in minutes).
 - ↳ When sleep timer is activated, **zz** is displayed.

To deactivate sleep timer

- 1 Press **SLEEP/TIMER** repeatedly until **[OFF]** (off) is displayed.
 - ↳ When sleep timer is deactivated, **zz** disappears on the display.

Listen to an external device

You can listen to an external audio device through this Mini Hi-Fi.

For audio players with headphone sockets

- 1 Press **MP3 LINK/AUX** repeatedly to select the MP3 link source.
- 2 Connect the supplied MP3 link cable to:
 - the **MP3 LINK** jack (3.5mm) on the Mini Hi-Fi.
 - the headphone jack on an external device.
- 3 Start to play the device (see the device user manual).

For audio players with red/white audio output sockets

- 1 Press **MP3 LINK/AUX** repeatedly to select the AUX source.
- 2 Connect the audio cables (white/red jackis, not supplied) to:
 - the **AUX IN** jacks on the back of the Mini Hi-Fi.
 - the **AUDIO OUT** jacks on an external device.
- 3 Start to play the device (see the device user manual).

Delete files in the USB device

- 1 During USB play, press **TITLE**+**⏮** to select an audio file.
 - To delete an audio folder, in the stop position, press **ALBUM** +**⏮** to select an audio folder.
- 2 Press **USB DELETE**.
 - ↳ A confirmation message is displayed.
- 3 While the message is displayed, press **USB DELETE** again to confirm.
 - To cancel, press **■**.
 - ↳ After you delete a file or an audio folder, the USB play stops.

Adjust display brightness

- 1 Press **DIM** repeatedly to select different levels of display brightness.

Select button light display

- 1 Press **LIGHT** repeatedly on the main unit.
 - ↳ Each time you press **LIGHT**, the main unit buttons light up in a different way.

Karaoke

You can connect a microphone and sing along with a music source.

- 1 Turn **MIC VOL** to the minimum level.
- 2 Connect a microphone to the **MIC 1/2** jack of the Mini Hi-Fi.
- 3 Press **CD 1/2/3**, or **TUNER**, or **USB**, or **MP3 LINK/AUX** to select the source, and start play.
- 4 Sing through the microphone.
 - To adjust the volume of the source, press **VOL +/-**.
 - To adjust the volume of the microphone, turn **MIC VOL**.
 - To adjust the echo level, turn **KARAOKE ECHO VOL**.

11 Product information



Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Total output power	600W RMS
Frequency response	60 - 16kHz
Signal-to- noise ratio	>67dB A (IEC)
Aux input	1500mV/2000mV

Disc

Laser type	Semiconductor
Disc diameter	12cm/8cm
Support disc	CD-DA, CD-R, CD-RW, MP3-CD, WMA-CD
Audio DAC	24Bits / 44.1kHz
Total harmonic distortion	<1.5%
Frequency response	60Hz -16kHz (44.1kHz)
S/N ratio	>75dBA

Tuner

Tuning range	FM: 87.5 - 108MHz; AM: 531 - 1602kHz (9KHz); 530 - 1700KHz (10KHz)
Tuning grid	50KHz (FM); 9KHz/10KHz (AM)
Number of presets	40
FM	75ohm wire
AM	loop antenna

Speakers

Speaker Impedance	3ohm
Woofer	2 x 5.25"
Tweeter	2 x 1.75"
Dimensions (W x H x D)	225 x 430 x 275mm
Weight	4.93kg each

Subwoofer

Speaker impedance	6ohm
Speaker driver	8"
Dimensions (W x H x D)	274 x 430 x 340mm
Weight	6.75kg

General information

AC power	110 - 127/220 - 240V, 50/60Hz
Operation power consumption	130W
Standby power consumption	<20W
USB direct	Version 2.0/1.1
Dimensions	
Main Unit (W x H x D)	265 x 345 x 382mm
Weight (without speakers)	8.51kg

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB 1.1)
- USB flash players (USB 2.0 or USB 1.1)
- memory cards (requires an additional card reader to work with this Mini Hi-Fi)

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 999 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32-320 (kbps), variable bit rates
- ID3 tag v2.0 or later
- Directory nesting up to a maximum of 8 levels

Maintenance

Clean the cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

Clean the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

12 Troubleshooting



Caution

- Never remove the casing of this Mini Hi-Fi.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this Mini Hi-Fi, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.Philips.com/support). When you contact Philips, ensure that your Mini Hi-Fi is nearby and the model number and serial number are available (see 'Get started' on page 12).

No power

- Ensure that the AC power plug of the Mini Hi-Fi is connected properly.
- Ensure that there is power at the AC outlet.
- As a power-saving feature, the Mini Hi-Fi switches to standby automatically 15 minutes after a play reaches the end and no control is operated.

No sound or poor sound

- Adjust the volume.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

Left and right sound outputs reversed

- Check the speaker connections and location.

No response from the Mini Hi-Fi

- Disconnect and reconnect the AC power plug, then turn on the Mini Hi-Fi again.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the Mini Hi-Fi.

- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Aim the remote control directly at the sensor on the front of the Mini Hi-Fi.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the Mini Hi-Fi. Try another one.

Poor radio reception

- Increase the distance between the Mini Hi-Fi and your TV or VCR.
- If the signal is too weak, adjust the antenna or connect an external antenna for better reception.

Timer does not work

- Set the clock correctly.
- Switch on the timer.
- If you have set a record timer and an alarm time, only the latest timer is activated.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.

Validez de la garantía

Todos los productos de la línea de audio y video Philips, se regirán por un año de garantía internacional (365 días), salvo para Chile donde los productos de las líneas CD Portable y RCR CD, los cuales se rigen por 6 meses de garantía (182 días)

Condiciones de la garantía

Esta garantía perderá su validez si:

- El defecto es causado por uso incorrecto o en desacuerdo con el manual de instrucciones
- El aparato sea modificado, violado por una persona no autorizada por Philips
- El producto esté funcionando con un suministro de energía (red eléctrica, batería, etc.) de características diferentes a las recomendadas en el manual de instrucciones
- El número de serie que identifica el producto se encuentre de forma adulterada.

Están excluidos de garantía,

- Los defectos que se generen debido al incumplimiento del manual de instrucciones del producto
- Los casos fortuitos o de la fuerza mayor, como aquellos causados por agentes de la naturaleza y accidentes, descargas eléctricas, señales de transmisión débiles.
- Los defectos que se generen debido al uso de los productos en servicios no doméstico/residencial regulares o en desacuerdo con el uso recomendado
- Daños ocasionados por fluctuaciones de voltajes, voltaje fuera de norma o por causas fuera de Philips, como cortocircuitos en los bafles o parlantes.
- En las ciudades en donde no existe el taller autorizado del servicio de Philips, los costos del transporte del aparato y/o el técnico autorizado, corren por cuenta del cliente.
- La garantía no será válida si el producto necesita modificaciones o adaptaciones para que funcione en otro país que no es aquél para el cual fue mercadeado.

El único documento válido para hacer efectiva la garantía de los productos, es la Factura o Boleta de compra del consumidor final.

Aquellos productos que hayan sido adquiridos en otros países y que no estén en el rango normal del país donde se efectuará la reparación, dicha prestación de servicio tomará mas tiempo de lo normal ya que es necesario pedir las partes/piezas al centro de producción correspondiente.

Centros de información**Líneas de atención al consumidor**

Chile: 600-7445477

Colombia: 01-800-700-7445

Costa Rica: 0800-506-7445

Ecuador: 1-800-10-1045

El Salvador: 800-6024

Guatemala: 1-800-299-0007

Panama: 800-8300

Peru: 0800-00100

Rep. Dominicana: 1-800-751-2673

Venezuela: 0800-100-4888

POLIZA DE GARANTIA PARA MEXICO

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor.**

Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestro **CENTRO DE INFORMACIÓN AL CLIENTE LADA** sin costo en toda la republica al **01 800 504 62 00** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles,** contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.

Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:

- Cuando el aparato sea utilizado en condiciones distintas a las normales.
- Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.
- Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.

PERIODOS DE GARANTIA

36 MESES.- Monitores para computadora.

12 MESES.- Televisores con y sin reproductor de video digital DVD, videocassetteras, reproductores de discos de video digital DVD, reproductores de disco de video digital con pantalla incluida, grabadores reproductores de disco de video digital DVD, grabadores reproductores de disco compacto, video proyectores (excepto la lámpara) , cámaras de video, radiograbadoras con y sin reproductor de disco compacto, reproductores de cassette portátil, reproductores de disco compacto portátil, reproductores de audio digital MP3 (Internet), decodificadores de señal (IRD), televisores para hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, minisistemas de audio, minisistemas de audio con reproductor de disco de video digital integrado, microsistemas de audio, sistemas de cine en casa, equipos modulares, sintonificadores, facsimils, LNB, antenas de recepción de satélite, DVD ROM, CDR ROM y CDRW ROM para computadora.

6 MESES.- radio relojes, radios A.M./F.M., auto estéreos, teléfonos inalámbricos, cámaras digitales.

3 MESES.- Accesorios, controles remotos, bocinas, cintas para fax y para cámaras de videoconferencia, audífonos.

PHILIPS

Philips Mexicana, S.A. de C.V.

Producto Importado por:
Philips Mexicana, S.A. de C.V.
Av. La Palma No.6
Col. San Fernando La Herradura
Huixquilucan, Edo. de México. C.P. 52784
Tel. 52 69 90 00

Centro de Informacion al Cliente
Información General
LADA SIN COSTO PARA TODA LA REPUBLICA
01 800 504 62 00
CORREO ELECTRONICO
PHILIPS@TPMEX.COM

MODELO _____ No. DE SERIE _____
La presente garantía contará a partir de: DIA _____ MES _____ AÑO _____

En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo) y en caso de tener alguna duda o pregunta por favor llame a nuestro **Centro de información al Cliente**, en donde con gusto le atenderemos en todo lo relativo a:

- * Servicio de sus aparatos Philips
- * Información de productos y Talleres Autorizados Philips
- * Asesoría en el manejo e instalación de su producto Philips
- * Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

NOTA: Los Centros que tengan (S) solo proporcionan Servicio y los que tengan (SR) venden refacciones, accesorios y proporcionan Servicio

CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO		CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO	
ACAPULCO, GRO	744	483-32-96	serproa@yahoo.com.mx	S	MEXICO, D. F. ZONA NORTE	55	55-67-19-92 55-67-22-56	chyr_electronica@yahoo.com.mx	S
AGUASCALIENTES, AGS	449	915-51-81	jimsaele@hotmail.com	S	MEXICO, D. F. ZONA ORIENTE	55	57-58-89-37	cnoguadam@terra.com.mx	S
CAMPECHE, CAMP.	981	816 25 75	oreza@hotmail.com	S	MEXICO, D. F. ZONA PONIENTE	55	58 12 44 12	raulmtzm@avantel.net	S
CANCUN, Q. ROO.	998	984 18 74	gammacancun@webtelmex.net.mx	S	MONTERREY, N.L	818	375-16-17 400-54-03	mcesa@prodigy.net.mx	S
CD. JUAREZ, CHIH	656	618-21-28 623-46-20	teleservicio@prodigy.net.mx	S	MORELIA, MICH	443	312-03-17	multiservicios_profesionales_de_zamora@msn.com	S
CD. OBREGON, SON	644	412-41-51 416-20-93	mena747@prodigy.net.mx	S	NEZAHUALCOYOTL EDO. MEX	55	57-33-34-98	vicentegutierrez@prodigy.net.mx	S
CD. VICTORIA, TAMP.	834	315-66-03 312-51-93	eeii_smiller@yahoo.com.mx	S	OAXACA, OAX	951	516-47-37	elfrancistor@prodigy.net.mx	S
COLIMA, COL	312	314-03-01	tv_antenas@hotmail.com	S	ORIZABA, VER	272	724 38 53	barreda_electronics@hotmail.com	S
CUERNAVACA, MOR	777	313-00-49 313-90-92	centroserviciohertz@hotmail.com	S	PACHUCA, HGO	771	714-15-81	zaratelco@hotmail.com	S
CULIACAN, SIN	667	716-15-10	stereovox@cin.megared.net.mx	S	POZA RICA, VER	782	824 47 82	sonydigital@prodigy.net.mx	S
CHIHUAHUA, CHIH	614	421-59-30 421-63-61	comercialdomestica@hotmail.com	S	PUEBLA, PUE	222	248-77-64 231-63-77	rascon12@prodigy.net.mx	S
CHILPANCINGO, GRO.	747	471 72 73	ingelec_gro@hotmail.com	S	QUERETARO, QRO	442	216-10-09		S
DURANGO, DGO	618	825-00-05	evsurdgo@yahoo.com	S	SALTILLO, COAH	844	415 35 80	electroncadigital_07@hotmail.com	S
GUADALAJARA, JAL.	33	36-15-72-62 36-16-83-27	www.Leeecom.com.mx	S	SAN LUIS POTOSI, S.L.P	444	815-34-07	centro_serviciosp@prodigy.net.mx	S
HERMOSILLO, SON	662	210-54-95 210-05-86	manuelhw@prodigy.net.mx	S	SATELITE, EDO. MEX	55	55 62 59 73	missus_satellite@hotmail.com	S
IRAPUATO, GTO	462	626-51-10	tv_gase@hotmail.com	S	TAMPICO, TAMP.	833	214 13 60	electromovie@prodigy.net.mx	S
LA PAZ, B.C.S	612	122-95-99	cenalfa@prodigy.net.mx	S	TEPIC, NAY	311	212-66-93	spe_in@hotmail.co	S
LEON, GTO	477	770-26-99	tecosspecializados@hotmail.com	S	TJUANA, B.C.N	664	621-22-15	wwwegi1@telhor.net	S
MATAMOROS, TAMP.	868	813-50-13	digitalelectronica@comunicable.net	S	TOLUCA, EDO. MEX	722	214-83-09		S
MAZATLAN, SIN	669	982-42-21	e_santel@hotmail.com	S	TOLUCA, EDO. MEX	722	213 82 94		S
MERIDA, YUC	999	928-59-05	evia2@prodigy.net.mx	S	TORREON, COAH	871	732-49-49	jomar02@prodigy.net.mx	S
MEXICALI, B.C.N	686	561-98-08 561-98-18	bajaelectronics@aol.com	S	TUXTLA GUTIERREZ, CHIS	961	618-19-08	kcvideo@prodigy.net.mx	S
MEXICO D.F. ZONA ARAGON	55	57 94 06 34	philipservicio@hotmail.com	S	URUAPAN, MICH	452	524-08-38 524-37-78	rosaliaa@mich1.telmex.net.mx	S
MEXICO D.F. ZONA CENTRO	55	55 21 60 07	unitelemex@yahoo.com.mx	SR	VERACRUZ, VER	229	932-78-23 932-44-44	antza@ver.megared.net.mx	S
MEXICO, D. F. ZONA SUR	55	55-36-71-03 55-36-25-75	centrodeservicioelectronicoo@hotmail.com	S	VILLAHERMOSA, TAB	993	314-31-36 314-61-67	villatec@intratur.net.mx	S
MEXICO, D. F. ZONA NORTE	55	53 68 30 21	tissaser@prodigy.net.mx	S	ZACATECAS, ZAC.	492	922 31 63	sertecmur@hotmail.com	S

Para mayor referencia de Talleres de Servicio Autorizados en otras ciudades comunicarse al 01 800 504 62 00 (lada sin costo)

LISTA DE SERVIÇO AUTORIZADO - BRASIL

CRUZEIRO DO SUL	68-3322432	BARRA S FRANCISCO	27-37562425	BELO HORIZONTE	31-32257262	PORTO TROMBETAS	93-35491606
RIO BRANCO	68-32217646	CASTELO	28-35420482	BELO HORIZONTE	31-32254066	SANTARÉM	93-35235322
RIO BRANCO	68-32249116	COLATINA	27-37222288	BELO HORIZONTE	31-34420944		
ALAGOAS		GUARAPARI	27-33614355	BELO HORIZONTE	31-34181919	PARAÍBA	
ARAPIRACA	82-5222367	LINHARES	27-33710148	BELO HORIZONTE	31-32957700	CAMPINA GRANDE	83-3212128
HAGIO	82-52417237	S GABRIEL DA PALHA	27-37271153	BELO HORIZONTE	31-34491000	ESPERANCA	83-3612218
PALMEIRA DOS INDIOS	82-45131453	SAO MATEUS	27-33738086	BELO HORIZONTE	31-21027733	GUARABIRA	83-2711159
UNIAO DOS PALMARES	82-32811305	VILA VELHA	27-32891233	BETIM	31-35322088	JOAO PESSOA	83-32646898
		VITORIA	27-32323899	BOM DESPACHO	37-35321296	JOAO PESSOA	83-32446044
				BOM DESPACHO	37-35225211	JOAO PESSOA	83-32210460
				CARAMANGOLA	32-37412017	NOVA FLORESTA	83-3741014
AMAPÁ		GOIÁS		CASSIA	35-35412293	SAFE	83-2832479
MACAPA	96-2175934	ANAPOLIS	62-3243562	CONGONHAS	31-37311638	SOLANEA	83-3631241
SANTANA	96-2811080	CACU	64-6561811	CONGONHAS	31-37311638		
		CALDAS NOVAS	64-64532878	CONS LAFAIETE	31-37637784		
		CATALAO	64-4412786	CONTAGEM	31-33912994	PARANÁ	
AMAZONAS		FORMOSA	61-6318166	CONTAGEM	31-33953641	AMPERE	46-5471605
MANAUS	92-36333035	GOIANIA	62-32191905	CORONEL FABRICIANO	31-38411804	ANTONINA	43-3421782
MANAUS	92-36633366	GOIANIA	62-32292708	CURVELO	37-33723039	ARACATUBA	43-34225306
MANAUS	92-3324252	GOIATUBA	94-34952272	DIVINOPOLIS	37-32212533	ARAPONGAS	42-2753732
		INHUMAS	62-5111840	FORMIGA	37-33214717	ASSIS CHATEAUBRIAND	44-5285181
BAHIA		IPAMERI	62-4511184	FRUTAL	34-34235279	BANDEIRANTES	43-5421711
ALAGOINHAS	75-4211128	ITAPURANGA	62-3551484	GOV. VALADARES	32-32716650	CAMPO MOURAO	45-33528970
BARREIRAS	77-36117592	ITUMBIRA	64-34310837	GUAXUPE	35-35513891	CASCAVEL	45-32254005
BOM JESUS DA LAPA	77-4814335	JUSSARA	62-3731806	GUAXUPE	35-35514124	CIANOVERT	46-6292842
BRUMADU	77-4412181	LUZIANIA	61-6228519	IPATINGA	31-38222332	CURITIBA	41-33334764
CAETITE	77-34541183	MINÉROS	64-6618259	ITABIRA	31-38316218	CURITIBA	41-32648791
CAMACARI	77-36218288	PIRES DO RIO	64-46111133	ITAJUBA	35-36213135	CUZCO	41-32534391
CICERO DANTAS	75-52282767	RUALMA	62-3997120	ITAPERICA	37-33411326	FOZ DE IGUAÇU	45-35233029
CRUZ DAS ALMAS	75-62312839	RIO VERDE	64-36201073	ITAPERICA	37-33411326	FORO DO IGUAÇU	45-35234115
ESPLANADA	75-4271454	TRINIDADE	62-5051505	ITUAINA	37-32412468	GUARACIPE BELTRAO	46-35233230
EUNAPOLIS	73-2815181	URUAÇU	62-3751285	ITUJUBA	34-32682131	GUARAPUAVA	46-35233230
FEIRA DE SANTANA	75-32232882			JOAO MONLEVADE	31-38512909	IBAITI	43-5461162
FEIRA DE SANTANA	75-2212342	MARANHÃO		JOAO MONLEVADE	31-38521112	IBIPORA	43-5461162
GANDU	73-32541664	ACAILANDIA	99-35381889	JOAO PINHEIRO	32-36561327	IRATI	42-34221337
ILHEUS	73-2315995	BACABAL	99-36212794	JUIZ DE FORA	32-30682584	LAPA	42-36222410
IRECI	74-36401020	BALAIAL	95-4100113	JUIZ DE FORA	32-35215514	LOANDA	43-36222410
ITABERA	75-22512358	CAROLINA	98-7711325	LAGOA DA PRATA	37-32613493	LONGDIRINA	44-4225063
ITABUNA	73-36313777	CAVAXS	99-35212377	LAVRAS	35-38219188	MANDUGUARI	42-3241002
ITAPETINGA	77-2613003	CHAPADINHA	97-4111364	MANHUAÇU	33-33314735	MARINGA	42-32626460
JACOBINA	74-36211323	CODO	98-36671267	MONTI CARMELO	34-38422082	MINERAS	45-32642580
JEQUIE	73-35254141	CODO	99-36612942	MONTI SANTO DE MINAS	35-35911888	PALMEIRA	42-2523006
JUAZEIRO	74-36116456	COELHO NETO	98-34731351	MONTES CLAROS	38-32218925	PARANAGUA	41-34225804
JUAZEIRO	74-36111002	IMPERATRIZ	99-35244699	MURIAE	37-37224334	PATO BRANCO	46-32242786
LAURO DE FREITAS	71-3784021	PEDEIREAS	99-36423142	MUZAMBINO	35-5712419	PONTA GROSSA	42-32266590
LURITIBA	75-4241908	PRESIDENTE DUTRA	99-36631815	NALVIERA	37-33242165	RIO NEGRO	47-36405251
PAULO AFONSO	75-20811349	SANTA INES	98-36537553	NOVA LIMA	31-35424206	ROCHAMAU	42-3561947
POCOS	77-4311890	SAO JOSE DE RIBAMAR	99-2241581	OLIVERIA	37-33344124	S J DOS PINHEIROS	47-32825252
RIBEIRA DO POMBAI	75-2761863	SAO LUIS	98-32323236	PARA DE MINAS	37-32316369	S MIGUEL DO IGUAÇU	45-5651429
SALVADOR	71-32473659	SAO LOUIS	98-32315276	PARA DE MINAS	37-32319575	SANTA FE	42-4741717
SALVADOR	71-2675000			PARACATU	38-3671250	SAO JORGE D' OESTE	46-5341305
SALVADOR	71-3207070	MATO GROSSO		PASSOS	35-3521432	STO ANTONIO PLATINA	43-35341809
SALVADOR	71-3356233	ALTA FLORESTA	66-35212460	PATOS DE MINAS	34-38222588	TELEMACHO BORBA	42-32726044
SANTO AMARO	75-32413171	ALTO ARAUJA	66-4811726	PATROCINIO	34-38311531	TOLEDO	45-32522471
SENHOR DO BONFIM	74-5413143	BARRO DA GARGAS	66-4011394	PIRANGUI	37-32716322	UMUARAMA	44-36321233
SANTO ANTONIO JESUS	75-32611794	BUÇUCAU	65-4091134	PURILANIA	37-3371462		
STO ANTONIO JESUS	75-36341470	LACAS DO RIO VERDE	65-5499133	POCOS DE CALDAS	37-32712866	PERNAMBUCO	
TEIXEIRA DE FREITAS	73-30111600	PONTES E LACERDA	65-2662326	POCOS DE CALDAS	35-37224448	BEL JARDIM	83-37612918
VALENCA	75-6431710	PRIMAVERA DO LESTE	66-4981862	PONTO NOVA	31-38172486	CABO STO AGOSTINHO	81-35211823
VITORIA DA CONQUISTA	77-34241183	RONDONOPOLIS	66-4233888	POUSO ALEGRE	35-34212120	CAMARAGIBE	81-34581246
		SINOP	65-5314592	S SEBASTIAO PARAISO	35-35313094	CARIARU	81-37720235
		TANGARA DA SERRA	65-3264131	S SEBASTIAO PARAISO	35-35312054	FLORESTA	81-8771274
CEARÁ	88-5310133	VARZEA GRANDE	65-6826502	SANTOS DUMONT	32-32516369	HUANZINA	87-37611090
BREJO SANTO	88-6910019			SAO JOAO DEL REI	33-33718306	GARANHUNS	87-37610085
CRATEUS	88-5212501	MATO GROSSO DO SUL		STO ANTONIO DO MONTE	37-32811258	PAZ DE ARGEMEM	81-34311423
FORTEALEZA	85-38275506	AMBAMAÍ	67-4811543	TEOFILO OTONI	35-35225831	RECIFE	81-32313939
FORTEALEZA	85-4008855	CAMPO GRANDE	67-33240284	TIMOTEO	31-38482728	RECIFE	81-21622111
IBAPIANA	88-36531223	CAMPO GRANDE	67-3831540	UIBA	32-35323626	RECIFE	81-34656042
IGUAÇU	88-3580152	CAMPO GRANDE	67-3213898	UBERABA	34-33332520	RECIFE	81-346629090
ITAPIPOCA	88-6312030	DOURADOS	67-4217117	UBERLANDIA	34-32123636	SALGUEIRO	87-38716309
JUAZEIRO DO NORTE	88-35112667	IVINHEMA	67-4421244	UBERLANDIA	34-32360764	SERRA TALHADA	87-38311401
LIMOEIRO DO NORTE	88-4231938	NAVIARA	67-4612486	VARGINHA	35-32227889		
OROS	88-5841271	NOVA ANDRADINA	67-4413851	VARZEA DA PALMA	38-38713158	PIAUÍ	
SORBAL	88-36116050	PONTE NOVA	67-4314313	VAZANTE	34-38131420	CAMPO MAIOR	86-32521376
TANGUA	88-36713336	RIO BRILHANTE	67-4527950	VICOSA	31-38991800	FLOREANO	89-5221154
UBAJARA	88-6431233	TRES LAGOAS	67-5212007			OEIRAS	89-4621066
				PARÁ		PARAIBA	86-3222877
DISTRITO FEDERAL		MINAS GERAIS		ABAAETUBA	91-37512272	PICOS	89-4221444
BRASILIA	61-3226898	ALFENAS	35-2927104	BELEM	91-37512272	PICOS	89-34155135
BRASILIA	61-33016666	ALMINARA	33-7212134	BELEM	91-32421090	TERESINA	86-32213535
GAMA	61-5564840	ANDRADAS	35-37312970	CAPANEMA	91-34621100	TERESINA	86-32208285
		ARAXA	34-36611132	CASTANHAL	91-37215052	TERESINA	86-32241618
ESPÍRITO SANTO		ARAXA	34-36691869	ITAITUBA	91-3181545		
ALEGRE	82-35625439	ARCOS	37-35313455	MARABÁ	94-3211891	RIO DE JANEIRO	
ARACRUZ	27-32561251	BAMBUI	37-34311473	OBIDOS	93-5472116	B JESUS ITABOANA	22-38312616
BAXO GUANDU	27-32321192	BARBACENA	32-33310283	PARAGOMINAS	31-30110728	BELOFORD ROXO	21-27616060

LISTA DE SERVIÇO AUTORIZADO - BRASIL

CABO FRIO	22-26451819	SAO BORJA	55-34311850	BOTUCATU	14-38821081	SAO PAULO	11-32222311
CAMPOS GOYTACAZES	22-27221499	SAO FCO DE PAULA	54-2441466	BOTUCATU	14-38155044	SAO ROQUE	11-47842509
CANTAGALO	22-25553303	SAO GABRIEL	55-2325833	CAMPINAS	19-32369199	SAO VICENTE	13-34638031
DUQUE DE CAXIAS	21-27711508	SAO JOSE DO OURO	54-3521216	CAMPINAS	19-32544819	SOROCABA	15-32241170
ITACARA	22-38612740	SAO LUIZ GONZAGA	55-33521365	CAMPINAS	19-32336498	SOROCABA	15-32241170
ITAPERUNA	22-38226065	SAO MARCOS	54-2911462	CAMPINAS	19-37372500	STA BARBARA D' OESTE	19-34631211
MACAE	22-27626235	SOBRADINHO	51-37421409	CAMPO LIMPO PAULISTA	11-40392000	TABOAO DA SERRA	11-47871480
MACAE	22-27591358	STA CRUZ DO SUL	51-37155455	CAMPOS DO JORDAO	12-36622142	TACQUARITINGA	16-33534039
MAGE	21-26330605	STA CRUZ DO SUL	51-37153048	CATANDUVA	17-35232524	TALUBATE	12-36219080
NITEROI	21-26220157	TAPEJARA	54-3442353	CERQUILHO	15-32842121	TUPA	14-34962596
NOVA FRIBURGO	22-25227692	TAPERIA	54-3851160	CRUZEIRO	12-31438359	VINHEDO	19-38765310
NOVA IGUAU	21-26675663	TAQUARI	51-6531291	DIADEMA	11-40430669	VOTUPORANGA	17-34215726
PETROPOLIS	24-23212737	TORRES	51-6641940	DRACENA	18-38212479		
RESENDE	24-33550101	TRES DE MAIO	55-35352101	FERNANDOPOLIS	17-34423921	SERGEPE	
RIO DE JANEIRO	21-25894622	TRES DE MAIO	55-35358727	FRANCA	16-37223898	ARACAJU	79-32119764
RIO DE JANEIRO	21-25892030	URUGUAIANA	55-34121791	FRANCO DA ROCHA	11-44492608	ARACAJU	79-32176080
RIO DE JANEIRO	21-25097136	VACARIA	54-2311396	GUARAJA	13-33582942	ESTANCIA	79-5222325
RIO DE JANEIRO	21-24315426	VENANCIO AIRES	51-37411443	GUARULHOS	11-44513376	ITABIANA	79-4313023
RIO DE JANEIRO	21-31579290	VERA CRUZ	51-37181350	GUARULHOS	11-44431153	LAGARTO	79-312656
RIO DE JANEIRO	21-33916353			IGARAPAVA	16-31724600		
RIO DE JANEIRO	21-22367814	RONDÔNIA		INDAIAUTUBA	19-38753831	TACANTINS	
RIO DE JANEIRO	21-31592187	ARIQUEMES	69-35353491	ITAPETINGINA	15-32710936	ARAGUAINHA	63-42118857
RIO DE JANEIRO	21-38675252	CACAOAL	69-4431415	ITAPIRA	19-38633802	ARAGUAINHA	63-4111818
RIO DE JANEIRO	21-25714999	CEREJEIRAS	69-33422251	ITARARE	15-35322743	GUARAJA	63-34641590
RIO DE JANEIRO	21-24451123	GUAJARA-MIRIM	69-35414430	ITU	11-40230188	GURUPI	63-33511038
SAO GONCALO	21-27013214	JI-PARANÁ	69-34211891	ITUVERAVA	16-7293365	GURUPI	63-33124470
TERESOPOLIS	21-27439467	PORTO VELHO	69-32273377	JABOTICABAL	16-32021580		
TRES RIOS	24-22555887	ROLIM DE MOURA	69-44211178	JALES	17-36324479		
TRES RIOS	24-22521388	VILHENA	69-33223321	JAU	14-36222117		
				JUNDIAI	11-45862182		
RIO GRANDE DO NORTE		RORAIMA		LEME	19-35713528		
CAICO	84-4171844	BOA VISTA	95-32249605	LIMEIRA	19-34413179		
MOSSORO	84-33147809	BOA VISTA	95-6233456	MARILIA	14-34547437		
NATAL	84-32231249			MATAO	16-33821046		
NATAL	84-32132345	SANTA CATARINA		MAUA	11-45145233		
PAU DOS FERROS	84-3512334	BLUMENAU	47-3227742	MOGI DAS CRUZES	11-47941814		
		CANOINHAS	47-6223615	MOGI-GUAÇU	19-38181171		
RIO GRANDE DO SUL		CANOINHAS	47-6223615	MOGI-MIRIM	19-38624401		
AGUDO	55-2651036	CAPINZAL	49-35552266	OLIMPIA	17-2812184		
ALGRETE	55-24221969	CHAPECO	49-33223304	OSASCO	11-36837343		
BAGE	53-32411295	CHAPECO	49-33221144	OURINHOS	14-33225457		
BENTO GONCALVES	54-4526825	CONCORDIA	49-34423704	PIRACICABA	19-34340454		
CAMAQUA	51-36711686	CRICIUMA	48-34375155	PIRASSUNUNGA	19-35614091		
CAMPINAS DO SUL	54-3661300	CUNHA PORÁ	49-6460043	PORTO FERREIRA	19-35812441		
CANELA	54-32821551	CURITIBANOS	49-32410851	PRES PRUDENTE	18-2225168		
CAPOA DA CANOA	51-6652368	DESCANSO	49-36230245	PRES. EPITACIO	18-2814184		
CARAZINHO	54-3302292	FLORIANOPOLIS	48-32254149	PRES. PRUDENTE	18-2217943		
CAXIAS DO SUL	54-32153107	INDAIAL	47-33333275	PROFESSA	14-35411686		
CAXIAS DO SUL	54-2268087	IPORA DO OESTE	49-36341289	RIBEIRAO PRETO	16-36106899		
CERRO LARGO	55-33591973	ITAIOPOLES	476-522282	RIBEIRAO PRETO	16-36368156		
CORONEL BUCACO	55-35571397	ITAJAI	47-33444777	RIBEIRAO PRETO	16-36107553		
ERECHIM	54-3211933	JARAGUA DO SUL	47-33722050	RIO CLARO	19-35348843		
ESTANCIA VELHA	51-35612142	JOACABA	49-35220418	S BERNARDO CAMPO	11-41257000		
FARROUPILHA	54-32683603	JOINVILLE	47-34331146	S BERNARDO CAMPO	11-43681788		
FAXINAL DO SOTURNO	55-32631150	LAGES	49-2232335	S CAETANO DO SUL	11-42214334		
FLORES DA CUNHA	54-2922625	LAGES	49-32244414	S JOAO BOA VISTA	19-36232990		
FREDERICO WESTPHALEN	55-37411850	LAGUNA	48-36461221	S JOSE CAMPOS	12-39239508		
GETULIO VARGAS	54-3411888	LAURO MULLER	48-4643202	S JOSE DO RIO PARDO	19-36085760		
GIRUA	55-33611764	MARAVILHA	49-6440052	S JOSE RIO PRETO	17-32335680		
GRAVATAI	51-4882030	MINHAZINHO	497-661014	S JOSE RIO PRETO	17-2352381		
HORIZONTINA	55-35371680	PORTO UNIAO	42-35232839	SALTO	11-40296563		
IBIRAIARAS	55-3551359	RIO DO SUL	47-5211920	SANTO ANDRE	11-49905288		
IBUI	55-33277766	SAO MIGUEL D' OESTE	49-36220026	SANTOS	13-32272947		
IMBE	51-36272704	SEARA	49-4521034	SANTOS	13-32847339		
LAJEADO	51-37145155	SOMBRIO	48-5331225	SAO CARLOS	16-33614913		
MARAU	54-33424571	TAIO	478-620576	SAO JOSE DO CAMPOS	12-39122278		
MONTENEGRO	51-6324187	TUBARAO	48-6224448	SAO JOSE RIO PRETO	17-2355241		
NONOIA	54-3621126	TUBARAO	48-6261651	SAO PAULO	11-2964622		
NOVA PRATA	54-32421328	TURVO	48-6250373	SAO PAULO	11-47036116		
NOVO HAMBURGO	51-58232191	URUSSANGA	484-651137	SAO PAULO	11-49791184		
OSORIO	51-36532524	VIDEIRA	49-35660376	SAO PAULO	11-38659897		
PALMEIRA MISSOES	55-37421407	XANXERE	49-4333026	SAO PAULO	11-62156667		
PANAMBI	55-33753488			SAO PAULO	11-69545517		
PASSO FUNDO	54-33111104	SÃO PAULO		SAO PAULO	11-36726766		
PELOTAS	51-3222633	AGUAS DE LINDOIA	19-38241524	SAO PAULO	11-66940111		
PORTO ALEGRE	51-32226941	AMERICANA	19-34062914	SAO PAULO	11-32077111		
PORTO ALEGRE	51-33256653	AMPARO	19-38072674	SAO PAULO	11-39757996		
PORTO ALEGRE	51-33268834	ARACATUBA	18-36218775	SAO PAULO	11-42976464		
RIO GRANDE	53-32323211	ARARAQUARA	16-33368710	SAO PAULO	11-56679695		
SANTA DO LIVRAMENTO	55-32411899	ATIBAIA	11-44118145	SAO PAULO	11-38751333		
SANTA MARIA	55-32222235	AVARE	14-37322142	SAO PAULO	11-55321515		
SANTA ROSA	55-35121991	BARRETOS	17-33222742	SAO PAULO	11-62809411		
SANTA VITORIA DA PALMAR	55-32633992	BATATAIS	16-37614455	SAO PAULO	11-32217317		
SANTO ANGELO	55-33131183	BAURU	14-32239551	SAO PAULO	11-37714709		
SANTO AUGUSTO	55-37811511	BIRIGUI	18-36424011	SAO PAULO	11-25770899		

CERTIFICADO DE GARANTIA NO BRASIL

Este aparelho é garantido pela Philips da Amazônia Indústria Eletrônica Ltda., por um período superior ao estabelecido por lei. Porém, para que a garantia tenha validade, é imprescindível que, além deste certificado, seja apresentada a nota fiscal de compra do produto.

A Philips da Amazônia Indústria Eletrônica Ltda. assegura ao proprietário consumidor deste aparelho as seguintes garantias , a partir da data de entrega do produto, conforme expresso na nota fiscal de compra, que passa a fazer parte deste certificado:

**Garantia para rádios e reprodutores de CD portáteis
(sem caixa acústica destacável): 180 dias**

Garantia para os demais produtos da marca Philips: 365 dias.

Esta garantia perderá sua validade se:

- O defeito apresentado for ocasionado por uso indevido ou em desacordo com o seu manual de instruções.
- O produto for alterado, violado ou consertado por pessoa não autorizada pela Philips.
- O produto for ligado a fonte de energia (rede elétrica, pilhas, bateria, etc.) de características diferentes das recomendadas no manual de instruções e/ou no produto.
- O número de série que identifica o produto estiver de alguma forma adulterado ou rasurado.

Estão excluídos desta garantia defeitos decorrentes do descumprimento do manual de instruções do produto, de casos fortuitos ou de força maior; bem como aqueles causados por agentes da natureza e acidentes. Excluem-se igualmente desta garantia defeitos decorrentes do uso dos produtos em serviços não doméstico/residencial regular ou em desacordo com o uso recomendado. **ESTÃO EXCLUÍDAS DA GARANTIA ADICIONAL AS PILHAS OU BATERIAS FORNECIDAS JUNTO COM O CONTROLE REMOTO.**

Nos municípios onde não exista oficina autorizada de serviço Philips, as despesas de transporte do aparelho e/ou do técnico autorizado, correm por conta do Sr. Consumidor requerente do serviço.

A garantia não será válida se o produto necessitar de modificações ou adaptações para habilitá-lo a operar em qualquer outro país que não aquele para o qual foi designado, fabricado, aprovado e/ou autorizado, ou ter sofrido qualquer dano decorrente deste tipo de modificação.

Philips da Amazônia Indústria Eletrônica Ltda.

Dentro do Brasil, para informações adicionais sobre o produto ou para eventual necessidade de utilização da rede de oficinas autorizadas, ligue para o Centro de Informações ao Consumidor (CIC). Em São Paulo - Capital e demais localidades com DDD 011 - tel. 2121-0203, nas demais localidades e estados - tel. 0800 701 02 03 (discagem direta gratuita), ou escreva para Caixa Postal: nº 21.315 - CEP04602-970 - São Paulo - SP, ou envie um e-mail para: cic@philips.com.br
Horário de atendimento: de segunda à sexta-feira, das 08:00 às 20:00 h; aos sábados das 08:00 às 13:00h.

Para atendimento fora do Brasil, contate a Philips local ou a:
Philips Consumer Service
Beukenlaan 2
5651 CD Eindhoven
The Netherlands

Certificado de Garantía en Argentina

Artefacto:

Modelo:

Fabricante/Importador: Philips Argentina S.A.

y/o Fábrica Austral de Productos Eléctricos S.A.

Dirección: Vedia 3892 - Buenos Aires

Fecha de Venta:

Nro. de serie

Firma y sello de la casa vendedora.

PHILIPS ARGENTINA S.A. en adelante denominada “la empresa”, garantiza al comprador de este artefacto por el término de (6) meses a partir de la fecha de adquisición, el normal funcionamiento contra cualquier defecto de fabricación y/o vicio de material, y se compromete a reparar el mismo —sin cargo alguno para el adquirente— cuando el mismo fallare en situaciones normales de uso y bajo las condiciones que a continuación se detallan:

1. Este certificado de garantía es válido únicamente en la Republica Argentina. El certificado debe ser completado por la casa vendedora y ser presentado por el usuario conjuntamente con la factura original de compra.
2. Serán causas de anulación de esta garantía en los casos que corresponda:
 - 2.1. Uso impropio o distinto del uso doméstico.
 - 2.2. Exceso o caídas de tensión eléctrica que impliquen uso en condiciones anormales.
 - 2.3. Instalación y/o uso en condiciones distintas a las marcadas en el “Manual de instalación y uso” que se adjunta a esta garantía.
 - 2.4. Cualquier intervención al artefacto por terceros no autorizados por la empresa.
3. La garantía carecerá de validez si se observare lo siguiente:
 - 3.1. Enmiendas o raspaduras en los datos del certificado de garantía o factura.
 - 3.2. Falta de factura original de compra que detalle tipo de artefacto, modelo, número de serie y fecha que coincida con los del encabezamiento del presente certificado.
4. No están cubiertos por esta garantía los siguientes casos:
 - 4.1. Los daños ocasionados al exterior del gabinete.
 - 4.2. Las roturas, golpes, caídas o rayaduras causadas por traslados.
 - 4.3. Los daños o fallas ocasionados por deficiencias, sobretensiones, descargas o interrupciones del circuito de alimentación eléctrica o rayos, deficiencias en la instalación eléctrica del domicilio del usuario o conexión del artefacto a redes que no sean las especificadas en el Manual de Uso del mismo.
 - 4.4. Las fallas, daños, roturas o desgastes producidos por el maltrato o uso indebido del artefacto y/o causadas por inundaciones, incendios, terremotos, tormentas eléctricas, golpes o accidentes de cualquier naturaleza.
 - 4.5. Las fallas o daños ocasionados en desperfectos en la línea telefónica.
 - 4.6. Las fallas producidas por una mala recepción ocasionada en el uso de una antena deficiente o en señales de transmisión débiles.
5. Las condiciones de instalación y uso del artefacto se encuentran detalladas en el Manual de Uso del mismo.
6. La empresa no asume responsabilidad alguna por los daños personales o a la propiedad al usuario o a terceros que pudieran causar la mala instalación o uso indebido del artefacto, incluyendo en este último caso a la falta de mantenimiento.
7. En caso de falla, el usuario deberá requerir la reparación a la empresa a través del Service Oficial y/o Talleres Autorizados más próximos a su domicilio y cuyo listado se acompaña al presente. La empresa a segura al usuario la reparación y/o reposición de piezas para su correcto funcionamiento en un plazo no mayor a 30 días contados a partir de la fecha de solicitud de reparación, salvo caso fortuito o fuerza mayor.

8. Toda intervención del servicio técnico realizada a pedido del usuario dentro del plazo de garantía, que no fuera originada por falla o defecto alguno cubierto por este certificado, deberá ser abonado por el interesado de acuerdo a la tarifa vigente.
9. El presente certificado anula cualquier otra garantía implícita o explícita, por la cual y expresamente no autorizamos a ninguna otra persona, sociedad o asociación a asumir por nuestra cuenta ninguna responsabilidad con respecto a nuestros productos.
10. En caso de que durante el período de vigencia de esta garantía el artefacto deba ser trasladado a las Delegaciones Oficiales y/o Talleres Autorizados de Service para su reparación, el transporte será realizado por la empresa y serán a su cargo los gastos de flete y seguros y cualquier otro que deba realizarse para su ejecución.



PHILIPS

Red de Talleres Autorizados en Argentina

CAPITAL FEDERAL

ATTENDANCE S.A.

- Av. Monroe 3351 (C1430BKA) Cap. Fed.
- Tel.: 4545-5574/0704 ó 6775-1300
- Ventas de Repuestos y Accesorios
- Tel.: 4545-0854

DIG TRONIC

- Av. San Martín 1762 (C1416CRS) Cap. Fed.
- Tel.: 4583-1501

ELECTARG S.R.L.

- Av. Córdoba 1357 (C1055AAD) Cap. Fed.
- Ventas de Repuestos y Accesorios
- Tel.: 4811-1050

Caillito Electarg J. M. Moreno 287 4903-6967/6854/8983

San Nicolás	Servitec	Bv. Alvarez 148	(03461) 454729/429578
San Pedro	Electrónica Menisale	Mitre 1695	(03329) 425523
Tandil	Lazzarini Oscar Rafael	Pellegrini 524	(02293) 442167
Trenque Lauquen	Labruna Electrónica	Av. San Martín 426	(02392) 423248
Tres Arroyos	Saini Fabián y Sergio	Av. Belgrano 562	(02983) 427369
Zárate	Electrónica Spinozzi	Ituzaingó 1030	(03487) 427353

GRAN BUENOS AIRES

Avellaneda	Casa Torres S.A.	Av. Mitre 2559	4255-5854
Florencio Varela	Casa Torres S.A.	San Martín 2574	4255-5854
Gregorio de Laferrere	Electrónica Alvarez	Honorio Luque 6084	4626-1322
Lomas de Zamora	Attendance S.A. Lomas	Laprida 485	4292-8900
Merlo	Argentónica S.H.	Pte. Cámpora 2175	(0220) 483717/4829934
Moreno	Argentónica S.H.	Bmé. Mitre 2977 loc.2	(0237) 4639500
Morón	Servotronic	Ntra. Sra. del Buen Viaje 1222	4627-5656
Olivos	Appliance	Av. Libertador 2684	4794-7700
Quilmes	Casa Torres S.A.	E. Ríos esq. Gran Canaria	4255-5854
Ramos Mejía	Electarg S.R.L. Suc.	Belgrano 224	4656-0619
San Miguel	Servotronic San Miguel	Belgrano 999	4664-4131
Villa Ballester	Servotronic	J. Hernández 3101	4767-2515/4768-5249

CATAMARCA

Catamarca	Omicron Central de Serv.	San Martín 225	(03833) 427235
-----------	--------------------------	----------------	----------------

CHACO

Resistencia	Freschi Jorge Oscar	Av. Avalos 320	(03722) 426030
-------------	---------------------	----------------	----------------

CHUBUT

Comodoro Rivadavia	C.A.S. S.R.L.	Alem 145	(0297) 4442629
Trelew	Fagtron Electrónica	Brasil 253	(02965) 427073

CORDOBA

Córdoba Capital	Servelco S.R.L.	Pje. E. Marsilla 635	(0351) 4724008/4732024
Río Cuarto	Maurutto Victor G.	Bv. Almafuerde 487	(0358) 4660204
Río Cuarto	Capaldi Abel	Paunero 832	(0358) 4623003
Río Tercero	Service Omega	Homero Manzi 149	(03571) 423330
San Francisco	Acuña Walter Electrónica	M. Moreno 360	(03564) 425367
Villa María	Grasso Electrónica	Bv. Alvear 541	(0353) 4521366
Villa María	Vanguard Sist. Electrónicos	México 421	(0353) 4532951

BUENOS AIRES

Azul	Herlein Raúl Horacio	Av. 25 de Mayo 1227	(02281) 428719
Bahía Blanca	Neutron	Soler 535	(0291) 4535329
Bragado	Yacovino Juan J.	San Martín 2141	(02342) 424147
Campana	Electricidad Krautor	Lavalle 415	(03489) 432919
Chivilcoy	Fama	Coronel Suárez 110	(02346) 424129
Junín	Junín Service	Alsina 537	(02362) 442754
La Plata	Da Tos e Hijos	Calle 68 N° 1532	(0221) 4516021
La Plata	Service Técnico La Plata	Av. 51 N° 1051 esq. 16	(0221) 4108155
Mar de Ajó	Tauro Electrónica	Catamarca 14	(02257) 421750
Mar del Plata	Central Service	Olazábal 2249	(0223) 4721639/4729367
Mar del Plata	Service Integral	Diag. Pueyrredón 3229	(0223) 4945633
Necochea	Electrónica Camejo	Calle 63 N° 1745	(02262) 426134
Pehuajó	Calcagni Carlos Alberto	Zubiria 794	(02396) 472665
Pergamino	ACV Sistemas	Dr. Alem 758	(02477) 421177
Pergamino	El Service	Juan B. Justo 1931	(02477) 418000

