



Thank you for choosing Philips.

Need help fast?

Read your Quick Use Guide and/or Owner's Manual first for quick tips that make using your Philips product more enjoyable.

If you have read your instructions and still need assistance, you may access our online help at

www.philips.com/support
or call

1-888-PHILIPS (744-5477)
while with your product.
(and Model / Serial number)



Philips vous remercie de votre confiance.

Besoin d'une aide rapide?

Les Guide d'utilisation rapide et Manuel de l'utilisateur regorgent d'astuces destinées à simplifier l'utilisation de votre produit Philips. Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse

www.philips.com/support
ou formez le

1-800-661-6162 (Francophone)
1-888-PHILIPS (744-5477) (English speaking)
Veuillez à avoir votre produit à portée de main.
(et model / serial nombre)



Gracias por escoger Philips

Necesita ayuda inmediata?

Lea primero la Guía de uso rápido o el Manual del usuario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Philips.

Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en

www.philips.com/support
o llame al teléfono

1-888-PHILIPS (744-5477)
y tenga a mano el producto.
(y número de model / serial)



PHILIPS

Canada

English:

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Français:

Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Class B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

CAUTION

 
 
 
Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

ATTENTION

L'utilisation des commandes ou réglages ou le non-respect des procédures ci-inclues peuvent se traduire par une exposition dangereuse à l'irradiation.

ATENCIÓN

El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

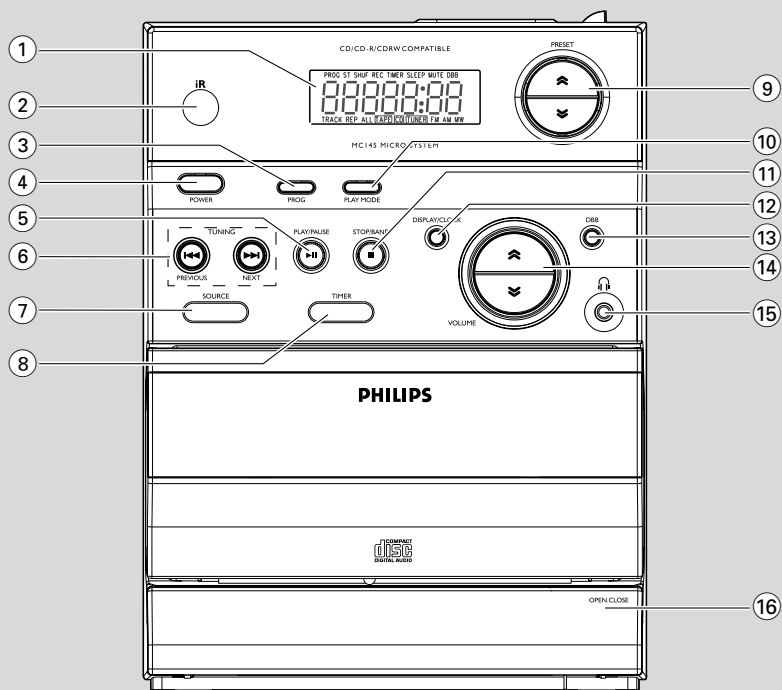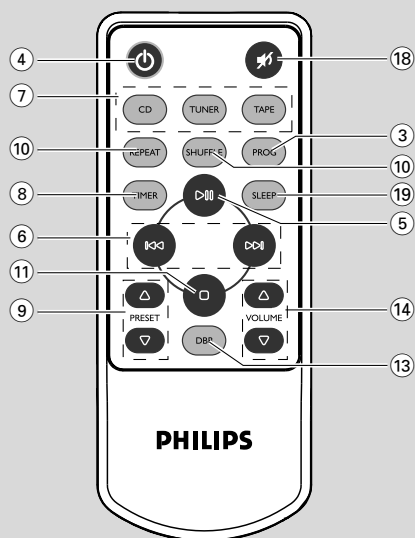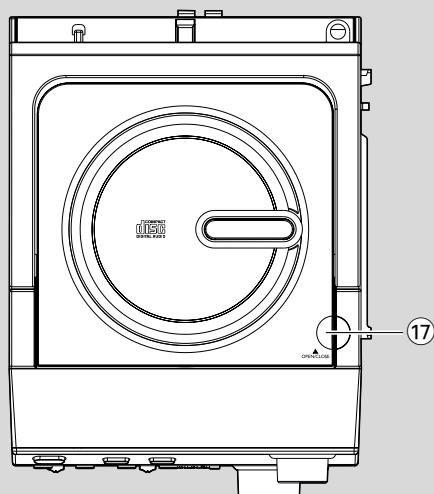

Return your Product Registration Card today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

PHILIPS

***Congratulations on your purchase,
and welcome to the “family!”***

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS “family,” you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once.

IMPORTANT SAFETY INSTRUCTIONS

 
1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/ accessories specified by the manufacturer.

12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. **Better usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

- Install **all** batteries correctly, **+** and **–** as marked on the unit.
- Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).
- Remove batteries when the unit is not used for a long time.

16. Apparatus shall not be exposed to dripping or splashing.

17. Do not place any sources of danger on the apparatus. (e.g. liquid filled objects, lighted candles).

18. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations.

For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

Class II equipment symbol



This symbol indicates that the unit has a double insulation system

English 8

Français 24

Español 43

English

Français

Español

Contents

General Information

Environmental information	9
Supplied accessories	9
Safety information	9

Preparation

Rear connections	10
Before using the remote control	11
Replacing battery (lithium CR2032) into the remote control	11

Controls

Controls on the system and remote control	12
--	----

Basic Functions

Switching the system on	13
Power-saving automatic standby	13
Adjusting volume and sound	13

CD Operation

Playing a disc	14
Selecting a different track	14
Finding a passage within a track	14
Different play modes: Shuffle and Repeat	15
Programming track numbers	15
Erasing the programme	15

Radio Reception

Tuning to radio stations	16
Programming radio stations	16
Tuning to preset radio stations	16

Tape Operation/Recording

Tape playback	17
General information on recording	17
Synchro start CD recording	17-18
Recording from the radio	18

Maintenance	18
--------------------------	----

Clock/Timer

Setting the clock	19
Setting the timer	19
Activating and deactivating TIMER	19
Activating and deactivating SLEEP	20

Specifications	20
-----------------------------	----

Troubleshooting	21-22
------------------------------	-------

The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Be responsible
Respect copyrights

This system complies with the FCC rules, Part 15 and with 21 CFR 1040.10.

Operation is subject to the following two conditions:

- ***This device may not cause harmful interference, and***
- ***this device must accept any interference received, including interference that may cause undesired operation.***

Environmental Information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

 
Supplied accessories

- 2 speaker boxes
- remote control with battery

Safety Information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer.
- Place the system on a flat, hard and stable surface.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the disc unit inside the system. Should this occur, the CD player would not operate normally. Leave the power on for about one hour with no disc in the system until normal playback is possible.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- **When the system is switched to Standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**

Preparations

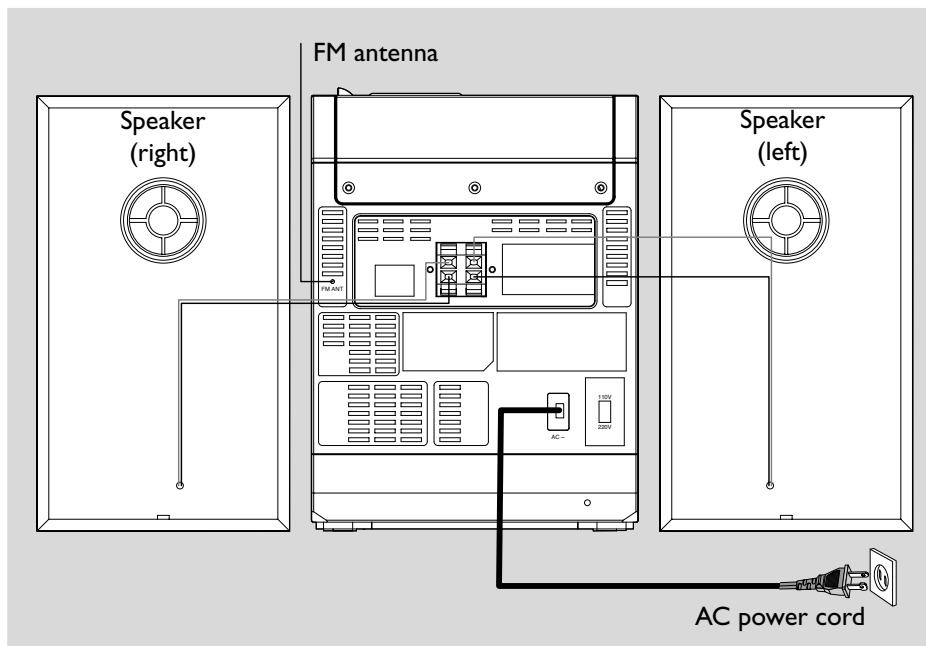

Rear connections

The type plate is located at the back of the system.

A Power

- Before connecting the AC power cord to the wall outlet, ensure that all other connections have been made.

 
WARNING!

- *For optimal performance, use only the original power cable.*
- *Never make or change any connections with the power switched on.*

B Speakers Connection

Front Speakers

Connect the speaker wires to the SPEAKERS terminals, right speaker to "RIGHT" and left speaker to "LEFT", coloured (marked) wire to "+" and black (unmarked) wire to "–".

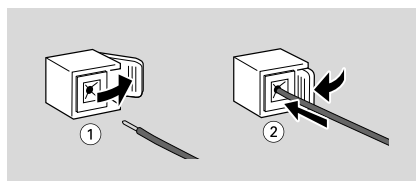


- Fully insert the stripped portion of the speaker wire into the terminal as shown.

Notes:

- *For optimal sound performance, use the supplied speakers.*
- *Do not connect more than one speaker to any one pair of +/– speaker terminals.*
- *Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.*


Before using the remote control

 - 1 Pull out the plastic protective sheet.
- 2 Select the source you wish to control by pressing one of the source select keys on the remote control (for example CD,TUNER).
- 3 Then select the desired function (for example ►, ◀, ▶).

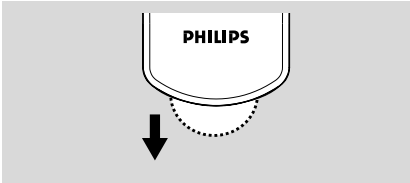

Replacing battery (lithium CR2032) into the remote control

 - 1 Pull out the knob (A) slightly to the right.
- 2 Pull out the battery compartment (B) .
- 3 Replace a new battery and fully insert the battery compartment back to the original position.

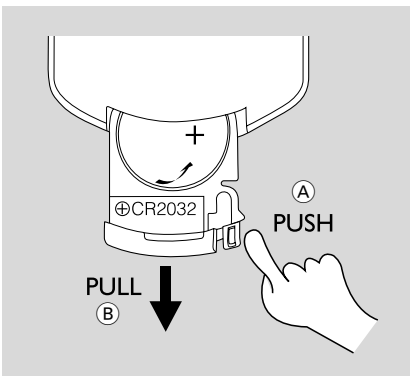

CAUTION!

Batteries contain chemical substances, so they should be disposed off properly.

 
Controls (illustrations on page 3)

Controls on the system and remote control

- ① **LCD Display**
 - shows the status of the system.
- ② **IR SENSOR**
 - infrared sensor for remote control.
- ③ **PROG**
 - for CD programs tracks and reviews the program.
 - for Tuner programs tuner stations manually or automatically.
- ④ **POWER / ⏻**
 - switches the system to standby/on.
- ⑤ **PLAY/PAUSE ►►**
 - for CD starts or pauses CD playback.
- ⑥ **TUNING, PREVIOUS/NEXT (◀◀ / ▶▶)**
 - for CD skips to the beginning of a current track/previous/ next track.
 - fast searches back and forward within a track/CD.
 - for Tuner tunes to radio stations.
 - for clock/timer .. adjusts the hours and minutes for clock / timer functions
- ⑦ **SOURCE (CD/ TUNER/ TAPE)**
 - switches on the system.
 - selects the respective sound source for CD/ TUNER / TAPE.
- ⑧ **TIMER**
 - activates/deactivates or sets the timer function.
- ⑨ **PRESET ⧻ / ⧼ (Δ / ▽ on remote control)**
 - for Tuner selects a preset radio station.
- ⑩ **PLAYMODE (REPEAT / SHUFFLE)**
 - repeats a track/CD program/ entire CD.
 - plays CD tracks in random order.
- ⑪ **STOP/BAND ■**
 - for CD stops CD playback or erase a CD program.
 - for Tuner (on the set only) selects waveband.
- ⑫ **DISPLAY/CLOCK**
 - for CD display CD remaining time.
 - at standby sets the clock function.
- ⑬ **DBB (Dynamic Bass Boost)**
 - enhances the bass.
- ⑭ **VOLUME ⧻ / ⧼ (Δ / ▽ on remote control)**
 - adjusts volume level.
- ⑮ **🎧**
 - connect headphones.
- ⑯ **Tape Deck Operation**
 - OPEN•CLOSE** ..Opens the tape key cover.
 - RECORD ●** starts recording.
 - PLAY ►** starts playback.
 - ◀◀ / ▶▶** fast rewinds/forwards the tape.
 - STOP•OPEN** ... stops the tape; opens the tape compartment.
 - PAUSE** pauses recording or playback.
- ⑰ **OPEN•CLOSE**
 - opens/closes the CD door.
- ⑱ **MUTE 🔊**
 - switches playback sound off and on.
- ⑲ **SLEEP**
 - activates/deactivates or selects the sleeper time.

Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example CD , TUNER).
- Then select the desired function (for example ►, ◀, ▶).

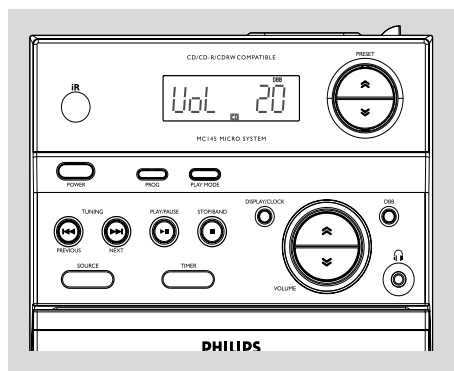

IMPORTANT:

Before you operate the system, complete the preparation procedures.

Switching the system on

- Press **POWER** (⏻ on the remote control).
→ The system will switch to the last selected source.
- Press **SOURCE** (CD, TUNER or TAPE on the remote control).
→ The system will switch to the selected source.

To switch the system to standby mode

 
 
- Press **POWER** (⏻ on the remote control).
- If in tape mode or recording mode, press **STOP•OPEN** first.
→ The volume level (up to maximum volume level of 20), interactive sound settings, last selected source and tuner presets will be retained in the player's memory.

Power-saving automatic standby

The power-saving feature automatically switches to standby 15 minutes after a tape or CD playback has ended and no control is operated.


Adjusting volume and sound

- 1 Press **VOLUME** (↗/↘ (Δ/▽ on remote control) to increase or decrease volume.
→ Display shows the volume level **VOL** and a number from 0-32.
- 2 Press **DBB** to switch bass enhancement on or off.
→ Display shows: **DBB** if the DBB is activated.
- 3 Press **MUTE** (🔇) on the remote control to stop sound play-back instantly.
→ Playback will continue without sound and the display shows **MUTE**.

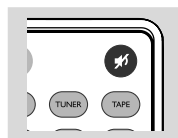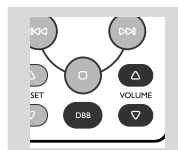


- To start sound playback you can:
 - press **MUTE** (🔇) again;
 - adjust the volume controls;
 - change source.

 CD Operation

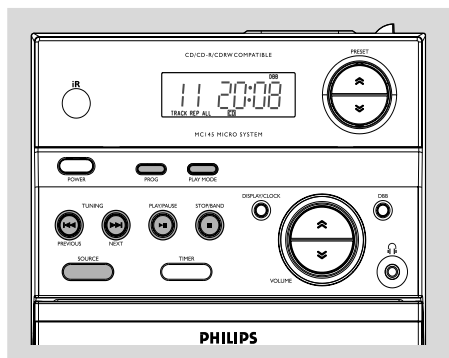

IMPORTANT:

 The lens of the CD player should never be touched.

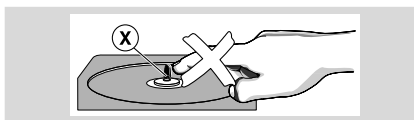


Playing a disc

This CD player plays Audio Discs including CD-Recordables and CD-Rewritables.

- CD-ROM, CD-I, CDV, VCD, DVD or computer CDs, however, are not possible.

 - 1 Select **CD** source.
- 2 Lift the disc door at the edge marked **OPEN•CLOSE** to open the CD compartment.
→ **OPEN** is displayed when you open the CD compartment.
- 3 Insert a disc with the printed side facing up and press down on **OPEN•CLOSE** to close the CD door.
→ **READY** is displayed as the CD player scans the contents of a disc. The total number of tracks and the total playing time are also shown.
- 4 Press **▶II** to start playback.

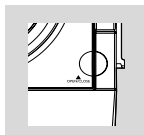

→ Current track number followed by elapsed playing time of the track are displayed during disc playback.

→ Press **DISPLAY/CLOCK** to display total remain playing time.

- 5 To pause playback press **▶II**. Press **▶II** again to resume play.

→ Display: The elapsed time flashes when playback is paused.

- 6 To stop disc playback, press **■**.

Note: CD play will also stop when;

- the CD door is opened.
- the disc has reached the end.
- you select another source: **TAPE**, **TUNER**.
- you select standby.
- you press the tape deck **PLAY ▶** key.

Selecting a different track

- Press **◀◀** or **▶▶** once or repeatedly until the desired track number appears in the display.
- Press **▶II** to start playback.

Finding a passage within a track

- 1 Press and hold down **◀◀** or **▶▶**.
→ The disc is played at high speed and low volume.
- 2 When you find the passage you want, release **◀◀** or **▶▶**.
→ Normal playback continues.

Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback.

REPEATplays the current track continuously

REPEAT ALL ...repeats the entire disc/programme

SHUFFLEtracks of the entire disc are played in random order

- 1 To select your play mode, press **PLAYMODE** (**SHUFFLE** or **REPEAT** on the remote control) before or during playback until the display shows the desired function.
- 2 Press **▶II** to start playback if in the STOP position.
→ If you have selected SHUFFLE, playback starts automatically.
- 3 To return to normal playback, press **PLAYMODE** (**SHUFFLE** or **REPEAT** on the remote control) until the various SHUFFLE/REPEAT modes are no longer displayed.
- You can also press **STOP** ■ to cancel your play mode.

Programming track numbers

Programme in the STOP position to select and store your disc tracks in the desired sequence. If you like, store any track more than once. Up to 20 tracks can be stored in the memory.

- 1 Press **◀◀** or **▶▶** to select your desired track number.
- 2 Press **PROG**.
→ Display shows: the selected track number.
PROG flashes and **! P r** appears briefly.
- 3 Repeat steps 1-2 to select and store all desired tracks.
→ **FFFF** is displayed if you attempt to programme more than 20 tracks.
- 4 To start playback of your disc programme, press **▶II**.

Notes:

 
- If you wish, you can add further tracks to your current program. Make sure you are in the STOP position, and that you have not exceeded 20 tracks.
- Display shows **NOSE** if there is no track selected.

Erasing the programme

You can erase the programme by:

- pressing ■ once in the STOP mode;
- pressing ■ twice during playback;
- opening the CD compartment;
- Select another sound source
→ **PROG** disappears from the display.

Radio Reception

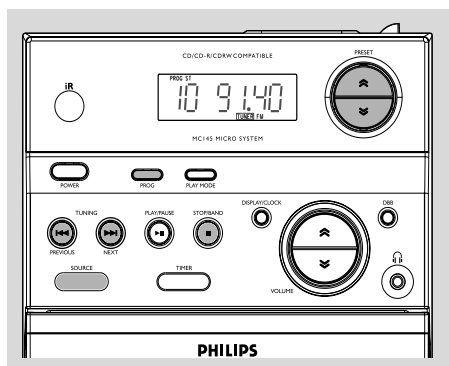

Tuning to radio stations

- 1 Select **TUNER** source.
→ **TUNER** is displayed.
- 2 Press **STOP/BAND** (on the set) or **TUNER** (on the remote control) once or more to select your waveband.
- 3 Press on **TUNING** ◀◀ or ▶▶ and release button.
→ The radio automatically tunes to a station with sufficient reception. Display indication during automatic tuning *srch*.
- 4 Repeat step 3 if necessary until you find the desired station.
- To tune to a weak station, press **TUNING** ◀◀ or ▶▶ briefly and repeatedly until you have found optimal reception.

Helpful hints:

To improve radio reception:

- For **FM**, extend coil antenna at the back of the unit fully for optimum reception.
- For **AM**, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.

Programming radio stations

You can store up to a total of 20 (10 FM and 10 AM) radio stations in the memory.

Automatic programming

Automatic programming will start with a chosen preset number 1. From this preset number upwards, former programmed radio stations will be overridden.

- 1 Press **STOP/BAND** (on the set) or **TUNER** (on the remote control) once or more to select your waveband.
- 2 Press **PRESET** $\approx / \approx$ (Δ / ∇ on remote control) to select the preset number where programming should start.

Note:

- If no preset number is selected, default is preset (1) and all your presets will be overridden.

 
- 3 Press **PROG** for more than 2 seconds to activate programming.
→ *PRG* is displayed and available stations are programmed in order of waveband reception strength.

Manual programming

- 1 Tune to your desired station (see Tuning to radio stations).
- 2 Press **PROG** to activate programming.
→ **PROG** flashes in the display.
- 3 Press **PRESET** $\approx / \approx$ (Δ / ∇ on remote control) to select a number from 1 to 10 for FM (or 1 to 10 for AM) to this station.
- 4 Press **PROG** again to confirm the setting.
→ **PROG**, the preset number and the frequency of the preset station is shown.
- 5 Repeat the above four steps to store other stations.
- You can override a preset station by storing another frequency in its place.

Tuning to preset radio stations

- Press **PRESET** $\approx / \approx$ (Δ / ∇ on the remote control) until the desired preset station is displayed.

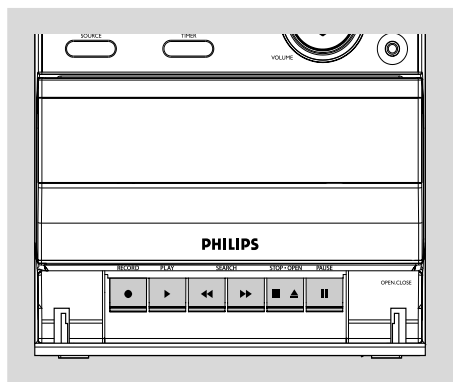

Tape playback

- 1 Select **TAPE** source.
→ Display: shows **TAPES** throughout tape operation.
- 2 Pull down the plate marked "**OPEN•CLOSE**" at the bottom of the main set.
- 3 Press **STOP•OPEN** ■ ▲ to open the tape door.
- 4 Insert a recorded tape and close the tape door.
- Load the tape with the open side downward and the full spool to the left.
- 5 Press **PLAY** ► to start playback.
- 6 To pause, press **PAUSE** ■■. Press again to resume.
- 7 Press ◀◀ or ▶▶ to fast wind tape in either direction.
- 8 To stop the tape, press **STOP•OPEN** ■ ▲.

Notes:

- During playback, the keys are automatically released at the end of a tape. To switch off the set, press **POWER**.
- During fast forwarding/rewinding, the keys will not be released at the end of a tape. To stop fast winding, press **STOP/EJECT** ■▲.
- The sound source cannot be changed while playing and recording a tape.

General information on recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- For recording, use only **NORMAL** (IEC type I) tapes on which the tabs have not yet been broken. This deck is not suited for recording on **METAL** (IEC IV) type tapes.
- The best recording level is set automatically. Altering the **VOLUME** or **DBB** controls will not affect the recording in progress.
- The recording sound quality might differ depending on the quality of your recording source and the recording tape.
- At the very beginning and end of the tape, no recording will take place during the 7 seconds when the leader tape passes the recorder heads.
- To protect a tape from accidental erasure, have the tape in front of you and break out the left tab. Recording on this side is no longer possible. If, however, you wish to record over this side again, cover the tabs with a piece of adhesive tape.

Synchro start CD recording

- 1 Select **CD** source.
- 2 Insert a disc and if desired, programme track numbers.
- 3 Press **STOP•OPEN** ■ ▲ to open the tape door.
- 4 Insert a suitable tape into the deck and close the tape door.
- 5 Press **RECORD** ● to start recording.
→ Playing of the CD programme starts automatically from the beginning of the CD after 7 seconds. It is not necessary to start the CD player separately.

Tape Operation / Recording

To select and record a particular passage within a CD track:

- Press and hold down on ◀◀ or ▶▶. Release the control when you recognize the passage you want.
- To interrupt CD playback press ▶◻.
- Recording starts from this exact point in the track when you press **RECORD ●**.
- 6 To pause, press **PAUSE ◻◻**. Press again to resume.
- 7 To stop recording, press **STOP•OPEN ■▲**.

Recording from the radio

- 1 Tune to the desired radio station (see Tuning to radio stations).
- 2 Press **STOP•OPEN ■▲** to open the tape door.
- 3 Insert a suitable tape into the deck and close the tape door.
- 4 Press **RECORD ●** to start recording.
- 5 To pause, press **PAUSE ◻◻**. Press again to resume.
- 6 To stop recording, press **STOP•OPEN ■▲**.

 
Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

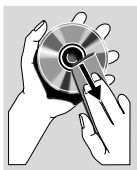


Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.


Cleaning the Heads and the Tape Paths

 - To ensure good recording and playback quality, clean the heads (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You can also clean the heads by playing a cleaning tape once.

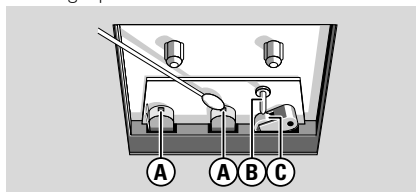

Demagnetising the heads

 - Use a demagnetising tape available at your dealer.

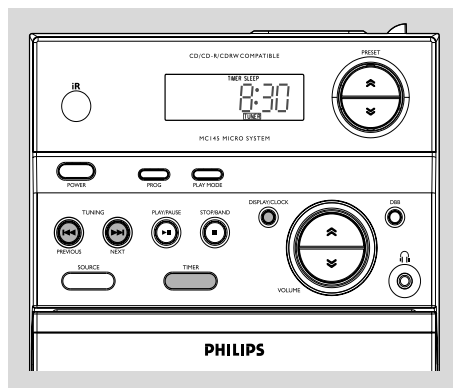

Setting the clock

- 1 In Standby mode, press **DISPLAY/CLOCK** button.
→ The clock digits for the hours flash.
- 2 Press **◀◀ / ▶▶** to set the hours.
- 3 Press **DISPLAY/CLOCK** again.
→ The clock digits for the minutes flash.
- 4 Press **◀◀ / ▶▶** to set the minutes.
- 5 Press **DISPLAY/CLOCK** to confirm the time.

Note:

– If the clock has not been set, –:– will be displayed.

Setting the timer

- The system can be used as an alarm clock. CD or TUNER can be set to switch on at a preset time. The clock time needs to be set first before the timer can be used.
 - If no button is pressed within 90 seconds during timer setup, the system will exit timer setting mode automatically.
- 1 In any mode, press **TIMER** for more than 2 seconds.
 - 2 Press **◀◀ / ▶▶** (CD / TUNER or **◀◀ / ▶▶** on the remote control) to select sound source.
 - 3 Press **TIMER** to confirm your desired source.
→ The clock digits for the hours flash.
 - 4 Press **◀◀ / ▶▶** to set the hours.
 - 5 Press **TIMER** again.
→ The clock digits for the minutes flash.
 - 6 Press **◀◀ / ▶▶** to set the minutes.
 - 7 Press **TIMER** to confirm the time.
→ The timer is now set and actiated.

Note:

– If source CD is selected and no disc is in the CD tray or the disc has an error, TUNER will be selected automatically.

Activating and deactivating TIMER

 
- In standby or during playback, press **TIMER** once.
→ Display shows **TIMER** if activated, and disappears if deactivated.

Clock/Timer

Activating and deactivating SLEEP

The sleep timer enables the system to switch off by itself after a set period of time.

- Press **SLEEP** on the remote control repeatedly to select desired time before system shuts off.
→ Display shows **SLEEP** and series of time options for selection: 60, 45, 30, 15, 0, 60.
- To deactivate, press **SLEEP** on the remote control once or more until '0' is shown, or press **POWER** /  on the system or remote control.

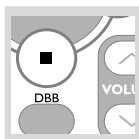

Specifications

AMPLIFIER

Output power 2 x 1.5 W RMS ⁽¹⁾
 Signal-to-noise ratio ≥ 62 dBA (IEC)
 Frequency response 63 – 16000 Hz, ± 3 dB
 Impedance loudspeakers 8 Ω
 Impedance headphones 32 Ω – 1000 Ω
⁽¹⁾ (8 Ω, 125 Hz - 10 kHz, 10%THD)

CD PLAYER

Frequency range 63 – 16000 Hz
 Signal-to-noise ratio 65 dBA

TUNER

FM wave range 87.5 – 108 MHz
 MW wave range 530 – 1700 kHz

TAPE DECK

Frequency response
 Normal tape (type I) 125 – 8000 Hz (8 dB)
 Signal-to-noise ratio
 Normal tape (type I) 34 dBA
 Wow and flutter ≤ 0.4% DIN

SPEAKERS

Bass reflex system
 Dimensions (w x h x d)
 130 x 224.5 x 213 (mm)
 5.12 x 8.84 x 8.39 (inch)

GENERAL INFORMATION

AC Power 120 V / 60 Hz
 Dimensions (w x h x d)
 168 x 224.5 x 214.5 (mm)
 6.61 x 8.84 x 8.45 (inch)
 Weight (with/without speakers)
 approx. 4.6 / 2.25 kg
 approx. 10.1 / 4.96 pound
 Standby power consumption < 3 W

Subject to modification

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

Problem	Solution
CD OPERATION	
"no cd" is displayed.	– Insert a disc. – Check if the disc is inserted upside down. – Wait until the moisture condensation at the lens has cleared. – Replace or clean the disc, see "Maintenance". – Use a finalised CD-RW or CD-R.
RADIO RECEPTION	
Radio reception is poor.	– If the signal is too weak, adjust the antenna or connect an external antenna for better reception. – Increase the distance between the Micro HiFi System and your TV or VCR.
TAPE OPERATION / RECORDING	
Recording or playback cannot be made.	– Clean deck parts, see "Maintenance". – Use only normal (IEC I) tape for recording. – Apply a piece of adhesive tape over the missing tab space.
GENERAL	
The system does not react when buttons are pressed.	– Remove and reconnect the AC power plug and switch on the system again.
Sound cannot be heard or is of poor quality.	– Adjust the volume. – Disconnect the headphones. – Check that the speakers are connected correctly. – Check if the stripped speaker wire is clamped.
The left and right sound outputs are reversed.	– Check the speaker connections and location.

Troubleshooting

The remote control does not function properly.

- Select the source (CD or TUNER, for example) before pressing the function button (▶, ◀, ▶).
- Reduce the distance between the remote control and the system.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Point the remote control directly toward IR sensor on the front of the system.

The timer is not working.

- Set the clock correctly.
- Press **TIMER** to switch on the timer.
- If a recording is in progress, stop the recording.

The Clock/Timer setting is erased.

- Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.
-

PHILIPS LIMITED WARRANTY

ONE (1) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth below.

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty covers new products if a defect arises and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product.

Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is given, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage occurring to product during shipping.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:
1-888-PHILIPS (1-888-744-5477)

TO OBTAIN ASSISTANCE IN CANADA...

1-800-661-6162 (French Speaking)
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 671539, Marietta, GA. 30006-0026

3121 233 48801