 




Jabra® CLIPPER

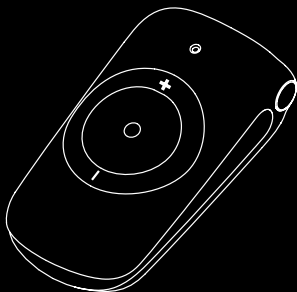

User manual

www.jabra.com

CONTENTS



THANK YOU	2
ABOUT YOUR JABRA CLIPPER	2
WHAT YOUR JABRA CLIPPER DOES	3
GETTING STARTED	4
CHARGING YOUR JABRA CLIPPER	4
TURNING YOUR JABRA CLIPPER ON AND OFF	4
PAIRING YOUR JABRA CLIPPER TO A PHONE OR OTHER DEVICE	4
WEARING STYLE	5
HOW TO	6
HEADSET VISUAL AND AUDIO INDICATORS	7
USING YOUR JABRA CLIPPER WITH TWO MOBILE DEVICES	9
TROUBLESHOOTING & FAQ	9
NEED MORE HELP?	11
TAKING CARE OF YOUR HEADSET	12
GLOSSARY	12

THANK YOU

Thank you for purchasing the Jabra CLIPPER *Bluetooth*® wireless technology Stereo Headset. We hope you enjoy it! This instruction manual will get you started and ready to make the most of your headset.

ABOUT YOUR JABRA CLIPPER

  - A Microphone**
- B Charging connector**
- C LED**
- D Multi-Function button**
- E 3.5mm jack for earphones**
- F Volume up
forward skip track/**
- G Volume down
backward skip track/**
- H Stereo earphones
(exchangeable)**

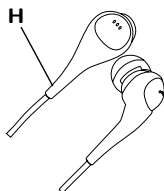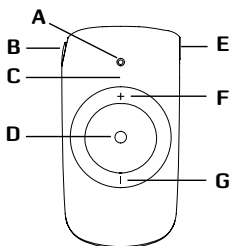

WHAT YOUR JABRA CLIPPER DOES

The Jabra CLIPPER lets you listen to stereo music through your *Bluetooth*® enabled mobile phone or music player, while ensuring that you never miss a call.

- Play your music wirelessly
- Answer or end mobile phone calls
- Automatically switch between music and calls
- Be connected to two different *Bluetooth*® devices at the same time (for example your PC and mobile phone)

FEATURES AND SPECIFICATIONS

- Clean and contemporary Danish design
- Wireless Stereo sound (A2DP)
- Automatically switch between music and calls
- Multiuse™ – connect to two different devices at the same time
- Incoming caller and mobile distance alert
- Remote control your music (AVRCP)*: Play, pause, stop, skip track
- Exchangeable noise-blocking stereo ear-buds (3.5mm jack)
- Up to 6 hours talk time and up to 200 hours standby time
- Includes two extra sets of ear-buds in different sizes (Medium & Large)
- *Bluetooth*® wireless technology - clear sound with *Bluetooth*® 2.1+ EDR & eSCO
- Auto-pairing for no-nonsense set-up
- Rechargeable battery with Micro-USB (5-pin) charging option from AC power supply (included), PC via USB cable (not included) or car charger (not included).
- Weight: 20 grams
- Colored LED-lights for *Bluetooth*® status and battery indicator
- Operating range up to 10 meters (approximately 33 feet)

Please note: Your Jabra CLIPPER can withstand a short rain shower but is not waterproof and cannot be submerged. If your device gets wet, it should be wiped clean of any traces of water in order to protect it from potential damage.

GETTING STARTED

Follow these three steps before using your headset:

- 1 Charge your headset (approximately 2 hours)**
- 2 Activate *Bluetooth*® on your mobile phone (refer to the manual for your mobile phone)**
- 3 Pair your headset to your mobile phone**

CHARGING YOUR JABRA CLIPPER

Make sure that your Jabra CLIPPER is fully charged before you start using it for the first time. While charging, the battery indicator changes from red to green, when fully charged. Charging time is approximately 2h. You can use the Jabra CLIPPER during charging. Please note: The lifetime of the battery will be significantly reduced if your device is left uncharged for a long period. Jabra therefore recommends that you recharge your device at least once a month.

TURNING YOUR JABRA CLIPPER ON AND OFF

- Press and hold the Multi-Function button until the LED turns green to turn it on.
- Press and hold the Multi-Function button until the LED turns red to turn it off.
- The headset will automatically turn off after 10 minutes if not connected to a device.

PAIRING YOUR JABRA CLIPPER TO A PHONE OR OTHER DEVICE

Headsets are connected to phones or other *Bluetooth*® devices using a procedure called 'pairing'. By following a few simple steps, pairing can be done in a matter of seconds.

1. Put the headset in pairing mode

1.a. First time pairing

- Turn on the headset and the Jabra CLIPPER will automatically enter pairing mode (indicator light is solid blue) and start searching for a device.

1.b. Later pairing

 
 
 
 
- Press and hold the Multi-Function button until the indicator light is solid blue (approximately 6 seconds).

2. Set your **Bluetooth®** phone or device to search for the Jabra CLIPPER

- Follow your phone's instruction guide. First make sure that **Bluetooth®** is activated on your mobile phone. Then set your phone to search for the headset. This usually involves going to a 'setup,' 'connect' or '**Bluetooth®**' menu on your phone and selecting the option to search for or 'add' a **Bluetooth®** device.*

3. Your phone will find the Jabra CLIPPER

- The phone will find the headset under name "Jabra CLIPPER".
- Your phone then asks if you want to pair with the headset.
- Accept by pressing 'Yes' or 'OK' on the phone and confirm with the passkey or PIN = 0000 (4 zeros). Your phone will confirm when pairing is complete.



Note: All communications between your Jabra CLIPPER headset and mobile phone are encrypted, so others will not be able to intercept and understand your conversation. Establishing this encryption is an important part of the pairing process.

WEARING STYLE

Jabra CLIPPER is designed as a clothing clip. This gives you a variety of simple and practical wearing styles: Just clip it on your shirt, jacket, t-shirt or whatever fits your needs.

Regardless of how you clip-on the Jabra CLIPPER, always be sure to place the headset so that the microphone is positioned as close to your mouth as possible. This will ensure that your voice comes through loud and clear.

IMPORTANT: DO NOT EXTEND THE METAL-CLIP BY MORE THAN FOUR (4) MILLIMETERS, AS IT WILL BEND OUT OF SHAPE PERMANENTLY.

HOW TO

The Jabra CLIPPER is easy to operate. The buttons performs different functions depending on how long you press them:

Duration of press

Tap	Press the button briefly
Double tap	Press the button briefly two times within 0.5 seconds
Press	Press the button approximately 1 second
Press and hold	Press the button approximately 4 seconds

Play music (Some phones may require you to start a media player first)*

- Tap the Multi-Function button.

Pause music

- Tap the Multi-Function button – tap again to resume playing.

Answer a call when playing music

- Tap the Multi-Function button and the music will be paused and the call will be connected.

End a call

- Tap the Multi-Function button to end an active call – when you end the call, your music will start again**.

Skip one track forward**

- Press and hold the '+' volume control button.

Skip one track back**

- Press and hold the '-' volume control button.

Answer a call

- Tap the Multi-Function button to answer a call.

End a call

- Tap the Multi-Function button to end an active call.

Reject a call**

- Press and hold the Multi-Function button when the phone rings to reject an incoming call. Depending on your phone settings, the person who called you will either be forwarded to voice mail or hear the busy signal.

Make a call**

- When your Jabra CLIPPER is connected to your phone, all calls made from your phone will automatically be transferred to your headset (subject to phone settings).

Redial last number**

- Double tap the Multi-Function button.

Adjust sound and volume*

- Tap the +/- volume control button to turn volume up or down.

Mute microphone when on a phone call

- Tap the – and + volume button simultaneously to mute and un-mute.

Adjust sound and volume*

- Tap the +/- volume control button to turn volume up or down.

HEADSET AUDIO AND VISUAL INDICATORS

The Jabra CLIPPER provides status messages using both lights and audio signals. For example, the LED lights various colors to indicate battery level, incoming calls, on/off operations, etc. Audio signals tell you when you have pressed a button or changed the volume; in-ear ring tones are also provided.

What the LED means:

The LED on the front side of Jabra CLIPPER indicates different states of the product:

LED light	
Solid Blue	In pairing mode – see 'Pair Jabra CLIPPER to a phone or other device'
Slow single blue flash	Connected to a phone and in standby mode
Single blue flash	Connected to phone and active on call
Quick blue double flash	Incoming call
Solid red	Charging
Solid green	Fully charged
Single red flash	Low Battery

The Jabra CLIPPER Display LED turns off after 30 seconds of inactivity. The headset is still active, and light will flash again after a tap on the Multi-Function button or any call activity.

Communication by Audio Indicators

Your Jabra CLIPPER employs sound alerts to communicate different actions or information. One important alert is the "Low Battery" alert, which is two short beeps, and indicates 5 minutes of battery time remains.

Another sound alert is the "Mobile Away" alert, which is four short beeps, and indicates you are moving out of range of your mobile phone.

USING YOUR JABRA CLIPPER WITH TWO MOBILE DEVICES

The Jabra CLIPPER is capable of having two different *Bluetooth*® devices connected to the headset at the same time – e.g. a mobile phone and a PC for Internet telephony (VoIP). This means that for example, you can use the same headset for both listening to music from your mobile phone as well as answering mobile phone calls and use it for Internet telephony (e.g. Skype or Google Talk) at the same time.

Please note: Jabra CLIPPER does not support two mobile phones at the same time.

TROUBLESHOOTING & FAQ

What is *Bluetooth*® Stereo/A2DP?

- *Bluetooth*® Stereo enables a wireless connection of stereo audio between two *Bluetooth*® Stereo devices. In order to provide a wireless *Bluetooth*® Stereo connection between two devices, both devices must support the A2DP (Advanced Audio Distribution Profile) *Bluetooth*® profile.

What is AVRCP?

- Audio Video Remote Control Profile (AVRCP) enables you to remote control your music player from the Jabra CLIPPER with functions such as Pause, Play, Stop & Skip Track (can be phone dependent).

How can I use the Multiuse™ feature on my Jabra CLIPPER?

- Multiuse functionality enables you to be connected to two different devices at the same time (e.g. a mobile phone and a PC). This means that for example, you can use the same headset for both listening to music from your mobile phone and use it for Internet telephony (e.g. Skype or Google Talk) at the same time.

I hear crackling noises

- *Bluetooth*® is a radio technology which means it is sensitive to objects between the headset and the device it is connected to. You should be able to have up to 10 meters (33 feet) of distance between the headset and the connected device when there are no major objects in the way (walls, etc.).

I cannot hear the phone call in the headset

- Increase the volume on the Jabra CLIPPER.
- Make sure your phone is connected to the headset by i.e. tapping the Multi-Function button, or viewing the LED indicator.

I have pairing problems

- You may have deleted the pairing connection in your mobile phone – follow the pairing instructions in 'Pair Your Headset to a Phone or other Device'.

I cannot use Reject call or Redial

- These features are dependent on your phone supporting them; please consult your phone's manual for details.

I cannot hear music in the headset

- Ensure that the headset is connected to your *Bluetooth*® enabled device.
- You may have been out-of-range (10 meters) to your *Bluetooth*® enabled device or the headset might have experienced an ESD (Electrostatic discharge) incidence. Press the Multi-Function Button to re-establish the *Bluetooth*® audio link - Increase the volume on your device.
- Make sure that the Jabra CLIPPER is charged.

The music I hear sounds very poor

Make sure the other device supports *Bluetooth*® 1.1 or higher including the Advanced Audio Distribution Profile (A2DP) for music streaming.

If the above procedure did not help then it is possible that your phone is using the stereo audio connection in a different way. You can enable this mode on Jabra CLIPPER by performing pairing in the following way:

- Remove the *Bluetooth*® connection to Jabra CLIPPER on your phone.
- Make sure the headset is on.
- Press and hold the Multi-Function button for more than 5 seconds until the LED display are solid Blue.
- Go through the regular steps in pairing the headset to a *Bluetooth*® device.

NEED MORE HELP?

1. Web: www.jabra.com
(for the latest support info and online User Manuals)

2. E-mail:

Deutsch	support.de@jabra.com
English	support.uk@jabra.com
Español	support.es@jabra.com
Français	support.fr@jabra.com
Italiano	support.it@jabra.com
Nederlands	support.nl@jabra.com
Polska	support.pl@jabra.com
Scandinavian	support.no@jabra.com
Россия	support.ru@jabra.com
	Information: info@jabra.com

3. Phone:

Belgique/Belgie	00800 722 52272
Danmark	70 25 22 72
Deutschland	0800 1826756
Die Schweiz	00800 722 52272
España	900 984572
France	0800 900325
Italia	800 786532
Luxembourg	00800 722 52272
Nederland	0800 0223039
Norge	800 61272
Österreich	00800 722 52272
Polska	0801 800 550
Portugal	00800 722 52272
Suomi	00800 722 52272
Sverige	020792522
United Kingdom	0800 0327026
Россия	+7 495 660 71 51
International	00800 722 52272

TAKING CARE OF YOUR HEADSET

- Always store the Jabra CLIPPER with the power off and safely protected
- Avoid storage at extreme temperatures (above 45°C/113°F – including direct sunlight – or below -10°C/14°F). This can shorten battery life and may affect operation. High temperatures may also degrade performance.
- Do not expose the Jabra CLIPPER to rain or other liquids.

GLOSSARY

- 1 **Bluetooth®** is a radio technology that connects devices, such as mobile phones and headsets, without wires or cords over a short distance (approx. 10 meters/33 feet). *Bluetooth®* is safe to use. It is secure too, so once a connection has been made no-one can listen in and there is no interference from other *Bluetooth®* devices either. Get more information at www.bluetooth.com.
- 2 **Bluetooth® profiles** are the different ways that *Bluetooth®* devices communicate with other devices. *Bluetooth®* phones support the headset profile, the hands-free profile or both. In order to support a certain profile, a phone manufacturer must implement certain mandatory features within the phone's software.
- 3 **Pairing** creates a unique and encrypted link between two *Bluetooth®* devices and lets them communicate with each other. *Bluetooth®* devices will not work if the devices have not been paired.
- 4 **Passkey or PIN** is a code that you enter on your *Bluetooth®* enabled device (e.g. a mobile phone) to pair it with your Jabra CLIPPER. This makes your device and the Jabra CLIPPER recognize each other and automatically work together.
- 5 **Standby mode** is when the Jabra CLIPPER is passively waiting for a call. When you 'end' a call on your mobile phone, the headset goes into standby mode.



Dispose of the product according to local standards and regulations.

www.jabra.com/weee

Jabra®

DISCOVER FREEDOM

A BRAND BY

GN Netcom

© 2010 GN Netcom US, Inc. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

© 2010 GN Netcom A/S. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

MADE IN CHINA
TYPE: OTE6



www.jabra.com

81-03134 A