

Register your product and get support at
www.philips.com/welcome

FWM603



EN User manual

PHILIPS

México



Es necesario que lea cuidadosamente su instructivo de manejo.

	PRECAUCIÓN - ADVERTENCIA	
	No abrir, riesgo de choque eléctrico	
	ATENCIÓN	
	Verifique que el voltaje de alimentación sea el requerido para su aparato	
Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado.		

Descripción: **Minisistema de Audio**
Modelo : **FWM603/55**
Alimentación: **110-127 / 220-240V~ ; 50/60 Hz**
Consumo: **100W**
Importador: **Philips Mexicana, S.A. de C.V.**
Domicilio: **Av. La Palma No.6**
Col. San Fernando La Herradura
Huixquilucan
Localidad y Tel: **Edo. de México C.P. 52784**
Tel.52 69 90 00
Exportador: **Philips Electronics HK, Ltd.**
País de Origen: **China**
N° de Serie: _____

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.**

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).*
- Cuando el aparato no haya sido operado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.*
- Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).*

Contents

1 Important	4	7 Listen to radio	16
Safety	4	Tune to a radio station	16
Notice	5	Program radio stations automatically	16
		Program radio stations manually	16
		Select a preset radio station	16
		Change AM tuning grid	16
2 Your Mini Hi-Fi System	6		
Introduction	6	8 USB record	17
What's in the box	6	Record to USB	17
Overview of the main unit	7	Schedule radio-to-USB record	17
Overview of the remote control	8		
3 Get started	10	9 Other features	18
Connect FM antenna	10	Set the alarm timer	18
Connect AM antenna	10	Set the sleep timer	18
Connect speakers	10	Listen to an external device	18
Connect power	11	Delete from USB device	19
Prepare the remote control	11	Karaoke	19
Auto install radio stations	12	Adjust display brightness	19
Set clock	12		
Turn on	12	10 Product information	20
4 Play	13	Specifications	20
Play disc	13	USB playability information	20
Play from USB	13	Supported MP3 disc formats	21
		Maintenance	21
5 Play options	14	11 Troubleshooting	22
Repeat and random play	14		
Program tracks	14		
Display play information	14		
6 Adjust volume level and sound effect	15		
Adjust volume level	15		
Mute sound	15		
Boost sound power	15		
Select a preset sound effect	15		
Enhance bass	15		
Incredible surround	15		
Customize sound for room acoustics	15		

1 Important

Safety

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any



way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑭ **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑰ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- ⑱ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

This apparatus includes this label:



Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

The making of unauthorized copies of copy-protected



Be responsible
Respect copyrights

material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



2 Your Mini Hi-Fi System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

Introduction

With this unit, you can enjoy audio from discs, USB devices, external devices, or radio stations. For your convenience, you can load up to 3 discs at once.

To enrich sound, this unit offers you these sound effects:

- MAX sound for instant power boost
- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)
- Incredible surround (IS)
- Virtual Ambience-based Control (VAC)

The unit supports the following media formats:

 


What's in the box

Check and identify the contents of your package:

- Main unit x 1
- AC power cable x 1
- Power plug adaptor x 1
- Loudspeaker box x 2
- Subwoofer x 1
- Remote control with 2 AAA batteries
- FM wire antenna x 1
- AM loop antenna x 1
- MP3 link cable x 1
- Quick start guide
- User manual

Overview of the main unit

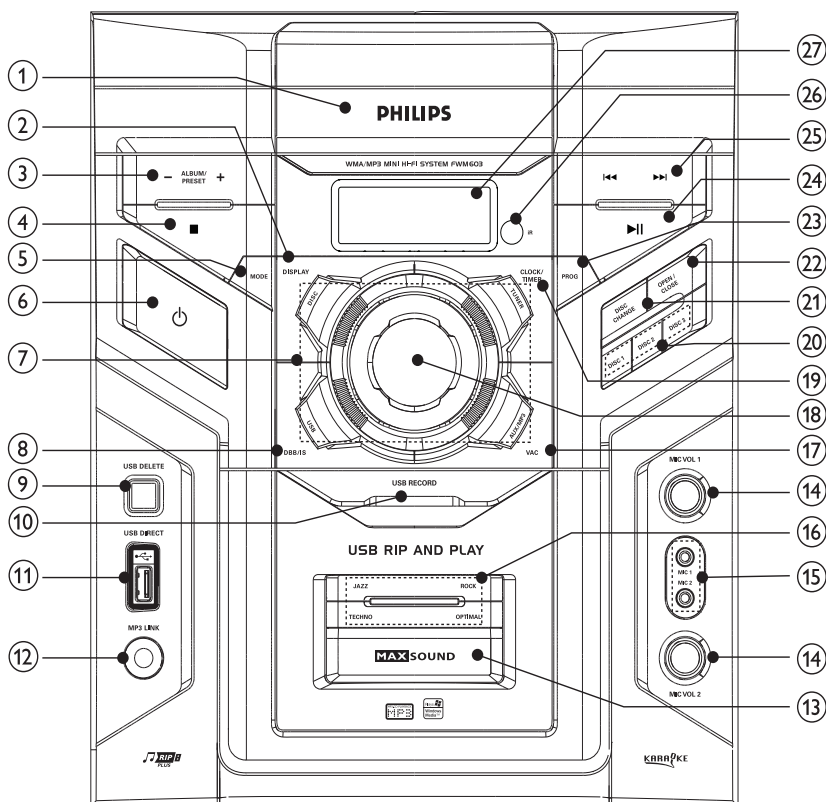


- ① **Disc compartment door**
- ② **DISPLAY**
 - Select display information.
- ③ **ALBUM/PRESET+/-**
 - Skip to the previous/next album.
 - Select a preset radio station.
 - Adjust time.
 - Select 12 hour or 24 hour format.
- ④ **■**
 - Stop play or erase a program.
- ⑤ **MODE**
 - Select repeat play or random play.
- ⑥ **⏻**
 - Turn on the unit or switch to standby mode.
- ⑦ **Source selection keys**
 - Select a source.
- ⑧ **DBB/IS**
 - Turn on or off dynamic bass enhancement.
 - Turn on or off incredible surround.
- ⑨ **USB DELETE**
 - Delete audio files stored on a USB device.
- ⑩ **USB RECORD**
 - Record from a disc or radio to a USB device.
- ⑪ **USB DIRECT**
 - Jack for a USB mass storage device.

- ⑫ **MP3 LINK**
 - Audio input jack (3.5mm) for an external audio device.
- ⑬ **MAX SOUND**
 - Turn on or off instant power boost for sound.
- ⑭ **MIC VOL**
 - Adjust microphone volume.
- ⑮ **MIC 1/2**
 - Jack for a microphone.
- ⑯ **DSC**
 - Select a preset sound equalizer setting.
- ⑰ **VAC**
 - Select an ambience-based equaliser setting.
- ⑱ **VOLUME**
 - Adjust volume.
- ⑲ **CLOCK/TIMER**
 - Set the clock.
 - Set the alarm timer.
- ⑳ **DISC 1/2/3**
 - Select a disc.
- ㉑ **DISC CHANGE**
 - Change a disc.
- ㉒ **OPEN/CLOSE**
 - Open or close the disc compartment.
- ㉓ **PROG**
 - Program tracks.
 - Program radio stations.
- ㉔ **▶||**
 - Start or pause play.
- ㉕ **⏮️⏭️**
 - Skip to the previous/next track.
 - Search within a track/ disc/USB.
 - Tune to a radio station.
 - Adjust time.
- ㉖ **iR**
 - Remote sensor.

- ㉗ **Display panel**
 - Show current status.

 Overview of the remote control

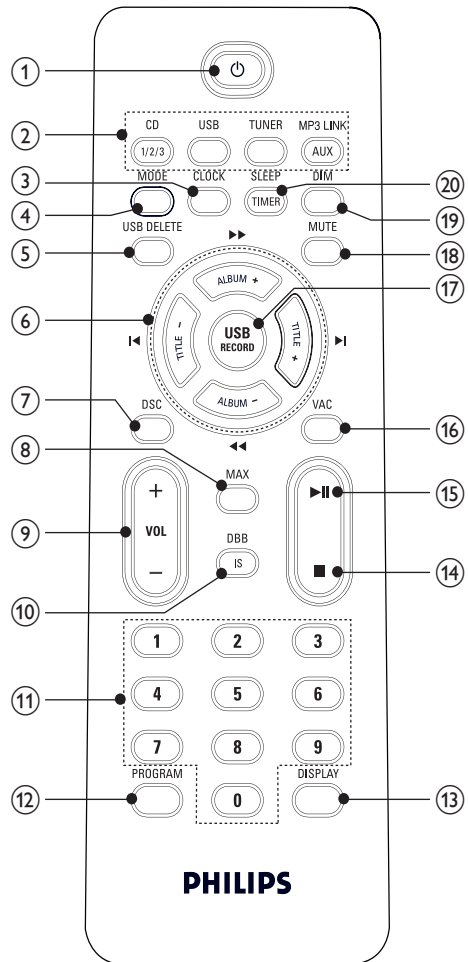

- ① **⏻**
 - Turn on the unit, or switch to standby mode.
- ② **Source selection keys**
 - Select a source.

- ③ **CLOCK**
 - Set the clock.
- ④ **MODE**
 - Select repeat play or random play.
- ⑤ **USB DELETE**
 - Delete audio files stored on a USB device.
- ⑥ **TITLE+/-◀▶**
 - Skip to the previous/next track.
 - Select a preset radio station.
 - Adjust time.
 - **ALBUM +/-**/Skip to the previous/next album.
 - Search within a track/ disc/USB.
 - Tune to a radio station.
 - Adjust time.
 - Select 12 hour or 24 hour format.
- ⑦ **DSC**
 - Select a preset sound equalizer setting.
- ⑧ **MAX**
 - Turn on or off instant power boost for sound.
- ⑨ **VOL +/-**
 - Adjust volume.
- ⑩ **DBB/IS**
 - Turn on or off dynamic bass enhancement.
 - Turn on or off incredible surround.
- ⑪ **Numeric keypad**
 - Select a track from a disc directly.
- ⑫ **PROGRAM**
 - Program tracks.
 - Program radio stations.
- ⑬ **DISPLAY**
 - Select display information.
- ⑭ **■**
 - Stop play or erase a program.
- ⑮ **▶||**
 - Start or pause play.
- ⑯ **VAC**
 - Select an ambience-based equaliser setting.
- ⑰ **USB RECORD**
 - Record to a USB device.
- ⑱ **MUTE**
 - Mute volume.
- ⑲ **DIM**
 - Select different levels of display brightness.
- ⑳ **SLEEP/TIMER**
 - Set the sleep timer.
 - Set the alarm timer.
 - Turn on or off sleep/alarm timer.

3 Get started

Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

 
If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____


Connect FM antenna

- 1 Connect the supplied FM antenna to the FM jack on the back of the main unit.

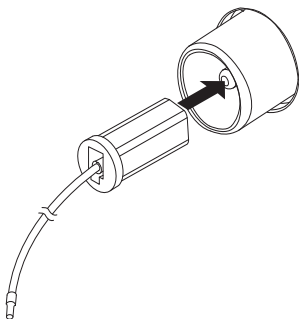


Connect AM antenna

 - ① Assemble the AM loop antenna.

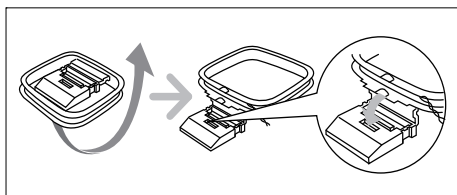

 
- ② Connect the AM loop antenna to the AM jack on the back of the main unit.

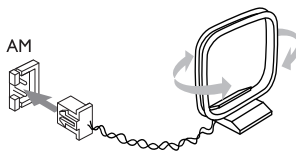

Connect speakers

Note

 - For optimal sound, use the supplied speakers only.
- Connect only speakers with impedance that is the same or higher than the supplied speakers. Refer to the Specifications section of this manual.

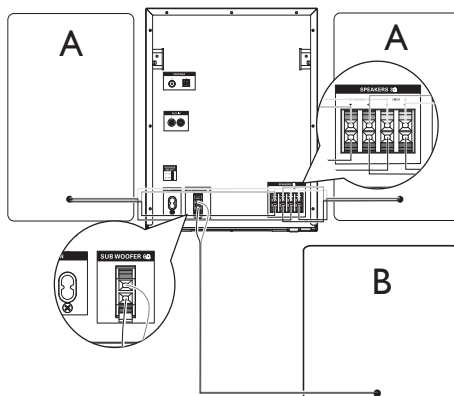


A: left/right speaker; B: Subwoofer

Note


- Ensure that the colors of the speaker wires and terminals are matched.

- 1 Hold down the socket flap.

 - 2 Insert the stripped part of the wire completely.
- Insert the right speaker wires to "R", left speaker wires to "L", subwoofer wires to "SUBWOOFER".
 - Insert the blue wires, white wires and red wires to "+", black wires to "-".
 - Release the socket flap.



Connect power

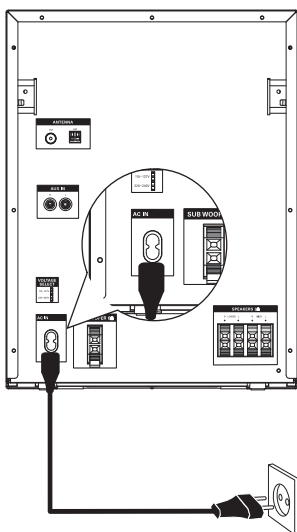 

Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage set on the voltage selector on the back of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.



Note

- The type plate is located on the back of the main unit.

- 1 If your power supply voltage is 110V-127V, adjust the voltage selector to 110V-127V.
- 2 Connect the AC power cable to:
 - the main unit.
 - the wall socket.

Prepare the remote control

 


Note

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

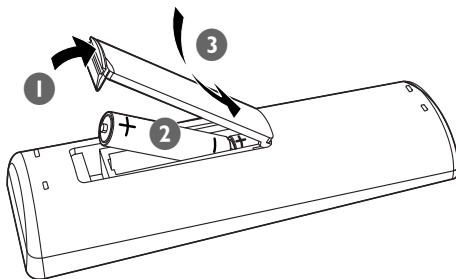

Note

- If you are not going to use the remote control for a long time, remove the batteries.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Auto install radio stations

When you connect power and no radio stations are stored, the unit automatically begins to store radio stations.

- 1 Connect the unit to the power supply.
 - ↳ [AUTO INSTALL - PRESS PLAY] (auto install - press the PLAY button) is displayed.
- 2 Press ►|| on the main unit to start installation.
 - ↳ [AUTO] (auto) is displayed.
 - ↳ The unit automatically stores radio stations with sufficient signal strength.
 - ↳ When all the available radio stations are stored, the first preset radio station is broadcast automatically.

Set clock

- 1 In the standby mode, press **CLOCK** to activate the clock setting mode.
 - ↳ The 12 hour or 24 hour format is displayed.
- 2 Press **ALBUM +/-◀▶** repeatedly to select 12 hour or 24 hour format.
- 3 Press **CLOCK** to confirm.
 - ↳ The clock digits are displayed and begin to blink.
- 4 Press **ALBUM +/-◀▶** to set the hour.
- 5 Press **TITLE +/-◀▶** to set the minute.
- 6 Press **CLOCK** to confirm.



Tip

- To view the clock during play, press **CLOCK**.

Turn on

- 1 Press **⏻**.
 - ↳ The unit switches to the last selected source.

 
Switch to standby

- 1 Press **⏻** to switch the unit to standby mode.
 - ↳ The backlight on the display panel turns off.
 - ↳ The clock (if set) appears on the display panel.

4 Play


Play disc

- 1 Press **CD 1/2/3** to select the disc source.
- 2 Press **OPEN/CLOSE** on the main unit to open the disc compartment.
- 3 Load up to two discs on the disc trays, with the printed side facing up.
 - To load the third disc, press **DISC CHANGE** on the main unit to rotate to the disc tray.

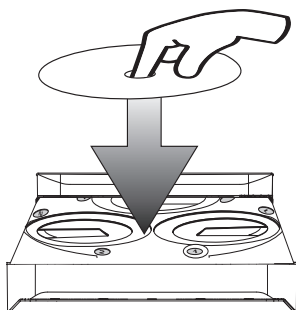

- 4 Press **OPEN/CLOSE** on the main unit to close the disc compartment.
- 5 If the disc doesn't play, press **▶||**.
 - To select a disc, press **CD 1/2/3**.
 - To pause/resume play, press **▶||**.
 - To stop play, press **■**.
 - To select another track, press **TITLE+/-◀▶**, or press a numeric button.
 - To select an album, press **ALBUM +/-◀▶**.
 - To search within a track, press and hold **ALBUM +/-◀▶**, then release to resume normal play.

 Play from USB

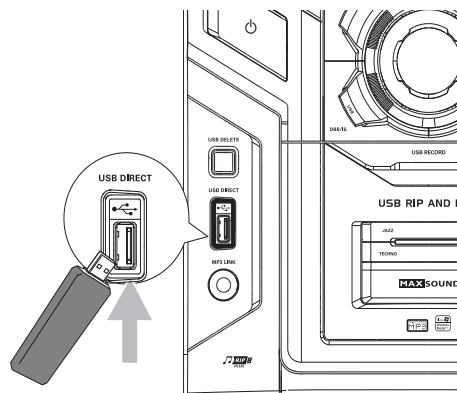

Note

- Ensure that the USB device contains playable audio contents for supported formats. (see 'USB playability information' on page 20)

- 1 Plug the USB device into the socket of this unit.
- 2 Press **USB** to select the USB source.
- 3 Press **ALBUM +/-◀▶** to select a folder.
- 4 Press **TITLE+/-◀▶** to select an audio file.
- 5 If the USB device doesn't play, press **▶||**.
 - To pause/resume play, press **▶||**.
 - To stop play, press **■**.
 - To search within an audio file, press and hold **ALBUM +/-◀▶**, then release to resume normal play.

5 Play options

Repeat and random play

- 1 Press **MODE** repeatedly to select:
 - : the current track is played repeatedly.
 - ALL: all tracks are played repeatedly.
 - ALL: all tracks are played randomly and repeatedly.
 - : all tracks are played randomly.
- 2 To return to normal play, press **MODE** repeatedly until play mode is no longer displayed.



Tip

- Shuffle play cannot be selected when you play programmed tracks.

Display play information

- 1 During play, press **DISPLAY** repeatedly to select different play information.

Program tracks

You can program a maximum of 40 tracks.

- 1 At CD/USB mode, in the stop position, press **PROGRAM** to activate the program mode.
↳ [PROG] (program) is displayed.
- 2 For MP3/WMA tracks, press **ALBUM +/-**   to select an album.
- 3 Press **TITLE +/-**   to select a track number; then press **PROGRAM** to confirm.
- 4 Repeat steps 2 to 3 to select and store all tracks to program.
- 5 Press **▶||** to play the programmed tracks.
↳ During play, [PROG] (program) is displayed.
 - To erase the program, in the stop position, press **■**.

6 Adjust volume level and sound effect

Note

- MAX sound and DSC (Digital Sound Control) cannot be activated at the same time.

Adjust volume level

- 1 During play, press **VOL +/-** to increase/decrease the volume level.

Mute sound

- 1 During play, press **MUTE** to mute/unmute sound.

Boost sound power

MAX gives an instant boost to the sound power.

- 1 Press **MAX** to turn on or off the instant power boost.

Select a preset sound effect

The DSC (Digital Sound Control) enables you to enjoy special sound effects.

- 1 During play, press **DSC** repeatedly to select:
 - [JAZZ] (jazz)
 - [ROCK] (rock)
 - [TECHNO] (techno)
 - [OPTIMAL] (optimal)

Enhance bass

The best DBB (Dynamic Bass Enhancement) setting is generated automatically for each DSC selection. You can manually select the DBB setting that best suits your listening environment.

- 1 During play, press **DBB/IS** repeatedly to select:
 - DBB 1
 - DBB 2
 - DBB 3
 - DBB off
 ↳ If DBB is activated, **DBB** is displayed.

Incredible surround

You can enhance audio with a virtual surround sound effect.

- 1 Press and hold **DBB/IS** to turn on or off the incredible surround.
 - ↳ If the incredible surround is activated, [INC SURR] (incredible surround) is displayed.

Customize sound for room acoustics

- 1 During play, press **VAC** repeatedly to select a type of listening environment:
 - [HALL] (hall)
 - [CONCERT] (concert)
 - [CINEMA] (cinema)

7 Listen to radio

Tune to a radio station

- 1 Press **TUNER** repeatedly to select FM or AM.
- 2 Press and hold **ALBUM +/-◀▶** for more than 2 seconds.
 - ↳ [SEARCH] (search) is displayed.
 - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.
 - To tune to a weak station, press **ALBUM +/-◀▶** repeatedly until you find optimal reception.

Program radio stations automatically

You can program a maximum of 40 (FM + AM) preset radio stations.

- 1 In the tuner mode, press and hold **PROGRAM** more than 2 seconds to activate automatic program mode.
 - ↳ [AUTO] (auto) is displayed.
 - ↳ All available stations are programmed in the order of waveband reception strength.
 - ↳ The first programmed radio station is broadcast automatically.

Program radio stations manually

You can program a maximum of 40 (FM + AM) preset radio stations.

- 1 Tune to a radio station.

- 2 Press **PROGRAM** to activate program mode.
 - ↳ [PROG] (program) is displayed.
- 3 Press **TITLE+/-◀▶** to allocate a number to this radio station, then press **PROGRAM** to confirm.
- 4 Repeat the above steps to program other stations.



Tip

- To overwrite a programmed station, store another station in its place.

Select a preset radio station

- 1 In tuner mode, press **TITLE+/-◀▶** to select a preset number.



Tip

- Position the antenna as far as possible from TV, VCR or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

Change AM tuning grid

In some countries, the AM radio frequency step between adjacent channels is 10 kHz (9 kHz in some areas).

- 1 Press **TUNER** to select AM.
- 2 Press and hold **■** on the main unit for more than 5 seconds.
 - ↳ The frequency step is changed to 9 kHz or 10 kHz.
 - ↳ All preset stations are erased and need to be re-programmed.

8 USB record

Audio CD tracks, MP3 files, radio and audio from external devices are recorded in .mp3 format, and WMA files are recorded in .wma format. The first time you record to USB, a folder called 'PHILIPS' is automatically created in the USB device. Each time you record to USB, the recorded files are stored in a sub-folder in the 'PHILIPS' folder. Files and sub-folders are named numerically in the order in which they are created.

Record to USB

- 1 Plug the USB device into the  socket of this unit.
- 2 Prepare the source to record from.
 - Disc - Select the disc source and load a disc. You can select a track from which a recording starts.
 - Radio - Tune to a radio station.
 - MP3 LINK/AUX - Select the MP3 link/AUX source, then connect and start to play an external device.
- 3 Press **USB RECORD** to start recording.
 - For discs, press **USB RECORD** repeatedly to select:
 - Ⓐ [REC ONE] (record one): the first/current track is recorded.
 - Ⓑ [REC ALL] (record all): all tracks/the remaining tracks are recorded.
 - ↳ Disc play starts automatically from the beginning of the disc/the selected track, and the recording starts.
 - ↳ To stop recording, press .

Note

- If the USB device does not have enough memory to store the audio files, a message about a full memory is displayed.

Schedule radio-to-USB record

Schedule radio recordings in advance and you can listen to your favorite programs at your convenience.



Note

- A recording is activated only in the standby mode.
- The maximum length of a recording is 12 hours.

- 1 Ensure that you set the clock correctly.
- 2 Plug the USB device into the  socket of this unit.
- 3 Tune to a radio station.
- 4 Press  to switch to standby mode.
- 5 Press and hold **SLEEP/TIMER** for more than 2 seconds.
 - ↳ A prompt to select the source is displayed.
- 6 Press **TUNER** repeatedly to select FM or AM.
- 7 Press **USB RECORD**.
 - ↳ The start timer digits are displayed and begin to blink.
- 8 Press **ALBUM +/-<||>** to set the hour.
- 9 Press **TITLE+/-<||>** to set the minute.
- 10 Press **SLEEP/TIMER** to confirm.
 - ↳ The end timer digits are displayed and begin to blink.
- 11 Press **ALBUM +/-<||>** to set the hour.
- 12 Press **TITLE+/-<||>** to set the minute.
- 13 Press **SLEEP/TIMER** to confirm.
 - ↳  is displayed.
 - ↳ At the scheduled times, the recording begins and ends automatically.
 - ↳ When the recording ends, the unit switches to standby mode.

To deactivate or re-activate a record timer

- 1 In the standby mode, press **SLEEP/TIMER** repeatedly.
 - ↳ If the timer is activated,  is displayed.
 - ↳ If the timer is deactivated,  disappears.

9 Other features

Set the alarm timer

This unit can be used as an alarm clock. The disc, radio or USB is activated to play at a preset time.



Note

- If you have set a record timer and an alarm timer, only the latest timer is activated.

- 1 Ensure that you have set the clock correctly.
- 2 Press **⏻** to switch to standby mode.
- 3 Press and hold **SLEEP/TIMER** for more than 2 seconds.
↳ A prompt to select the source is displayed.
- 4 Press **CD 1/2/3**, or **TUNER** or **USB** to select a source.
- 5 Press **SLEEP/TIMER** to confirm.
↳ The clock digits are displayed and begin to blink.
- 6 Press **ALBUM +/-◀▶** to set the hour.
- 7 Press **TITLE+/-◀▶** to set the minute.
- 8 Press **SLEEP/TIMER** to confirm.
↳ The timer is set and activated.

To deactivate or re-activate an alarm timer

- 1 In the standby mode, press **SLEEP/TIMER** repeatedly.
↳ If the timer is activated, **⌚** is displayed.
↳ If the timer is deactivated, **⌚** disappears.



Tip

- In MP3 link or AUX mode, the alarm timer cannot be set.
- If disc or USB source is selected but no audio file can be played, radio is activated automatically.

Set the sleep timer

This unit can switch to standby automatically after a set period of time.

- 1 When the unit is turned on, press **SLEEP/TIMER** repeatedly to select a set period of time (in minutes).
↳ When sleep timer is activated, **zz** is displayed.

To deactivate sleep timer

- 1 Press **SLEEP/TIMER** repeatedly until **[OFF]** (off) is displayed.
↳ When sleep timer is deactivated, **zz** disappears on the display.

Listen to an external device

You can listen to an external audio device through this unit.

For audio players with headphone sockets

- 1 Press **MP3 LINK/AUX** repeatedly to select the MP3 link source.
- 2 Connect the supplied MP3 link cable to:
 - the **MP3 LINK** jack (3.5mm) on the unit.
 - the headphone jack on an external device.
- 3 Start to play the device (refer to the device's user manual).

For audio players with red/white audio output sockets

- 1 Press **MP3 LINK/AUX** repeatedly to select the AUX source.
- 2 Connect the audio cables (white/red jacks, not supplied) to:
 - the **AUX IN** jacks on the back of the unit.
 - the **AUDIO OUT** jacks on an external device.
- 3 Start to play the device (refer to the device's user manual).

Delete from USB device

- 1 During USB play, press **TITLE**+**←/→** to select an audio file.
 - To delete an audio folder, in the stop position, press **ALBUM** +**←/→** to select an audio folder.
- 2 Press **USB DELETE**.
 - ↳ A confirmation message is displayed.
- 3 While the message is displayed, press **USB DELETE** again to confirm.
 - To cancel, press **■**.

Karaoke

You can connect a microphone and sing along with a music source.

- 1 Turn **MIC VOL** to the minimum level.
- 2 Connect a microphone to the **MIC 1/2** jack on the unit.
- 3 Press **CD 1/2/3**, or **TUNER**, or **USB**, or **MP3 LINK/AUX** to select the source, and start play.
- 4 Sing through the microphone.
 - To adjust the volume of the source, press **VOL** +**←/→**.
 - To adjust the volume of the microphone, turn **MIC VOL**.

Adjust display brightness

- 1 Press **DIM** repeatedly to select different levels of display brightness.

10 Product information

 Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Total output power	600W RMS
Frequency response	60 - 16kHz
Signal-to- noise ratio	>67dB A (IEC)
Aux input	1500mV/2000mV

Disc

Laser type	Semiconductor
Disc diameter	12cm/8cm
Support disc	CD-DA, CD-R, CD-RW, MP3-CD, WMA-CD
Audio DAC	24Bits / 44.1kHz
Total harmonic distortion	<1.5%
Frequency response	60Hz -16kHz (44.1kHz)
S/N ratio	>75dBA

Tuner

Tuning range	FM: 87.5 - 108MHz; AM: 531 - 1602kHz (9KHz); 530 - 1700KHz (10KHz)
Tuning grid	50KHz (FM); 9KHz/10KHz (AM)
Number of presets	40 (FM + AM)
FM	75ohm wire
AM	loop antenna

Speakers

Speaker Impedance	6ohm
Woofer	2 x 5.25"
Tweeter	2 x 1.75"
Dimensions (W x H x D)	230 x 345 x 279mm
Weight	3.58kg each

Subwoofer

Speaker impedance	6ohm
Speaker driver	8"
Output power	160W
Dimensions (W x H x D)	270 x 345 x 396mm
Weight	6.28kg

General information

AC power	110 - 127/220 - 240V, 50/60Hz
Operation power consumption	100W
Standby power consumption	<2W
USB direct	Version 2.0/1.1
Dimensions Main Unit (W x H x D)	269 x 311 x 366mm
Weight (without speakers)	7.31kg

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB 1.1)
- USB flash players (USB 2.0 or USB 1.1)
- memory cards (requires an additional card reader to work with this unit)

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)

- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 999 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32-320 (kbps), variable bit rates
- ID3 tag v2.0 or later
- Directory nesting up to a maximum of 8 levels

 
Maintenance

Clean the cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

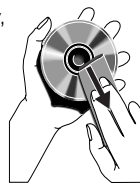

Clean the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

11 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site www.philips.com/welcome. When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- To save power, the unit switches to standby automatically 15 minutes after a play reaches the end and no control is operated.

No sound or poor sound

- Adjust the volume.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

Left and right sound outputs reversed

- Check the speaker connections and location.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.

- Replace the batteries.
- Aim the remote control directly at the sensor on the front of the main unit.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- If the signal is too weak, adjust the antenna or connect an external antenna for better reception.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Validez de la garantía

Todos los productos de la línea de audio y video Philips, se regirán por un año de garantía internacional (365 días), salvo para Chile donde los productos de las líneas CD Portable y RCR CD, los cuales se rigen por 6 meses de garantía (182 días)

Condiciones de la garantía

Esta garantía perderá su validez si:

- El defecto es causado por uso incorrecto o en desacuerdo con el manual de instrucciones
- El aparato sea modificado, violado por una persona no autorizada por Philips
- El producto esté funcionando con un suministro de energía (red eléctrica, batería, etc.) de características diferentes a las recomendadas en el manual de instrucciones
- El número de serie que identifica el producto se encuentre de forma adulterada.

Están excluidos de garantía,

- Los defectos que se generen debido al incumplimiento del manual de instrucciones del producto
- Los casos fortuitos o de la fuerza mayor, como aquellos causados por agentes de la naturaleza y accidentes, descargas eléctricas, señales de transmisión débiles.
- Los defectos que se generen debido al uso de los productos en servicios no doméstico/residencial regulares o en desacuerdo con el uso recomendado
- Daños ocasionados por fluctuaciones de voltajes, voltaje fuera de norma o por causas fuera de Philips, como cortocircuitos en los bafles o parlantes.
- En las ciudades en donde no existe el taller autorizado del servicio de Philips, los costos del transporte del aparato y/o el técnico autorizado, corren por cuenta del cliente.
- La garantía no será válida si el producto necesita modificaciones o adaptaciones para que funcione en otro país que no es aquél para el cual fue mercadeado.

El único documento válido para hacer efectiva la garantía de los productos, es la Factura o Boleta de compra del consumidor final.

Aquellos productos que hayan sido adquiridos en otros países y que no estén en el rango normal del país donde se efectuará la reparación, dicha prestación de servicio tomará mas tiempo de lo normal ya que es necesario pedir las partes/piezas al centro de producción correspondiente.

Centros de información**Líneas de atención al consumidor**

Chile: 600-7445477

Colombia: 01-800-700-7445

Costa Rica: 0800-506-7445

Ecuador: 1-800-10-1045

El Salvador: 800-6024

Guatemala: 1-800-299-0007

Panamá: 800-8300

Peru: 0800-00100

Rep. Dominicana: 1-800-751-2673

Venezuela: 0800-100-4888

POLIZA DE GARANTIA PARA MEXICO

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor.**

Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestro **CENTRO DE INFORMACIÓN AL CLIENTE LADA** sin costo en toda la república al **01 800 504 62 00** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles, contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.

Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:

-Cuando el aparato sea utilizado en condiciones distintas a las normales.

-Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.

-Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.

PERIODOS DE GARANTIA

36 MESES.- Monitores para computadora.

12 MESES.- Televisores con y sin reproductor de video digital DVD, videocassetteras, reproductores de discos de video digital DVD, reproductores de disco de video digital con pantalla incluida, grabadores reproductores de disco de video digital DVD, grabadores reproductores de disco compacto, video proyectores (excepto la lámpara) , cámaras de video, radiograbadoras con y sin reproductor de disco compacto, reproductores de cassette portátil, reproductores de disco compacto portátil, reproductores de audio digital MP3 (Internet), decodificadores de señal (IRD), televisores para hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, minisistemas de audio, minisistemas de audio con reproductor de disco de video digital integrado, microsistemas de audio, sistemas de cine en casa, equipos modulares, sintonificadores, facsimils, LNB, antenas de recepción de satélite, DVD ROM, CDR ROM y CDRW ROM para computadora.

6 MESES.- radio relojes, radios A.M./F.M., auto estéreos, teléfonos inalámbricos, cámaras digitales.

3 MESES.- Accesorios, controles remotos, bocinas, cintas para fax y para cámaras de videoconferencia, audifonos.

PHILIPS

Philips Mexicana, S.A. de C.V.

Producto Importado por: Philips Mexicana, S.A. de C.V.

Av. La Palma No.6
Col. San Fernando La Herradura
Huixquilucan, Edo. de México. C.P. 52784
Tel. 52 69 90 00

Centro de Información al Cliente Información General

LADA SIN COSTO PARA TODA LA REPUBLICA
01 800 504 62 00
CORREO ELECTRONICO
PHILIPS@TPMEX.COM

MODELO _____ No. DE SERIE _____

La presente garantía contará a partir de: DIA _____ MES _____ AÑO _____

En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo) y en caso de tener alguna duda o pregunta por favor llame a nuestro **Centro de información al Cliente**, en donde con gusto le atenderemos en todo lo relativo a:

- * Servicio de sus aparatos Philips
- * Información de productos y Talleres Autorizados Philips
- * Asesoría en el manejo e instalación de su producto Philips
- * Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

NOTA: Los Centros que tengan (S) solo proporcionan Servicio y los que tengan (SR) venden refacciones, accesorios y proporcionan Servicio

CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO		CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO	
ACAPULCO, GRO	744	483-32-86	serproa@yahoo.com.mx	S	MEXICO, D. F., ZONA NORTE	55	55-67-19-92 55-67-22-56	chyr_electronica@yahoo.com.mx	S
AGUASCALIENTES, AGS	449	915-51-81	jimsaale@hotmail.com	S	MEXICO, D. F., ZONA ORIENTE	55	57-58-89-37	cnoguedam@terra.com.mx	S
CAMPECHE, CAMP.	981	816 25 75	oreza@hotmail.com	S	MEXICO, D. F., ZONA PONIENTE	55	58 12 44 12	raulrtzm@avantel.net	S
CANCUN, Q ROO.	998	984 18 74	gammacancun@webtelmex.net.mx	S	MONTERREY, N.L.	818	375-16-17 400-54-03	mcesa@prodigy.net.mx	S
CD. JUAREZ, CHIH	656	618-21-28 623-46-20	teleservicio@prodigy.net.mx	S	MORELIA, MICH	443	312-03-17	multiservicios_profesionales_de_zamora@msn.com	S
CD. OBREGON, SON	644	412-41-51 416-20-93	mena747@prodigy.net.mx	S	NEZAHUALCOYOTL, EDO. MEX	55	57-33-34-98	vicentegutierrez@prodigy.net.mx	S
CD. VICTORIA, TAMPS	834	315-66-03 312-51-93	eeil_smiller@yahoo.com.mx	S	OAXACA, OAX	951	516-47-37	elfrancistor@prodigy.net.mx	S
COLIMA, COL	312	314-03-01	tv_antenas@hotmail.com	S	ORIZABA, VER	272	724 38 53	barreda_electronics@hotmail.com	S
CUERNAVACA, MOR	777	313-00-49 313-90-92	centroserviciohertz@hotmail.com	S	PACHUCA, HGO	771	714-15-81	zarateelc@hotmail.com	S
CULIACAN, SIN	667	716-15-10	stereovox@cln.megared.net.mx	S	POZA RICA, VER	782	824 47 82	sonydigital@prodigy.net.mx	S
CHIHUAHUA, CHIH	614	421-59-30 421-63-61	comercialdomestica@hotmail.com	S	PUEBLA, PUE	222	248-77-64 231-63-77	rascon12@prodigy.net.mx	S
CHILPANCINGO, GRO.	747	471 72 73	ingelec_gro@hotmail.com	S	QUERETARO, GRO	442	216-10-09		S
DURANGO, DGO	618	825-00-05	evsurdgo@yahoo.com	S	SALTILLO, COAH	844	415 35 80	electroncadigital_07@hotmail.com	S
GUADALAJARA, JAL	33	36-15-72-62 36-16-83-27	www.Lee.com.com.mx	S	SAN LUIS POTOSI, S.L.P	444	815-34-07	centro_serviciosp@prodigy.net.mx	S
HERMOSILLO, SON	662	210-54-95 210-05-86	manuelw@prodigy.net.mx	S	SATELITE, EDO. MEX	55	55 62 59 73	missus_satellite@hotmail.com	S
IRAPUATO, GTO	462	626-51-10	tv_gase@hotmail.com	S	TAMPICO, TAMPS	833	214 13 80	electromovie@prodigy.net.mx	S
LA PAZ, B.C.S	612	122-95-99	cenafpa@prodigy.net.mx	S	TEPIC, NAY	311	212-66-93	spe_tr@hotmail.co	S
LEON, GTO	477	770-26-99	tecospecializados@hotmail.com	S	TIJUANA, B.C.N	664	621-22-15	www.egi1@telnor.net	S
MATAMOROS, TAMPS	868	813-50-13	digitalelectronica@comunicable.net	S	TOLUCA, EDO. MEX	722	214-83-09		S
MAZATLAN, SIN	669	982-42-21	e_santel@hotmail.com	S	TOLUCA, EDO. MEX	722	213 62 94		S
MERIDA, YUC	999	928-59-05	evia2@prodigy.net.mx	S	TORREON, COAH	871	732-49-49	jpmart02@prodigy.net.mx	S
MEXICALI, B.C.N	666	561-98-08 561-98-18	bajaelectronics@aol.com	S	TUXTLA GUTIERREZ, CHIS	961	618-19-08	kcvideo@prodigy.net.mx	S
MEXICO D.F., ZONA ARACON	55	57 94 06 34	philipservicio@hotmail.com	S	URUAPAN, MICH	452	524-08-38 524-37-78	rosaliaq@mich1.telmex.net.mx	S
MEXICO D.F., ZONA CENTRO	55	55 21 60 07	unitelmex@yahoo.com.mx	SR	VERACRUZ, VER	229	932-78-23 932-44-44	antza@ver.megared.net.mx	S
MEXICO, D. F., ZONA SUR	55	55-36-71-03 55-36-25-75	centrodeservicioelectronico@hotmail.com	S	VILLAHERMOSA, TAB	993	314-31-36 314-61-67	villatec@intratur.net.mx	S
MEXICO, D. F., ZONA NORTE	55	53 68 30 21	lissaser@prodigy.net.mx	S	ZACATECAS, ZAC.	492	922 31 63	sertecmur@hotmail.com	S

Para mayor referencia de Talleres de Servicio Autorizados en otras ciudades comunicarse al 01 800 504 62 00 (lada sin costo)

LISTA DE SERVIÇO AUTORIZADO - BRASIL

ACRE		CARIACICA	27 3336-0574	DIVINOPOLIS	37 3213-6278	IPORA	44 3652-1126
RIO BRANCO	68 3224-0558	COLATINA	27 3721-3272	DORES DO INDIAI	37 3551-1094	IRATI	42 3422-1337
ALAGOAS		GUARAPARI	27 3261-3656	FORMIGA	37 3321-1998	LARANJEIRAS SUL	42 3635-3288
ARAPIRACA	82 3522-2321	LINHARES	27 3372-2000	GOV VALADARES	33 3221-0665	LOANDA	44 3425-1716
MACEIO	82 3221-0168	PINEIROS	27 3765-1117	IPATINGA	31 3822-3125	LONDRINA	43 3323-7993
PENEDO	82 3551-3893	SAO MATEUS	27 3763-1080	ITABIRA	31 3831-4530	LONDRINA	43 3324-2112
AMAPA		SERRA	27 3337-5404	ITAJUBA	35 3622-4214	MAL CAND RONDON	45 3254-2074
MACAPA	96 3223-2837	VILA VELHA	27 3289-5622	ITUJUBA	34 3261-4555	MARINGA	44 3025-3759
AMAZONAS		VITORIA	27 3323-1363	JANAUBA	38 3821-1110	MARINGA	44 3222-8035
ITACOAIRAS	92 3521-2509	GOIAS		JOAO MONLEVADE	31 3851-6229	MEDIANEIRA	45 3284-2580
MANAUS	92 3233-2578	ANAPOLIS	62 3098-7587	JOAO PINEIRO	38 3561-4887	NOVA ESPERANCA	44 3252-4431
MANAUS	92 3236-1238	CATALAO	64 3441-2786	JUIZ DE FORA	32 3215-6597	PALOTINA	44 3649-5131
MANAUS	92 3239-0313	FORMOSA	61 3631-4490	LAVRAS	35 3821-0550	PARANAGUA	41 3422-6566
MANAUS	92 3644-6977	GOIANIA	62 3241-7198	MANTENA	33 3241-2515	PARANAVAI	44 3422-2162
BAHIA		GOIANIA	62 3280-0291	MONTE CARMELO	34 3842-1710	PARANAVAI	44 3422-3799
BARREIRAS	77 3611-2845	GOIANIA	62 3223-3105	MONTE CLAROS	38 3221-7477	PATO BRANCO	46 3224-4488
BARREIRAS	77 3612-4254	GOIANIA	62 3229-2508	NANUQUE	33 3621-1630	PONTA GROSSA	42 3223-1083
BOM JESUS LAPA	77 3481-0399	INUMAMA	62 3265-5541	PARACATU	38 3671-1016	RIO NEGRO	47 3645-0251
BRUMADU	77 3441-1421	IPAMERI	62 3511-1108	PASSOS	35 3521-8344	ROLANDIA	43 3015-5844
CAETITE	77 3454-1183	ITAPERANGA	64 3491-4377	PATOS DE MINAS	34 3821-4088	SANTA HELENA	45 3089-2198
CANDEIAS	71 3601-3217	ITUUBARA	64 3431-1990	PATROCINIO	34 3831-1445	SAO JOSE PINHAIS	41 3282-5030
CARATES	71 3641-1982	LUZIANIA	64 3432-2640	POCOS DE CALDAS	35 3722-1424	SAO MIGUEL IGUAÇU	45 3565-1429
CICERO DANTAS	75 3278-1027	QUIRINOPOLIS	64 3651-1943	PONTE NOVA	31 3817-3564	SARANDI	44 3264-1322
CONCEICAO COITE	75 3262-3203	RIALMA	62 3397-1320	POUSO ALEGRE	35 3421-6087	STO ANT PLATINA	43 3534-4469
CRUZ DAS ALMAS	75 3621-5120	RIO VERDE	64 3621-1441	RAUL SOARES	33 3351-3460	TELEMACO BORBA	42 3272-2533
ESPLANADA	75 3427-2885	SAO LUIS M BELOS	64 3671-1297	SAO JOAO DEL REI	32 3371-9611	TOLEDO	45 3055-3382
EUNAPOLIS	73 3281-7773	STA HELENA DE GO	64 3641-2567	SAO LOURENCO	35 3324-6084	UMUARAMA	44 3622-1065
FEIRA DE SANTANA	75 3623-1785	URUACU	62 3357-1328	SAO SEBASTIAO PARAISO	35 3531-3094	UNIAO DA VITORIA	42 3522-1942
GANDU	73 3254-1947	VALPARAIZO DE GOIAS	61 3627-1917	SETE LAGOAS	31 3772-2000	VERA CRUZ DO OESTE	45 3287-1479
GUANAMBI	77 3451-2791	MARANHAO		TEOFILO OTONI	33 3521-2158	PERNAMBUCO	
IBICARAI	73 3242-1475	ACAILANDIA	99 3538-1889	TRES CARACOS	35 3231-3474	ANGEO INGAZEIRA	87 3838-3185
IPIAU	73 3531-5938	BACABAL	99 3621-2794	TRES PONTAS	35 3266-1828	ARARIPINA	87 3873-1757
IRECE	74 3641-2419	CAXIAS	99 3521-2377	UBA	32 3532-4202	ARCOVERDE	87 3821-1346
ITABUNA	73 3211-3914	IMPERATRIZ	99 3524-5843	UBERABA	34 3333-2520	CABO DE STO AGOSTINHO	81 3521-1823
ITABUNA	73 3211-6324	PINEIRO	98 3631-4202	UBERLANDIA	34 3212-3636	CAMARAGIBE	81 3458-4327
ITAMARAJU	73 3294-1742	PRESIDENTE DUTRA	99 3603-1815	UBERLANDIA	34 3214-0511	CARPINA	81 3621-6740
ITAPETINGA	77 3261-2405	SANTA INES	98 3653-1986	UNAI	38 3676-1809	CARUARU	81 3721-2231
JACOBINA	74 3621-3607	SAO LUIS	98 3221-8959	VARGINHA	35 3221-4334	GARANHUNS	87 3781-1914
JEQUIE	73 3525-2524	SAO LUIS	98 3231-5278	VICOSA	31 3891-4647	JABOTATO DOS GUARARAPES	81 3361-6175
JUAZEIRO	87 3035-0484	MATO GROSSO		PARA		LIMOEIRO	81 3428-3959
LAURO DE FREITAS	71 3378-4201	ALTO ARAUJUA	65 481-1200	ALTAMIRA	93 3515-1411	OLINDA	87 8439-4692
MURITIBA	75 3424-1024	BARRA DO GARÇAS	66 3401-8947	BELEM	91 3225-4185	PETROLINA	87 8699-4692
RIBEIRA POMBAL	75 3276-1495	BARRA DOS GARÇAS	66 3401-1438	BELEM	91 3242-1090	RECIFE	81 3268-3061
SALVADOR	71 32612028	CACERES	65 3223-1796	BELEM	91 3261-8247	RECIFE	81 3325-2516
SALVADOR	71 3314-1391	CIJABA	65 3317-6464	BELEM	91 3241-2223	RECIFE	81 3222-4154
SALVADOR	71 3232-4761	CIJABA	65 3624-3681	BRAGANCA	91 3425-1982	SAO CAITANO	81 3736-1818
SALVADOR	71 3248-5143	JACIARA	66 3461-3334	CAPANEMA	91 3462-9029	SAO LOURENCO MATA	81 3525-0192
SALVADOR	71 3266-5088	LUCAS RIO VERDE	65 3549-1333	CASTANHAL	91 3721-2415	SERRA TALHADA	87 3831-5575
SALVADOR	71 3351-7586	MIRASSOL D'OESTE	65 3241-1827	CONC DO ARAUJUA	94 3421-1216	VITORIA DE STO ANTO	81 3526-0219
SALVADOR	71 3381-2057	PRIMAVERA DO LESTE	66 3498-5583	MARABA	94 3321-3144	PIAU	
SALVADOR	71 3431-4485	RONDONOPOLIS	66 3421-6457	OBIDOS	93 5471-216	PARNAIBA	86 3321-2135
SENHOR DO BONFIM	74 3541-3112	SINOP	66 3531-2491	PARAGOMINAS	91 3729-2388	PICOS	89 3415-5138
SERRINHA	75 3261-1794	SORRISO	66 3544-1080	SANTAREM	93 3522-3611	TERESINA	86 3216-5800
STO ANTO DE JESUS	75 3631-2711	TANGARA DA SERRA	65 3326-3861	XINGUARA	94 3426-1091	TERESINA	86 3221-4618
TEIXEIRA FREITAS	73 3291-8266	MATO GROSSO DO SUL		PARAIBA		TERESINA	86 3221-8174
VALENCA	75 3641-9515	CAMPO GRANDE	67 382-6088	CABEDELLO	83 3228-4280	RIO DE JANEIRO	
VIT DA CONQUISTA	77 3422-3243	CAMPO GRANDE	67 3394-4480	CAJAZEIRAS	83 3531-2499	ARARUAMA	22 2665-5614
CEARA		CORUMBIA	67 3231-4490	CAMPINA GRANDE	83 3321-2128	BARRA MANSA	24 3323-4840
ARACATI	88 3421-4484	DOURADOS	67 3421-7117	CAMPINA GRANDE	83 3343-1734	BELFORD ROXO	21 2761-3072
CRATEUS	88 3691-0019	DOURADOS	67 3424-2179	GUARABIRA	83 3371-3035	BOM JESUS DO ITABAPOANA	22 3831-2216
CRATO	88 3521-2818	NOVA ANDRADINA	67 3441-3775	JOAO PESSOA	83 3321-4800	CABO FRIO	22 2643-0104
FORTALEZA	85 3268-3912	PONTA PORA	67 3431-2020	PATOS	83 3421-4514	CABO FRIO	22 2643-0160
FORTALEZA	85 3231-7373	RIO BRILHANTE	67 3452-2038	SOUSA	83 3521-1978	CAMPOS DOS GOYTCAZES	22 2723-7400
FORTALEZA	85 3244-6275	TERENOS	67 3246-0003	APUCARANA	43 3422-4244	DUQUE DE CAXIAS	21 2671-1732
FORTALEZA	85 4008-8555	MINAS GERAIS		ARAPONGAS	43 3252-3880	ITAPERUNA	22 3822-0605
IBIPAINA	88 3653-1223	ABETE	37 3541-3211	ASTORGA	44 3234-3662	MAGE	22 2757-2430
IGUATU	88 3581-0203	ARAGUARI	34 3241-6026	CAMPO LARGO	41 3032-7275	MAGE	21 2739-5719
IPU	88 3683-1766	ARAXA	34 3661-2688	CAMPO MOURAO	44 3523-3092	FRIBURGO	21 2717-0224
ITAPIPOCA	88 3631-2030	ARCOS	37 3351-2872	CAPANEMA	46 3552-2250	NOVA FRIBURGO	22 2523-9857
JUAZEIRO NORTE	88 3512-2120	BARBACENA	37 3331-0802	CASCAVEL	45 3224-1485	NOVA IGUAÇU	21 2668-3727
RUSSAS	88 3411-2585	BELO HORIZONTE	31 3201-8958	CASCAVEL	45 3225-3435	PETROPOLIS	24 2242-1841
SOBRAL	88 3671-3336	BELO HORIZONTE	31 3225-4066	CASTRO	42 3232-1135	RESENDE	24 3354-2500
UBAJARA	88 3634-1233	BETIM	31 3532-2088	CIANORTE	44 3629-3884	RIO BONITO	21 2734-2201
DISTRITO FEDERAL		CAMPO BELO	35 3832-6134	CORN PROCOPIO	31 3224-1954	RIO DAS OSTRAS	22 2771-3195
BRASILIA	61 3224-7682	CARANGOLA	32 3741-2017	CURITIBA	41 3289-2745	RIO DE JANEIRO	21 2443-9014
BRASILIA	61 3245-5758	CARATINGA	32 3321-9699	CURITIBA	41 3019-1121	RIO DE JANEIRO	21 2208-0897
BRASILIA	61 3346-0529	CASSIA	35 3541-2293	CURITIBA	41 3026-1525	RIO DE JANEIRO	21 2242-1127
BRASILIA	61 3371-6090	CATAGUASES	32 3421-4755	CURITIBA	41 3224-8008	RIO DE JANEIRO	21 2252-1031
BRASILIA	61 3556-4490	CEL FABRICIANO	31 3841-3824	CURITIBA	41 3333-4764	RIO DE JANEIRO	21 2259-4548
BRASILIA	61 3562-8287	CONSELHEIRO LAFAIETE	31 3761-4063	CURITIBA	41 3352-2325	RIO DE JANEIRO	21 2270-7241
ESPÍRITO SANTO		CONTAGEM	31 3351-6871	DOIS VIZINHOS	46 3536-2208	RIO DE JANEIRO	21 2286-4338
AFONSO CLAUDIO	27 3735-1207	CONTAGEM	31 3391-2994	FOZ DO IGUAÇU	45 3028-6061	RIO DE JANEIRO	21 2287-1443
CACHEIRA DO ITAPEMIRIM	28 3522-3528	CURVELO	38 3721-7194	FRANCISCO BELTRAO	46 3523-3700	RIO DE JANEIRO	21 2288-7999
		DIAMANTINA	38 3531-3411	GUARAPUAVA	42 3623-5325	RIO DE JANEIRO	21 2401-7282
				IBAITI	43 3546-1162	RIO DE JANEIRO	21 2452-5430
				IBIPORA	43 3258-1649	RIO DE JANEIRO	21 2484-3488

LISTA DE SERVIÇO AUTORIZADO - BRASIL

RIO DE JANEIRO	21 2527-9532	URUGUAIANA	55 3411-4343	CAMPINAS	19 3234-8163	SÃO JOSE CAMPOS	12 3942-8056
RIO DE JANEIRO	21 2545-7526	VACARIA	54 3231-1396	CAMPUS DO JORDAO	12 3662-3899	SÃO JOSE DO RIO PARDO	19 3681-3662
RIO DE JANEIRO	21 2558-3109	VENANCIO AIRES	55 3441-1443	CAPOA BONITO	15 3542-1898	SÃO JOSE DO RIO PRETO	17 3233-4036
RIO DE JANEIRO	21 2589-9276	VERANOPOLIS	54 3441-1909	CAPIVARI	19 3491-2403	SÃO JOSE RIO PRETO	17 3234-6688
RIO DE JANEIRO	21 2595-5583			CARAGATATUBA	12 3882-6249	SÃO MANUEL	14 3841-4964
RIO DE JANEIRO	21 3287-2300	RONDÔNIA		CATANDUVA	17 3523-8252	SÃO PAULO	11 2097-3077
RIO DE JANEIRO	21 3332-7563	ARIQUEMES	69 3535-5365	CERQUILHO	15 3384-4659	SÃO PAULO	11 2281-8642
RIO DE JANEIRO	21 3376-2827	BURITIS	69 3238-3630	CHARQUELEADA	19 3498-0891	SÃO PAULO	11 2647-1586
RIO DE JANEIRO	21 3393-6999	CACAL	69 3443-3017	COSMOPOLIS	19 3972-1113	SÃO PAULO	11 2692-2091
RIO DE JANEIRO	21 3394-2599	JARU	69 3521-2313	COTIA	11 4703-7739	SÃO PAULO	11 3662-3443
RIO DE JANEIRO	21 3396-4540	JÍ PARANA	69 3421-5589	CRUZEIRO	12 3144-1256	SÃO PAULO	11 3885-3698
SÃO GONÇALO	21 2701-3828	JÍ PARANA	69 3421-0451	DIADEMA	11 4044-3033	SÃO PAULO	11 3915-6589
SÃO JOÃO DEL REI	21 3119-4588	PIMENTA BUENO	69 3451-2291	DRACENA	18 3821-1851	SÃO PAULO	11 5543-8628
SÃO JOÃO MERITI	21 2766-7137	PORTO VELHO	69 3221-3191	ESP. STO. PINHAL	19 3651-4767	SÃO PAULO	11 5891-6186
TERESOPOLIS	21 2742-7396			FERNANDOPOLIS	17 3463-2394	SÃO PAULO	11 2115-4889
TRES RIOS	24 2252-1456	RORAIMA		FRANCA	16 3722-3898	SÃO PAULO	11 2215-6667
VOLTA REDONDA	24 3342-5930	BOA VISTA	95 3625-6159	FRANCO DA ROCHA	11 4448-3800	SÃO PAULO	11 2221-0830
RIO GRANDE DO NORTE		SANTA CATARINA		GUARATINGUETA	12 3132-2811	SÃO PAULO	11 2296-4622
CAICO	84 3417-1096	ALFREDO WAGNER	48 3276-1420	GUARULHOS	11 2408-0753	SÃO PAULO	11 2297-6464
CURRAIS NOVOS	84 3431-2398	ARARANGUA	48 3522-0304	GUARULHOS	11 2408-7192	SÃO PAULO	11 2695-3012
MOSSORO	84 3316-4114	BALNEARIO CAMBORIÚ	47 3363-0706	GUARULHOS	11 2422-7555	SÃO PAULO	11 2703-6116
NATAL	84 3212-2227	BLUMENAU	47 3322-7742	IBITINGA	16 3342-2198	SÃO PAULO	11 2919-0874
NATAL	84 3213-2345	BRUSQUE	47 3351-2095	INDAIAL	19 3875-1623	SÃO PAULO	11 2944-3511
NATAL	84 3213-4034	CAIBI	49 3648-0256	ITAPETINGA	15 3271-2583	SÃO PAULO	11 2947-7098
NATAL	84 3222-4795	CANOINHAS	47 3622-3615	ITAPEVA	15 3521-4458	SÃO PAULO	11 2958-4199
		CAPINZAL	49 3555-2266	ITAPIRA	19 3863-1335	SÃO PAULO	11 2961-9903
RIO GRANDE DO SUL		CHAPÉCO	49 3322-3304	ITAPUQUECETUBA	11 4642-9510	SÃO PAULO	11 2967-3407
ARVOREZINHA	51 3772-2018	CHAPÉCO	49 3323-4687	ITARARE	15 3532-4012	SÃO PAULO	11 2979-1184
BAGE	53 3242-5361	CONCORDIA	49 3423-0856	ITU	11 4023-0866	SÃO PAULO	11 3062-1588
BENTO GONÇALVES	54 3055 3673	CRICIUMA	48 3433-0269	ITUVERAVA	16 3729-2859	SÃO PAULO	11 3115-0845
CACEQUI	55 3254-1465	CRICIUMA	48 3433-7370	JABOTICABAL	16 3202-1217	SÃO PAULO	11 3207-3832
CACHOEIRINHA	51 3041-6055	CURITIBA PORA	49 3646-0043	JACAREÍ	12 3952-6320	SÃO PAULO	11 3209-2838
CAMAQUA	51 3671-5878	CURITIBANOS	49 3245-0556	JACUPIRANGA	13 3864-1565	SÃO PAULO	11 3225-9877
CAMPINAS DO SUL	54 3366-1390	CURITIBANOS	49 3245-0556	JALES	17 3632-1195	SÃO PAULO	11 3228-9895
CAMPO BOM	51 3987-1336	FLORIANOPOLIS	49 3221-0200	JAU	14 3622-4223	SÃO PAULO	11 3268-5026
CANÓAS	51 3031-4408	FLORIANOPOLIS	48 3225-3600	JAU	14 3622-7450	SÃO PAULO	11 3263-3687
CANÓAS	51 3429-2094	FRIBURG	49 3246-2121	JUNDIAÍ	11 4587-7792	SÃO PAULO	11 3236-1834
CARAZINHO	54 3330-3046	IBIRAMA	47 3357-2174	LARANJAL PTA	15 3285-2588	SÃO PAULO	11 3714-4282
CAXIAS DO SUL	54 3536-7040	ICARA	48 3432-3106	LEME	19 3571-6055	SÃO PAULO	11 3726-7805
CERRITO LARGO	55 3359-2102	ITAPERIOLIS	47 3652-1572	LENÇÓIS PAULISTA	14 3263-0578	SÃO PAULO	11 3742-3347
CHARQUELEADAS	51 9906-5272	ITAJAI	47 3241-9696	LEMEIRA	19 3441-2622	SÃO PAULO	11 3771-2224
CONSTANTINA	51 9906-5272	ITAJAI	47 3344-4777	LINS	14 3522-3988	SÃO PAULO	11 3774-4318
DOIS IRMÃOS	51 3564-1539	ITUPORANGA	47 3533-2093	LORENA	12 3153-2186	SÃO PAULO	11 3845-2704
DOM PEDRITO	53 243-2265	JARAGUA DO SUL	47 3275-4147	MARILIA	14 3422-3871	SÃO PAULO	11 3851-6096
ENCANTADO	51 3751-3469	JACABA	49 3522-0737	MATÃO	16 3394-3212	SÃO PAULO	11 3872-5067
ERECHIM	54 3321-1933	JOINVILLE	47 3433-1146	MAUA	11 4541-4977	SÃO PAULO	11 3865-8995
ERECHIM	54 522-3218	JOINVILLE	47 3436-2525	MOCOCA	19 3665-5780	SÃO PAULO	11 3975-1955
FARROUILHA	54 3268-3845	LAGES	49 3222-3638	MOGI DAS CRUZES	11 4790-8094	SÃO PAULO	11 5011-5353
FLORES DA CUNHA	54 3292-2192	MARAVILHA	49 3664-0052	MOGI MIRIM	19 3862-4561	SÃO PAULO	11 5041-6549
GETULIO VARGAS	54 3341-1426	ORLEANS	48 3466-0674	ORLANDIA	16 3826 1944	SÃO PAULO	11 5055-2839
GRAMADO	54 3286-2350	PINHALZINHO	49 3366-1014	ORLANDIA	16 3826-1944	SÃO PAULO	11 5061-0075
GRAVATAÍ	51 3488-2509	RIO DO SUL	47 3521-2396	OSASCO	11 3682-8983	SÃO PAULO	11 5066-6122
IBIRAMA	54 3355-1359	RIO NEGRINHO	47 3644-0979	OSASCO	11 3687-9000	SÃO PAULO	11 5031-3889
IJUI	55 3332-9522	SÃO BENTO DO SUL	47 3635-0939	OSVALDO CRUZ	18 3528-2155	SÃO PAULO	11 5499-4250
IMBÉ	51 3627-5449	SÃO JOSE	48 3246-0789	OURINHOS	14 3322-3662	SÃO PAULO	11 5575-8989
LAGOA VERMELHA	54 3358-2459	SÃO LOURENÇO OESTE	49 3344-1217	PARAGUAI PTA	18 3361-7621	SÃO PAULO	11 5594-6614
LAJEADO	51 3714-5155	SÃO MIGUEL DOESTE	49 3622 0975	PEDEREIRAS	14 3252-2529	SÃO PAULO	11 5631-4494
MARAU	54 3342-2656	SEARA	49 3452-1417	PENAPOLIS	18 3652-1639	SÃO PAULO	11 5666-2975
NAO ME TOQUE	54 3332-1605	TJUCAS	47 3382-0949	PINDAMONHANGABA	12 3642-3738	SÃO PAULO	11 5687-1952
NONAI	54 3362-1126	TIMBO	47 3382-0949	PIRACICABA	19 3422-8885	SÃO ROQUE	11 4784-6785
NOVA PRATA	54 3242-1328	TUBARAO	48 3622-1993	PIRASSUNINGA	19 3561-7201	SÃO SEBASTIAO	12 3892-2572
NOVO HAMBURG	51 3593-6978	TUBARAO	48 3622-1993	PORTO FERREIRA	19 3581-5027	SÃO VICENTE	13 3467 1598
OSORIO	51 3663-2127	TURVO	48 3525-0172	PRATA GRANDE	13 3473-1260	SERTÃOZINHO	16 3942-2002
PALMEIRA MISSOES	55 3742-2344	VIDEIRA	49 366-7171	PRES EPTACABO	18 3281-6877	SOROCABA	15 3232-9728
PASSO FUNDO	54 3313-4665	XANXERE	49 3433-3026	PRES PRUDENTE	18 3222-6269	STA BARBARA D'OESTE	19 3473-1302
PELOTAS	53 3225-5247			PRES PRUDENTE	18 3222-6269	SUMARÉ	19 3873-6498
PORTO ALEGRE	51 3062-5632	SÃO PAULO		RIBEIRAO PIRES	11 4823-1088	SUZANO	11 4748-2975
PORTO ALEGRE	51 3217-9658	ADAMANTINA	18 3521-3262	RIBEIRAO PIRES	16 3610-6989	TABOAO DA SERRA	11 4138-4548
PORTO ALEGRE	51 3218-9658	AGUAS DE LINDOIA	19 3834-1524	RIBEIRAO PIRES	16 3610-7571	TABOAO DA SERRA	11 4701-7829
PORTO ALEGRE	51 3233-4206	AMERICANA	19 3406-5055	RIBEIRAO PRETO	16 3636-8156	TATUI	15 3259-5870
PORTO ALEGRE	51 3233-4206	AMPARO	19 3807-4121	RIO CLARO	19 3524-5901	TAUBATE	12 3632-6652
PORTO ALEGRE	51 3332-7507	ARACATUBA	18 3623-4864	RIO CLARO	19 3524-7526	TIETE	15 3282-2283
PORTO ALEGRE	51 3348-6870	ARARAQUARA	16 3336-7154	ROSANA	18 3288-1469	VALINHOS	19 3871-1624
QUARAI	55 3423-1561	ARARAS	19 3541-3118	SALTO	11 4028-7896	VARGEM GDE PTA	11 4158-1003
ROSARIO DO SUL	55 3231-1177	ARTUR NOGUEIRA	19 3827-5410	SANTA FE DO SUL	17 3631-1873	VARGEM GDE SUL	19 3641-1342
SANTA MARIA	55 3222-8866	ARUJA	11 4655-4935	SANTA ISABEL	11 4657-1112	VINHEDO	19 3876-3608
SANTA ROSA	55 3511-1414	ASSIS	18 3324-2082	SANTANA DE PARNAIBA	11 4705-2632	VOTORANTIM	15 3343-6606
SANTIAGO	55 3251-1483	ATIBAIA	11 4412-5125	SANTO ANDRE	11 4992-6683	VOTUPORANGA	17 3421-1159
SANTO ANGELO	55 3312-1661	AVARE	14 3732-4233	SANTOS	13 3227-2947		
SÃO BORJA	55 3431-2083	BARRA BONITA	14 3641-0689	SANTOS	13 3235-5534	SERGIPÉ	
SÃO LEOPOLDO	51 3589-1210	BARUERI	11 4198-1336	SÃO BERNARDO CAMPO	11 4109-5460	ARACAJU	79 3213-1611
SÃO LUIZ GONZAGA	55 3352-1538	BAURUR	14 3223-2210	SÃO BERNARDO CAMPO	11 4121-6922	ARACAJU	79 3241-5543
SÃO MARCOS	54 3291-1357	BAURUR	14 3232-2485	SÃO BERNARDO CAMPO	11 4125-7000	ITABAIANA	79 3431-2931
SARANDI	54 3361-1138	BEBEDOURO	17 3342-6894	SÃO CAETANO DO SUL	11 3565-4748		
SOLEDADE	54 381-1449	BIRIGUI	18 3644-5004	SÃO CAETANO DO SUL	11 4221-4334	TOCANTINS	
STA CRUZ DO SUL	51 3715-3048	BOITUVA	15 3263-4022	SÃO CAETANO DO SUL	11 4224-2040	ARAGUAINHA	63 3414-4210
TAPEJARA	54 3344-1012	BOTUCATU	14 3815-5044	SÃO CARLOS	16 3371-4076	PALMAS	63 3212-1442
TAQUARA	51 3542-3605	BOTUCATU	14 3815-6007	SÃO JOAO BOA VISTA	19 3623-5695		
TORRES	51 9811-4301	BRAGANCA PTA	11 4034-1262	SÃO JOAQUIM BARRA	16 3728-4118		
TRES PASSOS	55 3522-1295	CACAPAVA	12 3653-6944	SÃO JOSE CAMPOS	12 3921-0673		

CERTIFICADO DE GARANTIA NO BRASIL

Este aparelho é garantido pela Philips da Amazônia Indústria Eletrônica Ltda., por um período superior ao estabelecido por lei. Porém, para que a garantia tenha validade, é imprescindível que, além deste certificado, seja apresentada a nota fiscal de compra do produto.

A Philips da Amazônia Indústria Eletrônica Ltda., assegura ao proprietário consumidor deste aparelho as seguintes garantias, a partir da data de entrega do produto, conforme expresso na nota fiscal de compra, que passa a fazer parte deste certificado:

Garantia para rádios e reprodutores de CD portáteis

(sem caixa acústica destacável): 180 dias

Garantia para os demais produtos da marca Philips: 365 dias.

Esta garantia perderá sua validade se:

- O defeito apresentado for ocasionado pelo uso indevido ou em desacordo com o seu manual de instruções.
- O produto for alterado, violado ou consertado por pessoa não autorizada pela Philips.
- O produto for ligado a fonte de energia (rede elétrica, pilhas, bateria, etc.) de características diferentes das recomendadas no manual de instruções e/ou no produto.
- O número de série que identifica o produto estiver de alguma forma adulterado ou rasurado.

Estão excluídos desta garantia defeitos decorrentes do descumprimento do manual de instruções do produto, de casos fortuitos ou de força maior; bem como aqueles causados por agentes da natureza e acidentes. Excluem-se igualmente desta garantia defeitos decorrentes do uso dos produtos em serviços não doméstico/residencial regular ou em desacordo com o uso recomendado.

ESTÃO EXCLUÍDAS DA GARANTIA ADICIONAL AS PILHAS OU BATERIAS FORNECIDAS JUNTO COM O CONTROLE REMOTO.

Nos municípios onde não exista oficina autorizada de serviço Philips, as despesas de transporte do aparelho e/ou do técnico autorizado, correm por conta do Sr. Consumidor requerente do serviço. A garantia não será válida se o produto necessitar de modificações ou adaptações para habilitá-lo a operar em qualquer outro país que não aquele para o qual foi designado, fabricado, aprovado e/ou autorizado, ou ter sofrido qualquer dano decorrente deste tipo de modificação.

Philips da Amazônia Indústria Eletrônica Ltda.

Dentro do Brasil, para informações adicionais sobre o produto ou para eventual necessidade de utilização da rede de oficinas autorizadas, ligue para o Centro de Informações ao Consumidor (CIC). Em São Paulo - Capital e demais localidades com DDD 011 - tel. 2121-0203, nas demais localidades e estados - tel. 0800 701 02 03 (discagem direta gratuita), ou escreva para Caixa Postal: n 21.315 - CEP04602-970 - São Paulo - SP, ou envie um e-mail para: cic@philips.com.br

Horário de atendimento: de segunda à sexta-feira, das 08:00 às 20:00h; aos sábados das 08:00 às 13:00h.

Para atendimento fora do Brasil, contate a Philips local ou a: Philips Consumer Service Beukenlaan 2 -5651 CD Eindhoven The Netherlands

Certificado de Garantía en Argentina

Artefacto:

Modelo:

**Fabricante/Importador: Philips Argentina S.A.
y/o Fábrica Austral de Productos Eléctricos S.A.**

Dirección: Vedia 3892 - Buenos Aires

Fecha de Venta:

--

Nro. de serie

Firma y sello de la casa vendedora.

PHILIPS ARGENTINA S.A. en adelante denominada “la empresa”, garantiza al comprador de este artefacto por el término de (6) meses a partir de la fecha de adquisición, el normal funcionamiento contra cualquier defecto de fabricación y/o vicio de material, y se compromete a reparar el mismo —sin cargo alguno para el adquirente— cuando el mismo fallare en situaciones normales de uso y bajo las condiciones que a continuación se detallan:

1. Este certificado de garantía es válido únicamente en la Republica Argentina. El certificado debe ser completado por la casa vendedora y ser presentado por el usuario conjuntamente con la factura original de compra.
2. Serán causas de anulación de esta garantía en los casos que corresponda:
 - 2.1. Uso impropio o distinto del uso doméstico.
 - 2.2. Exceso o caídas de tensión eléctrica que impliquen uso en condiciones anormales.
 - 2.3. Instalación y/o uso en condiciones distintas a las marcadas en el “Manual de instalación y uso” que se adjunta a esta garantía.
 - 2.4. Cualquier intervención al artefacto por terceros no autorizados por la empresa.
3. La garantía carecerá de validez si se observare lo siguiente:
 - 3.1. Enmiendas o raspaduras en los datos del certificado de garantía o factura.
 - 3.2. Falta de factura original de compra que detalle tipo de artefacto, modelo, número de serie y fecha que coincida con los del encabezamiento del presente certificado.
4. No están cubiertos por esta garantía los siguientes casos:
 - 4.1. Los daños ocasionados al exterior del gabinete.
 - 4.2. Las roturas, golpes, caídas o rayaduras causadas por traslados.
 - 4.3. Los daños o fallas ocasionados por deficiencias, sobretensiones, descargas o interrupciones del circuito de alimentación eléctrica o rayos, deficiencias en la instalación eléctrica del domicilio del usuario o conexión del artefacto a redes que no sean las especificadas en el Manual de Uso del mismo.
 - 4.4. Las fallas, daños, roturas o desgastes producidos por el maltrato o uso indebido del artefacto y/o causadas por inundaciones, incendios, terremotos, tormentas eléctricas, golpes o accidentes de cualquier naturaleza.
 - 4.5. Las fallas o daños ocasionados en desperfectos en la línea telefónica.
 - 4.6. Las fallas producidas por una mala recepción ocasionada en el uso de una antena deficiente o en señales de transmisión débiles.
5. Las condiciones de instalación y uso del artefacto se encuentran detalladas en el Manual de Uso del mismo.
6. La empresa no asume responsabilidad alguna por los daños personales o a la propiedad al usuario o a terceros que pudieran causar la mala instalación o uso indebido del artefacto, incluyendo en este último caso a la falta de mantenimiento.
7. En caso de falla, el usuario deberá requerir la reparación a la empresa a través del Service Oficial y/o Talleres Autorizados más próximos a su domicilio y cuyo listado se acompaña al presente. La empresa a segura al usuario la reparación y/o reposición de piezas para su correcto funcionamiento en un plazo no mayor a 30 días contados a partir de la fecha de solicitud de reparación, salvo caso fortuito o fuerza mayor.

8. Toda intervención del servicio técnico realizada a pedido del usuario dentro del plazo de garantía, que no fuera originada por falla o defecto alguno cubierto por este certificado, deberá ser abonado por el interesado de acuerdo a la tarifa vigente.
9. El presente certificado anula cualquier otra garantía implícita o explícita, por la cual y expresamente no autorizamos a ninguna otra persona, sociedad o asociación a asumir por nuestra cuenta ninguna responsabilidad con respecto a nuestros productos.
10. En caso de que durante el período de vigencia de esta garantía el artefacto deba ser trasladado a las Delegaciones Oficiales y/o Talleres Autorizados de Service para su reparación, el transporte será realizado por la empresa y serán a su cargo los gastos de flete y seguros y cualquier otro que deba realizarse para su ejecución.



PHILIPS

Red de Talleres Autorizados en Argentina

CAPITAL FEDERAL

ATTENDANCE S.A.

- Av. Monroe 3351 (C1430BKA) Cap. Fed.
- Tel.: 4545-5574/0704 6 6775-1300
- Ventas de Repuestos y Accesorios
- Tel.: 4545-0854

DIG TRONIC

- Av. San Martín 1762 (C1416CRS) Cap. Fed.
- Tel.: 4583-1501

ELECTARG S.R.L.

- Av. Córdoba 1357 (C1055AAD) Cap. Fed.
- Ventas de Repuestos y Accesorios
- Tel.: 4811-1050

Caballito Electarg J. M. Moreno 287 4903-6967/6854/8983

BUENOS AIRES

Azul	Herlein Raúl Horacio	Av. 25 de Mayo 1227	(02281) 428719
Bahía Blanca	Neutron	Soler 535	(0291) 4535329
Bragado	Yacovino Juan J.	San Martín 2141	(02342) 424147
Campana	Electricidad Krauter	Lavalle 415	(03489) 432919
Chivilcoy	Fama	Coronel Suárez 110	(02257) 424129
Junín	Junín Service	Alsina 537	(02362) 442754
La Plata	Da Tos e Hijos	Calle 68 N° 1532	(0221) 4516021
La Plata	Service Técnico La Plata	Av. 51 N° 1051 esq. 16	(0221) 4108155
Mar de Ajó	Tauro Electrónica	Catamarca 14	(02257) 421750
Mar del Plata	Central Service	Olazábal 2249	(0223) 4721639/4729367
Mar del Plata	Service Integral	Diag. Pueyrredón 3229	(0223) 4945633
Necochea	Electrónica Camejo	Calle 63 N° 1745	(02262) 426134
Pehuajó	Calcagni Carlos Alberto	Zubiría 794	(02396) 472665
Pergamino	ACV Sistemas	Dr. Alem 758	(02477) 421177
Pergamino	El Service	Juan B. Justo 1931	(02477) 418000

San Nicolás	Servitec	Bv. Alvarez 148	(03461) 454729/429578
San Pedro	Electrónica Menisale	Mitre 1695	(03329) 425523
Tandil	Lazzarini Oscar Rafael	Pellegrini 524	(02293) 442167
Trenque Lauquen	Labruno Electrónica	Av. San Martín 426	(02392) 423248
Tres Arroyos	Saini Fabián y Sergio	Av. Belgrano 562	(02983) 427369
Zárate	Electrónica Spinozzi	Ituzaingó 1030	(03487) 427353

GRAN BUENOS AIRES

Avellaneda	Casa Torres S.A.	Av. Mitre 2559	4255-5854
Florencio Varela	Casa Torres S.A.	San Martín 2574	4255-5854
Gregorio de Laferrere	Electrónica Alvarez	Honorio Luque 6084	4626-1322
Lomas de Zamora	Attendance S.A. Lomas	Laprida 485	4292-8900
Merlo	Argentronica S.H.	Pte. Cámpora 2175	(0220) 4837177/482934
Moreno	Argentronica S.H.	Bmé. Mitre 2977 loc.2	(0237) 4639500
Morón	Servotronic	Ntra. Sra. del Buen Viaje 1222	4627-5656
Olivos	Appliance	Av. Libertador 2684	4794-7700
Quilmes	Casa Torres S.A.	E. Rios esq. Gran Canaria	4255-5854
Ramos Mejía	Electarg S.R.L. Suc.	Belgrano 224	4656-0619
San Miguel	Servotronic San Miguel	Belgrano 999	4664-4131
Villa Ballester	Servotronic	J. Hernández 3101	4767-2515/4768-5249

CATAMARCA

Catamarca	Omicron Central de Serv.	San Martín 225	(03833) 427235
-----------	--------------------------	----------------	----------------

CHACO

Resistencia	Freschi Jorge Oscar	Av. Avalos 320	(03722) 426030
-------------	---------------------	----------------	----------------

CHUBUT

Comodoro Rivadavia	C.A.S. S.R.L.	Alem 145	(0297) 4442629
Trelew	Fagtron Electrónica	Brasil 253	(02965) 427073

CORDOBA

Córdoba Capital	Servelco S.R.L.	Pje. E. Marsilla 635	(0351) 4724008/4732024
Río Cuarto	Maurutto Víctor G.	Bv. Almagro 487	(0358) 4660204
Río Cuarto	Capaldi Abel	Paunero 832	(0358) 4623003
Río Tercero	Service Omega	Homero Manzi 149	(03571) 423330
San Francisco	Acuña Walter Electrónica	M. Moreno 360	(03564) 425367
Villa María	Grasso Electrónica	Bv. Alvear 541	(0353) 4521366
Villa María	Vanguard Sist. Electrónicos	México 421	(0353) 4532951

