

Quick Start Guide




Step A *Install*

Step B *Prepare*

Step C *Enjoy*

What's in the Box?


You should find these items upon opening the box.

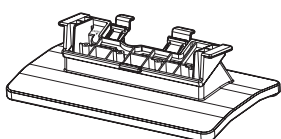

Stand




FM antenna

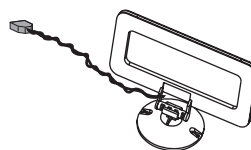

AM antenna



Remote control with
1 x CR2025 battery

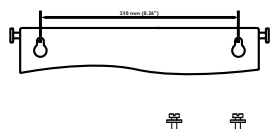

Mounting kit
(1x template, 2 x screws)



Quick start guide



User manual

PHILIPS

Step A *Install*

Mounting stand onto the set

1


Put MCM275 on a flat and firm surface, rear side facing up

2

As shown, align the stand to the slots at set's bottom, ▼ **FRONT** facing down

3


Push the stand down into the slots

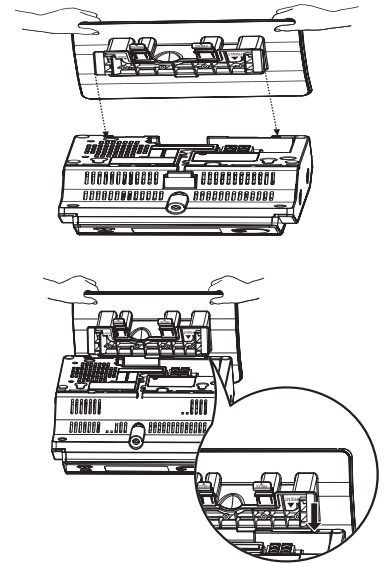

Helpful hints:

- For wall mounting, please refer to the **User Manual, Appendix: How to mount your MCM275 onto Walls**. You may need assistance from the qualified service personnel.

Rear connections

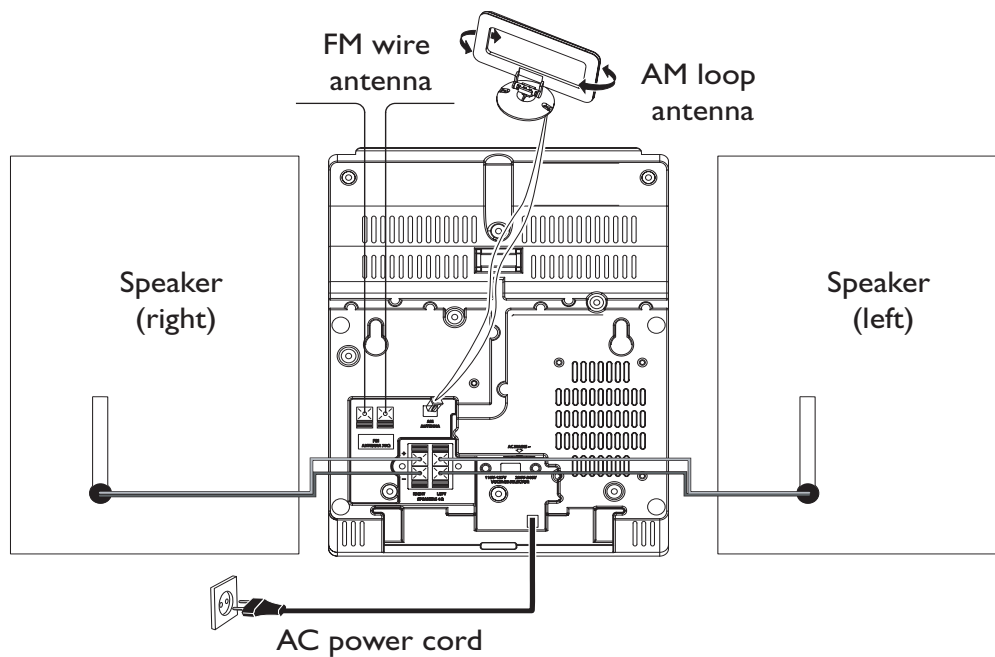

1

Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT** (red and black)

2


Extend the wire antenna and fit it to **FM ANTENNA**

3

- Assemble the loop antenna
- Fit the plug of the loop antenna to **AM ANTENNA**

4


Connect the AC power cord to the wall socket

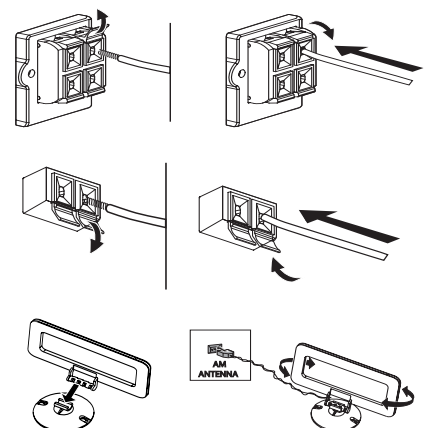

Step B Prepare


Setting the clock

- 1 Press and hold **STANDBY-ON**  to switch the set to Standby mode
→ The display shows the set time
→ --:--:-- flashes by default if you have not set the clock
- 2 In the standby mode, press and hold **DISPLAY/CLOCK** on the remote control
→ 12 HR or 24 HR appears for the initial clock setting. **To select 24-hour clock or 12-hour clock,**
 - a. Press **VOLUME +/-** once or more
 - b. Press **DISPLAY/CLOCK** to confirm
→ The hours digits start flashing
- 3 Hold down or press **VOLUME +/-** repeatedly to set the hours
- 4 Press **DISPLAY/CLOCK** to confirm
- 5 Hold down or press **VOLUME +/-** repeatedly to set the minutes
- 6 Press **DISPLAY/CLOCK** to confirm

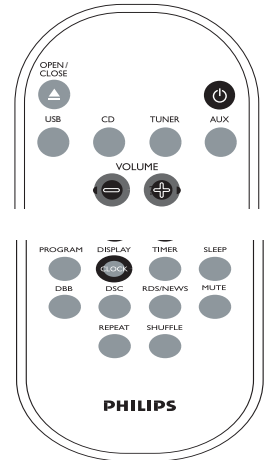

IMPORTANT!

– Remove the protective plastic tab before using the remote control

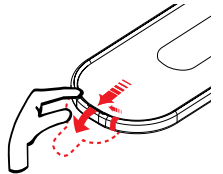

Notes for remote control:



- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).
- Then select the desired function (▶||, ◀, ▶ for example).

Step C Enjoy

Playing discs


With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

- 1 Press **SOURCE** once or more to select **CD** (or **CD** on the remote control)
- 2 Press **CD OPEN•CLOSE**  to open the CD compartment
- 3 Insert a disc with the printed side facing up. Press **CD OPEN•CLOSE**  again to close the compartment
- 4 Press **▶ ||** to start playback
- 5 To stop playback, press **STOP** 

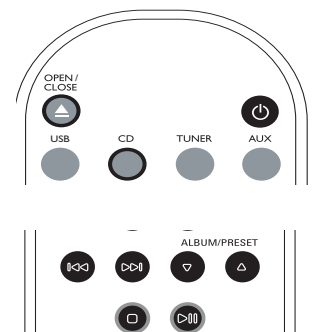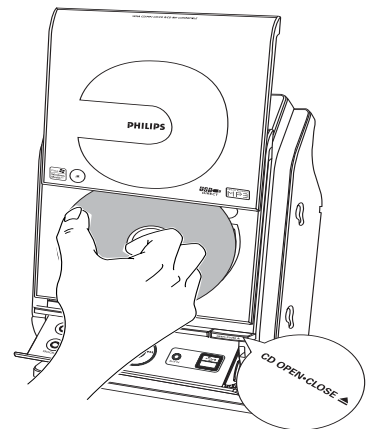

Tuning to radio stations


- 1 Press **SOURCE** once or more to select **TUNER** (or **TUNER** on the remote control)
- 2 Press and hold **PROGRAM** until **AUTO** appears
→ **P** flashes. Available stations are programmed: FM stations followed by AM stations
- 3 Press the **ALBUM/ PRESET** buttons once or more until the desired preset station is displayed

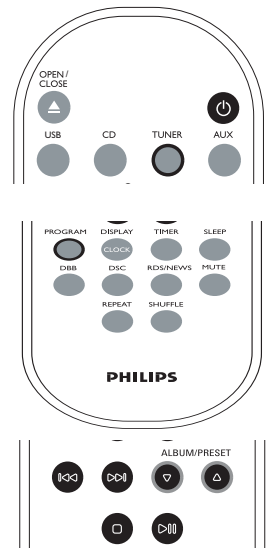

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Check you have unfolded the control panel
- 2 Insert the USB device's USB plug into the socket  on the set's foldable control panel
- 3 Press **SOURCE** once or more to select **USB** (or **USB** on the remote control)
- 4 Play the USB's audio files as you do with the albums/tracks on a CD
- 5 Press **STANDBY-ON**  to switch off the set

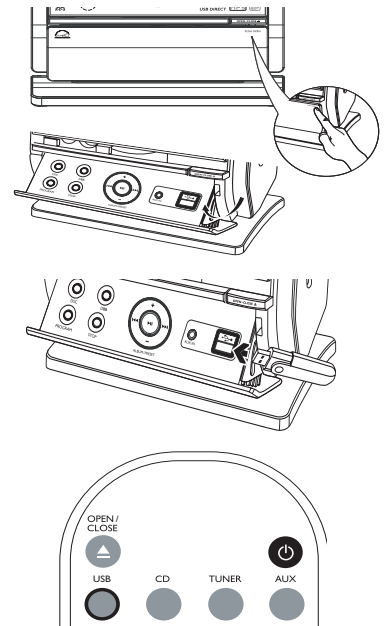

Detailed playback features and additional functions are described in the accompanied owner's manual.

