

Philips GoGear MP3 player

GoGear

Quick start guide

快速入门指南

快速入門指南

คู่มือเริ่มต้นใช้งานอย่างรวดเร็ว

Guía de configuración rápida

SA3RGA02

SA3RGA04

SA3RGA08

Quick start guide


Register your product and get support at
www.philips.com/welcome

PHILIPS

Unpack

打开包装
แกะกล่องผลิตภัณฑ์

打開包裝
Sáquelo de la caja

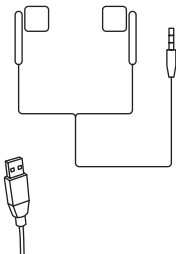

 XP (SP3) / Vista / 7




USB 



1

Install Philips Songbird

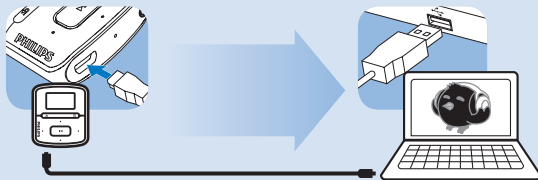安裝
ติดตั้ง安裝
Instalación

PHILIPS
sense and simplicity


2 Sync

同步
ซิงค์


同步
Sincronización



使用
Uso

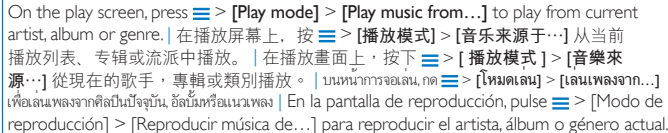

Device does not power on | 设备未启动 | 裝置尚未啟動 | อุปกรณ์ไม่ทำงาน
| El dispositivo no se enciende

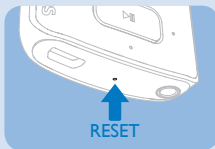

See **support information** in the user manual for more | 详情请参阅用户手册中的支持信息 | 請參閱用戶手冊中的支援資訊以了解更多 | ดูเพิ่มเติม
ข้อมูลการสนับสนุน ในคู่มือผู้ใช้สำหรับ | Consulte la **información de asistencia** en el
manual del usuario para obtener más detalles



Be responsible
Respect copyrights

All rights reserved.

www.philips.com

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or
their respective owners

© 2011 Koninklijke Philips Electronics N.V.



Printed in China
SA3RGA_93 97_QSG_V1.3
wk11083