

Quick Start Guide



 
Step A **Install**

Step B **Prepare**

Step C **Enjoy**

What's in the Box?


You should find these items upon opening the box.

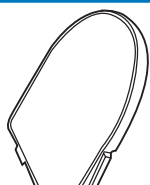


Stand



 
FM wire antenna

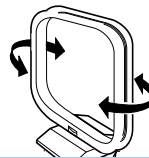


MW antenna

 

Remote control with
1 x CR2025 battery

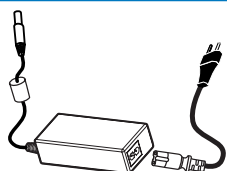 

Power adaptor

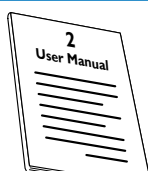 

User manual



Quick start guide

 
PHILIPS

Step A *Install*


Mounting the stand onto the set

1

Locate the bottom of the main unit and find the slot, then slide the stand in the slot until it stops, as indicated in the figure.

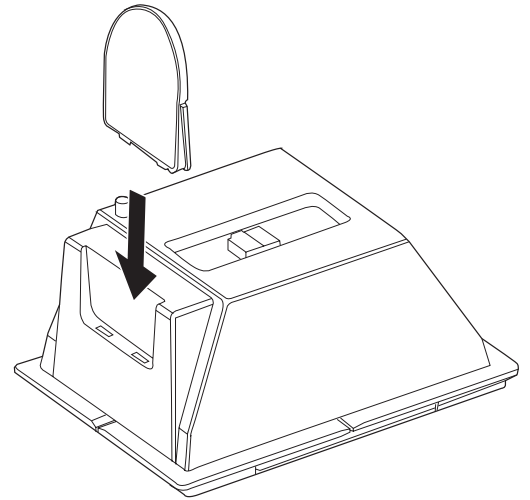

Rear connections

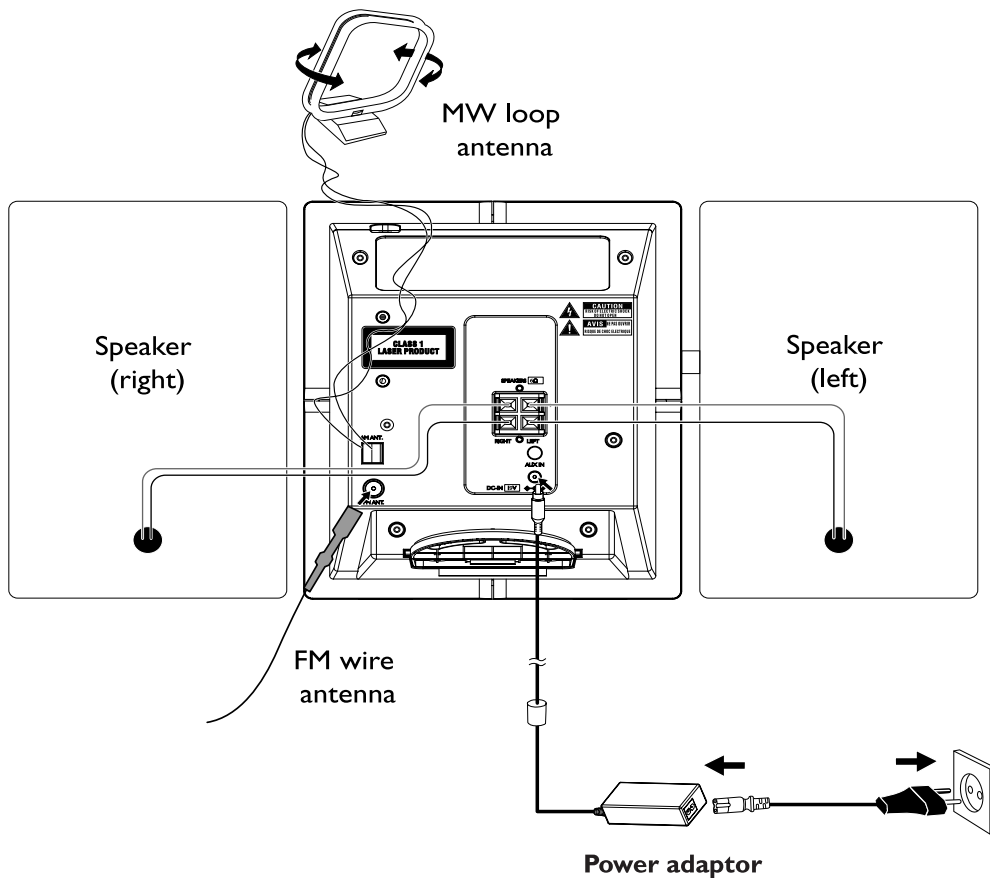 

Tip

– To receive optimal radio reception, put the main unit and the antennas as far away as possible from the power adaptor.

1

Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT** (red and black).

2

Extend the wire antenna and fit it to **FM ANTENNA**.

3

Insert the MW antenna to **MW ANTENNA** jacks.

4

Connect the power adaptor to the wall socket.

Step B Setup

Setting the clock

1 Press and hold **STANDBY-ON/ ECO POWER**  to switch the set to Standby mode.
→ The display shows the set time.
→ --:--:-- displays by default if you have not set the clock.

2 In the standby mode, press and hold **DISPLAY/CLOCK** (or **CLOCK** on the remote control).
→ The hours digits start flashing.

3 To switch between 12 hour and 24 hour display, press **PROGRAM** (or **PROG** on the remote control) repeatedly to set the hours.

4 Hold down or press **VOLUME +/-** repeatedly to set the hours.

 
5 Press **DISPLAY/CLOCK** (or **CLOCK** on the remote control) to confirm.

6 Hold down or press **VOLUME +/-** repeatedly to set the minutes.

7 Press **DISPLAY/CLOCK** (or **CLOCK** on the remote control) to confirm.

IMPORTANT!

– Remove the protective plastic tab before using the remote control.

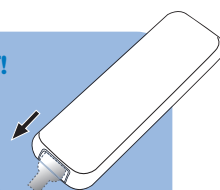

Notes for remote control:

– First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).
– Then select the desired function (▶||, ◀◀, ▶▶ for example).

Step C Enjoy

Playing discs

With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

1 Press **SOURCE** (or **CD** on the remote control) once or more to select **CD**.

2 Press **OPEN/CLOSE**  to open the CD compartment.

3 Insert a disc with the printed side facing outward. Then close the CD door.

4 Press **▶ ||** to start playback.

5 To stop playback, press **STOP** .

Tuning to radio stations

- 1 Press **SOURCE** (or **TUNER** on the remote control) once or more to select **TUNER**.
- 2 Press and hold **PROGRAM** (or **PROG** on the remote control) until **AUTO** appears.
→ Available stations (RDS, FM and MW) are programmed.
- 3 Press **ALBUM/PRESET +/-** (or **▲/▼** on the remote control) buttons once or more until the desired preset station is displayed.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the front panel of the main set.
- 2 Press **SOURCE** (or **USB** on the remote control) once or more to select USB.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Detailed playback features and additional functions are described in the accompanied owner's manual.



© Royal Philips Electronics N.V. 2008
All rights reserved.

<http://www.philips.com>

PDCC-JH/ZYL-0820

