

Register your product and get support at
www.philips.com/welcome

SWW1810



Quick Start Guide

1

Connect

2

Enjoy

PHILIPS

What's in the box



Receiver



Transmitter



Remote control




Power adapter x 2




IR blaster extender cable




IR sensor extender cable

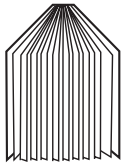

User manual

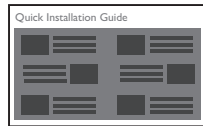

Quick start guide

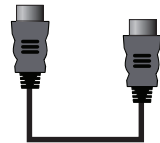

HDMI cable



Adhesive tape x 2



Anchors x 2



Screws x 2

Note


- Make sure you have all these items in the box. Contact your dealer for any missing or damaged items.

1

Connect


Connect the transmitter to your HD devices

- 1 Connect the audio/video source to the transmitter using the supplied HDMI cable.
 - Connect one end of the HDMI cable to the **HDMI IN** connector of the transmitter.
 - Connect the other end of the HDMI cable to the **HDMI OUT** connector of the video source.
- 2 Connect the supplied power adapter to the transmitter.
 - Connect one end of the power adapter to the **DC IN** jack of the transmitter.
 - Connect the other end of the power adapter to a power outlet.
 - The power button of the transmitter is lit in solid blue and turns red in standby mode.

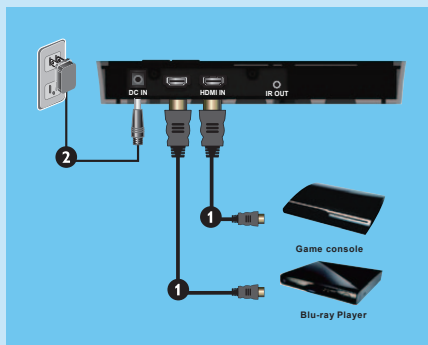

Connect the receiver to the HDTV set

- 1 Connect the receiver with an additional HDMI cable (not supplied):
 - Connect one end of the HDMI cable to the receiver.
 - Connect the other end to the **HDMI IN** connector of your HDTV.
- 2 Connect the supplied power adapter to the receiver:
 - Connect one end of the power adapter to the **DC IN** jack of the receiver.
 - Connect the other end of the power adapter to a power outlet.
 - The power button of the receiver is lit in solid blue and turns red in standby mode.

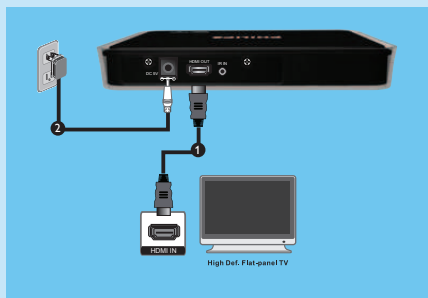

Install remote control batteries

- 1 Open the battery compartment.
- 2 Insert two AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.




2

Enjoy

Turn on the power of your HDTV

- 1 Go to the source menu under the settings menu of your HDTV.
- 2 Select the HDMI input to which the receiver is connected.

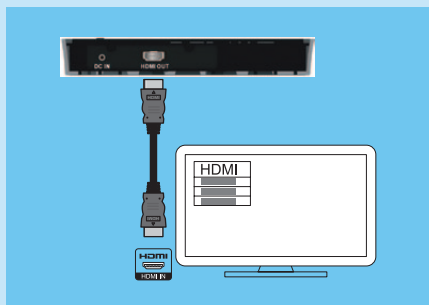

Activate the wireless link

Switch on the transmitter and receiver.

Press  on the remote control or the transmitter and receiver in standby mode to turn it on.

Select the source on the transmitter

Press the source buttons on the remote control, transmitter or receiver until you see the available video from your device.




Mount your receiver

You can either mount the receiver on the wall or on the back of the HDTV.


Mount your receiver on the wall

- 1 Select a spot near the HDTV.
- 2 Drill two holes in the wall. Make sure that the distance between the two holes is $1\frac{25}{32}$ " (45mm) and the diameter of the hole is $\frac{5}{16}$ " (5mm).
- 3 Punch the supplied two anchors into the two holes on the wall.
- 4 Put the two screws into the anchors and leave $\frac{1}{8}$ " (3mm) to mount the receiver on.
- 5 Hook the key holes at the back of the receiver on the screws.

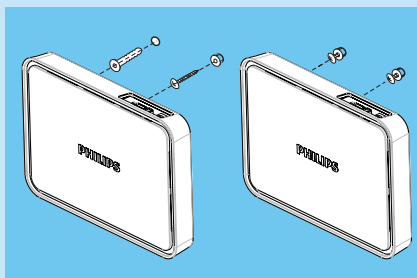

Mount your receiver on the back of the HDTV

- 1 Remove the white protective film from one of the supplied adhesive tapes.
- 2 Secure the glued side of the adhesive tape and attach it to the central bottom area of the receiver.
- 3 Select a flat location on the rear side of the HDTV.
- 4 Remove the white protective film from the other adhesive tape.
- 5 Secure the glued side of the adhesive tape and attach it to the selected rear side of the HDTV.
- 6 Align the adhesive tape on the receiver with the one on the HDTV until both the receiver and HDTV are mounted together firmly.

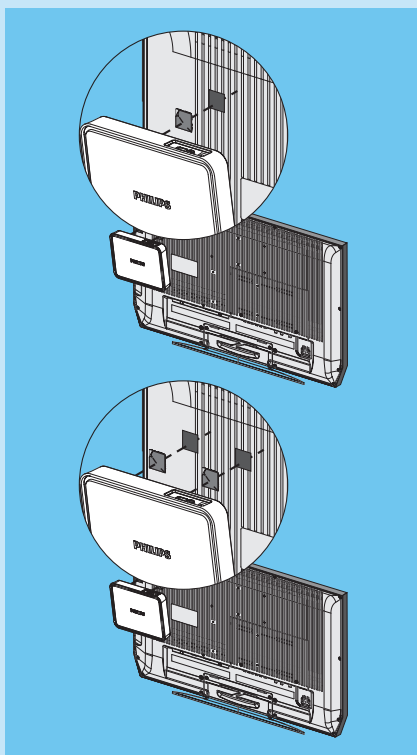

Troubleshooting

There is no video displayed on my TV screen.

- Make sure that the appropriate cables are selected and inserted to the transmitter; receiver; and HDTV.
- Make sure that you select HDMI as the input source on your HDTV.
- Check the power LED and status LED on the receiver.

I cannot hear any sound or the sound is poor, what do I do?

- Make sure that the TV volume is adjusted correctly.
- Make sure that the TV volume is not set to minimum or the sound is not muted.
- Make sure that the audio bit rate is supported.
- Make sure the HDMI cable of the transmitter is connected correctly.

The laptop screen image is not full screen on my TV.

- 1 Right-click on an open space on your desktop.
- 2 Select **Graphics Options > Output to > Digital Television** (Now the laptop image will only appear on your TV).
- 3 Once again, right-click on an open space on your desktop.
- 4 Select **Screen Resolution**.
- 5 On the pop-up box increase the resolution settings till the laptop image better fits your TV screen.
- 6 Select **OK** and **KEEP CHANGES** when you are satisfied with your image size.

Welcome to Philips

Register your product at www.philips.com/welcome


Need help?

User manual

Refer to the user manual that came with your SWW1810.

Online help

www.philips.com/support

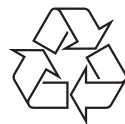

© 2011 Koninklijke Philips Electronics N.V.
All rights reserved.
Reproduction in whole or in part is prohibited without the written consent of the copyright owner.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.



**Be responsible
Respect copyrights**

SWW1810_27_EN_QSG_V2.0
WK11485