

Philips GoGear audio player 

SA1MXX02B	SA1MXX02K
SA1MXX02KN	SA1MXX02W
SA1MXX04B	SA1MXX04K
SA1MXX04KN	SA1MXX04P
SA1MXX04W	SA1MXX04WS
SA1MXX08K	

Quick start guide



PHILIPS

Getting started

Overview of the main menu

 
Menu	Mode	To
	Music	play your digital audio tracks
	FM radio	listen to FM radio
	Recording	create or listen to recordings
	Folder view	view files in folders
	Settings	customize the settings of the Digital Audio Player
	Now playing	show the current play screen

Connect and charge

The GoGear Mix has a built-in battery that can be charged through the USB port of a computer.

Connect the Digital Audio Player to a computer

- 1 Slide out the integrated USB plug () of the Digital Audio Player.
- 2 Connect the USB plug to a spare USB port on your computer.
- 3 Turn on your computer.
> The GoGear Mix charges.



Note

- For first-time use, allow the GoGear Mix to charge for 3 hours.
- The charging animation stops and the  icon is displayed when the charging process is completed.

Install software

The Digital Audio Player contains the following software:

- **Philips Device Manager** (helps you get firmware updates for the Digital Audio Player)

When you connect the Digital Audio Player to the PC for the first time, a pop-up window appears:

- 1 Select **Install Philips Device Manager**.
- 2 Follow the on-screen instructions to complete the installation.

If the pop-up window is not displayed automatically:

- 1 Select **My Computer** (Windows XP / Windows 2000) / **Computer** (Windows Vista).
- 2 Right click on **Philips GoGear Mix**.
- 3 Select **Install Philips Device Manager**.
- 4 Follow the on-screen instructions to complete the installation.

Turn the GoGear Mix on and off

- 1 To toggle between modes on and off, slide and hold  for approximately 2 seconds.

The Digital Audio Player has a lock switch to prevent accidental operation.

- 1 To lock the buttons when you play, move the slider to position .
>All buttons except the volume keys are locked and the display shows a lock icon.
- 2 To unlock the buttons again, move the slider to the center position.

Music

Listen to music

- 1 From the main menu, select .
- 2 Navigate the sub-menus to select your music.
- 3 Press  to play.
 - Press  to toggle between pause and play.

Radio

Listen to FM radio

- 1 From the main menu, select .
 - The earphones cable acts as FM antenna.

Manually tune a radio station

While in mode, you can manually tune to a radio station:

- 1 To search for the next stronger signal, press and hold / .
- 2 To fine tune the frequency, briefly press / .

Auto-tune preset radio station

The auto-tune feature of the Digital Audio Player helps you find radio stations and save them under the preset numbers.

- 1 While in mode, select **[Auto tune]**.
 - > The radio automatically tunes radio stations and saves the frequencies to presets.
 - > There are 20 presets available.
 - > To stop auto tuning, press .
 - > To exit radio, press and hold for 2 seconds.

Play a preset radio station

- 1 While in mode, select preset.
- 2 Press or to change to another preset.
- 3 To search for the next stronger signal, press and hold or for 2 seconds.
 - To exit radio, press and hold for 2 seconds.

Note To play preset radio stations, you first have to store radio stations under presets.

Recordings

Record from FM radio

(Available with some versions only!)

- 1 From the main menu, select > **[Start FM radio recording]**.
 - Press to toggle between pause and record.
- 2 Press to stop.
- 3 Press to save the recording or press to cancel.
 - > Recordings are saved on the player.
(Filename format: FMRECXXX.WAV, where XXX is the recording number that is generated automatically.)

You can find your recordings under **[Recordings Library]** > **[FM Radio]**.

Record audio/voices

This is how you can record audio/voices with the built-in microphone (see section **Overview** for location of built-in microphone):

- 1 From the main menu, select > **[Start voice recording]**.
 - Press to toggle between pause and record.
- 2 Press to stop.
- 3 Press to save the recording or press to cancel.
 - > Recordings are saved on the player.
(Filename format: VOICEXXX.WAV, where XXX is the recording number that is generated automatically.)

You can find your recordings under **[Recordings Library]** > **[Voice]**.

Need help?

User Manual

See the user manual stored on this player.

Online

Go to www.philips.com/welcome

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Recycling the product and the built-in battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. To safeguard the functionality and safety of your product, take your product to an official collection point or service centre where a professional can remove or replace the battery as shown in the user manual.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.



Be responsible
Respect copyrights



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners
© 2009 Koninklijke Philips Electronics N.V.
All rights reserved.

www.philips.com



Printed in China
wk9045