

Important

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Read this user manual carefully before you use the appliance, and save the user manual for future reference.

Danger

- Do not immerse the motor unit in water nor rinse it under the tap.

Warning

- Never use your fingers or an object to push ingredients into the feeding tube while the appliance is running. Only use the pusher.
- Before you connect the appliance to the power, make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage.
- Never connect this appliance to a timer switch, to avoid a hazardous situation.
- Do not use the appliance if the power cord, the plug, protecting cover, rotating sieve or any other parts are damaged or has visible cracks.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons to avoid a hazard.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- For their safety, do not allow children to play with the appliance.
- Never let the appliance run unattended.
- If food sticks to the wall of the blender jar or bowl, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Be careful when you are emptying the bowl, handle or clean the discs, the blade units and the juicer sieve. The cutting edges are very sharp.
- Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- If the blades get stuck, unplug the appliance before you remove the ingredients that block the blades.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- This appliance is intended for household use only.

Caution

- Never switch off the appliance by turning the blender jar, the bowl, or their lids. Always switch off the appliance by turning the speed selector to 0 or OFF.
- Unplug the appliance immediately after use.
- Always wait until the moving parts stop running, then switch off and unplug the appliance before opening the lid and reaching into any of the parts that move in use.
- Always switch off and unplug the appliance if it is left unattended, and before assembling, disassembling, cleaning and changing accessories, or approaching parts that move in use.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions and table for cleaning given in this manual.
- Never use any accessories or parts from other manufacturers that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not exceed the maximum level indication on the bowl or the jar. Follow the quantities, processing time and speed as indicated in the user manual.
- Let hot ingredients cool down (< 80°C) before processing them.
- Always let the appliance cool down to room temperature after each batch that you process.
- Certain ingredients such as carrots may cause discolorations on the surface of the parts. This does not have a negative effect on the parts. The discolorations usually disappear after some time.
- Noise level: Lc = 86 dB [A]

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Before first use

Before you use the appliance and accessories for the first time, thoroughly clean the parts that come into contact with food.

To explore more helpful tips and basic recipes online, you can:

- Go to www.philips.com.
- Click the search button  on the homepage.
- Type the product number "HR7776, HR7777 or HR7778" in the search box.
- Find or download the information you need from the searching result.

Overview (Fig. 1)

- | | | | |
|---|--------------------------------|---|---|
|  | Food processor pusher |  | Mini chopper jar |
|  | Food processor bowl lid |  | Seal ring |
|  | Blade unit |  | Detachable blade unit for mini chopper or blender |
|  | Drive shaft |  | Maxi juicer pusher |
|  | Food processor bowl |  | Maxi juicer lid |
|  | Motor unit |  | Maxi juicer filter |
|  | Kneading accessory |  | Maxi juicer bowl |
|  | Double balloon beater |  | Base unit of maxi juicer bowl |
|  | Reversible shredding disc |  | Measuring cup |
|  | Adjustable slicing disc |  | Blender lid |
|  | Julienne disc (HR7778 only) |  | Blender jar |
|  | Granulating disc (HR7778 only) |  | Seal ring |
|  | French fry disc (HR7778 only) |  | Detachable blade unit for blender or mini chopper |
|  | Citrus press cone |  | Tray cover |
|  | Citrus press sieve |  | Storage tray |
|  | Mini juicer pusher |  | Spatula |
|  | Mini juicer lid |  | Cleaning brush |
|  | Mini juicer filter | | |
|  | Mini juicer base | | |

Food processor

General Assembly

Before you use or assemble any of the accessories, make sure that you assemble according to Fig. 2 to 10.

- Turn the bowl clockwise until you hear a click to fix it onto the motor unit.
- Assemble the accessory or the accessory equipped with the shaft to the bowl.
- Put the ingredients in the bowl.
 - For the citrus press, press the citrus fruits on the cone, and go to Step 5.
- Put the lid on the bowl, and turn the lid clockwise until you hear a click to fix it. Then put the pusher into the feeding tube.
 - For the discs and mini juicer, put the ingredients into the feeding tube with the pusher.
- Connect the power plug to the power supply.
- Check the advised ingredient quantity and setting in Table 16. Turn the knob to the desired speed setting.
- After use, turn the knob to **OFF**, and then unplug the appliance.

Blade unit

Before you start, make sure that you assemble according to Fig. 2.

You can use the blade unit to chop, mix, blend, or puree ingredients. You can also use it to mix and blend cake batters.

To remove food that sticks to the blade or to the inside of the bowl, use a spatula to remove the excess after you switch off the appliance.

	Note
- Always put the blade unit in the bowl before you start to add the ingredients. - Do not use the blade unit to chop hard ingredients, like coffee beans, turmeric, nutmeg, and ice cubes, as this may cause the blade to get blunt. - Do not let the appliance run too long when you chop (hard) cheese or chocolate. Otherwise these ingredients become too hot, start to melt, and turn lumpy.	

Kneading accessory

Before you start, make sure that you assemble according to Fig. 3.

Turn the knob to the ON position and then press the kneading preset button  to start. Press the button again to stop when the dough is formed.

	Tip
- If using High Gluten Flour, for best results, use 60g water for every 100g of flour, and knead at speed 9-12 for 1.5 mins (max time). - The kneading preset button  is equipped with an auto-stop timer to protect your appliance from over usage. - The kneading preset button  also has an auto cool down period after each processing cycle. During this period, the button will blink and the function cannot be activated.	

Double balloon beater

	Warning
Do not use the double balloon beater to blend cake batters with butter or margarine. Use the blade unit for this job.	

Before you start, make sure that you assemble according to Fig. 4.

Turn the knob to the ON position and then press the whipping/whisking preset button  to start. Press the button again to stop when the cream or egg whites are completely processed.

You can use the double balloon beater to whisk egg whites and to whip cream.

	Tip
The whipping/whisking button  is equipped with an auto-stop timer to protect your appliance from over usage.	

Discs

Before you start, make sure that you pick your desired disc from following and assemble according to Fig. 5:

	Name	Purpose
	Reversible shredding disc	For shredding ingredients into thin or thick flat pieces with the reversible sides
	Adjustable slicing disc	For slicing ingredients to the slicing thickness you set
	Julienne disc (HR7778 only)	For cutting ingredients into thin strips
	Granulating disc (HR7778 only)	For granulating ingredients to small/fine pieces
	French fry disc (HR7778 only)	For cutting ingredients into thick strips.

	Caution
- Be careful when you handle the slicing blade of disc. It has a very sharp cutting edge. - Never use the disc to process hard ingredients, like ice cubes. - Do not exert too much pressure on the pusher when you press ingredients into the feed tube.	

	Note
Put the ingredients into the feeding tube with the pusher. Fill the feeding tube evenly for the best results. When you have to process a large amount of ingredients, process small batches and empty the bowl between batches.	

Citrus press

Before you start, make sure that you assemble according to Fig. 6.

	Note
- Put the sieve for citrus press on the shaft in the bowl. Make sure that the projection on the sieve is locked in the slot of the bowl handle. When the sieve is fixed correctly, you hear a click. - Press the citrus fruit onto the cone. Stop pressing to remove the pulp from the sieve if necessary. When you finish pressing or want to remove the pulp, turn the knob to OFF and remove the bowl from the appliance with the accessories on it.	

Mini Juicer (HR7777 only)

Before you start, make sure that you assemble according to Fig. 7.

	Caution
- Do not exert too much pressure on the pusher when you press ingredients into the feed tube. - Do not fill the bowl beyond the maximum indication.	

	Note
Before processing ingredients, remove all seeds and pits from plums, apricots, peaches, and cherries, remove all tough skins from pineapples, melons etc.	

Mini chopper (Optional)

Before you start, make sure that you assemble according to Fig. 8.

You can use the mini chopper to chop coffee beans, peppercorns, nuts, herbs, dried fruits etc.

Dried fruits such as figs can be chopped and use as toppings for yoghurt or spread for your bread or biscuit.

For best results when processing dried black Mission figs, use max of 60 g at speed P for 7 seconds.

	Note
- You can order a mini chopper jar and a blade unit (under service code number 9965 100 56737 & 9965 100 56882) from your Philips dealer or a Philips service center as extra accessories. - Follow the recommendation on Table 16. Do not exceed the maximum level indicated on the mini chopper.	

Maxi Juicer (HR7778 only)

Before you start, make sure that you assemble according to Fig. 9.

You can use the maxi juicer to juice up to 1.5 kg of fruits and vegetables such as carrots, apples, watermelon, pear, grapes, and pineapple.

	Caution
- Never insert your hand or another object (e.g. a fork, knife, spoon, or spatula) into the feeding tube. Only use the pusher supplied with the appliance for this purpose. - Wait until the sieve has completely stopped rotating before you remove the lid.	

	Note
- Always check the sieve before use. Do not use the juicer if you notice any damage like cracks, crazes, or a loose grating disc. - Before processing ingredients, remove all seeds and pits from plums, apricots, peaches and cherries, remove all tough skins from pineapples, melons etc. - When you clamp the lid on the juicer bowl correctly, you hear a click.	

Blender

Before you start, make sure that you assemble according to Fig. 10.

To crush ice, turn the knob to the ON position and then press the ice preset button . Press the button again to stop.

	Note
- Never open the lid to put your hand or any object in the jar while the blender is running. - Always assemble the sealing ring onto the blade unit before you attach the blade unit to the blender jar. - To add liquid ingredients during processing, pour them into the blender jar through the feeding hole. - Precut ingredients into small pieces before you process them. - If you want to prepare a large quantity, process small batches of ingredients instead of a large quantity at once. - To avoid spillage. When you process a liquid tends to foam (for example, milk), do not put more than 1 liter of liquid in the blender jar. - Put the ingredients in the blender jar within the maximum level indication.	

5 Cleaning

	Warning
Before you clean the appliance, unplug it.	

	Caution
- Make sure that the cutting edges of the blades and discs do not come into contact with hard objects. This may cause the blade to get blunt. - The cutting edges are sharp. Be careful when you clean the blade unit of the food processor, the blade unit of the blender and the discs.	

- Clean the motor unit with a moist cloth.
- Clean the other parts in hot water (< 60°C) with some washing-up liquid or in a dishwasher.

6 Storage

- Push the power cord into the integrated cord storage (Fig. 12).
- Store the product in a dry place.
- (For HR7776 and HR7777) Put the small accessories in the food processor bowl (Fig. 13).
- (For HR7778) Put the kneading accessory, blade unit, double balloon beater, spatula, and discs into the accessory storage tray (Fig. 14).

7 Guarantee and service

If you have a problem, need service, or need information, see www.philips.com/support or contact the Philips Consumer Care Center in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Center in your country, go to your local Philips dealer.

Penting

Tahniah atas pembelian anda dan selamat menggunakan Philips! Untuk mendapat manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftarkan produk anda di www.philips.com/welcome.

Baca manual pengguna anda dengan teliti sebelum anda menggunakan perkakas dan simpan manual pengguna untuk rujukan masa depan.

Bahaya

- Jangan rendam unit motor di dalam air atau membilasnya di bawah pili air.

Amaran

- Jangan sekali-kali menggunakan jari anda atau suatu objek untuk menolak ramuan ke dalam tiub suapan semasa perkakas sedang berjalan. Gunakan penolak sahaja.
- Sebelum anda sambungkan perkakas ke kuasa, pastikan voltan yang dinyatakan di bahagian bawah perkakas sesuai dengan voltan kuasa setempat.
- Jangan sambungkan perkakas ini ke suis pemasa untuk mengelakkan situasi berbahaya.
- Jangan gunakan perkakas jika kord kuasa, plag, penutup pelindung, penyaring berputar atau mana-mana bahagian lain sudah rosak atau kelihatan retak.
- Jika kord kuasa rosak, anda mesti menggantikannya di Philips, pusat servis yang dibenarkan oleh Philips ataupun orang seumpamanya yang layak bagi mengelakkan bahaya.
- Perkakas ini tidak seharusnya digunakan oleh kanak-kanak. Jauhkan perkakas dan kordnya dari capaian kanak-kanak.
- Perkakas ini boleh digunakan oleh orang yang kurang upaya dari segi fizikal, deria atau mental, atau kurang berpengalaman dan pengetahuan jika mereka diberi pengawasan atau arahan berkenaan penggunaan perkakas secara selamat dan jika mereka memahami bahaya yang mungkin berlaku.
- Untuk keselamatan mereka, jangan benarkan kanak-kanak bermain dengan perkakas.
- Jangan biarkan perkakas digunakan tanpa pengawasan.
- Jika makanan melekat pada dinding balang atau mangkuk pengisar, matikan perkakas dan cabut keluar plagnya. Kemudian gunakan spatula untuk mengeluarkan makanan dari dindingnya.
- Berhati-hati apabila anda mengosongkan mangkuk, pemegang atau membersihkan cakera, unit bilah dan penyaring pemerah jus. Mata pemotongnya adalah sangat tajam.
- Jangan sentuh bilah terutama apabila plag perkakas dipasang. Bilah adalah sangat tajam.
- Jika pisau tersekat, cabut plag perkakas sebelum anda mengeluarkan bahan-bahan yang menyekat pisau.
- Berhati-hati jika cecair panas dituangkan ke dalam pemproses makanan atau pengisar kerana ia akan menolaknya keluar daripada perkakas disebabkan pengewapan yang mengejut.
- Perkakas ini dimaksudkan untuk penggunaan rumah tangga sahaja.

Awas

- Jangan sesekali mematikan perkakas dengan memutarakan balang, mangkuk atau penutup pengisarnya. Sentiasa mematikan perkakas dengan memutarakan pemilih kelajuan ke 0 atau MATI.
- Cabut plag sebaik sahaja selesai penggunaan.
- Tunggu sehingga bahagian yang bergerak berhenti berjalan, kemudian matikan dan cabut plag perkakas setiap kali sebelum membuka penutup dan mencapai mana-mana bahagian bergerak yang digunakan.
- Matikan dan cabut plag perkakas jika perkakas dibiarkan tanpa pengawasan dan sebelum memasang, membuka, membersihkan dan mengecas aksesori atau mendekati bahagian yang bergerak semasa digunakan.
- Bersihkan bahagian-bahagian yang terkena makanan dengan rapi sebelum anda menggunakan peralatan buat pertama kali. Rujuk kepada arahan dan jadual pembersihan yang diberikan dalam panduan ini.
- Jangan sekali-kali menggunakan sebarang perkakas atau bahagian daripada mana-mana pengilang lain yang tidak disyorkan secara khusus oleh Philips. Jika anda menggunakan aksesori atau bahagian yang sedemikian, jaminan anda menjadi tidak sah.
- Jangan melebihi penanda tahap maksimum pada mangkuk atau balang. Ikut kuantiti, masa memproses dan kelajuan seperti yang dinyatakan dalam manual pengguna.
- Biarkan ramuan panas menyejuk (< 80°C) sebelum memprosesnya.
- Sentiasa biarkan perkakas menyejuk ke suhu bilik selepas anda memproses setiap kelompok.
- Sesetengah ramuan seperti lobak merah mungkin akan menyebabkan penyahwarnaan pada permukaan bahagiannya. Ini tidak mempunyai kesan negatif pada bahagian. Penyahwarnaan biasanya menghilang selepas beberapa ketika.
- Aras hingar: Lc = 86 dB [A]

Medan elektromagnet (EMF)

Perkakas Philips ini mematuhi semua piawai yang berkaitan dengan medan elektromagnet (EMF). Jika dikendalikan dengan betul dan menurut arahan di dalam manual pengguna ini, perkakas ini selamat untuk digunakan berdasarkan bukti saintifik yang ada pada masa ini.

Kitar semula

Produk anda direka bentuk dan dilkalkan dengan menggunakan bahan dan komponen yang berkualiti tinggi, yang boleh dikitar semula dan digunakan semula.

Apabila simbol tong beroda yang dipangkah ini dilekatkan pada sesuatu produk, ia bermakna produk tersebut diliputi oleh Arahan Eropah 2002/96/EC.

Jangan buang produk anda dengan buangan isi rumah yang lain. Sila ambil tahu tentang peraturan tempatan mengenai pengumpulan berasingan produk elektrik dan elektronik. Cara membuang produk lama anda yang betul akan membantu mencegah kemungkinan akibat negatif terhadap alam sekitar dan kesihatan manusia.

Sebelum penggunaan pertama

Sebelum anda menggunakan perkakas dan aksesori buat kali pertama, bersihkan bahagian yang akan bersentuhan dengan makanan sebersih-bersihnya.

Untuk menerokai lebih banyak petua dan resipi asas dalam talian, anda boleh:

- Pergi ke www.philips.com.
- Klik butang carian  pada halaman utama.
- Taipkan nombor produk "HR7776, HR7777 atau HR7778" dalam kotak carian.
- Cari atau muat turun maklumat yang anda perlukan daripada keputusan carian.

Gambaran keseluruhan (Rajah 1)

- | | | | |
|---|---------------------------------------|---|--|
|  | Penolak pemproses makanan |  | Asas pemerah jus mini |
|  | Mangkuk pemproses makanan |  | Balang pencincang mini |
|  | Unit bilah |  | Gegelang kedap |
|  | Acı pemacu |  | Unit bilah boleh tanggal untuk pencincang atau pengisar mini |
|  | Mangkuk pemproses makanan |  | Penolak pemerah jus maxi |
|  | Unit motor |  | Penutup pemerah jus maxi |
|  | Aksesori menguli |  | Penapis pemerah jus maxi |
|  | Pemukul belon berkembar |  | Mangkuk pemerah jus maxi |
|  | Cakera pemayang boleh diterbalikkan |  | Unit asas mangkuk pemerah jus maxi |
|  | Cakera penghiris boleh laras |  | Cawan penyukat |
|  | Cakera Julienne (HR7778 sahaja) |  | Cakera pembetulan (HR7778 sahaja) |
|  | Cakera kentang jejari (HR7778 sahaja) |  | Balang pengisar |
|  </ | | | |

