

Philips GoGear audio player

SA1VBE02
SA1VBE04
SA1VBE08
SA1VBE16

Quick start guide



PHILIPS

Need help?

Please visit

www.philips.com/welcome

where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

Contents

EN

- 2 Register your product
- 3 What's in the box
- 4 Overview of the controls and connections
- 6 Connect and charge
- 8 Install software
- 9 Turn GoGear Vibe on
- 10 Navigate and play
- 12 Transfer and organize
- 13 Napster
- 14 Audiobooks
- 17 Update GoGear Vibe
- 18 Need help?
- 18 Disposal of your old product and the integrated battery

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

What's in the box



Earphones



USB cable



CD-ROM



Quick start
guide

What else you'll
need:




Computer

You need a computer with the following minimum requirements:

- Windows XP (SP2 or above) / Vista
- Pentium III 800MHz processor or higher
- 512 MB RAM
- 500MB hard disk space
- Internet connection
- Windows® Internet Explorer 6.0 or later
- CD-ROM drive
- USB port

Overview of the controls and connections

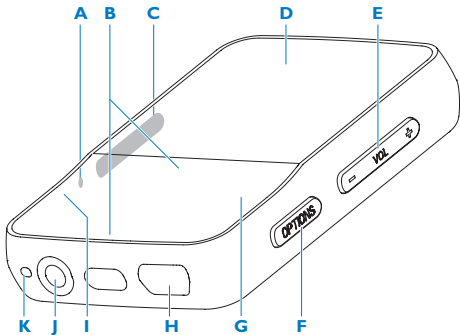

A	RESET	press: reset GoGear Vibe
B	▲ / ▼	press: scroll up/down press and hold: scroll up/down at high speed
C	①	slide and hold: turn GoGear Vibe on/off
	🔒	slide: lock/unlock all buttons except -VOL +
D		display
E	-VOL +	press: increase/decrease the volume press and hold: increase/decrease fast
F	OPTIONS	view available options
G	▶ 	press: play/pause
H	🔌	USB connection jack
I	↶	press: back one level press and hold: return to main menu
J	🎧	headphone jack
K	MIC	microphone

Connect and charge

- 1 Connect the USB plug of the supplied USB cable to a spare USB port on your computer.
- 2 Connect the small USB plug of the USB cable to the small USB jack on GoGear Vibe.
- 3 Turn on your computer.
> *GoGear Vibe charges.*



Note

- For first-time use, allow GoGear Vibe to charge for 3 hours.
- The charging animation stops and the  icon is displayed when the charging process is completed.

- 1 Connect GoGear Vibe to your computer.
- 2 Insert the CD that comes with GoGear Vibe into the CD-ROM drive of your computer.
- 3 Follow the on-screen instructions to complete the installation of the software.

If the installation program fails to start automatically:

- 1 Browse the CD contents with Windows Explorer.
- 2 Double click on the file ending with '.exe'.

Install software

GoGear Vibe comes with the following software:

- Philips Device Manager (helps you get firmware updates for GoGear Vibe)
- Media Converter for Philips (helps you convert and transfer video files for GoGear Vibe)
- Windows Media Player (helps you convert and transfer music files for GoGear Vibe)

Important

- Remember to install the software provided in the supplied CD-ROM for music and/or video transfer.
- Before installing the software, check that your computer meets the requirements.

Turn GoGear Vibe on

- 1 To toggle between modes on and off, slide and hold ⓘ for approximately 2 seconds.

GoGear Vibe has a lock switch to prevent accidental operation:

- 1 To lock the buttons when you play, move the slider to position  .
 - > *All buttons except the volume keys are locked and the display shows a lock icon.*
- 2 To unlock the buttons again, move the slider to the center position.

Navigate and play

- 1 From the main menu, select  /  / .
- 2 Press  /  to select music / videos / pictures.
 - Mode  / : Press  to toggle between pause and play music / video.
 - Mode : Press  to start slideshow.
- 3 Press **OPTIONS** to view available options.

Tip You can find more detailed information on these features in the user manual.

Menu	Mode	To
	Music	play music tracks
	Video	play videos
	Pictures	view pictures
	FM radio	listen to FM radio
	Recordings	create or listen to recordings
	Folder view	view files in folders
	Settings	customize the settings of GoGear Vibe
	Now playing	show the current play screen

Transfer and organize

You can install the **Windows Media Player** to organize and facilitate locating your files.

- 1 With GoGear Vibe connected to the USB port of the computer, open **Windows® Explorer**.
- 2 Create folders in the mass storage of GoGear Vibe.
- 3 Use drag and drop actions to sort your music into the folders.

MediaConverter™ for Philips enables you to

- download videos from the Internet to your PC at the click of a button.
- convert video files (that are compatible with **Windows Media Player**) on your PC to the correct screen size of GoGear Vibe.
- transfer converted videos from your PC to GoGear Vibe.

Note Video conversion and transfer can take a long time, depending on your PC configuration.

Napster

The Napster To Go online music service offers a variety of purchase and subscription models.

The Napster Software supplied with GoGear Vibe helps you

- search Napster for music by name
 - purchase Napster music
 - play unlimited Napster music on your computer
 - transfer your Napster music to your GoGear Vibe
 - browse the Napster catalogue
- 1 Download and launch the Napster software on your computer.
 - 2 Connect GoGear Vibe to your computer.
 - 3 Use drag and drop action to transfer music to GoGear Vibe.

Note The download of Napster subscription tracks requires Computer activation. For more detailed instructions on Napster To Go, refer to the user manual. You can also launch Napster To Go, select 'Help' from the pull-down menu and click on 'Tutorial' or 'User Guide' to learn more.

Audiobooks

GoGear Vibe supports books in audio format. The use of this feature requires that you download the **AudibleManager** from audible.com. With the **AudibleManager** you can manage the digital contents of your audiobooks.

Visit audible.com and register. The onscreen instructions guide you through the **AudibleManager** software download process.

You can search audiobooks by book name or by author.

While you listen to an audiobook, you can navigate the same way as you would in any other audio file.

Listen to radio

- 1 From the main menu, select .
- 2 To search for the next stronger signal, press and hold ▲ / ▼.
- 3 To fine tune the frequency, briefly press ▲ / ▼.

Tip You can find more information on presets and auto-tuning in the user manual.

Settings

This is how you navigate and customize the **Settings**.

- 1 Press ▲ / ▼ to select an option.
- 2 Press ►|| to confirm a selection and go to the next level (when available).
- 3 Press ↶ to return to the previous level.
- 4 Press and hold ↶ to exit the **Settings** menu.

Update GoGear Vibe

- 1 Ensure that your computer is connected to the Internet.
- 2 Connect GoGear Vibe to the computer (see section **Connect and charge** for instructions).
- 3 On your computer, click **Start > Programs > Philips Digital Audio Player > Vibe Device Manager** to launch **Philips Device Manager**.
- 4 Click **Update**.
 - > *Philips GoGear Vibe Device Manager* checks for updates and installs new firmware from the Internet, if available.
- 5 When the display shows **Update completed**, click **OK**.
- 6 Disconnect GoGear Vibe from the computer.
 - > *GoGear Vibe* restarts after the firmware is updated and is ready for use again.

Need help?

User Manual

See the user manual stored on this player.

Online

Go to www.philips.com/welcome

Disposal of your old product and the integrated battery

All our products are designed and manufactured with high quality materials and components, which can be recycled and reused.



The crossed-out wheel bin symbol on a product means that the product is subject to the European Directive 2002/96/EC. This symbol can also be used in combination with a chemical symbol, which means that the product complies with the environmental directive for that chemical.

 Never dispose of your product with other household waste. Inform yourself or ask your dealer about local environmentally safe recycling regulations. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.



Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. To safeguard the functionality and safety of your product, always bring your product to an official collection point or service centre where a professional can remove / replace the battery as shown in user manual.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or
their respective owners
© 2009 Koninklijke Philips Electronics N.V.
All rights reserved.
www.philips.com



Printed in China
SA1VBE_02_QSG_V2.0
wk9301