

Quick Start Guide



Step A Connect

Step B Setup

Step C Enjoy

What's in the Box?

You should find these items upon opening the box.




FM antenna



Remote Control

Pull out the plastic protective sheet before use.

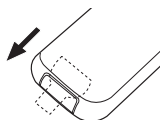

Quick Start Guide



User manual



MP3 cable

PHILIPS

Step A *Connect*

1

Connect the speaker cables.

2

Connect the FM antennas.

3

Connect the power cable of the system.

Tip


See the User Manual for how to connect other equipment to this system.

Warning!

If your system is equipped with a voltage selector, set the **VOLTAGE SELECTOR** to the local power voltage.

Note:

There are two groups of wires for each speaker box, one is blue-black wire for high frequency (connect the blue wire to "+" and the black one to "-"), and the other is red-black wire for low frequency (connect the red wire to "+" and black one to "-").

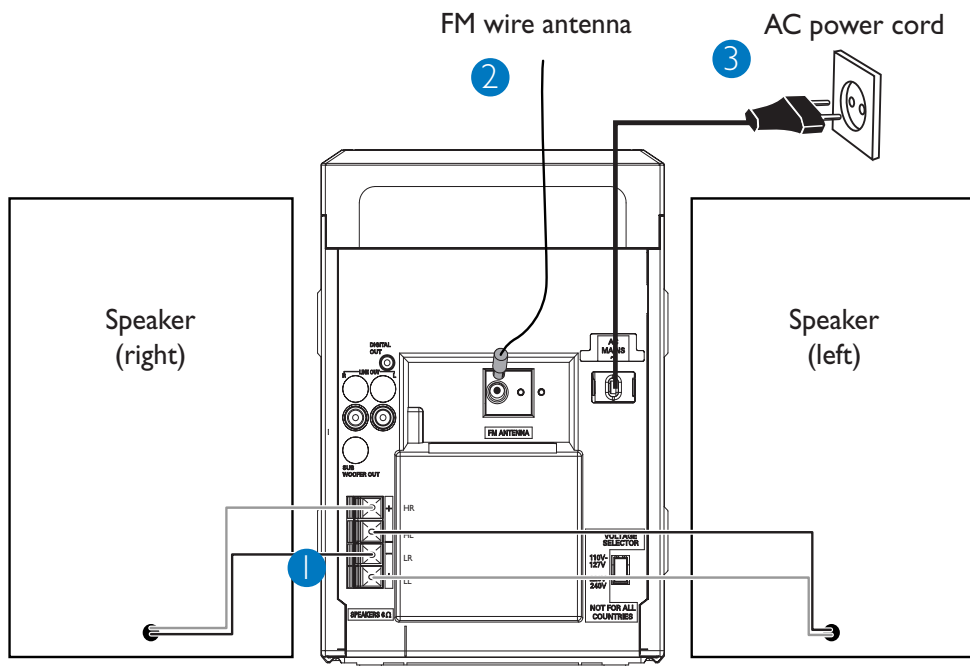

Step B Setup

Setting the clock

1

In standby mode, press and hold **CLOCK SET** on the system.

2


When the hour digits flash, turn the **VOLUME** control on the front panel to set the hours.

3

Press **CLOCK SET** again and the minute digits flash. Then turn the **VOLUME** control on the front panel to set the minutes.

4

Press **CLOCK SET** again to confirm the time setting.

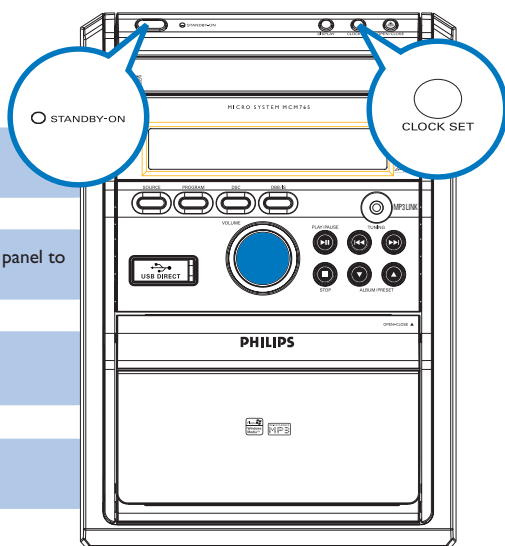

Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example iPod, TUNER).
- Then select the desired function (for example ►||, ◀◀, ▶▶).

Step C Enjoy

Playing a disc

1

Press **OPEN/CLOSE** ▲ to open the disc tray and load in a disc, then press the same button again to close the disc tray.


→ Make sure the label side of the disc is facing up.

2

Press ►|| to start playback.

3

To stop playback, press ■.

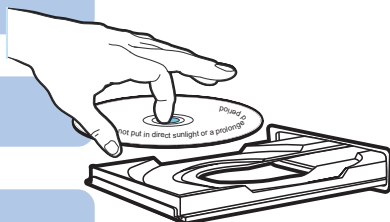


Playing a USB device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more to select **USB** (or **USB** on the remote control).
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Programming and tuning to radio stations

- 1 Press **SOURCE** repeatedly to select the tuner source.
- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.
- 3 Press **▼** or **▲** until the desired preset station is displayed.

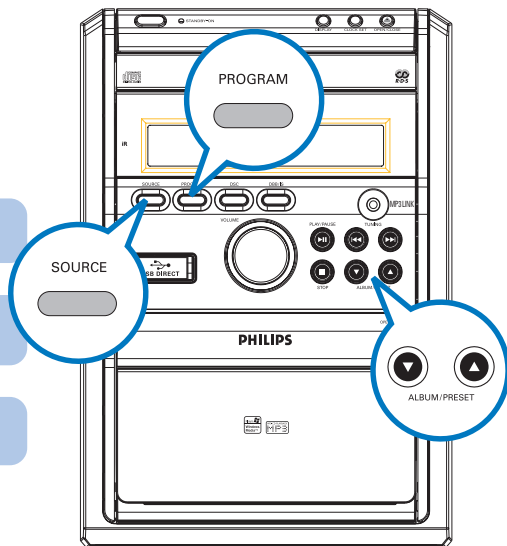

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

