



PHILIPS



Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

English 39911

Congratulations on your purchase, and welcome to Philips! To fully benefit from the product that Philips offers register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Do not block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Only use for drying and styling scalp hair. Do not use the appliance on artificial hair.

- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and standards regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old product with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Style your hair

Note: Always tie the appliance and attachments cool down before you connect or disconnect the attachments. Do not use the appliance on completely wet hair. Dry your hair with a towel. The appliance is most effective on towel-dried hair. Select a suitable attachment for the hairstyle you want.

Styling result	Attachment
Create natural straight hair	Padde brush (1) (HP8656 only)
Create more volume and curls	Volumeur (2)
Create inward/Outward curls	Thermobrush (3)
Create loose curls	Retractable bristle brush (4)
Dry hair	Nozzle (5)

- Tip**
 - Before you start, apply heat protective spray to better protect your hair.

Before and after styling your hair (Fig.3)

- Dry your hair with a towel.
- Connect the plug to a power supply socket.
- Open a suitable attachment and attach the dryer with the grooves aligned and turn the attachment left.

- Hold your hair a "lock", and the attachment is locked in place.
- Slide the air-flow switch (3) Fig.3) to gentle and cool airflow. For fixing your hair, strong and warm airflow & for drying and styling or the Thermobrush setting (3) for gentle drying and styling preventing your hair from overheating.

- If the appliance is powered on, it is automatically and continuously dispersed to provide additional shine and reducing frizz. (Only for HP8657. It is only for HP8656)

- To disconnect the attachment, press the release button (3) Fig.1) and pull it off.

- Tip**
 - After styling, apply hair spray or mousse to fix your hairstyle.

Create natural straight hair (Fig.4) (HP8656 only)

- Tie the paddle brush (1) Fig.4) on your hair.
- Brush through your hair slowly with the paddle brush, just like you would with a normal brush.
- Brush your hair backward as you tie.

- You may brush underneath your hair to get a more bouncy hairstyle.

- When finished, use your fingers to shape your hair.

Create more volume in roots (Fig.5)

 
 
- Slide the volumeur (2) Fig.5) into your hair about 3 cm away from the parting of your hair.

- When the appliance is switched on, the volumeur slowly towards the centre of your head, allowing hair to be pulled against the volumeur thus creating a little bulge of hair on the volumeur.

- Hold the appliance in a safe and dry place for 7-10 seconds.

- Use your hand to set the volumeur rests at an angle on your head.

- Remove the volumeur from your head, releasing the hair that was on the volumeur.

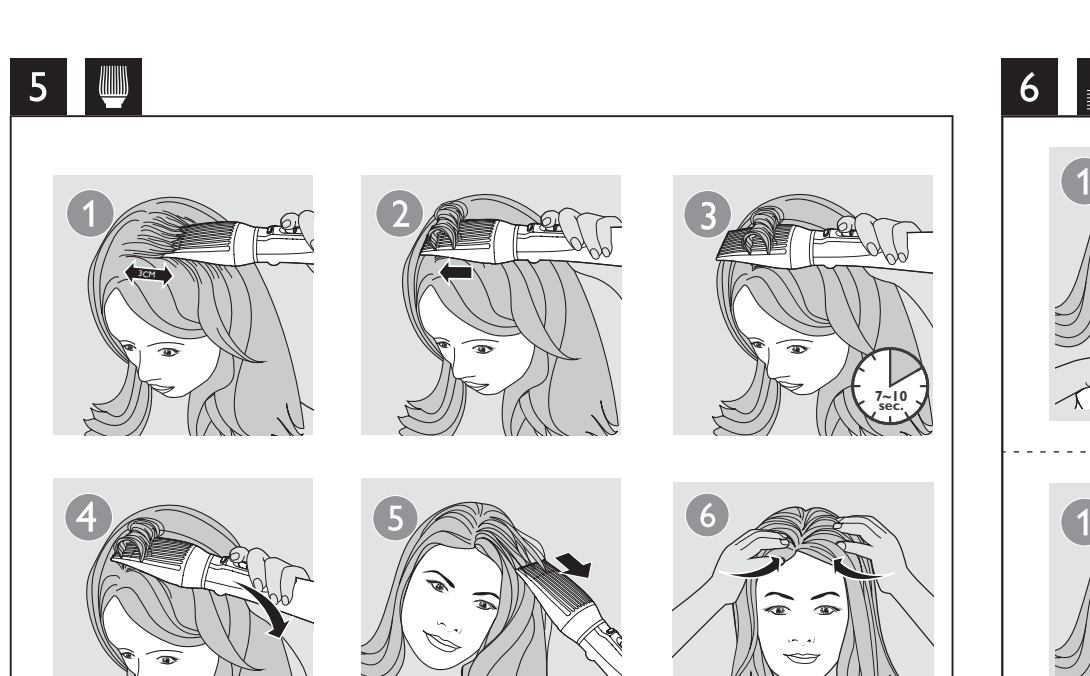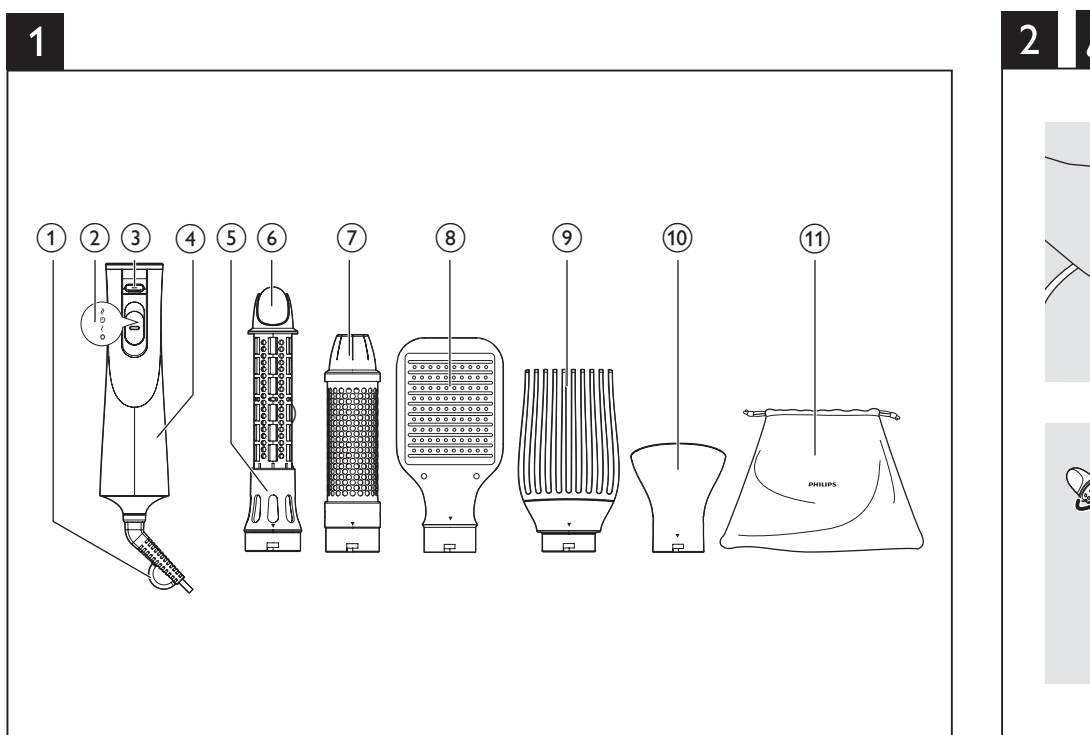

Specifications are subject to change without notice

© 2014 Koninklijke Philips N.V.
All rights reserved.

English 39911

Congratulations on your purchase, and welcome to Philips! To fully benefit from the product that Philips offers register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Do not block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Only use for drying and styling scalp hair. Do not use the appliance on artificial hair.

- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

- Do not use the appliance overalls, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

Electromagnetic fields (EMF)

 
 

 
 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
This Philips appliance complies with all applicable standards and standards regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old product with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

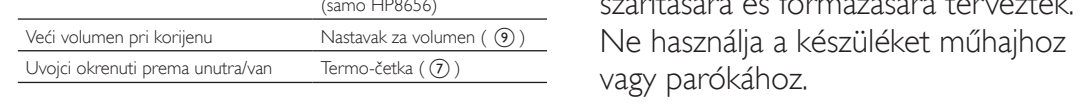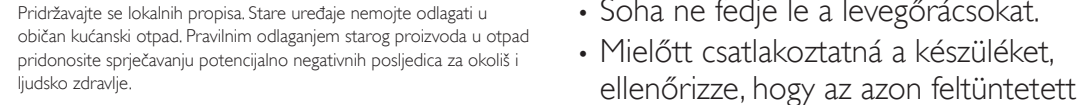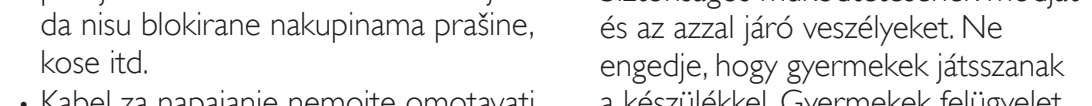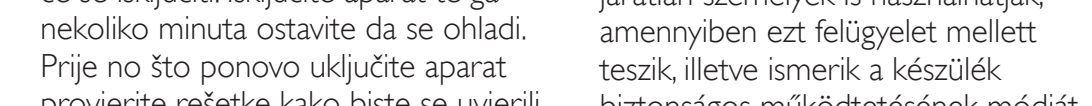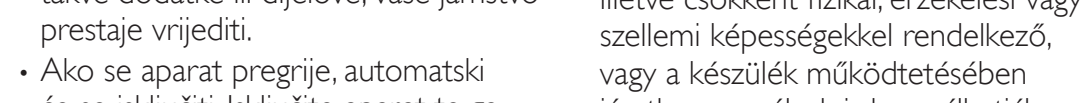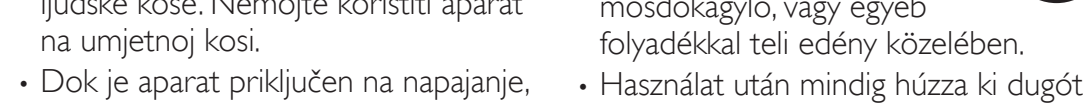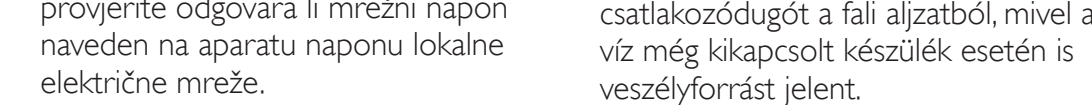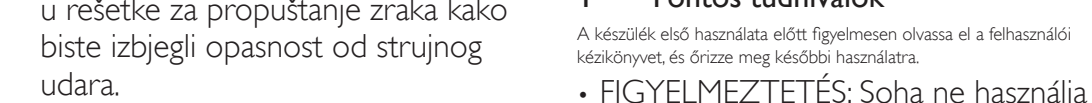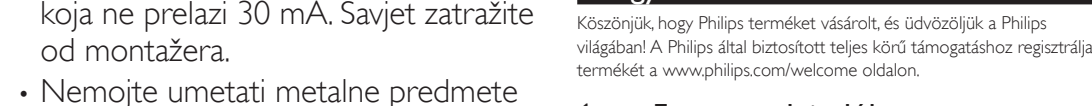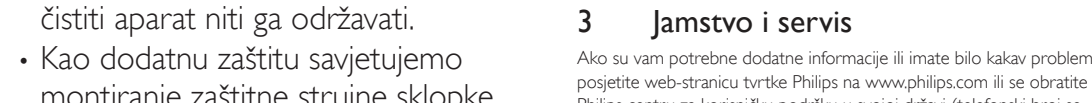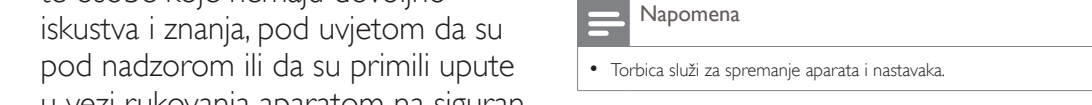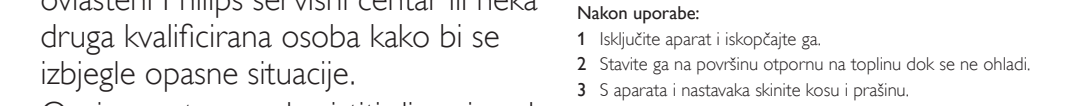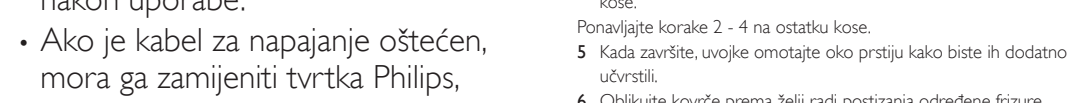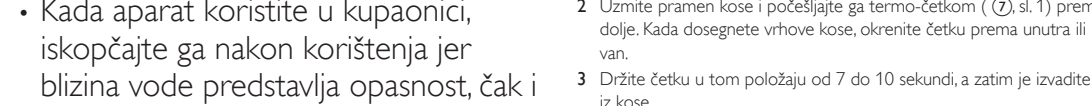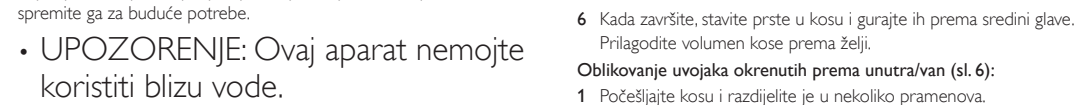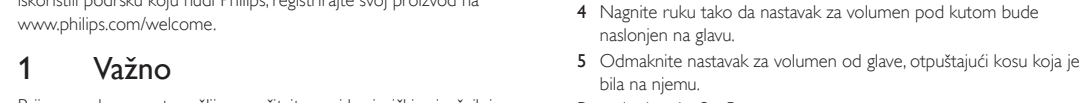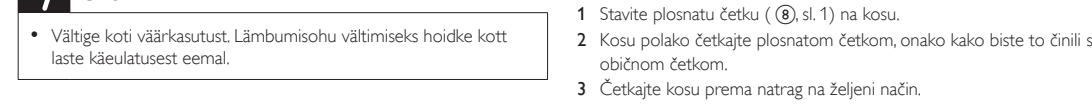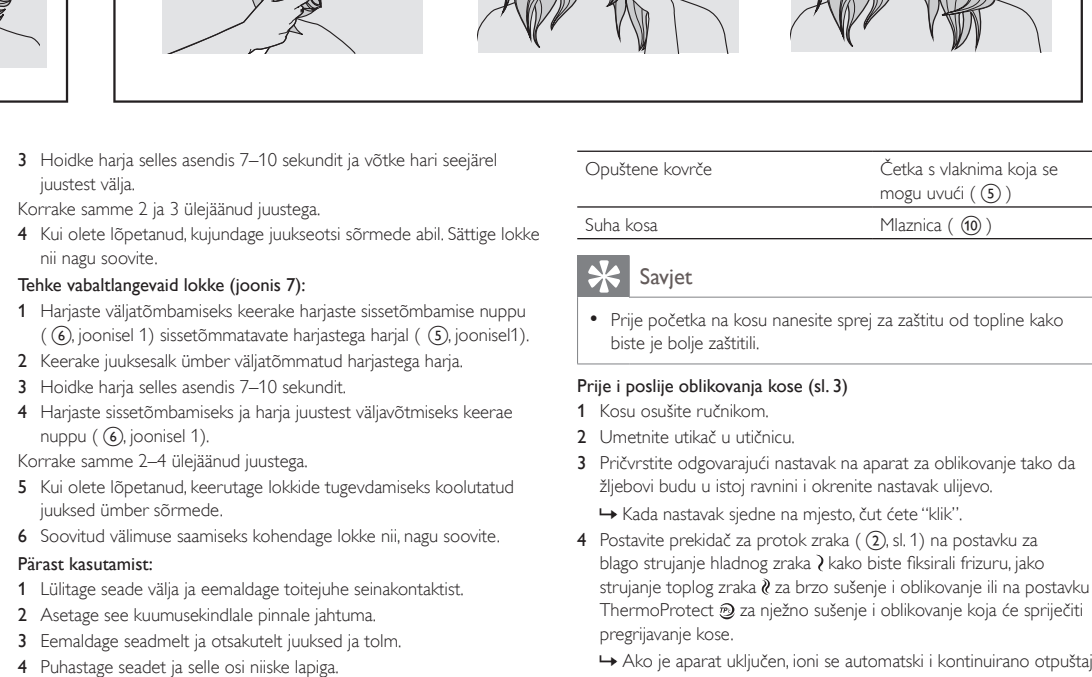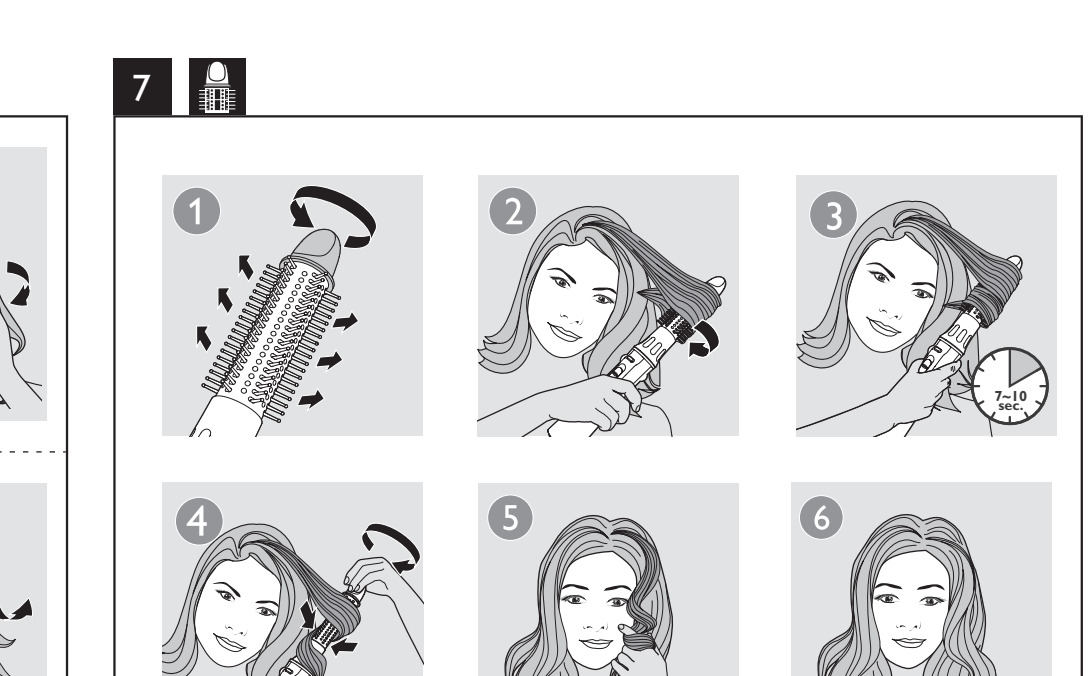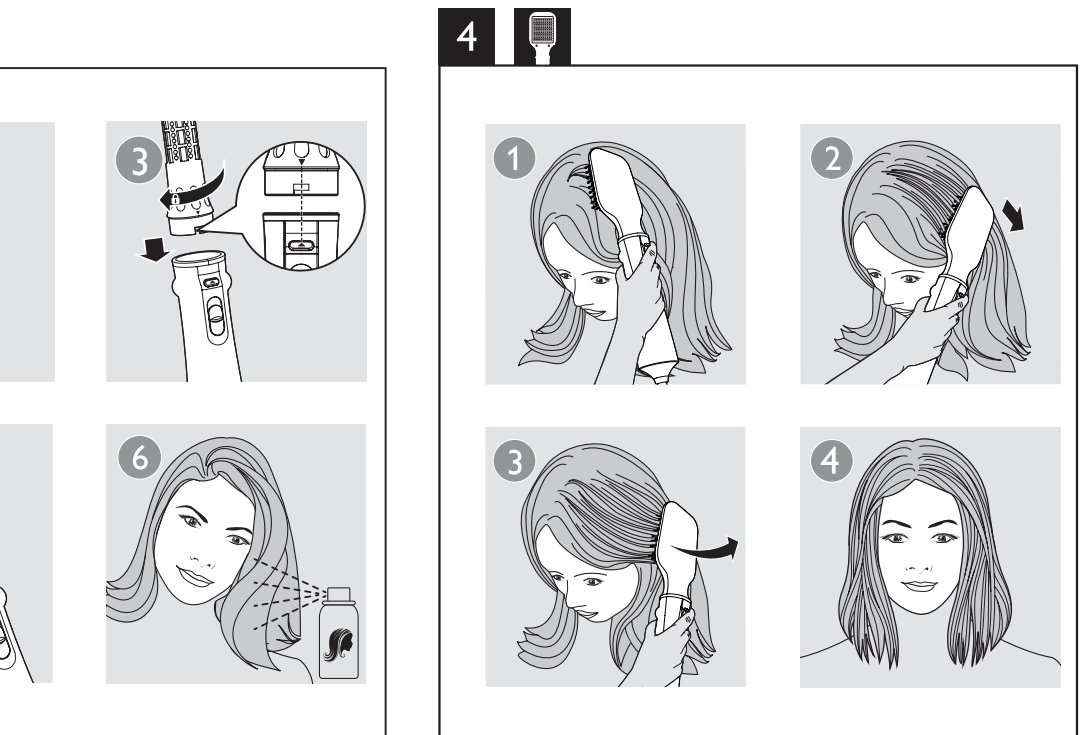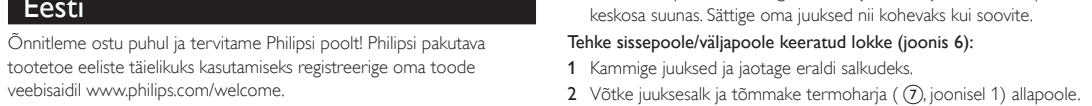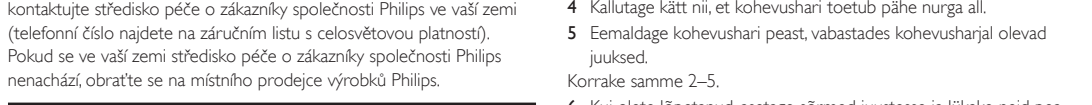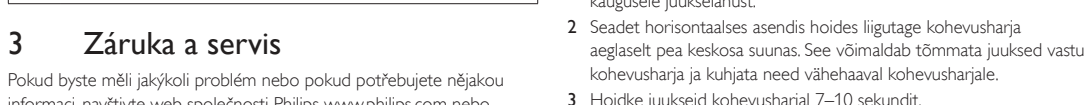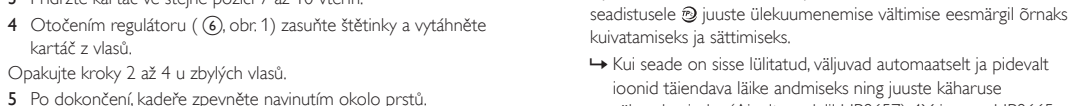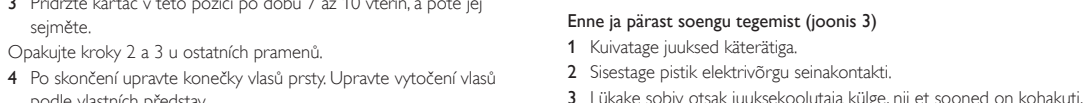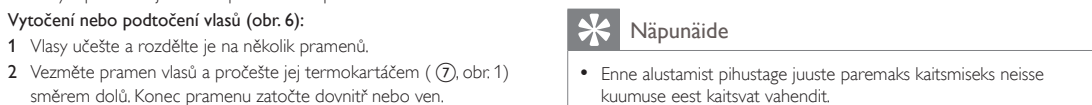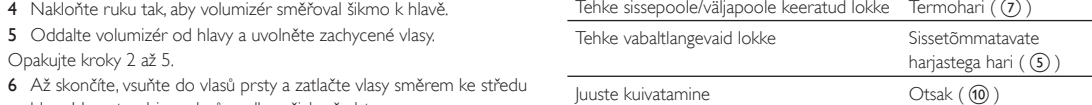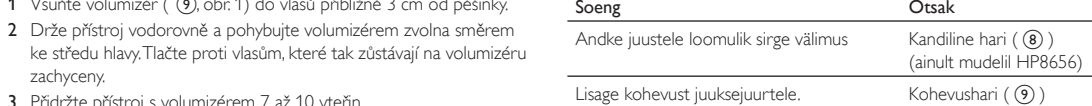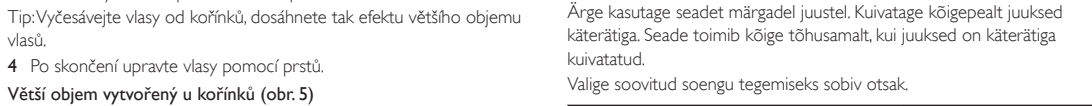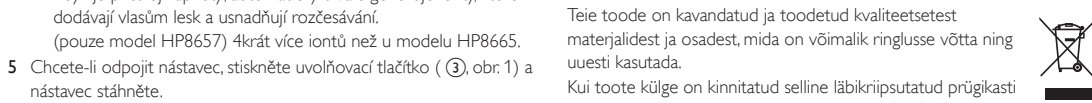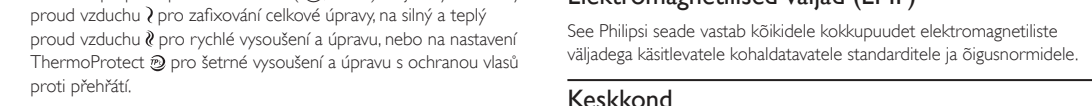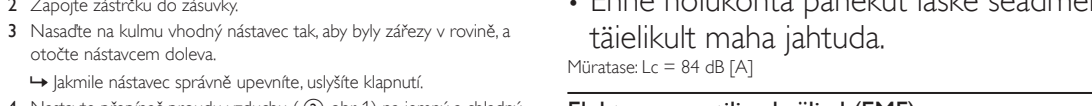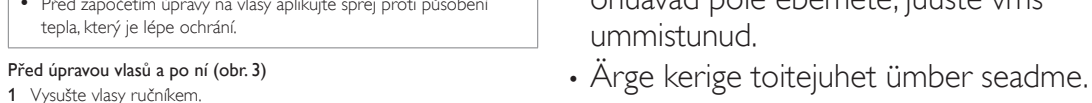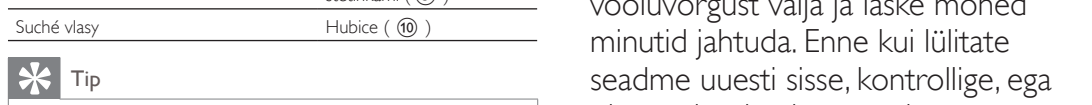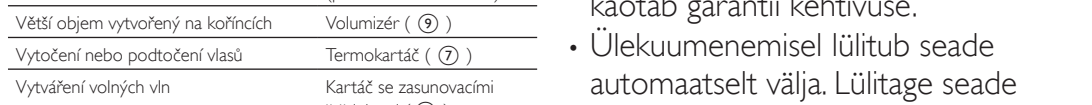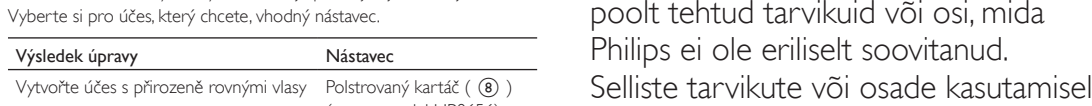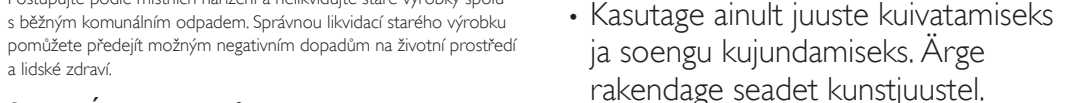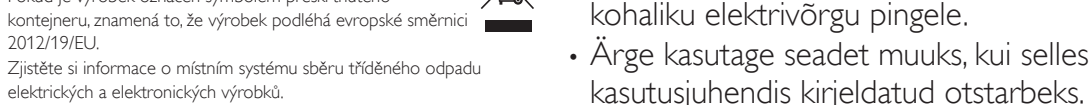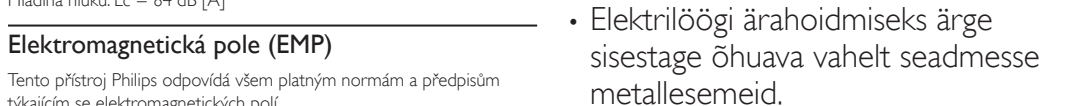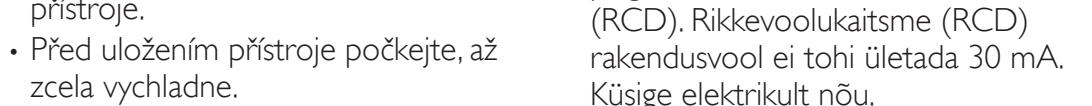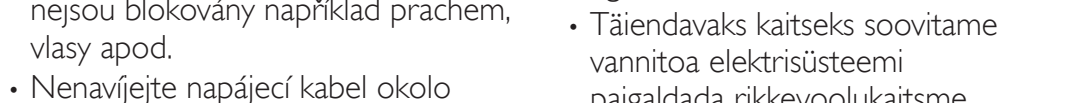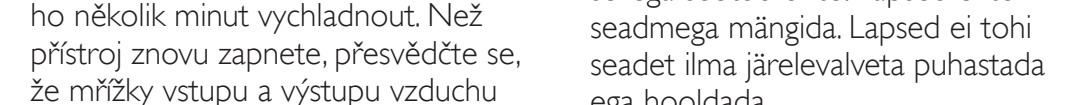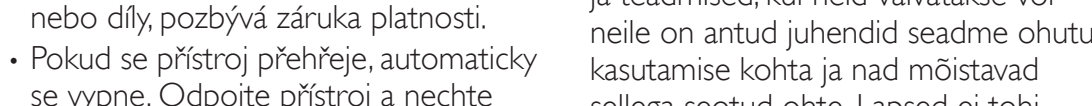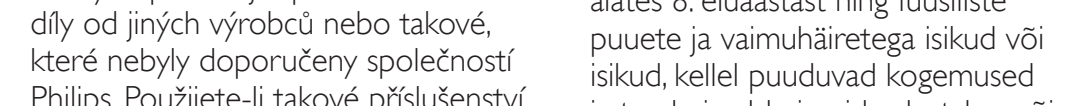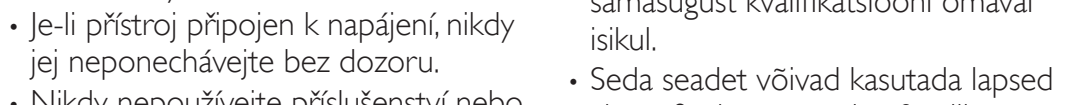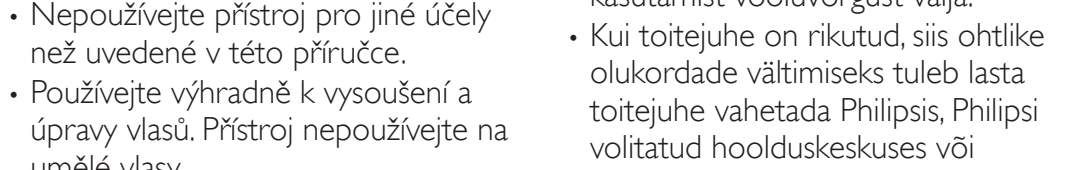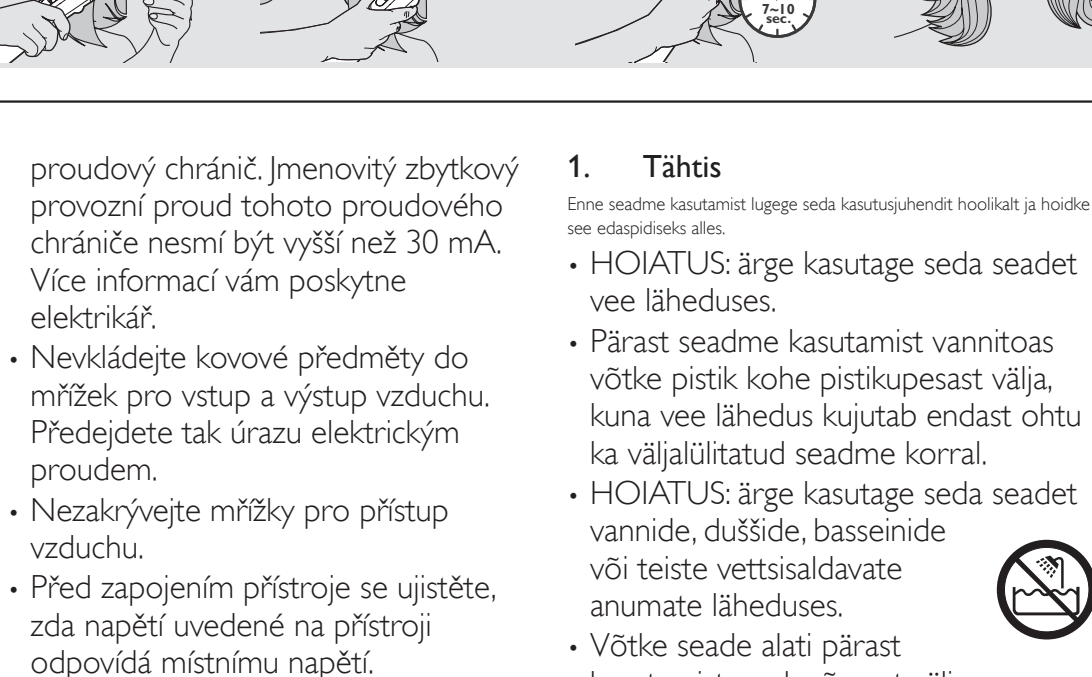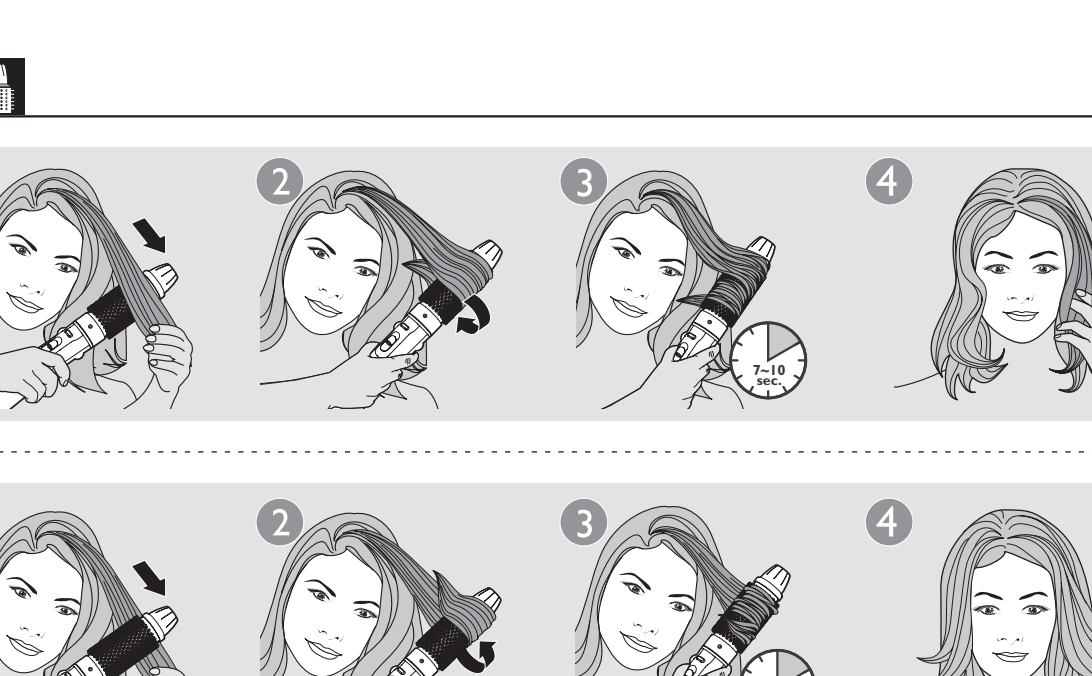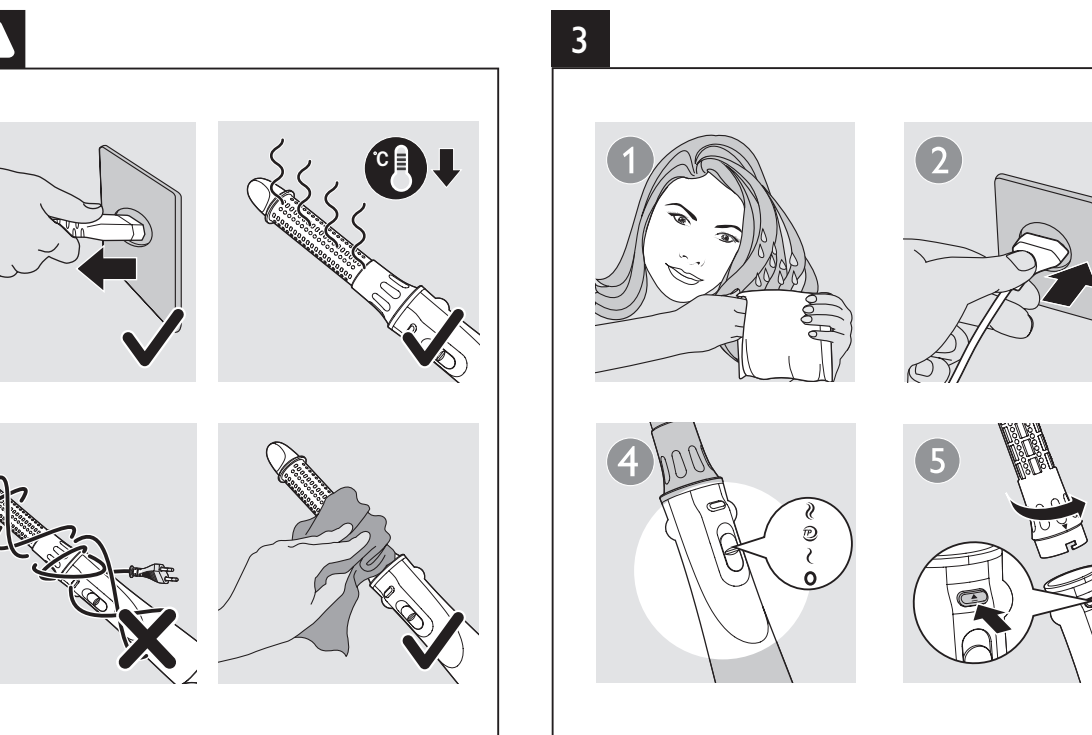

- Ha a készülék csatlakoztatva van a feszültséghez, soha ne hagyja azt felügyelet nélkül.
- Ne használjon más gyártótól származó, vagy a Philips által jóvá nem hagyott tartozékokat vagy akart részeket. Ellenkező esetben a garancia érvényét veszti.
- Tűlhevülés esetén a készülék automatikusan kikapcsol. Húzza ki a készülék csatlakozódugóját a fal aljzatból, és néhány percig hagyja hűlni. Mielőtt újra bekapcsolná a készüléket, ellenőrizze a szellőzőrészt, hogy ha, szőz szb. nem akadályozza-e a levegő áramlását.
- Ne tekerje a hálózati csatlakozó kábel a készülék köré.
- Mielőtt eltenné, várja meg, amíg a készülék lehűl.
- Zapora Le = 84 dB [A]

Elektronágneses mezők (EMF)

Ez a Philips készülék az elektronágneses terevre éves átlagban összesen vonatkozó szabványok és előírások megfelel.

Környezvédelem

Ez a termék csak mindaddig anyagok és alkatrészek felhasználásával készült, amelyek újrahasznosítottak és újra felhasználhatók.

A felhasználás kapcsolódó áramtörések károsak szemből az egészségre, hogy a termelés során a 2012/19/EU európai irányelvvel összhangban.

Tárgyszöveg az elektronikus és elektronikus termékek szelvényeinek felhasználását és a környezetet.

Csatlakozás a helyi szabványokkal összhangban, és a károsítást megelőzően a szellőzőrész ellenőrzése.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

Használati utasítások és a készülék használati utasításai.

