 


- 2 Select [Bluetooth], and then tap **OK** to confirm.
- 8 To set the pin code on, select [Pin Code On] and then tap **OK** to confirm.
- 3 Select [Security], and then tap **OK** to confirm.
- 4 Select [Pin Code], and then tap **OK** to confirm.



- 5 Select a number, and then tap **OK** to confirm.
- 6 Repeat Step 5 until the pin code is complete.
- 7 Select [Enter], and then tap **OK** to confirm.



On your mobile phone:

- 1 Select photos to be sent to the PhotoFrame.
- 2 Select [Send] > [Bluetooth], and then confirm the selection.
- 3 If a pin code is required, enter the pin code (0000 by default) of the PhotoFrame.
- 4 Select [Send], and then confirm the selection.

Selected photos are sent to and saved in the Bluetooth album on the PhotoFrame.

Frequently asked questions

Is the LCD screen touch-enabled?

The LCD screen is not touch-enabled. After you turn on the PhotoFrame, you can use the touch boarder on the front panel to control the PhotoFrame.

Can I use the PhotoFrame to delete photos on a memory card?

Yes, it supports operations to delete photos on external devices such as a memory card. Ensure that you enable the delete function on a memory card available on the PhotoFrame.

Why does not my PhotoFrame show some of my photos?

- The PhotoFrame plays only JPEG photos (maximum: 8000 x 6000 pixel resolution) and progressive JPEG photos (maximum: 1024 x 768 pixel resolution).
- Ensure that these photos are not damaged.

Why does my PhotoFrame not show some of my video files?

- The PhotoFrame plays most video clips of a digital still camera in M-JPEG (*.avi/*.mov), MPEG-1 (*.mpg), MPEG-4 (*.avi/*.mov/*.mp4), H.263 (*.avi/*.mov) format. Some video clips might have compatibility issues when played on your PhotoFrame. Before playing, ensure that these video clips are compatible with your PhotoFrame.
- Ensure that the size of the video files are applicable to your PhotoFrame (For details, see "Product information" in the User Manual).
- Ensure that the video files are not damaged.

Why cannot my PhotoFrame show video files even I could see them in [Browse] mode, and I played them before?

Ensure that [Slideshow Photo Only] is not enabled.

To play video in slideshow mode:

- In slideshow mode, tap [].
- In the displayed option menu, select [Slideshow Photo Only].

3. In the displayed message, select [No] and then tap **OK** to confirm.
- Now you can play these video files in slideshow.

Why does my PhotoFrame not show some of my music files?

The PhotoFrame only supports MP3 (MPEG Audio Layer III) music files. Ensure that these MP3 (MPEG Audio Layer III) music files are not damaged.

Why does the PhotoFrame not go into auto-off status after I set it?

Ensure that you set the current time, auto-off time, and auto-on time correctly. The PhotoFrame automatically turns off its display exactly at the auto-off time. If the time has already passed for the day, it starts to enter auto-off status at the specified time from the next day.

The PhotoFrame is ON but the PhotoFrame does not respond anymore. What can I do?

Ensure that the PhotoFrame is turned on. Then, use a pin to trigger the **RESET** button located on the back to restore the system.



© Royal Philips Electronics NV 2009
All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics NV or their respective owners.

C5G_V2.0 Printed in China



PhotoFrame

SPH8008

SPH8208



Quick start guide

- Get started
- Play
- Setup

What's in the box



Philips Digital PhotoFrame



Charging dock



AC-DC power adaptor



CD-ROM, including
• Digital User Manual
• Philips PhotoFrame Manager
(Software and User Manual)



USB cable



Quick Start Guide

What you also need



AC power socket



Memory card/USB



Computer

1 Get started

Control buttons

- Turn on/off the PhotoFrame
- Access the home screen
- Access the quick menu
- Access option menu

Zoom in/out

- Zoom in an image
Switch modes: Album mode -> thumbnail mode -> slideshow mode -> zoom in 2 times -> zoom in 4 times
- Zoom out an image
Switch modes: Album mode -> thumbnail mode -> slideshow mode -> zoom out 2 times -> zoom out 4 times

Up/down slider

- Scroll up/down at high speed
- Select the upper item
- Increase the volume
- Select the item below
- Decrease the volume

OK

- Display slideshow
- Play/Pause slideshow/video
- Confirm a selection

Left/right slider

- Scroll left/right at high speed
- Select the left item
- Select the right item

Charge the built-in battery

Caution

- Never drop the product. When you drop the product, it will be damaged.


Note

- For the first time use of your PhotoFrame, charge the built-in battery.


Approximate time for charging the built-in battery

Set on	5 hours
Set off	2.5 hours
Standby mode	3 hours

 - 1 Connect the supplied power cord to the supplied charging dock, fix the cord to the cord channel, and then connect the power cord to a power supply socket.



 - 2 Connect the PhotoFrame to the charging dock.

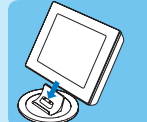



Tip

- During charge, the LED indicators after the control buttons on the front panel blink.
- When the built-in battery is fully charged, the LED indicators stop blinking and you can share your memories with the PhotoFrame everywhere for up to 2 hours.
- Battery life varies with use.

Turn on/off the PhotoFrame

Note

- You can only turn off the PhotoFrame after all copy and save actions are complete.

For the first time use:

- 1 Press and hold for more than 1 second.
→ The language selection menu is displayed.
- 2 Select a language, and then tap **OK** to confirm.
→ The home screen is displayed.



For other times when the on screen language is set before:

- 1 Press and hold for more than 1 second.
→ The home screen is displayed.
- To turn off the PhotoFrame, press and hold for about 2 seconds.

The display indicates the approximate levels of the battery status and the PhotoFrame status as follows:

- 2 Insert an SD card or other storage device into the PhotoFrame firmly.

Icon	Status
	Battery level 0%~19%
	Battery level 20%~39%
	Battery level 40%~59%
	Battery level 60%~79%
	Battery level 80%~100%
	PhotoFrame in dock, AC-powered, not under charge
	PhotoFrame under charge

Transfer photos/music or video files from an SD card

Caution

- Do not remove a storage device from the PhotoFrame when files are transferring from or to the storage device.

For details on other applicable storage device, refer to the User Manual of your PhotoFrame in the supplied CD-ROM.

- 1 Open the cover on the right rear of the PhotoFrame.



→ An option menu is displayed.



- 3 Select **[Transfer]**, and then tap **OK** to confirm.
→ A confirmation message is displayed.
- 4 To select all photos or video/music files, select **[Yes]** and then tap **OK** to confirm. To select some of photos or video/music files, select **[No]** and then tap **OK** to confirm. Tap and **OK** to select photos or video/music files, and then tap to continue the transfer operation.
- 5 Select a destination album on the PhotoFrame, and then tap **OK** to confirm.
→ Photos/video files are transferred to the PhotoFrame.
- To remove a storage device, pull it out from the PhotoFrame.

Transfer by Philips PhotoFrame Manager (recommended way)

Caution

- Do not disconnect the PhotoFrame from the PC when files are transferring between the PhotoFrame and the PC.

Note

- Ensure that you have installed Philips PhotoFrame Manager on your PC. For details, refer to Philips PhotoFrame Manager in the supplied CD-ROM.

- 1 Connect the supplied USB cable to the PhotoFrame and to the PC.



→ Philips PhotoFrame Manager starts automatically.

- 2 Select **[Transfer Photos]** / **[Transfer Music]** / **[Transfer Video]**.
- 3 Under **[My frame photos]** / **[My frame music]** / **[My frame video]**, select a destination album/ folder.



2 Play

Browse photos/video files in album mode

- 1 In the home screen, select **[Browse]** and then tap **OK** to confirm.



→ Photos/video files are displayed in album mode.



- 2 Select an album, and then tap to access the album.



- 3 Tap to browse photos/video files in the album.

Tip

- If you select an album and then tap **OK**, photos/video files in the selected album are displayed in slideshow.

Play photos/video files

Note

- With the PhotoFrame, you can play JPEG/ progressive JPEG photos and most video clips of a digital still camera in M-JPEG (*.avi/*.mov), MPEG-1 (*.mpg), MPEG-4 (*.avi/*.mov/*.mp4), H.263 (*.avi/*.mov) format. Some video clips might have compatibility issues when played on your PhotoFrame. Before playing, ensure that these video clips are compatible with your PhotoFrame.
- Some video clips in a format which is not compatible with your PhotoFrame, like *.3gp/*.3g2 and some others, may be played with no audio output. When a video clip is played with no audio output, the icon is displayed on the screen.
- In album/thumbnail/filmstrip mode, a video file is displayed with the icon on the left top corner.

- 1 In the home screen, select **[Play]** and then tap **OK** to confirm.



→ Photos/video files are displayed in slideshow mode.

During play:

- To view the album where the photo/video in slideshow is saved, tap twice.

- To adjust volume, tap / .
- To pause/resume play, tap **OK**.

To play the previous/next file, tap / .

Play background music

Note

- Only MP3 (MPEG Audio Layer III) music files can be played on the PhotoFrame.

- 1 During photo display, tap .
→ An option menu is displayed.
- 2 Tap repeatedly to select **[Play Background Music]**, and then tap **OK** to confirm.



- 3 Select **[Set Music]**, and then tap **OK** to confirm.



- 4 Select a folder.
- 5 To play all music files in the folder, tap **OK** to confirm.

- To play a single music file, tap to access the folder, select a music file, and then tap **OK** to confirm.

If you have set music before:

- In **[Play Background Music]** menu, select **[Turn On]** and then tap **OK** to confirm.



- Selected music files are played.

To stop music play:

- In **[Play Background Music]** menu, select **[Turn Off]** and then tap **OK** to confirm.

Display collage photos

- 1 In the home screen, select **[Settings]** and then tap **OK** to confirm.



- 2 Select **[Slideshow]**, and then tap **OK** to confirm.



- 3 Select **[Collage]**, and then tap **OK** to confirm.



- 4 Select a collage format, and then tap **OK** to confirm.
- To stop collage display, select **[Settings]** > **[Slideshow]** > **[Collage]** > **[Single]** and then tap **OK** to confirm.

3 Setup

Set up Bluetooth connection

With your PhotoFrame, you can set up **Bluetooth** connection with a device like a mobile phone. Once a device is recognized, it is automatically accepted when it tries to connect with the PhotoFrame.

- 1 In the home screen, select **[Settings]** and then tap **OK** to confirm.



- 2 Select **[Bluetooth]**, and then tap **OK** to confirm.



- 3 Select **[Setup]**, and then tap **OK** to confirm.
- 4 Select **[Bluetooth On]**, and then tap **OK** to confirm.



- To set off **Bluetooth** connection, select **[Bluetooth Off]** and then tap **OK** to confirm.

Tip

- If **Bluetooth** connection on your PhotoFrame is enabled, the **Bluetooth** icon is displayed on the top-right corner of the screen.
- Photos obtained via **Bluetooth** connection are saved in the **Bluetooth** album. You can access or manage the **Bluetooth** album the same way you access or manage other albums on the PhotoFrame.

Set Bluetooth pin code

To keep security, you can set a pin code (from 1 to 16 digits) on the PhotoFrame. The default pin code is 0000.

- 1 In the home screen, select **[Settings]** and then tap **OK** to confirm.

