 




Flip-top cover
Couvercle rabattable
Tapa abatible




Screw cap
Bague
Rosca



Sport spout
Bec Sport
Boquilla deportiva





Magic valve
Valve Magic
Válvula Magic


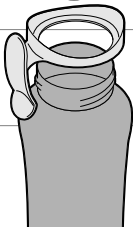


Belt / buggy clip
Attache Ceinture / Poussette
Clip de sujeción

Cup
Tasse
Vaso

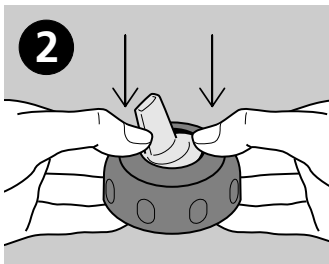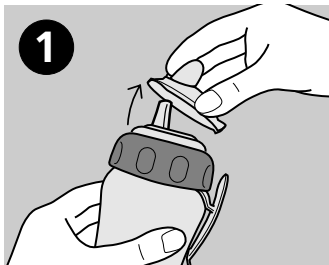

3

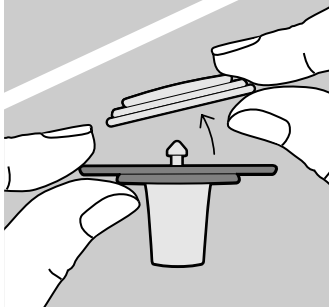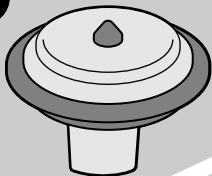

RECOMMENDATIONS FOR USE

- Dishwasher safe. Not suitable for hot or fizzy drinks
- Before and after every use, separate all parts and wash in warm soapy water, then rinse
- Do not use anti-bacterial cleaners as they may cause the plastic to crack
- Please DO NOT FORGET THE MAGIC VALVE – otherwise the cup will leak
- Always ensure valve is properly assembled
- Continuous and prolonged sucking of any fluids other than milk and water will cause tooth decay. Fruit juices and flavoured sugary drinks are not recommended but if they are used, they should be well diluted and only used for limited periods, not constantly sipped
- This product must only be used under adult supervision. Do not allow your child to play with the small parts or walk or run while using the cup

Spare spouts with valves available separately – can be used with all AVENT feeding bottles (Excludes AVENT disposable bottles. Do not use valves with AVENT teats).

AVENT® is here to help

Freephone: **0800 289064** (UK ONLY)

1800 509 021 (IRL ONLY)

1 300 364 474 (AUSTRALIA OUTSIDE NSW ONLY),

(02) 9457 0000 (AUSTRALIA WITHIN NSW ONLY)

e-mail: england@cannonavent.com **www.avent.com**