

PhotoFrame

SPF2007

SPF2107

SPF2207



Quick start guide

1

Get started

2

Use your PhotoFrame

 
3

Setup


PHILIPS

ENG

What's in the box

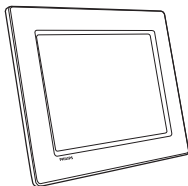

PhotoFrame

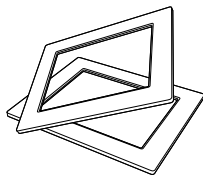 

(For SPF2107 and SPF2207)
Two extra baby frames



Stand



CD-ROM

 
- Digital User Manual
- PC software for Windows



Quick Start Guide



USB cable

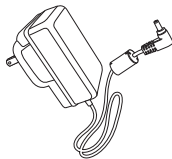

AC-DC power adaptor

1


Get Started

A Install the stand

Control buttons


Button	Function
	Turn on/off the PhotoFrame
	Play slideshow/music/video Change mode for slideshow (For photo/video) Zoom in
	Select the previous/next/ right/left item
OK	(For music/video) Pause or resume play Confirm a selection
	Enter the main menu (For photo/video) Zoom out

 B Install the stand

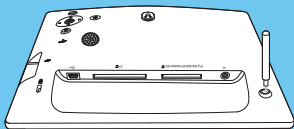


- 1 Insert the stand into the PhotoFrame.
- 2 Screw the stand into the stand hole firmly.

 C Connect the power

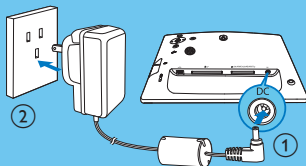

- 1 Connect the power cord to the **DC** socket of the PhotoFrame.
- 2 Connect the power cord to a power supply socket.

 D Connect a storage device

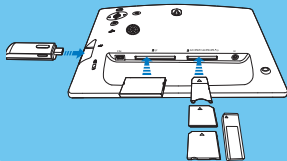

Insert a storage device firmly.

- Compact Flash type I
- Secure Digital (SD)
- Secure Digital (SDHC)
- Multimedia Card
- Multimedia + Card
- xD card
- Memory Stick
- Memory Stick Pro (with adaptor)
- USB memory drive

 
2

Use your PhotoFrame

A Turn on the PhotoFrame

- 1 Press and hold  for more than 1 second.

↳ Help message for control keys is displayed.

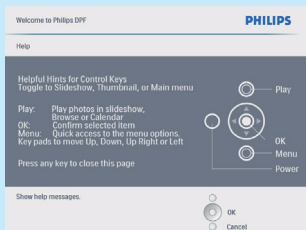

- To access the main menu directly, press .

B Display photos

 Note

You can play only JPEG photos on the PhotoFrame.

- 1 In the main menu, select **[Photos]** and then press **OK** to confirm.
 - ↳ Available photo sources are displayed.
- 2 Select a photo source, and then press **OK** to confirm.
- 3 Select an album, and then press **OK** to confirm.
 - ↳ Photos in the album are displayed in thumbnail mode.
- 4 Press  to start slideshow play.

- In Slideshow mode, press  to display the next/previous photo.
- In Slideshow mode, press  to toggle between slideshow, browse, calendar, and Kiddy Clock (for SPF2107 and SPF2207) mode.

C Play video

 Note

- You can play only M-JPEG video files (in *.avi format) on the PhotoFrame.
- For best compatibility, you can use bundled PC software (for Windows) to transfer video files to your PhotoFrame and play.

- 1 In the main menu, select **[Video]** and then press **OK** to confirm.
- 2 Select a source, and then press **OK** to confirm.
- 3 Select an album/folder, and then press **OK** to confirm.
 - To select files in a sub-folder, repeat step 3.
- 4 Select a file to play.
 - To select all files, press and hold **OK**.
- 5 Press  to start play.

During play,

- To stop, press and hold .
- To pause, press **OK**.
- To resume, press **OK** again.
- To play in full screen, press .
- To stop play in full screen, press .
- To adjust volume, press .

- To select the next/previous file, press ◀/▶.
- To mute play, press and hold ▼ until the 🚫 icon is displayed.
- To change repeat mode, press 🔄 repeatedly.
- To adjust volume, press ▲/▼.
- To mute play, press and hold ▼ until the 🚫 icon is displayed.
- To change repeat mode, press 🔄 repeatedly.

D Play music

≡ Note

You can play only MP3 (MPEG Audio Layer III) music files on the PhotoFrame.

- 1 In the main menu, select **[Music]** and then press **OK** to confirm.



- 2 Select a source, and then press **OK** to confirm.
- 3 Select an album/folder, and then press **OK** to confirm.
 - To select files in a sub-folder, repeat step 3.
- 4 Select a file to play.
 - To select all files, press and hold **OK**.
- 5 Press 🔄 to start play.

During play,

- To pause, press **OK**.
- To resume, press **OK** again.
- To stop, press 🚫.
- To select the next/previous file, press ◀/▶.

E Play background music

≡ Note

You can only play MP3 (MPEG audio layer III) music files on the PhotoFrame.

- 1 In the main menu, select **[Music]** and then press **OK** to confirm.
- 2 Select a source, and then press **OK** to confirm.
- 3 Select an album/folder, and then press **OK** to confirm.
 - To select files in a sub-folder, repeat step 3.
- 4 Select a file, and then press **OK** to confirm.
 - To select all files, press and hold **OK**.
- 5 Press 🔄 to access the menu list.
- 6 Select **[Play at background]**, and then press **OK** to confirm.
- 7 Select **[Yes]**, and then press **OK** to start play.

F

Display collage photos

- 1 In the main menu, select **[Slideshow]** and then press **OK** to confirm.
- 2 Select **[Collage]**, and then press **OK** to confirm.
- 3 Select **[Multi]**, and then press **OK** to confirm.
- 4 Select a layout.
- 5 Press **◀** (Right) to select **[Photo 1]**.
- 6 Press **◀** (Right) again to access the photo source options.
- 7 Select a photo from a photo source.
- 8 Repeat steps 5 to 7 until all photos are selected for the format.

- 9 Press **⏏** to start collage display.

- To stop collage display, select **[Slideshow] > [Collage] > [Single]** and then press **OK** to confirm.



Tip

- If you select a collage layout, the PhotoFrame displays a static collage. If you select **[Random]** format, the PhotoFrame automatically does the random collage base on the optimal layout of photos and displays the collages in slideshow mode.

3

Setup

A

Select photo background

- 1 In the main menu, select **[Slideshow]** and then press **OK** to confirm.
- 2 Select **[Background Color]**, and then press **OK** to confirm.
- 3 Select a background color / **[Auto fit]** / **[RadiantColor]**, and then press **OK** to confirm.
 - ↳ If you select a background color, the PhotoFrame displays a photo with a background color or black bar.
 - ↳ If you select **[Auto fit]**, the PhotoFrame extends a photo to fill the screen with picture distortion.
 - ↳ If you select **[RadiantColor]**, the PhotoFrame extends the color on the edges of a photo that is smaller than the full screen to fill the screen without black bars or aspect ratio distortion.

B Select on-screen language

- 1 In the main menu, select **[Setup]** and then press **OK** to confirm.
- 2 Select **[Language]**, and then press **OK** to confirm.
- 3 Select **[Language Setting]**, and then press **OK** to confirm.
- 4 Select a language, and then press **OK** to confirm.

C Set display auto on/off by time



Note

Ensure that you set the current time and date of the PhotoFrame before you set the auto on/off function.

- 1 In the main menu, select **[Setup]** and then press **OK** to confirm.
- 2 Select **[Smart power]**, and then press **OK** to confirm.
- 3 Select **[Set time]**, and then press **OK** to confirm.
- 4 Select **[Weekday]** / **[Weekend]**, and then press **OK** to confirm.
- 5 Select **[Auto on]** / **[Auto off]**, and then press **OK** to confirm.
 - To cancel **[Auto on]** / **[Auto off]**, select **[Set On/Off] > [Off]**.
- 6 Press **▲** / **▼** / **◀** / **▶** and **OK** to set the time for auto-on/auto-off function, and then press **OK** to confirm.

D Zoom and crop pictures

- 1 In the main menu, select **[Photos]** and then press **OK** to confirm.



- 2 Select a photo source, and then press **OK** to confirm.
- 3 Select an album, and then press **OK** to confirm.
 - ➔ Photos in the album are displayed in thumbnail mode.
- 4 Press **▲** / **▼** / **◀** / **▶** to select a photo, and then press **OK** to confirm.
 - To select all photos displayed on the screen, press and hold **OK** for more than 1 second.
- 5 Press **[Photo Menu]** to access **[Photo Menu]** and manage photos.
- 6 In **[Photo Menu]**, select **[Zoom and Crop]** and then press **OK** to confirm.
- 7 Press **[Zoom In/Out]** to zoom in a photo.
 - Press **[Zoom In/Out]** to zoom out a photo.
- 8 Press **▲** / **▼** / **◀** / **▶** to crop the photo, and then press **OK** to confirm.
- 9 Select **[Yes]**, and then press **OK** to confirm.

3

Setup

E Set time and date

- 1 In the main menu, select **[Setup]** and then press **OK** to confirm.
- 2 Select **[Time and Date]**, and then press **OK** to confirm.
- 3 Select **[Set time]** / **[Set date]**, and then press **OK** to confirm.
- 4 Press **▲** / **▼** / **◀** / **▶** and **OK** to enter the current time/date, and then press **OK** to confirm.

F Create an event reminder

- 1 In the main menu, select **[Setup]** and then press **OK** to confirm.
- 2 Select **[Event reminder]**, and then press **OK** to confirm.
- 3 Select **[New reminder]**, and then press **OK** to confirm.
↳ A keypad is displayed.
- 4 To enter the new name (up to 24 characters), select an alphabet/number and then press **OK** to confirm.
 - To switch between uppercase and lowercase, select **[abc]** on the displayed keypad and then press **OK** to confirm.
- 5 When the name is complete, select **[Enter]** and then press **OK** to confirm.

G Set event time and date Note

Ensure that you set the current time and date of the PhotoFrame before you set time and date for an event reminder.

- 1 In the main menu, select **[Setup]** and then press **OK** to confirm.
- 2 Select **[Event reminder]**, and then press **OK** to confirm.
- 3 Select a reminder, and then press **OK** to confirm.
- 4 Select **[Set time]** / **[Set date]**, and then press **OK** to confirm.
- 5 Press **▲** / **▼** / **◀** / **▶** and **OK** to set the time/date, and then press **OK** to confirm.

H Set on/off a reminder

- 1 In the main menu, select **[Setup]** and then press **OK** to confirm.
- 2 Select **[Event reminder]**, and then press **OK** to confirm.
- 3 Select a reminder, and then press **OK** to confirm.
- 4 Select **[Set]**, and then press **OK** to confirm.
- 5 Select **[On]** to set the reminder on, and then press **OK** to confirm.
 - To set the reminder off, select **[Off]** and then press **OK** to confirm.

Frequently asked questions

Is the LCD screen touch-enabled?

The LCD screen is not touch-enabled. Use the buttons on the back to control the PhotoFrame.

What can I do if a video format is not in the *.avi format?

You can use Philips PhotoFrame Manager to convert the format. For more details, refer to the user manual of Philips PhotoFrame Manager in the supplied CD-ROM.

Can I use the PhotoFrame during its display auto-off periods?

Yes. You can press **⏻** to wake up the PhotoFrame.

Why does not the PhotoFrame go into autooff status after I set it?

Ensure that you set the current time, auto-off time, and auto-on time correctly. The PhotoFrame automatically turns off its display exactly at the auto-off time. If the time has already passed for the day, it starts to enter auto-off status at the specified time from the next day.

The PhotoFrame is ON but the PhotoFrame does not respond anymore. What can I do?

Ensure that the PhotoFrame is turned on. Then, use a pin to trigger the **RESET** button located on the back to restore the system.

Register your product and get support at
www.philips.com/welcome



© Royal Philips Electronics N.V. 2009
All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

Printed in China

QSG_V1.7

