

Register your product
and get support at
www.philips.com/welcome

SRP5107WM/17



EN User Manual

PHILIPS

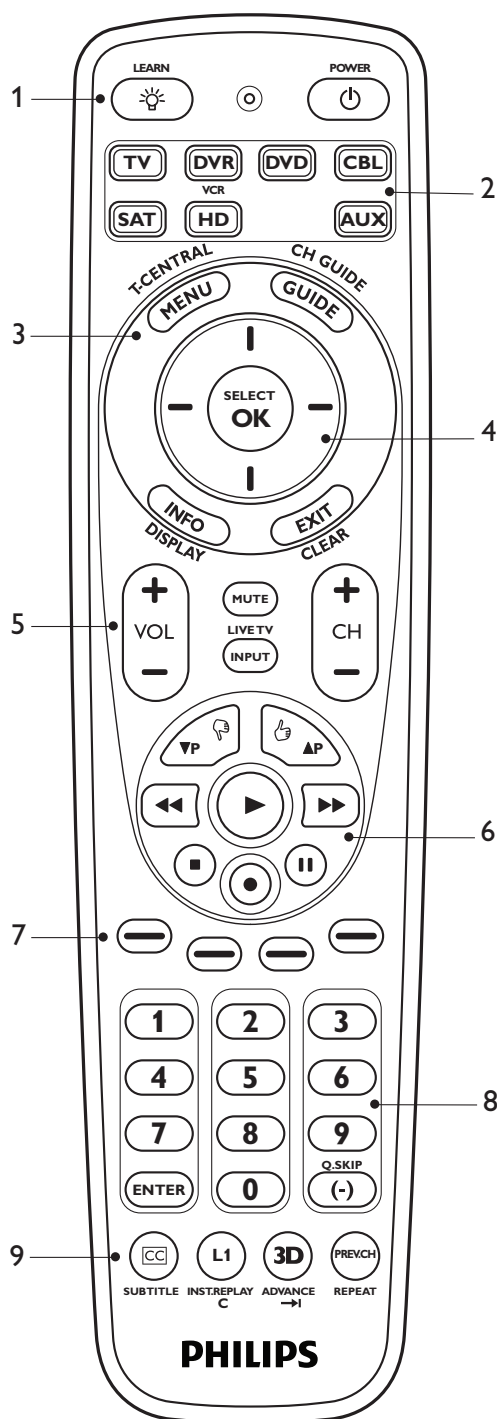


Table of contents

1	Your SRP5107WM.....	3-4
2	Getting started	4-9
2.1	Inserting the batteries.....	4
2.2	Testing the universal remote control	4-5
2.3	Setting up the universal remote control	5-9
3	Using the universal remote control.....	9-15
3.1	Buttons and functions.....	9-12
3.2	Controlling combo devices.....	12-13
3.3	Learning button functions.....	13-14
3.4	Resetting a button to its original function	14
3.5	Resetting the original functions of the remote control (Factory Reset)	15
4	Service and support	15-18
4.1	Frequently asked questions.....	15-17
4.2	Need help?	17
	FCC Compliancy.....	18
	Notice for Canada.....	18
	Helpline	19
	Brand list.....	20-31

1 Your SRP5107WM

Congratulations on your purchase of the Philips SRP5107WM universal remote control.

After setting up the remote control you can operate up to 7 different devices with it.

Simple Setup

The universal remote control comes with the innovative Simple Setup technology.

After setup, the SRP5107WM can operate TV, DVD player/recorder (including Blu-ray player), VCR, DVR, HD, auxiliary equipment and all common Cable, Satellite, DTV and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, TiVo and many more.

Simply follow the instructions in chapter 2.3 to set up the remote control for your devices.

We focused on making this remote control consumer friendly. We have highlighted the DVR (TiVo/Replay) buttons in blue for easy referencing on the keypad.


The remote control is equipped with the most common functions for operating your devices. However, if you miss certain functions, this remote control can 'learn' these functions from the original remote control.

To fully benefit from the support that Philips offers, register your product at:
www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AA type batteries, noting the + and - configuration in the battery compartment.

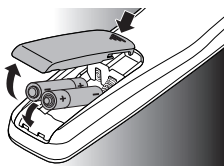

Note

When replacing the batteries, all user settings will be retained in the remote control memory for an unlimited period of time.

2.2 Testing the universal remote control


It is advised to test whether your device(s) already respond(s) to the SRP5107WM before setting it up (see chapter 2.3). The example below instructs you how to do this for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment) which you want to operate using the SRP5107WM.

Example: testing the universal remote control on your TV:

- Switch ON** your TV manually or use the original remote control for this. Tune to channel 1.
- Press the  device selection button to select TV.
 - The red Setup light  blinks. If the Setup light  did not blink, check whether the batteries are properly inserted (see chapter 2.1).



- Check whether the buttons that you need for operating your TV are working. For an overview of the buttons and their functions see chapter 3.1.

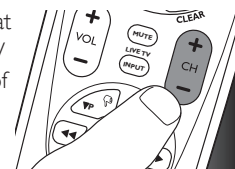

- If the TV responds as it should to all of the button commands, the SRP5107WM is ready for use.
If the device does not respond at all or not to all of the button commands, follow the instructions in chapter 2.3.

2.3 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment) which you want to operate, using the universal remote control.


The remote control can be set up to operate any 7 of the following devices:

Device name	Description
TV	Traditional TV, LCD/Plasma TV, flat panel TV, projection TV and 3D TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos
DVR	Digital/Personal Video Recorder (DVR/PVR), TiVo, DVR part of DVR/SAT, DVR/Cable and DVR/DVD combos
DVD	DVD player/recorder (DVDR/DVD-RW), DVD/Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV/DVD, TV/VCR/DVD, DVR/DVD and VCR/DVD combos
CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV), Digital Television (DTV), TiVo, SAT/Digital TV (DTV)/WebTV, DTV/Advanced Television Systems (ATSC) - Digital To Analog Converter; CBL part of DVR/Cable combos and SAT part of DVR/SAT combos
VCR	Video cassette player/recorder; VCR part of TV/VCR, TV/VCR/DVD and VCR/DVD combos


AUX	Auxiliary equipment: CD, Audio System, Laser Disc, Digital Picture Frame, Media Center PC, Home Automation, Home Theater in a Box (HTIB)
HD	Any of the above listed devices

Example: setting up the universal remote control to operate your TV:

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.
- 2 **Press and hold** the  device selection button **for 5 seconds** until the red Setup light  blinks.
 - The remote control is now in setup mode.

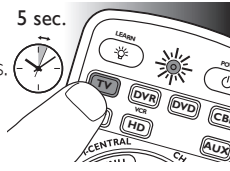

- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual. A 4-digit code is shown for each brand.

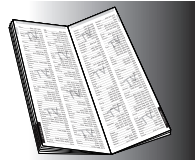


Use the digit buttons to enter the code for your brand (e.g. Philips, **2 1 9 5**).

- If the red Setup light  turns off, an invalid code was entered. In this case, try again.



- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.
 - This step normally takes between 5 and 60 seconds.


In extreme circumstances this step can take up to 15 minutes.

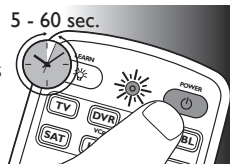

- 5 **Switch ON** the TV.
Try out the buttons that you need for operating it. Try, for example, if the - CH + and digit buttons function properly.
 - If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.3.3.



- 6 Press the  device selection button **twice** to finish setup.
 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

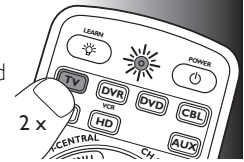

! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*
- *Alternatively you can set up the universal remote control with the learn feature as described in chapter 3.3.*

2.3.1 Setting up the remote control for other devices (DVR, DVD player/recorder; Cable/Satellite box, DTV, VCR, HD and auxiliary equipment)

- 1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player/recorder or a video cassette in the VCR.
- 2 Then follow steps 2 to 6 of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button: , , , ,  or .

2.3.2 Setting up the remote control for combo devices

In most cases you will have to set up the remote control for each part of the combo device. Only in some cases a single code-set will operate all parts of the combo.

For example: for a TV/DVD combo you will first have to set up the remote control for TV (with the  button) and then for DVD (with the  button or any other device selection button) in order to operate both parts of the combo. For this refer to chapter 2.3.

2.3.3 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.

Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup


- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player; make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

After initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player; make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Select the device that you wish to operate (e.g. DVD).
Press the  device selection button to select DVD.

- 3 Keep buttons  and  pressed **simultaneously for 5 seconds**.
 - The red Setup light  lights up. The remote control is now in setup mode.

- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

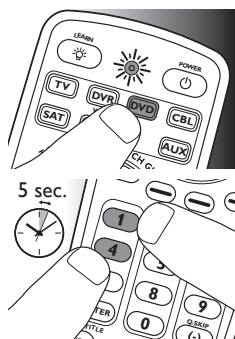

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP5107WM (e.g. Info/Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP5107WM.

- 1   

LEARNused to setup learning functions.


BACKLIGHT turns the backlighting on/off.

SETUP light.....lights up when a remote control command is being sent, when you select a device and when the remote control is in setup or learn mode.


POWER switches the selected device on/off.

- 2   device selection buttons. Select the device to be operated.


  

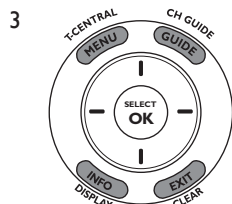


MENU menu on/off.
GUIDE electronic program guide.
INFO on-screen channel information.
EXIT exits/clears on-screen menu displays.

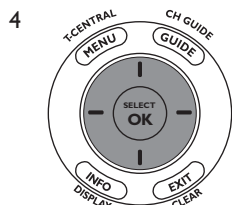

 SELECT selects menu items for the device you are controlling.
OK confirms your selection.
(I) UP/DOWN,
(-) LEFT/RIGHT cursor up, down, left, right in a menu.



+ VOL - increases/decreases the volume level of the device, normally TV.
MUTE turns the sound of the device (normally TV) off/on while the picture remains.
INPUT selects available source inputs (Antenna, Cable, etc.).
+ CH - next / previous channel.

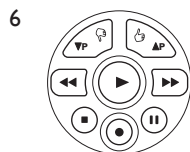

▼P ▲P previous (▼P) / next (▲P) page/track in various modes.
◀ rewind.
▶ play.
▶▶ fast forward.
■ stop.

● record.
II pause.

7 **⏮** **⏪** **⏩** **⏭** context sensitive buttons, ordered following the requirements for cable boxes. A - Yellow, B - Blue, C - Red, D - Green.



Digit buttons for direct channel / track selection.

ENTER used after direct channel selection. Some devices require **ENTER** to be pressed after channel selection.

(-) selects between one and two-figure channel numbers.



CC TV Closed Caption (if your TV has this feature).
L1 stores learned button commands.
3D changes TV / DVD mode to 3D.
PREV CH returns to the previously selected channel.

Note

For some TV brands/types, the **POWER** button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

3.1.1 Dedicated DVR functions - labeled in blue (*TiVo/Replay)

When you select DVR mode by pressing the **DVR** button, all blue DVR function buttons will become active.

3 T.CENTRAL TiVo button for TiVo Central.

CH GUIDE TiVo Live Guide - the TiVo Program Guide.

DISPLAY brings up the Channel Banner.

CLEAR exits/clears on-screen menu displays.

5 **LIVE TV INPUT** goes to Live TV broadcast.

- 6 thumbs Up/Down. Set your Thumbs ratings.
- P ▼ and P ▲ select previous (▼)/next (▲) page in Replay TV guides and menus.
- 8 skips 30 seconds of a recorded or delayed show.
- 9 turns the subtitles on/off.
- replays the last 7 seconds (Replay) or 8 seconds (TiVo) of a program.
- catches you up to the live broadcast.
- repeats current chapter/track.

* TiVo and Replay are registered trade marks of their respective owners.

3.2 Controlling combo devices

Some combo devices (e.g. TV/DVR, TV/DVD, DVD/DVR, etc.) have separate buttons on the original remote control to select the part of the combo device to be controlled. For example, if your combo device is a DVD/DVR then its original remote control might have separate DVD and DVR buttons for selection of the combo part you wish to operate. The equivalent button functions can be found on your Philips remote control by using the device selection buttons.

Example for a DVD/DVR combo:

- 1 Set up the remote control for each part of the combo as described in chapters 2.3 and 2.3.2. In this example for both DVD and DVR.
- 2 Press the device selection button **twice** to select the DVD part of the combo.



Press the device selection button **twice** to select the DVR part of the combo.



Notes

- This method can be applied similarly to all combo devices (TV/DVR, TV/VCR, TV/DVD, etc.) and is available for all device modes.
- Note that this feature is not supported by all codes.


3.3 Learning button functions

If you miss certain functions from your original remote control on the SRP5107WM, the SRP5107WM can learn these functions. You can store a function under any of the available buttons, except under the button. Any function already stored under a button will be deleted. The SRP5107WM is equipped with one dedicated button for learning additional functions: .

- 1 Make sure that you have the original remote control at hand.
- 2 Select the desired device (e.g. DVD). Press the device selection button to select DVD.



- 3 Place both remote controls on a flat surface (like a table) and aim them head-to-head with about 5 - 10 cm in between.

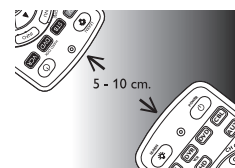

- 4 Keep the button and the button you wish to learn on the SRP5107WM (e.g. the) **pressed simultaneously for 5 seconds**, until the red Setup light lights up.
 - The remote control is now in learn mode.
- 5 Press **and hold** the button that you wish to learn on the original remote control until the red Setup light blinks twice and then goes out **to confirm that learning was successful**.
 - The remote control has now learned the new function.



Note

- It may occur that learning a button function fails the first time. The red Setup light  will then give **4 short blinks** and go out. In this case, please try again.
- If you keep having trouble learning button functions, check the batteries in both SRP5107WM and original remote control and replace if necessary.
- It may also be that the remote control learn memory is full (a total of about 60 buttons can be learned). In this case you can reset one or more buttons to their original functions in order to create memory space. For this, see chapter 3.4.

3.4 Resetting a button to its original function

If an improved button (see chapter 2.3.3) still does not function as expected, you can always reset the button to its original function.

When resetting a button to its original function, any learned function stored under the button will be deleted.

- In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.
 - The remote control is now in setup mode.
- Press digit buttons **9**, **9** and **6**, in that order.
 - After each button press the red Setup light  blinks once.
- Press the button that you wish to reset **twice**.
E.g. the **►►** button.
 - After each button press the red Setup light  blinks once.
 - The red Setup light  will blink one more time to confirm that the button was successfully reset to its original function.
 - The button can now also learn a new function, if desired.

3.5 Resetting the original functions of the remote control (Factory Reset)

In some cases it may be useful to reset the original functions of the remote control.

E.g. if the remote control memory is full while you wish to set it up for a specific device or learn an extra function to it. The remote control will then be reset to the default factory settings and all user settings will be deleted.

- In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.
 - The remote control is now in setup mode.
- Press digit buttons **9**, **8** and **1**, in that order.
 - After each button press the red Setup light  blinks once.
 - The red Setup light  will blink one more time to confirm that the original functions of the remote control were successfully reset. Any extra functions have been deleted.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

Setup

I cannot enter setup mode.

- Battery level too low or battery lifetime came to an end.
- Replace the batteries. See chapter 2.1.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common brands of TV, DVR, DVD player/recorder, Cable/Satellite box, DTV/VCR, HD and auxiliary equipment.

- You will find a complete brand list on page 20-31 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.3.3) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.3.3.

How do I set up the remote control for combo devices (TV/VCR, TV/DVD, DVD/VCR, etc)?

Some combo devices require you to set up two different device selection buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV/DVD combo.

Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

The device I want to operate does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.3.3.
- Try learning button functions from the original remote control. See chapter 3.3.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory during battery replacement.



Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP5107WM, you can always contact us.

When calling our helpline, make sure to have the SRP5107WM at hand when you call, so that our operators can help you determine whether the SRP5107WM is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP5107WM/17.

Date of purchase:

...../...../.....
(day/month/year)

For online support go to:

www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.

Helpline

Country

United States of America / Canada

Phone number

001-888-744-5477

Helpline

Brand list

A		Amtron.....0141
A mark.....4544	(DB1)	AMW.....0143
A.R. Systems.....0012	(DB2)	ANABA.....0145 (DB1)
ABC.....0013		Anam.....0146
Abex.....0014		Anam National.....0147
ABS.....0016		Anglo.....0151 (DB2)
Accele Vision.....4194	(DB1)	Anitech.....0154 (DB2)
ACCESS HD.....3554		Ansonic.....0156 (DB2)
Acer.....0028		ANTRONIX.....0159
ACESONIC.....4370		AOC.....0165
Acura.....0036	(DB2)	Aomni.....3555
ADC.....0040	(DB2)	Apex.....3691
ADCOM.....0041		Apex Digital.....0170
ADELPHIA.....4195		Apple.....0172
Admiral.....0046		Arcam.....0179 (DB2)
ADTH.....4371		Archer.....0180
Advent.....0054		Ardem.....0184 (DB2)
Adventura.....0055		Aristona.....0192 (DB2)
Adyson.....0058	(DB2)	Armstrong.....0195 (DB1)
Afreey.....0062		Arris.....4931 (DB1)
Agashi.....0063	(DB2)	ARTEC.....4016
Aiko.....0069		Asberg.....0205 (DB2)
Aim.....0070	(DB2)	ASHA.....0209 (DB1)
Aiwa.....0072		Aspect.....4374
Akai.....0074		ASPIRE.....4233
Akiba.....0078	(DB2)	Astar.....0218
Akito.....0082	(DB2)	Asuka.....0227 (DB2)
Akura.....0083	(DB2)	AT&T.....3453
Alaron.....0085		Atlantic.....0233 (DB2)
Alba.....0086	(DB2)	Atori.....0237 (DB2)
Albatron.....0087		A-TREND.....0011
Alco.....0092	(DB2)	Audio Authority.....0245
Alienware.....0099		AUDIO DYNAMICS
ALLEGRO.....0103		0248
Allorgan.....0105	(DB2)	AUDIO TECHNICA
Allstar.....0108	(DB2)	4780
ALPHA DIGITAL...4014		Audiosonic.....0264 (DB2)
AMC.....0121	(DB2)	Audioton.....0266 (DB2)
America Action.....0123		Audiotronic.....0267 (DB2)
AMERICAN HIGH0125	(DB1)	Audiovox.....0268 (DB2)
AMERICAST.....0127		Autovox.....0280
AMES.....4372		Aventura.....0287
Amphion Media Works		Awa.....0296 (DB2)
.....0135	(DB2)	Axion.....0299
AMPLICA.....0136		
Amplivision.....0138	(DB2)	B
Ampro.....0139		B & K.....0304
Amstrad.....0140	(DB2)	Baird.....0311 (DB2)
AMTC.....4015		Bang & Olufsen.....0314

B

B & K.....	0304
Baird	0311 (DB2)
Bang & Olufsen.....	0314

Basic Line.....	0325	(DB2)		0467	(DB1)
Bastide.....	0327	(DB2)	CALIX.....	0468	(DB1)
Baur.....	0331	(DB2)	Candle.....	0480	
Bazin.....	0335	(DB2)	CANON.....	0481	(DB1)
BEAUMARK.....	0340	(DB1)	Capehart.....	0484	
Beko.....	0346	(DB2)	CAPETRONIC.....	0485	
Belcor.....	0348		Carad.....	0488	(DB2)
BELL.....	4376		Carena.....	0489	(DB2)
Bell & Howell.....	0350		Carnivale.....	0491	
BELL EXPRESSVU.....	0352		Carrefour.....	0492	(DB2)
BELL SOUTH.....	0353		Carver.....	0494	
BenQ.....	0359		Cascade.....	0496	(DB2)
Beon.....	0361	(DB2)	Casio.....	0499	
Best.....	0364	(DB2)	Catha.....	4094	(DB2)
Bestar.....	0368	(DB2)	Cathay.....	0501	(DB2)
BGH.....	3507		CAVS.....	0503	
Binatone.....	0378	(DB2)	CCE.....	0504	
BLAUPUNKT.....	0390		Celebrity.....	0509	
BLUE RIDGE			Celera.....	0510	
COMMUNICATIONS			Centrios.....	0517	
.....	4982	(DB1)	Centurion.....	0520	
Blue Sky.....	0395		CENTURY.....	0521	
BLU-RAY.....	4377		Cetronic.....	4380	
Bodysonic.....	4378		Changhong.....	0530	
Boots.....	0405	(DB2)	CHANNEL		
Bose.....	0407		MASTER.....	0531	
BOSS.....	4197		Chaparral.....	0533	(DB1)
BOSTON ACOUSTICS			CHARTER.....	4239	
.....	0411	(DB1)	CHEYENNE.....	4381	
BPL.....	0413	(DB2)	Cimline.....	0552	(DB2)
Bradford.....	0414		Cineral.....	0559	
BRIGHT HOUSE.....	4236	(DB1)	CINEVISION.....	0562	
Brillian.....	0422		CITECH.....	4382	
Brinkmann.....	0423	(DB2)	Citizen.....	0567	
Brionvega.....	0424	(DB2)	City.....	0569	(DB2)
Britannia.....	0425	(DB1)	Clairtone.....	0573	
Brockwood.....	0430		Clarion.....	0575	
Broksonic.....	0432		Clarivox.....	0576	(DB2)
Buffalo.....	0442		Classic.....	0580	
Bush.....	0445		Clatronic.....	0581	(DB2)
Byd:sign.....	0448		CLEARMAX.....	0584	
			Cip.....	4383	
			Cip Classic.....	4383	
C			CMS.....	0590	(DB2)
CABLE ONE.....	4237	(DB1)	CMS Hightec.....	0591	(DB2)
CABLETENNA.....	0456		Coby.....	0597	
CABLEVIEW.....	0458		COGECO.....	4385	
CADVISION.....	4238		Colortyme.....	0601	
CADENCE.....	4379		Colour Voice.....	0602	(DB1)
California Audio Labs					

COLT.....0603 (DB1)	Diamond.....0747 (DB2)
COMCAST.....3456	Diamond Vision.....0748
Commercial Solutions	Digatron.....0751 (DB2)
.....0615	Digiline.....0759 (DB2)
COMTRONICS.....0623	Digimate.....3807
CONCEPT.....0624	Digistar.....0767
Concerto.....0625	DIGITAL DÉCOR...4389
Concierge.....4386	Digital Lifestyles.....3567
Concorde.....0626 (DB2)	DIGITAL LIVING ...4390
Condor.....0627 (DB2)	DIGITAL MUSIC
Conia.....0628	EXPRESS.....4391
Contec.....0635	Digital Stream.....3809 (DB1)
CONTEL.....0636	Digitrex.....0782
COOLSAT.....0643	Digiwave.....0784 (DB1)
Cornea.....4387	Digix.....3520
COSHIP.....0646	Dimensia.....3569
Cosmel.....0647 (DB2)	DIRECTOR.....0793
COX.....4200	DirecTV.....0794
Craig.....0650	DISH NETWORK
CRITERION.....0654	SYSTEMS.....3966 (DB1)
Crosley.....0655	DISHPRO.....0800
Crown.....0658	Disney.....0803
CS Electronics.....0663 (DB2)	Dixi.....0807 (DB2)
CTX.....0665	DRAKE.....0825
Curtis.....0666	DREAMBOX.....4392
Curtis Mathes.....0667	Drean.....0832 (DB2)
CXC.....0670	DRIVE.....4393
CyberHome.....0672	DSE.....0833 (DB2)
CYBERNEX.....0673 (DB1)	DTS.....0837 (DB2)
CyberPower.....0674	Dual.....0838
Cybervision.....4388	Dukane.....4394
Cytron.....0680	Dumont.....0840

D		Dux.....0843 (DB2)
Danichi.....3914 (DB2)		DVD2000.....0844 (DB1)
Dansai.....0699 (DB2)		D-Vision.....0684 (DB2)
Dawa.....0707 (DB2)		Dwin.....0848
Daytron.....0710		DX ANTENNA.....0849
DBX.....0712 (DB1)		Dynasty.....4395
Decca.....0718 (DB2)		DYNATECH.....0854 (DB1)
Deitron.....0722 (DB2)		Dynatron.....0855 (DB2)
Dell.....0725		Dynex.....3476
DELPHI.....0726		
Denon.....0731		
Denver.....0733 (DB2)	E	EASTERN.....0859
DENZEL.....0734		ECHOSPHERE.....4396
DESAY.....0737		ECHOSTAR.....0866
Desmet.....0738 (DB2)		Eclipse.....0867 (DB2)
Diamant.....0746 (DB2)		EIGERVISION.....4397

Elbe.....0880	(DB2)	Frontech.....1042	(DB2)
Electroband.....0888		FUJJ.....1047	(DB1)
Electrograph.....0889		Fujitsu.....1052	
Electrohome.....0890		Fujitsu General.....1053	(DB2)
ELECTROPHONIC		Funai.....1056	
.....0893	(DB1)	Futuretech.....1064	
Elektra.....0896			
Element.....3477			
ELG.....0900	(DB2)	G Vision.....4400	
Elin.....0902	(DB2)	Galaxi.....1068	(DB2)
Elite.....0903	(DB2)	Galaxis.....1069	(DB2)
Elite Video.....4398		GARRARD.....1075	
Elta.....0910		Gateway.....1076	
Emerson.....0917		GBC.....1078	(DB2)
Emprex.....0922		GC ELECTRONICS	
EMTEC.....4363		1080	
Envision.....0933		GE.....1081	
Epson.....0937		GE HOMEMINDER	
Erres.....0942	(DB2)	4401	
ESA.....0943		GEC.....1083	(DB2)
ESC.....0945	(DB2)	Geloso.....1087	(DB2)
ESCIENT.....0946		GEMINI.....1089	
Etron.....0949	(DB2)	GENERAL	
Eurofeel.....0954	(DB2)	COMMUNICATIONS	
Euroman.....0956	(DB2)	4983	(DB1)
Europa.....0957	(DB2)	GENERAL	
Europhon.....0959	(DB2)	INSTRUMENT.....1093	(DB1)
EVERQUEST.....0971		General Technic.....1095	(DB2)
EXPRESSVU.....0977		Genexxa.....1097	
Exquisit.....0978	(DB2)	GFM.....3820	
		Giant.....1113	(DB2)
		Gibraltar.....1114	
		GLOBECAST.....4402	
		Go Video.....1126	
		GoldHand.....1136	(DB2)
		Goldline.....1138	(DB2)
		GoldStar.....1140	
		Goodmans.....1142	(DB2)
		GPM.....1149	(DB2)
		GPX.....1150	
		Gradiente.....1151	
		Graetz.....1152	(DB2)
		Granada.....1154	(DB2)
		Grandin.....1156	(DB2)
		GREENHILL.....1157	
		GRIDLINK.....3824	
		Gronic.....1160	(DB2)
		Grundig.....1162	
		Grundy.....1163	

Grunpy.....1165
Guestvision.....4403

H

HAAZ.....1172
Haier.....1175
Halifax.....1179 (DB2)
Hallmark.....1180
HAMLIN.....1182
Hampton.....1183 (DB2)
Hanns.G.....3478
Hannspree.....1189
Hanseatc.....1190 (DB2)
Hantarex.....1192 (DB2)
Hantor.....1193 (DB2)
Harley Davidson.....1197
Harman/Kardon.....1198
Harvard.....1202
Harwood.....1204
Hauppauge.....1206
Havermy.....1208
HCM.....1210 (DB2)
HD-DVD.....4404
HEADQUARTER...1214
Helios.....1219
Hello Kitty.....1221
Hema.....1222 (DB2)
Hewlett Packard.....1229
Higashi.....1234 (DB2)
Highline.....1236 (DB2)
Hikona.....1237
HiLine.....3533 (DB2)
Hinari.....1243 (DB2)
HI-Q.....1231
Hisense.....1249
Hitachi.....1251
Hiteker.....1255
Hitsu.....1257 (DB2)
Hornophon.....1277 (DB2)
Howard Computers
.....1281
HP.....1283
Huanyu.....1292 (DB2)
HUGHES.....4205
HUGHES NETWORK
SYSTEMS.....1296 (DB1)
Humax.....1298
Hush.....1304
Hygashi.....1308 (DB2)

Hyper.....1309 (DB2)
Hypson.....1312 (DB2)
Hyundai.....1315

I

Iberia.....1320 (DB2)
iBUYPOWER.....1322
ICE.....1324 (DB2)
ICeS.....1325 (DB2)
iHome.....3480 (DB2)
I-Inc.....3462
iLive.....1339 (DB2)
ILLICO.....4206
iLo.....1341
Ima.....1342
Imperial.....1346 (DB2)
Indiana.....1350 (DB2)
Infinity.....1352
InFocus.....1353
Ingersol.....1355 (DB2)
Initial.....1356
INKEL.....1357
Inno Hit.....1358 (DB2)
INSIGHT.....1367 (DB1)
Insignia.....1368
INSTANT REPLAY
.....3580
Integra.....1370
Inteq.....1373
Interbuy.....1376 (DB2)
Interfunk.....1377 (DB2)
Internal.....1379 (DB2)
International.....1380 (DB2)
Intervision.....1386 (DB2)
iPOD.....4405
IR.....4110 (DB2)
Irradio.....1396 (DB2)
Isukai.....1402 (DB2)
iSymphony.....3755 (DB2)
ITC.....1404 (DB2)
ITS.....1405 (DB2)
ITV.....1408 (DB2)

J

Janeil.....1414
JASCO.....1415
JBL.....1420
JC Penney.....4208
JCB.....1421

JCL.....4209
Jensen.....1429
JERROLD.....1431
JVC.....1464
jWin.....1465

K

Kaisui.....1471 (DB2)
Kamp.....1475 (DB2)
Karcher.....1484 (DB2)
Kawasaki.....1488
Kawasho.....1489
Kaypani.....1490
KDS.....1494
KEC.....1496
Kendo.....1500 (DB2)
Kenwood.....1507
KIC.....1512 (DB2)
KINGBOX.....4406
Kingsley.....1520 (DB2)
KISS.....1524
Kiton.....1525 (DB2)
KLH.....1529
Kloss.....1532
Kloss Novabeam...4210
Kneissel.....1535 (DB2)
KNOLOGY.....4326 (DB1)
KODA.....1539
KODAK.....1540
Kogi.....4407
Kolster.....1543 (DB2)
Konka.....1548
Korpel.....1552 (DB2)
Kosmos.....1557 (DB2)
KOSS.....1558
KRELL.....1569
KTV.....1572
Kurazai.....4408
KXD.....1581
Kyoto.....1585 (DB2)

L

Lasonic.....1600
Layco.....4117 (DB2)
Lecson.....1606 (DB2)
Legend.....1609
Lenco.....1615 (DB2)
Lenoir.....1617 (DB2)
Lenoxx.....1618

Leyco.....1627 (DB2)
LG.....1628
Liesenk & Tter.....1630 (DB2)
Liesenkotter.....1631 (DB2)
Lifetec.....1633
Linksys.....1640
LINN.....1641
Liquid Video.....1644
LITEON.....1645
Lloyd's.....1648
Lodgenet.....1658
Loewe.....1660
Loewe Opta.....3540 (DB2)
Logik.....1661
Luce.....1672
Luma.....1674 (DB2)
Lumatron.....1676 (DB2)
LUTRON.....1679
Lux May.....1680 (DB2)
Luxman.....1682
Luxor.....1683 (DB2)
LXI.....1686

M

MACOM.....1693
Madison.....1698 (DB2)
MAG.....1701
Magnafoon.....1703 (DB2)
Magnasonic.....1704
Magnavox.....1706
Magnin.....1708
Magnum.....1709 (DB2)
Majestic.....1713
Manesth.....1718 (DB2)
Manhattan.....1719 (DB2)
Marantz.....1724
Mark.....1731 (DB2)
MARTA.....1735
Masuda.....1744 (DB2)
Matsui.....1750 (DB2)
Matsushita.....1751
Maxent.....1757
MCE.....1766
McIntosh.....1767 (DB2)
MCS.....1770
Media Center PC...1777
MEDIACOM.....1780 (DB1)
Mediator.....1784 (DB2)
Medion.....1787

Medison.....	1788	(DB2)
Megapower.....	1791	
Megatron.....	1795	
MEI.....	1796	
Melectronic.....	3654	(DB2)
Memorex.....	1800	
Memphis.....	1802	(DB2)
Mercury.....	1804	(DB2)
MERIDIAN.....	1805	
METROCAST.....	4984	(DB1)
Metz.....	1810	(DB2)
MGA.....	1811	
MGN TECHNOLOGY.....	1812	
MICROGEM.....	4024	(DB1)
Micromaxx.....	1822	(DB2)
Micromega.....	1824	(DB2)
Microsoft.....	1826	
MICROVISION.....	4409	
Microyal.....	4410	(DB1)
Midcontinent.....	4596	(DB1)
Midland.....	1831	
Minato.....	1835	(DB2)
Mind.....	1837	
Minoka.....	1840	(DB2)
MINOLTA.....	1841	
Mintek.....	1845	
Minutz.....	1847	
Misakai.....	4411	
MISSION.....	1852	
Mitsubishi.....	1855	
Mivar.....	1857	(DB2)
Monivision.....	1872	
Montgomery Ward.....	4212	
Morgans.....	3970	(DB2)
Moteva.....	4412	
Motorola.....	1878	
MOVIE TIME.....	1880	
MOXI.....	4581	(DB1)
MTC.....	1889	
Multitec.....	1906	(DB2)
Multitech.....	1907	
MultiVision.....	1909	(DB1)
Murphy.....	1911	(DB2)
MUSTEK.....	1916	
Myron & Davis.....	4413	
Myryad.....	1922	(DB2)

N

NAD.....	1926	
Naiko.....	1930	(DB2)
NAKAMICHI.....	1932	
Nakimura.....	1933	(DB2)
National Panasonic.....	4661	(DB2)
NEC.....	1950	
Neckermann.....	1951	(DB2)
NEI.....	1952	(DB2)
NELSON.....	4414	(DB2)
NEO.....	3947	
NEOSAT.....	4415	
NESA.....	1959	
NET.....	1961	
Netgear.....	1964	
Netsat.....	1966	(DB2)
NetTV.....	1967	(DB1)
Neufunk.....	1970	(DB2)
New Tech.....	1979	(DB2)
Nexus Electronics.....	3948	
NEXXTECH.....	1990	
Nicamagic.....	1994	(DB2)
Nikkai.....	1998	(DB2)
Nikkei.....	1999	(DB1)
Nikko.....	2000	
Niko.....	2002	
Niles.....	2004	(DB2)
Niveus Media.....	2012	
Noblex.....	2013	
Nobliko.....	2014	(DB2)
Norcent.....	2020	
Nordic.....	2021	(DB2)
Nordmende.....	2022	(DB2)
Normerel.....	2024	(DB2)
Norsat.....	2025	(DB1)
Northgate.....	2027	
Norwood Micro.....	2029	
NOVAPLEX.....	2034	
Novatronic.....	2035	(DB2)
Now TV.....	2039	(DB1)
NSC.....	2042	
NSM.....	2043	
NTC.....	2045	
NuVision.....	2053	
Nyko.....	3759	

O

OAK.....	2059	
Okana.....	4122	(DB2)
Okano.....	2065	(DB2)
Olevia.....	2067	
On Command.....	2077	
Onking.....	2084	
ONKYO.....	2085	
Onwa.....	2087	
Opera.....	2090	(DB2)
Oppo.....	2092	
Optimus.....	2095	
Optoma.....	2097	
Optonica.....	2099	
Orbit.....	2103	(DB2)
Orion.....	2111	
ORITRON.....	2112	
Online.....	2113	(DB2)
Osaki.....	2118	(DB2)
Osio.....	2121	(DB2)
Osume.....	2123	(DB2)
Otic.....	2125	
Otto Versand.....	2126	(DB2)

P

PACE.....	2134	
Pacific.....	2135	
Pael.....	2140	(DB2)
Palladium.....	2145	(DB2)
Palsonic.....	2147	(DB2)
Panama.....	2149	(DB2)
Panasonic.....	2153	
Panavision.....	2154	(DB2)
PANDIGITAL.....	3868	
PANSAT.....	2158	
PARAGON.....	2161	
PARK.....	3951	
Pathe Cinema.....	2168	(DB2)
Pausa.....	2171	(DB2)
Penney.....	2182	
PENTAX.....	2183	
Perdio.....	2185	(DB2)
Perfekt.....	2186	(DB2)
Petters.....	2189	
Philco.....	2192	
Philharmonic.....	2194	(DB2)
Philips.....	2195	
PHILIPS MAGNAVOX.....	3715	(DB1)
Phoenix.....	2199	(DB2)
Phonola.....	2201	(DB2)
Phonotrend.....	2202	(DB2)
PHOTOSHARE.....	4416	
Pilot.....	2207	
Pinnacle Systems.....	2210	(DB1)
Pioneer.....	2212	
Pionier.....	2213	(DB2)
Piva.....	4417	
Planar.....	2217	
Plantron.....	2219	(DB2)
Playsonic.....	2224	(DB2)
Polaroid.....	2230	
POLK AUDIO.....	2232	
Poppy.....	2236	(DB2)
Portland.....	2238	
POWER ACOUSTIK.....	4418	
Powerpoint.....	2241	(DB2)
Precision.....	2244	
Priceclub.....	2252	(DB1)
Prima.....	2253	
PRIMESTAR.....	2257	
Princeton.....	2258	
Prism.....	2261	
Profekt.....	4126	(DB2)
Profex.....	2269	(DB2)
Profitronic.....	2273	(DB2)
Proline.....	2274	
PROSAT.....	2278	
Proscan.....	2279	
Prosonic.....	2282	
PROTEC.....	2283	
Protech.....	2284	(DB2)
Proton.....	2288	
Prottron.....	2289	
Proview.....	2290	
ProVision.....	2291	(DB2)
Pulsar.....	2296	
Pye.....	2302	(DB2)
PYLE.....	2303	
Pymi.....	2304	(DB2)

Q

QUARTER.....	2318	
QUARTZ.....	2319	
Quasar.....	2320	
Quelle.....	2322	(DB2)

R

Radiava.....	2329 (DB2)	Samtron.....	2450
Radio Shack.....	3547	Sandra.....	2454 (DB2)
Radiola.....	2330 (DB2)	Sangean.....	3490 (DB2)
Radiomarelli.....	2331 (DB2)	SANKY.....	2456
RadioShack.....	2333 (DB2)	SANSONIC.....	3881
Radiotone.....	2334 (DB2)	Sansui.....	2458
RADIX.....	2335	Santeca.....	4420
RANDEX.....	2343	Sanyo.....	2462
RCA.....	2351	SBR.....	2492 (DB2)
RCN.....	4419	Sceptre.....	2498
Realistic.....	2354	Schneider.....	2501 (DB2)
Recor.....	2359 (DB2)	SCIENTIFIC ATLANTA	
Rectiligne.....	2362 (DB2)		2503
Redstar.....	2366 (DB2)	Scimitsu.....	2505
Reflex.....	2368 (DB2)	Scotch.....	2506
REGAL.....	2370 (DB1)	Scott.....	2508
REGENCY.....	2371	Sears.....	2514
REGENT.....	2372	SEG.....	2522
REMBRANDT.....	2375	SEI.....	2524 (DB2)
REOC.....	2379	Sei-Sinudyne.....	2525 (DB2)
REPLAYTV.....	2380	Selectron.....	4421
RevolutionHD.....	3503	Semp.....	2530
Revox.....	2383 (DB2)	Sencora.....	2531 (DB2)
RFT.....	2386 (DB2)	SENSORY SCIENCE	
Rhapsody.....	2387		2533
Ricavision.....	2388	Sentra.....	2534 (DB2)
RICOH.....	2390	Serino.....	2539 (DB2)
RIO.....	2393	SERVICE ELECTRIC	
RJTech.....	2395 (DB1)		4583 (DB1)
R-Line.....	2327 (DB2)	Sharp.....	2550
Roadstar.....	2398 (DB2)	SHAW.....	4327
ROGERS.....	4215	Sheng Chia.....	2554
Roku.....	2407	Sherwood.....	2557
ROSEN.....	2413	Sherwood Newcastle	
Rotel.....	2414		3766
Rowa.....	2416 (DB2)	SHINCO.....	2560
Royal.....	2419 (DB1)	SHINSONIC.....	2562
Runco.....	2423	SHINTOM.....	2563

S

SABA.....	2429 (DB1)	Shintoshi.....	2564 (DB2)
SAE.....	2433	Shivaki.....	2567 (DB2)
Saisho.....	2437 (DB2)	Shogun.....	2568
Saivod.....	2439 (DB2)	SHURE.....	2571
Sampo.....	2446	Siam.....	2572 (DB2)
Samsonic.....	2447	Siarem.....	2573 (DB2)
Samsung.....	2448	Siemens.....	2574 (DB2)
Samsux.....	2449	Siera.....	2576 (DB2)
		Sierra.....	3549 (DB1)
		SIGNAL.....	2581
		Signature.....	2582

Silva.....	2591 (DB2)	SUDDENLINK.....	4241 (DB1)
Silva Schneider.....	2592 (DB2)	SunBrite.....	2759
Silver.....	2594 (DB2)	Sunfire.....	2760 (DB2)
Simpson.....	2598	Sungale.....	2761
Sindyne.....	4510 (DB2)	Sunkai.....	2762 (DB2)
Singer.....	2599	SUNKEY.....	4426
SIRIUS.....	2602	Sunstar.....	2768 (DB2)
SKARDIN.....	2607	Sunwood.....	2772 (DB2)
SKY.....	2610 (DB2)	Superguide.....	2780 (DB1)
SKY NETWORK.....	4422	Superla.....	2782 (DB2)
SKYFI.....	4423 (DB2)	Superscan.....	2786
Skyworth.....	2631	Supersonic.....	2787
SL MARX.....	2633	SuperTech.....	2789 (DB2)
SMARTPARTS.....	4424	Supra.....	2792
Solavox.....	2654 (DB2)	Supre-Macy.....	2794
Sole.....	2655	Supreme.....	2795
Sonic.....	2666	Sutron.....	2798 (DB2)
SONIC BLUE.....	2667	SV2000.....	2799
Soniko.....	2669 (DB2)	SVA.....	2800
Sonitron.....	2671 (DB2)	Sydney.....	2808 (DB2)
Sonneclair.....	2673 (DB2)	Sylvania.....	2809
Sonoko.....	2675 (DB2)	Symphonic.....	2810
Sontec.....	2677 (DB2)	Syntax.....	2814
Sony.....	2679	Sysline.....	2815 (DB2)
Soundesign.....	2684	Systemax.....	2817
SOUNDSTORM.....	4425	Sytong.....	2820 (DB2)
Soundwave.....	2689 (DB2)		
Sova.....	2690		
Soyo.....	2693		
Spectra.....	2697		
SpectraVision.....	2699 (DB1)		
Spectroniq.....	2701		
SPRUCER.....	2702		
Squareview.....	2703		
Srypton.....	4138 (DB2)		
SSS.....	2708		
Stack 9.....	2710		
Standard.....	2713		
Star Choice.....	2716 (DB1)		
STAR TRAK.....	2720		
STARCOM.....	2722		
STARGATE.....	2723		
Starlite.....	2728		
Starsight.....	2734 (DB1)		
Stereophonics.....	2740 (DB2)		
Strato.....	2745 (DB2)		
STS.....	2749		
Studio Experience.....	2750		
Stylandia.....	2752 (DB2)		

T

Tagar Systems.....	2831
TANDY.....	2843
TAO.....	4427
Tascam.....	2848
Tashiko.....	2850 (DB1)
Tatung.....	2852
TCL.....	2856
Teac.....	2860
Tec.....	2861 (DB2)
Tech Line.....	2863 (DB2)
Technics.....	2869
Technika.....	2870
Technol Ace.....	2875
Techview.....	2883
Techwood.....	2884
Tedex.....	2889 (DB2)
Teknika.....	2895
Telecor.....	2910 (DB2)
Telefunken.....	2914
Telefusion.....	2915 (DB2)
Telegazi.....	2917 (DB2)

Telemeister	2924 (DB2)	U	
Telerent	2927	Uher	3089 (DB2)
Telesonic	2930 (DB2)	UltimateTV	3091 (DB1)
Telestar	2931 (DB2)	Ultra	3093
Teletech	2934 (DB2)	Ultravox	3095 (DB2)
Teleton	2935 (DB2)	Unic Line	3100 (DB2)
Televideon	2938 (DB2)	UNIDEN	3101
Televue	2939	UNIKA	3102
TELSAT	4428	UNITECH	3105
Tennessee	2952 (DB2)	United	3106
Tensai	2954 (DB2)	UNITED CABLE	3108
Tera	2957	Universal	3113
TERAPIN	2958	Universum	3115 (DB2)
Tevion	2962	Univox	3116 (DB2)
Textet	2963 (DB2)	US Logic	3124
TEXSCAN	2965		
Theta Digital	2970	V	
Thomas	2971	Vector Research	3137
Thomson	2972	VENTURER	3143
Thorens	2973 (DB2)	VEOS	3144
Thorn	2974 (DB2)	VERIZON	3146
TIME WARNER	3518	Vestel	3148 (DB2)
TIVAX	3956	Vexa	3149 (DB2)
TiVo	2991	Victor	3155
TMK	2994	Video Cipher II Plus	
TNCi	2996		3156 (DB1)
TOCOM	3000	VIDEO CONCEPTS	
Tokai	3001 (DB2)		3157
Tokyo	3004 (DB2)	VIDEO TECH	4429
Toshiba	3021	Videocon	3163
Totevision	3024	Videologic	3165 (DB2)
Touch	3025	Videologique	3166 (DB2)
Towada	3028 (DB2)	VIDEOSONIC	3171
Trakton	3036 (DB2)	VideoSystem	3172 (DB2)
Trans Continens	3037 (DB2)	Videotechnic	3173 (DB2)
Transfec	4143 (DB2)	VIDEOTRON	3175
Transonic	3041 (DB2)	VIDEOWAY	3176
Transtec	3042 (DB2)	Vidikron	3178
TREDEX	3045	Vidtech	3179
Trident	3054 (DB2)	VIEWSAT	3185
Triumph	3058 (DB2)	Viewsonic	3186
TruTech	3467	VIEWSTAR	3187
TV86	3076	Viking	3188
TVA	4225	Viore	3192
TVS	3081	Visiola	3197 (DB2)
		Vision	3198 (DB2)
		VISIONETICS	3199
		VISIONTEC	4052
		VISTA	4430

Vizio	3211	X	
Voodoo	3215	X10 HOME	
Vortec	3217 (DB2)	AUTOMATION	4433
Voxson	3220 (DB2)	xbox	3295 (DB1)
V-TECH	3728	XENIUS	3297
		XM	3311 (DB1)
		XR-1000	3316
		Xrypton	3317 (DB2)
W			
Waltham	3230 (DB2)		
Wards	3231	Y	
Watson	3233 (DB2)	YAMAHA	3326
Watt Radio	3234 (DB2)	YAMAKAWA	3327
Waycon	3237	Yamishi	3328 (DB2)
WEB TV	4431	Yokan	3335 (DB2)
Wega	3238 (DB2)	Yoko	3336 (DB2)
Wegavox	3239 (DB2)		
Weltblick	3245 (DB2)	Z	
Western Digital	4260	Zanussi	3349 (DB2)
Westinghouse	3249	Zenith	3356
Wharfedale	3255	Zentech	4031 (DB1)
White Westinghouse	3258	ZINWELL	3365
.....	3258	ZT Group	3370
WideOpenWest	4555 (DB2)		
WINEGARD	3268		
WONDER	4432 (DB2)		
WoW!	4985 (DB1)		
Wyse	3288		

(DB1) Brands only available from version DB1 onwards.
You can find the DB version on the sticker inside the battery compartment.

(DB2) Brands only available from version DB2 onwards.
You can find the DB version on the sticker inside the battery compartment.
DB2 products also include previous database (DB) updates (DB1).





© 2011 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5302 3

November 2011

www.philips.com

RTP/4811