

FWD398/98



PHILIPS



*Use this simple and quick way to watch
your favourite DVD movie and enjoy
your Home Cinema experience!*



Helpful Hints

You only need to make one video connection to your TV in order to view the DVD playback.



If your TV has S-Video or Component (PR PB Y) video jacks, use one of these video connections instead for higher picture quality.



If your TV has only a single Antenna In jack, you will need an accessory RF modulator. The RF modulator converts the video from the DVD system so it can play through the TV's Antenna connector. Refer to your owner's manual for proper connection.

When listening to TV programs, press AUX/MP3 LINK on the remote control to set the DVD system to AUX mode in order for the sound to be heard.

 
DEMO MODE

To turn ON




Press & HOLD  button
for 5 seconds

To turn OFF

Press  button

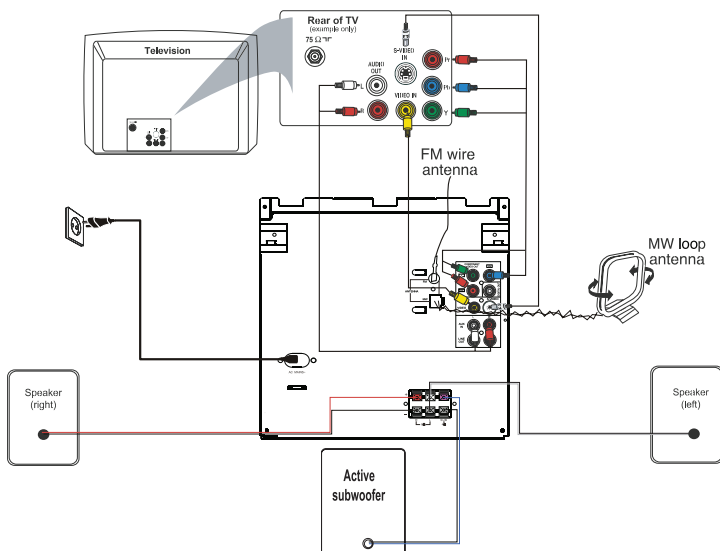

   Please refer to Owner's Manual for more TV connection options.

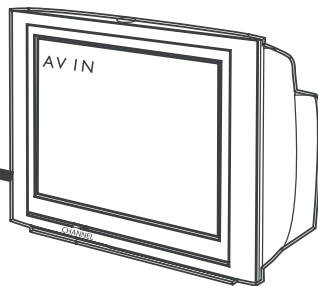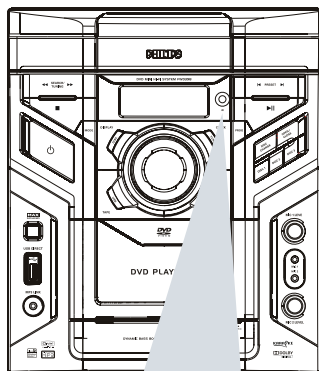

Make sure your DVD system and TV are connected and turned on!

Plug & Play

- 1 Turn on the system.**
"AUTO INSTALL PRESS PLAY" will be displayed.
- 2 Press ►II on the system to start installation.**

Playing a disc

- 3 Press DISC1/2/3 on the remote control.**
You can also select the DISC on the front panel.
- 4 Turn on the TV and select the correct Video mode.**
You should see the blue Philips DVD background screen on the TV (If no disc in the DVD system).
- 5 Press OPEN/CLOSE on the front of the DVD system and load discs, then press the corresponding OPEN/CLOSE again to close the disc tray.**
Make sure the disc label is facing up. For double-sided discs, load the side you want to play face up.
- 6 Playback will start automatically.**
If a disc menu appears, use ◀◀▶▶/▲/▼ on the remote control to make the necessary selection, then press **OK** to confirm. Or use the **numeric keypad** on the remote control to select features. Follow the instructions given in the disc menu.
- 7 To stop playback, press ■.**

Region Codes

DVDs must be labeled for **ALL** regions or **Region 3**, in order to play on this DVD system.



You should find the below accessories in the packaging box.

FM antenna (T- Type) (pig tail)	Power Cable	Composite video cable (yellow)	Remote control	batteries (2xAAA)	MW loop antenna
--	--------------------	---------------------------------------	-----------------------	--------------------------	------------------------



Detailed playback features and additional functions are described in the accompanying owner's manual