

DAP-2590

Release 1.2

AirPremier N

Dual Band PoE Access Point

User Manual

Business Class Networking

Table of Contents

Product Overview	4	VLAN > PVID Setting	36
Package Contents.....	4	Intrusion	37
System Requirements.....	4	Schedule	38
Introduction.....	5	AP Array	39
Features and Benefits	6	Internal RADIUS Server	40
Wireless Basics	7	DHCP Server > Dynamic Pool Settings	41
Four Operational Modes	10	DHCP Server > Static Pool Setting	43
Getting Started	11	DHCP Server > Current IP Mapping List.....	45
Using the Configuration Menu	13	Filters > Wireless MAC ACL.....	46
Home > Basic Settings > Wireless.....	15	Filters > WLAN Partition.....	47
Access Point mode.....	15	Traffic Control > Uplink/Downlink Setting	48
WDS with AP mode	17	Traffic Control > QoS.....	49
WDS mode.....	19	Traffic Control > Traffic Manager.....	50
Wireless Client mode	21	Home > Status	51
Open System or Shared Key authentication	23	Device Information	51
WPA-Personal authentication	24	Client Information	52
WPA-Enterprise authentication	25	WDS Information.....	53
802.1X authentication	26	Home > Status	54
LAN	27	Stats > Ethernet	54
Home > Advanced Settings	28	Stats > WLAN.....	55
Performance	28	Log > View Log.....	56
Multi-SSID	31	Log > Log Settings	57
VLAN > VLAN List.....	33	Maintenance > Administrator Settings.....	58
VLAN > Port List.....	34	Limit Administrator.....	59
VLAN > Add/Edit VLAN	35	System Name Settings.....	60
		Login Settings	61

Console Settings	62
SNMP Settings	63
Ping Control Setting	64
Firmware and SSL Certification Upload.....	65
Maintenance > Configuration File	66
Maintenance > Time and Date	67
Configuration > Save and Activate.....	68
Configuration > Discard Changes.....	68
System > System Settings.....	69
Help.....	70
Using the AP Array	71
Simple WLAN Management.....	71
WLAN Management Tool	71
Easy Deployment and Management.....	72
Different AP Roles in an Array	75
Easy Configuration of D-Link AP Array	75
Supported in all D-Link 11n Business APs	77
Reliable WLAN Management Tool	77
Troubleshooting.....	78
Technical Specifications.....	81
Contacting Technical Support.....	83
Warranty	84
Registration.....	90

Package Contents

- D-Link DAP-2590 AirPremier N Dual Band PoE Access Point
- Power Adapter
- Manual on CD
- Ethernet Cable
- Mounting Plate
- Install Guide

Warning: *Using a power adapter with different specifications than the one included with the DAP-2590 will cause damage and void the warranty for this product.*

If any of the above items are missing, please contact your reseller.

System Requirements

- Computers with Windows®, Macintosh®, or Linux-based operating systems with an installed Ethernet adapter
- Internet Explorer version 7.0 and above or Firefox version 3.0 and above.

Introduction

D-Link, an industry pioneer in wireless networking, introduces a solution for businesses seeking to deploy next generation draft 802.11n LANs. D-Link unveils its new AirPremier N Dual Band PoE Access Point (DAP-2590), designed specifically for business-class environments such as large or enterprise corporations to provide secure and manageable dual band wireless LAN options for network administrators.

Versatile Access Point

The AirPremier N Dual Band PoE Access Point allows network administrators to deploy a highly manageable and extremely robust dual band wireless network. All three dual band antennas are detachable and can provide optimal wireless coverage in either 2.4GHz (802.11g and draft 2.0 802.11n) or 5GHz (802.11a and draft 2.0 802.11n) bands. Enclosed in a plenum-rated metal chassis, the AirPremier N Dual Band PoE Access Point adheres to strict fire codes for placement in air passageways. For advanced installations, this new high-speed Access Point has integrated 802.3af Power over Ethernet (PoE) support, allowing installation of this device in areas where power outlets are not readily available.

Enhanced Performance

The AirPremier N Dual Band PoE Access Point delivers reliable wireless performance with maximum wireless signal rates of up to 300Mbps in either the 2.4GHz or 5GHz wireless band. This, coupled with support for Wi-Fi Multimedia™ (WMM) Quality of Service features, makes it an ideal access point for audio, video, and voice applications. Additionally, the DAP-2590 supports load balance features to ensure maximum performance.

Security

To help maintain a secure wireless network, the AirPremier N Dual Band PoE Access Point provides the latest in wireless security technologies by supporting both Personal and Enterprise versions of WPA and WPA2 (802.11i) with support for RADIUS server backend. To further protect your wireless network, MAC Address Filtering, Wireless LAN segmentation, Disable SSID Broadcast, Rogue AP Detection, and Wireless Broadcast Scheduling are also included.

The AirPremier N Dual Band PoE Access Point includes support for up to 8 VLANs for implementing multiple SSIDs to further help segment users on the network. The DAP-2590 also includes a wireless client isolation mechanism, which limits direct client-to-client communication.

Features and Benefits

- Four different operation modes - Capable of operating in one of four different operation modes to meet your wireless networking needs: Access Point, WDS with AP, WDS, or Wireless Client.
- Faster wireless networking with the 802.11n (draft) standard to provide a maximum wireless signal rate of up to 300 Mbps*.
- Compatible with the 802.11b standard to provide a wireless data rate of up to 11 Mbps, allowing you to migrate your system to the 802.11n (draft) and 802.11g standards on your own schedule without sacrificing connectivity.
- Compatible with the 802.11g standard to provide a wireless data rate of up to 54 Mbps in the 2.4 GHz frequency range.
- Compatible with the 802.11a standard to provide a wireless data rate of up to 54 Mbps in the 5 GHz frequency range.
- Better security with WPA - The DAP-2590 can securely connect wireless clients on the network using WPA (Wi-Fi Protected Access) to provide a much higher level of security for your data and communications than its previous versions.
- AP Manager II management software - The real-time display of the network's topology and AP's information makes network configuration and management quick and simple.
- SNMP for management - The DAP-2590 is not just fast, but also supports SNMP v.3 for better network management. Superior wireless AP manager software is bundled with the DAP-2590 for network configuration and firmware upgrade. Systems administrators can also set up the DAP-2590 easily with the Web-based configuration. A D-Link D-View 6.0 module will be downloadable for network administration and real-time network traffic monitoring with D-Link D-View 6.0 software.
- Utilizes OFDM technology (Orthogonal Frequency Division Multiplexing).
- Supports 802.3af Power over Ethernet.
- Supports one 10/100/1000M Ethernet port.
- Operates in the 2.4~2.5 GHz or 5.15~5.85 GHz** frequency ranges.
- Web-based interface for managing and configuring.

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

**Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2590 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

Wireless Basics

D-Link wireless products are based on industry standards to provide high-speed wireless connectivity that is easy to use within your home, business or public access wireless networks. D-Link wireless products provides you with access to the data you want, whenever and wherever you want it. Enjoy the freedom that wireless networking can bring to you.

WLAN use is not only increasing in both home and office environments, but in public areas as well, such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are allowing people to work and communicate more efficiently. Increased mobility and the absence of cabling and other types of fixed infrastructure have proven to be beneficial to many users.

Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards, allowing wireless users to use the same applications as those used on a wired network.

People use WLAN technology for many different purposes:

Mobility - Productivity increases when people can have access to data in any location within the operating range of their WLAN. Management decisions based on real-time information can significantly improve the efficiency of a worker.

Low implementation costs - WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLAN's ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

Installation and network expansion - By avoiding the complications of troublesome cables, a WLAN system can be fast and easy during installation, especially since it can eliminate the need to pull cable through walls and ceilings. Wireless technology provides more versatility by extending the network beyond the home or office.

Inexpensive solution - Wireless network devices are as competitively priced as conventional Ethernet network devices. The DAP-2590 saves money by providing users with multi-functionality configurable in four different modes.

Scalability - Configurations can be easily changed and range from Peer-to-Peer networks, suitable for a small number of users to larger Infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

Standards-Based Technology

The DAP-2590 Wireless Access Point utilizes the 802.11a, 802.11b, 802.11g, and 802.11n (draft) standards.

The IEEE 802.11n (draft) standard is an extension of the 802.11a, 802.11b, and 802.11g standards that came before it. It increases the maximum wireless signal rate up to 300 Mbps* within both the 2.4 GHz and the 5 GHz bands, utilizing OFDM technology.

This means that in most environments - within the specified range of this device - you will be able to transfer large files quickly, or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing OFDM (Orthogonal Frequency Division Multiplexing) technology. OFDM works by splitting the radio signal into multiple smaller sub-signals that are then simultaneously transmitted at different frequencies to the receiver. OFDM reduces the amount of crosstalk (interference) in signal transmissions.

The D-Link DAP-2590 will automatically sense the best possible connection speed to ensure the greatest possible speed and range.

Note: *802.11n offers the most advanced network security features available today, including WPA.*

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

Installation Considerations


The D-Link DAP-2590 lets you access your network, using a wireless connection, from virtually anywhere within its operating range. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- 1** Keep the number of walls and ceilings between the DAP-2590 and other network devices to a minimum - each wall or ceiling can reduce your DAP-2590's range by 3-90 feet (1-30 meters). Position your devices so that the number of walls or ceilings is minimized.
- 2** Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle, the wall appears to be over 42 feet (14 meters) thick! Position your devices so that the signal will travel straight through a wall or ceiling - instead of at an angle - for better reception.
- 3** Building materials can impede the wireless signal - a solid metal door or aluminum studs can have a negative effect on range. Try to position wireless devices and computers with wireless adapters so that the signal passes through drywall or open doorways, and not through other materials.
- 4** Keep your product away - at least 3-6 feet or 1-2 meters - from electrical devices or appliances that generate RF noise.
- 5** If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even when the phone is not in use.

Four Operational Modes


Operation Mode (Only supports 1 mode at a time)	Function
Access Point (AP)	Create a wireless LAN
WDS with AP	Wirelessly connect multiple networks while still functioning as a wireless AP
WDS	Wirelessly connect multiple networks
Wireless Client	AP acts as a wireless network adapter for your Ethernet enabled device

Getting Started

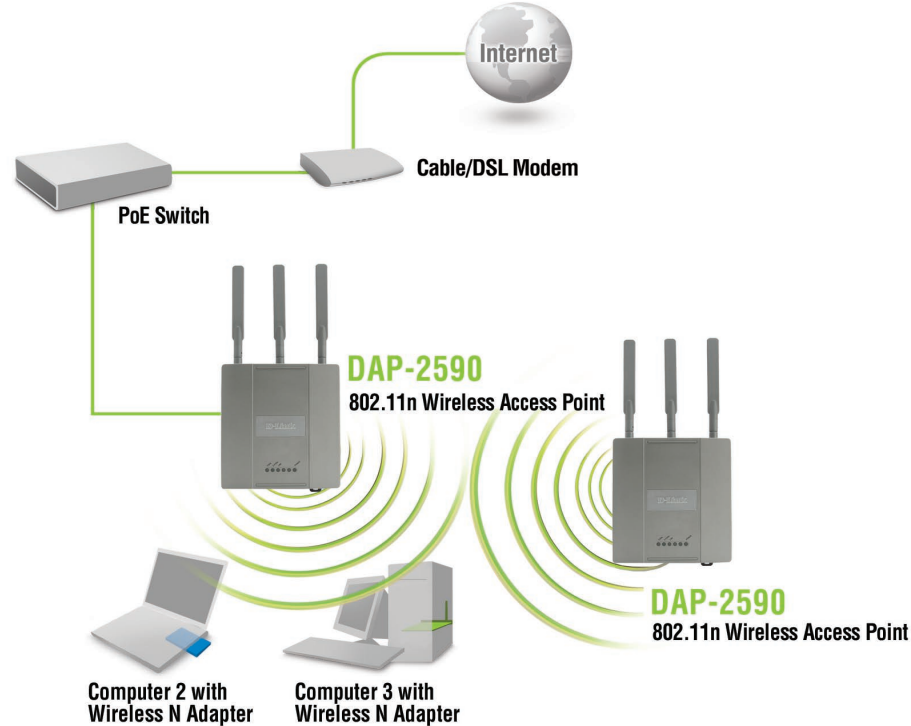

- 1 You will need broadband Internet access.
- 2 Consult with your cable or DSL provider for proper installation of the modem.
- 3 Connect the cable or DSL modem to a router. See the printed Install Guide included with your router.
- 4 See the printed Install Guide included with the DAP-2590.
- 5 If you are connecting a desktop computer to your network, install a wireless PCI adapter into an available PCI slot on your desktop computer.
- 6 Install the drivers for your wireless CardBus adapter into a laptop computer.

Connecting PoE (Power over Ethernet)

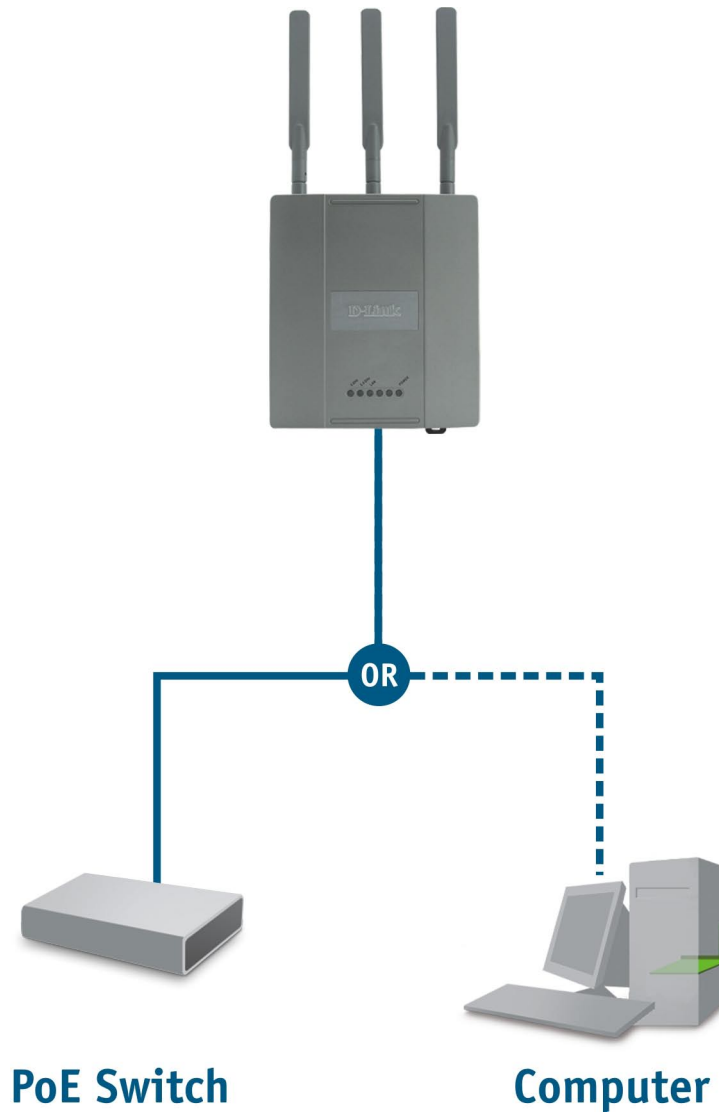

Connect one end of an Ethernet cable (included with your package) to the LAN port on the DAP-2590 and the other end of the Ethernet cable to either your computer or to your PoE switch. The AP can be powered on by a PoE switch or by the power adapter shipped with the AP.

Using the Configuration Menu

To configure the DAP-2590, use a computer that is connected to the DAP-2590 with an Ethernet cable (see the *Network Layout diagram*).

First, disable the “Access the Internet using a proxy server” function. To disable this function, go to **Control Panel > Internet Options > Connections > LAN Settings** and uncheck the enable box.

Start your web browser program (Internet Explorer, Mozilla Firefox).

Type the IP address and http port of the DAP-2590 in the address field (**http://192.168.0.50**) and press **Enter**. Make sure that the IP addresses of the DAP-2590 and your computer are in the same subnet.

After the connection is established, you will see the user identification window as shown.

Note: If you have changed the default IP address assigned to the DAP-2590, make sure to enter the correct IP address.




- Type “**admin**” in the User Name field.
- Leave the Password field blank.
- Click the **Login** button.

A screenshot of the D-Link DAP-2590 login page. The page has a dark blue header with the "D-Link" logo on the left and "DAP-2590" on the right. Below the header is a light blue box containing a "LOGIN" section. Inside this section, it says "Login to the Access Point:". There are two input fields: "User Name" with the text "admin" entered, and "Password" which is empty. To the right of the password field is a "Login" button.

Note: If you have changed the password, make sure to enter the correct password.

After successfully logging into the DAP-2590 the following window will appear:

 
When making changes on most of the configuration windows in this section, use either the **Apply** button or the **Save** button to save your configuration changes.



Click the **Apply** button to configure changes.



Click the **Save** button to configure changes.

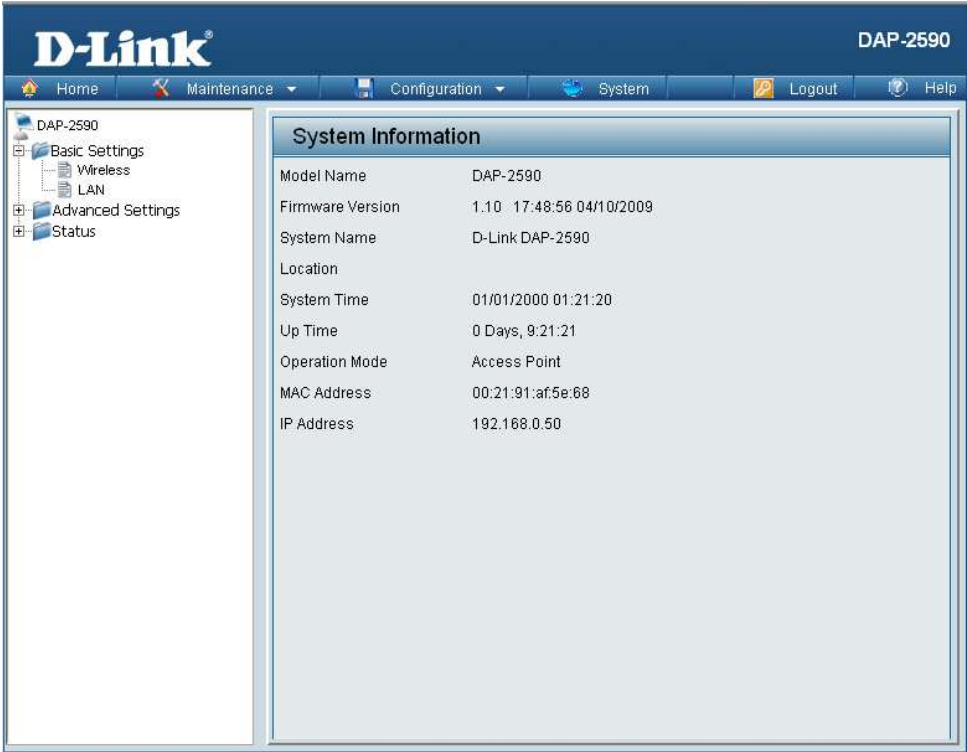

Alternatively, click the “Save and Activate” option on the Configuration drop-down menu at the top of each DAP-2590 window. This will cause the DAP-2590 to save and reboot.



Home > Basic Settings > Wireless

Access Point mode

In Access Point mode, the DAP-2590 functions as a wireless AP. After completing the desired settings, click the **Save** button to let your changes take effect.

The screenshot shows the D-Link DAP-2590 configuration interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings, Wireless, LAN, Advanced Settings, and Status. The main content area is titled 'Wireless Settings' and contains the following fields:

- Wireless Band: 2.4GHz (dropdown)
- Mode: Access Point (dropdown)
- Network Name (SSID): dlink (text input)
- SSID Visibility: Enable (dropdown)
- Auto Channel Selection: Disable (dropdown)
- Channel: 6 (dropdown)
- Channel Width: 20 MHz (dropdown)
- Authentication: Open System (dropdown)
- Key Settings section:
 - Encryption: ☒ Disable, ☐ Enable
 - Key Type: HEX (dropdown)
 - Key Index(1~4): 1 (dropdown)
 - Key Size: 64 Bits (dropdown)
 - Network Key: (text input)
 - Confirm Key: (text input)
- Save button at the bottom right.

- Wireless Band:** Select either **2.4 GHz** or **5 GHz** from the pull-down menu.
- Mode:** Select **Access Point** from the pull-down menu. The other three choices are **WDS with AP**, **WDS**, and **Wireless Client**.
- Network Name (SSID):** Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can easily be changed to connect to an existing wireless network or to establish a new wireless network. The SSID can be up to 32 characters and is case-sensitive.
- SSID Visibility:** **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.
- Auto Channel Selection:** Enabling this feature automatically selects the channel that provides the best wireless performance. **Enable** is set by default. The channel selection process only occurs when the AP is booting up.
- Channel:** All devices on the network must share the same channel. To change the channel, first toggle the Auto Channel Selection setting to **Disable**, and then use the pull-down menu to make the desired selection. (**Note:** The wireless adapters will automatically scan and match the wireless settings.)

Channel Width: Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. When the channel width is set to **Auto 20/40 MHz**, then 802.11n wireless devices are allowed to transmit data using 40 MHz.

Authentication: Select **Open System** to communicate the key across the network.
Select **Shared Key** to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available.
Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.
Select **WPA-Enterprise** to secure your network with the inclusion of a RADIUS server.
Select **802.1X** if your network is using port-based Network Access Control.

For more information about the different types of Authentication offered on the DAP-2590 and the respective settings of each, please go to the first page of the “Authentication” explanations, which begins on page 23.

WDS with AP mode

In WDS with AP mode, the DAP-2590 wirelessly connects multiple networks while still functioning as a wireless AP. After completing the desired settings, click the **Save** button to let your changes take effect.

Wireless Band: Select either **2.4 GHz** or **5 GHz** from the pull-down menu.

Mode: **WDS with AP** mode is selected from the pull-down menu.

Network Name (SSID): Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Auto Channel Selection: Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in WDS with AP mode. The channel selection process only occurs when the AP is booting up.

Channel: All devices on the network must share the same channel. To change the channel, use the pull-down menu to make the desired selection. (**Note:** The wireless adapters will automatically scan and match the wireless settings.)

The screenshot shows the D-Link DAP-2590 configuration interface. The left sidebar contains a tree view with categories: Basic Settings (Wireless, LAN), Advanced Settings (Performance, Multi-SSID, VLAN, Intrusion, Schedule, AP Array, Internal RADIUS Server, DHCP Server, Filters, Traffic Control), and Status. The main content area is titled 'Wireless Settings' and includes the following fields:

- Wireless Band:** 5GHz (pull-down menu)
- Mode:** WDS with AP (pull-down menu)
- Network Name (SSID):** dlink (text field)
- SSID Visibility:** Enable (radio button)
- Auto Channel Selection:** Disable (radio button)
- Channel:** 36 (pull-down menu)
- Channel Width:** Auto 20/40 MHz (pull-down menu)
- WDS Section:**
 - Remote AP MAC Address:** Eight input fields labeled 1 through 8.
 - Site Survey:** A table with columns CH, Signal, BSSID, Security, and SSID. A 'Scan' button is located to the right of the table.
- Authentication:** Open System (pull-down menu)
- Key Settings Section:**
 - Encryption:** Disable (radio button)
 - Key Type:** HEX (pull-down menu)
 - Key Index(1~4):** 1 (pull-down menu)
 - Network Key:** (text field)
 - Confirm Key:** (text field)
 - Key Size:** 64 Bits (pull-down menu)
- Save:** A button at the bottom right of the form.

Channel Width:	Allows selection of the channel width you would like to operate in. 20 MHz and Auto 20/40 MHz allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. 802.11n wireless devices are allowed to transmit data using 40 MHz when the channel width is Auto 20/40 MHz .
Remote AP MAC Address:	Enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks.
Site Survey:	Click the Scan button to search for available wireless networks, then click on the available network that you want to connect with.
Authentication:	Use the pull-down menu to choose Open System, Shared Key, or WPA-Personal. Select Open System to communicate the key across the network. Select Shared Key to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available. Select WPA-Personal to secure your network using a password and dynamic key changes. No RADIUS server is required. For more information about the different types of Authentication offered on the DAP-2590 and the respective settings of each, please go to the first page of the “Authentication” explanations, which begins on page 23.

WDS mode

In WDS mode, the DAP-2590 wirelessly connects multiple networks, without functioning as a wireless AP. After completing the desired settings, click the **Save** button to let your changes take effect.

Wireless Band: Select either **2.4 GHz** or **5 GHz** from the pull-down menu.

Mode: **WDS** is selected from the pull-down menu.

Network Name (SSID): Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Auto Channel Selection: Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in WDS mode.

Channel: All devices on the network must share the same channel. To change the channel, use the pull-down menu to make the desired selection.

Channel Width: Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. 802.11n wireless devices are allowed to transmit data using 40 MHz when the channel width is **Auto 20/40 MHz**.

The screenshot shows the D-Link DAP-2590 configuration interface. The 'Wireless Settings' tab is active. The 'Wireless Band' is set to 2.4GHz, 'Mode' is WDS, 'Network Name (SSID)' is dlink, 'SSID Visibility' is Enable, 'Auto Channel Selection' is Disable, 'Channel' is 6, and 'Channel Width' is Auto 20/40 MHz. The 'WDS' section shows 'Remote AP MAC Address' fields for 1 through 8. The 'Site Survey' section has a 'Scan' button and a table with columns CH, Signal, BSSID, Security, and SSID. The 'Authentication' section is set to 'Open System'. The 'Key Settings' section shows 'Encryption' as Disable, 'Key Type' as HEX, 'Key Index(1~4)' as 1, 'Key Size' as 64 Bits, and empty fields for 'Network Key' and 'Confirm Key'. A 'Save' button is at the bottom right.

Remote AP MAC Address:	Enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks.
Site Survey:	Click the Scan button to search for available wireless networks, then click on the available network that you want to connect with.
Authentication:	Use the pull-down menu to choose Open System, Shared Key, or WPA-Personal. Select Open System to communicate the key across the network. Select Shared Key to limit communication to only those devices that share the same WEP settings. Select WPA-Personal to secure your network using a password and dynamic key changes. No RADIUS server is required. For more information about the different types of Authentication offered on the DAP-2590 and the respective settings of each, please go to the first page of the Authentication explanations which begins on page 23.

Wireless Client mode

In Wireless Client mode, the DAP-2590 functions as a wireless client on a wireless network in which an AP already exists. After completing the desired settings, click the **Save** button to let your changes take effect.

- Wireless Band:** Select either **2.4 GHz** or **5 GHz** from the pull-down menu.
- Mode:** **Wireless Client** is selected from the pull-down menu.
- Network Name (SSID):** Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network.
- SSID Visibility:** This option is unavailable in wireless client mode.
- Auto Channel Selection:** Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in Wireless Client mode.
- Channel:** The channel used will be displayed, and follow the root AP.
- Channel Width:** This option is unavailable in wireless client mode.
- Site Survey:** Click the **Scan** button to search for available wireless networks, then click on the available network that you want to connect with.

The screenshot shows the D-Link DAP-2590 configuration interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings, Wireless, LAN, Advanced Settings, and Status. The main content area is titled 'Wireless Settings' and contains the following sections:

- Wireless Band:** 5GHz
- Mode:** Wireless Client
- Network Name (SSID):** dlink
- SSID Visibility:** Enable
- Auto Channel Selection:** Enable
- Channel:** 36
- Channel Width:** Auto 20/40 MHz
- Site Survey:** A table with columns CH, Signal, BSSID, Security, and SSID. A Scan button is present.
- Authentication:** Open System
- Key Settings:**
 - Encryption: Disable (selected) or Enable
 - Key Type: HEX
 - Key Index(1~4): 1
 - Key Size: 64 Bits
 - Network Key: [text box]
 - Confirm Key: [text box]
- Wireless MAC Clone:**
 - Enable: [checkbox]
 - MAC Source: Auto
 - MAC Address: [text box] : [text box] : [text box] : [text box] : [text box] : [text box] [Scan]
 - MAC Address table: [empty table]

A Save button is located at the bottom right of the configuration area.

Authentication: Use the pull-down menu to choose **Open System** or **WPA Personal**.
Select **Open System** to communicate the key across the network.
Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.
For more information about the different types of Authentication offered on the DAP-2590 and the respective settings of each, please go to the first page of the Authentication explanations which begins on page 23.

Wireless MAC Clone

Enable: Click the box to enable the Wireless MAC Clone feature. Enabling this option allows the user to manually assign the source MAC address to packets forwarded by the DAP-2590. If disabled, the packet's source MAC address field will be automatically selected as the DAP-2590's MAC address.

MAC Source: Use the drop-down menu to select either **Auto** or **Manual**.

MAC Address: If you selected **Manual** for the MAC Source above, you can either click the **Scan** button to search for all available devices connected to your DAP-2590's Ethernet port or manually enter a MAC address in the space provided.

Open System or Shared Key authentication

Encryption: Use the radio button to disable or enable encryption.

Key Type: Select **HEX**** or **ASCII***.

Key Size: Select **64 Bits** or **128 Bits**.

Key Index (1~4): Select the 1st through the 4th key to be the active key.

Network Key: Input up to four keys for encryption. You will select one of these keys in the Key Index pull-down menu.

Confirm Key: Retype the Network Key entered above in the corresponding field.

**ASCII (American Standard Code for Information Interchange) is a code that represents English letters using numbers ranging from 0-127.*

***Hexadecimal (HEX) digits consist of the numbers 0-9 and the letters A-F.*

The screenshot displays the D-Link DAP-2590 configuration interface. The left sidebar shows a tree view with categories like Basic Settings, Advanced Settings, and Status. The main content area is titled 'Wireless Settings'. It includes several configuration fields: Wireless Band (5GHz), Mode (Access Point), Network Name (SSID) (dlink), SSID Visibility (Enable), Auto Channel Selection (Disable), Channel (36), Channel Width (Auto 20/40 MHz), and Authentication (Open System). Below these, the 'Key Settings' section has radio buttons for Encryption (Disable selected, Enable unselected), a Key Type dropdown (HEX), a Key Index dropdown (1), a Key Size dropdown (64 Bits), and input fields for Network Key and Confirm Key. A 'Save' button is located at the bottom right of the settings area.

WPA-Personal authentication

- WPA Mode:** When **WPA-Personal** is selected for Authentication type, you must also select a WPA mode from the pull-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.
- Cipher Type:** When you select WPA-Personal, you must also select **AUTO**, **AES**, or **TKIP** from the pull-down menu.
- Group Key Update Interval:** Select the interval during which the group key will be valid. The default value of **1800** is recommended.
- PassPhrase:** When you select WPA-Personal, please enter a PassPhrase in the corresponding field.
- Confirm PassPhrase:** Retype the PassPhrase entered above in the corresponding field.

The screenshot displays the D-Link DAP-2590 configuration interface. The left sidebar shows a tree view with categories like Basic Settings, Wireless, LAN, Advanced Settings, Performance, Multi-SSID, VLAN, Intrusion, Schedule, AP Array, Internal RADIUS Server, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Wireless Settings' and contains the following fields:

- Wireless Band: 5GHz
- Mode: Access Point
- Network Name (SSID): dlink
- SSID Visibility: Enable
- Auto Channel Selection: Disable
- Channel: 36
- Channel Width: Auto 20/40 MHz
- Authentication: WPA-Personal
- PassPhrase Settings** (expanded):
 - WPA Mode: AUTO (WPA or WPA2)
 - Cipher Type: Auto
 - Group Key Update Interval: 1800 (Seconds)
 - PassPhrase: [Empty text field]
 - Confirm PassPhrase: [Empty text field]

A 'Save' button is located at the bottom right of the configuration area.

WPA-Enterprise authentication

- WPA Mode:** When **WPA-Enterprise** is selected, you must also select a WPA mode from the pull-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.
- Cipher Type:** When WPA-Enterprise is selected, you must also select a cipher type from the pull-down menu: **Auto**, **AES**, or **TKIP**.
- Group Key Update Interval:** Select the interval during which the group key will be valid. The recommended value is **1800**, as a lower interval may reduce data transfer rates.
- Network Access Protection:** Enable or disable Microsoft Network Access Protection.
- RADIUS Server:** Enter the IP address of the RADIUS server. Click External if the RADIUS server is on your network or Internal if you are using the RADIUS server on the DAP-2590.
- RADIUS Port:** Enter the RADIUS port (**1812** is the default).
- RADIUS Secret:** Enter the RADIUS secret.
- Accounting Mode:** Select if you want to use a different server for accounting.
- Accounting Server:** Enter the IP address of the Accounting server.
- Accounting Port:** Enter the Accounting port (**1813** is the default).
- Accounting Secret:** Enter the Accounting secret.

The screenshot shows the D-Link DAP-2590 configuration interface. The left sidebar lists navigation options: Basic Settings, Wireless, LAN, Advanced Settings, Performance, Multi-SSID, VLAN, Intrusion, Schedule, AP Array, Internal RADIUS Server, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'Wireless Settings' and contains the following configuration options:

- Wireless Band:** 5GHz
- Mode:** Access Point
- Network Name (SSID):** dlink
- SSID Visibility:** Enable
- Auto Channel Selection:** Disable
- Channel:** 36
- Channel Width:** Auto 20/40 MHz
- Authentication:** WPA-Enterprise
- RADIUS Server Settings:**
 - WPA Mode:** AUTO (WPA or WPA2)
 - Cipher Type:** Auto
 - Group Key Update Interval:** 1800 (Seconds)
 - Network Access Protection:** ☒ Disable ☐ Enable
 - RADIUS Server Mode:** ☒ External ☐ Internal
 - Primary RADIUS Server Setting:**
 - RADIUS Server:** [Empty field]
 - RADIUS Port:** 1812
 - RADIUS Secret:** [Empty field]
 - Backup RADIUS Server Setting (Optional):**
 - RADIUS Server:** [Empty field]
 - RADIUS Port:** 1812
 - RADIUS Secret:** [Empty field]
 - Primary Accounting Server Setting:**
 - Accounting Mode:** Disable
 - Accounting Server:** [Empty field]
 - Accounting Port:** 1813
 - Accounting Secret:** [Empty field]
 - Backup Accounting Server Setting (Optional):**
 - Accounting Server:** [Empty field]
 - Accounting Port:** 1813
 - Accounting Secret:** [Empty field]

A 'Save' button is located at the bottom right of the configuration area.

Note: You can input the secondary RADIUS server and accounting server settings if you have a backup RADIUS and accounting server.

802.1X authentication

- Key Update Interval:** Select the interval (in seconds) during which the key will be valid.
- RADIUS Server:** Enter the IP address of the RADIUS server. Click **External** if the RADIUS server is on your network or **Internal** if you are using the RADIUS server on the DAP-2590.
- RADIUS Port:** Enter the RADIUS port (**1812** is the default).
- RADIUS Secret:** Enter the RADIUS secret.
- Accounting Mode:** Select if you want to use a different server for accounting.
- Accounting Server:** Enter the IP address of the Accounting server.
- Accounting Port:** Enter the Accounting port (**1813** is the default).
- Accounting Secret:** Enter the Accounting secret.

The screenshot shows the D-Link DAP-2590 configuration interface. The left sidebar contains a tree view with 'Basic Settings', 'Wireless', 'LAN', 'Advanced Settings', and 'Status'. The 'Wireless' section is selected. The main content area is titled 'Wireless Settings' and contains the following fields:

- Wireless Band: 2.4GHz
- Mode: Access Point
- Network Name (SSID): dlink
- SSID Visibility: Enable
- Auto Channel Selection: Enable
- Channel: 6
- Channel Width: 20 MHz
- Authentication: 802.1X

Below these are the 'RADIUS Server Settings' and 'Accounting Server Settings' sections:

RADIUS Server Settings

- Key Update Interval: 300 (Seconds)
- RADIUS Server Mode**: External (selected), Internal
- Primary RADIUS Server Setting**:
 - RADIUS Server: [text box]
 - RADIUS Port: 1812
 - RADIUS Secret: [text box]
- Backup RADIUS Server Setting (Optional)**:
 - RADIUS Server: [text box]
 - RADIUS Port: 1812
 - RADIUS Secret: [text box]

Accounting Server Settings

- Primary Accounting Server Setting**:
 - Accounting Mode: Disable
 - Accounting Server: [text box]
 - Accounting Port: 1813
 - Accounting Secret: [text box]
- Backup Accounting Server Setting (Optional)**:
 - Accounting Server: [text box]
 - Accounting Port: 1813
 - Accounting Secret: [text box]

A 'Save' button is located at the bottom right of the configuration area.

Note: You can input the secondary RADIUS server and accounting server settings if you have a backup RADIUS and accounting server.

LAN

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DAP-2590. These settings may be referred to as private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet. After completing the desired LAN settings, click the **Save** button to let your changes take effect.

Get IP From: Choose **Static IP (Manual)** if you do not have a DHCP server on your network, or if you wish to assign a static IP address to the DAP-2590. When **Dynamic IP (DHCP)** is selected, the other fields here will be grayed out. Please allow about 2 minutes for the DHCP client to be functional once this selection is made.

IP Address: The default IP address is **192.168.0.50**. Assign a static IP address that is within the IP address range of your network.

Subnet Mask: Enter the subnet mask. All devices in the network must share the same subnet mask.

Default Gateway: Enter the IP address of the gateway in your network. If there is a gateway in your network, please enter an IP address within the range of your network.

The screenshot shows the D-Link DAP-2590 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with 'DAP-2590' expanded, containing 'Basic Settings' (with sub-items 'Wireless' and 'LAN'), 'Advanced Settings', and 'Status'. The main content area is titled 'LAN Settings'. It contains the following fields: 'Get IP From' (a dropdown menu set to 'Static IP (Manual)'), 'IP Address' (a text box containing '192.168.0.50'), 'Subnet Mask' (a text box containing '255.255.255.0'), and 'Default Gateway' (an empty text box). A 'Save' button is located at the bottom right of the settings area.

Home > Advanced Settings

Performance

The Performance Settings window offers a number of user-controlled settings designed to optimize the performance of the DAP-2590. After completing the desired settings, click the Save button to let your changes take effect.

Wireless: Use the drop-down menu to turn the wireless function **On** or **Off**.

Wireless Mode: The different combination of clients that can be supported include **Mixed 802.11n, 802.11g and 802.11b**, **Mixed 802.11g and 802.11b**, and **802.11n Only** in the 2.4 GHz band and **Mixed 802.11n and 802.11a**, **802.11a only**, and **802.11n Only** in the 5 GHz band. Please note that when backwards compatibility is enabled for legacy (802.11a/g/b) clients, degradation of 802.11n (draft) wireless performance is expected.

Data Rate*: Indicate the base transfer rate of wireless adapters on the wireless LAN. The AP will adjust the base transfer rate depending on the base rate of the connected device. If there are obstacles or interference, the AP will step down the rate. This option is enabled in Mixed 802.11g and 802.11b mode (for 2.4 GHz) and 802.11a only mode (for 5 GHz). The choices available are **Best (Up to 54)**, **54**, **48**, **36**, **24**, **18**, **12**, **9**, and **6** for 5 GHz and **Best (Up to 54)**, **54**, **48**, **36**, **24**, **18**, **12**, **9**, **6**, **11**, **5.5**, **2** and **1** for 2.4 GHz.

Beacon Interval (25-500): Beacons are packets sent by an access point to synchronize a wireless network. Specify a value in milliseconds. The default (**100**) is recommended. Setting a higher beacon interval can help to save the power of wireless clients, while setting a lower one can help a wireless client connect to an access point faster.

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

DTIM Interval (1-15):	Select a Delivery Traffic Indication Message setting between 1 and 15 . 1 is the default setting. DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.
Transmit Power:	This setting determines the power level of the wireless transmission. Transmitting power can be adjusted to eliminate overlapping of wireless area coverage between two access points where interference is a major concern. For example, if wireless coverage is intended for half of the area, then select 50% as the option. Use the pull-down menu to select 100% , 50% , 25% , or 12.5% .
WMM (Wi-Fi Multimedia):	WMM stands for Wi-Fi Multimedia. Enabling this feature will improve the user experience for audio and video applications over a Wi-Fi network.
Ack Time Out (2.4 GHZ, 48~200) or Ack Time Out (5 GHZ, 25~200):	To effectively optimize throughput over long distance links enter a value for Acknowledgement Time Out between 25 and 200 microseconds for 5 GHz or from 48 to 200 microseconds in the 2.4 GHz in the field provided.
Short GI:	Select Enable or Disable . Enabling a short guard interval can increase throughput. However, be aware that it can also increase the error rate in some installations due to increased sensitivity to radio-frequency installations.
IGMP Snooping:	Select Enable or Disable . Internet Group Management Protocol allows the AP to recognize IGMP queries and reports sent between routers and an IGMP host (wireless STA). When IGMP snooping is enabled, the AP will forward multicast packets to an IGMP host based on IGMP messages passing through the AP.
Connection Limit:	Select Enable or Disable . This is an option for load balancing. This determines whether to limit the number of users accessing this device. The exact number is entered in the User Limit field below. This feature allows the user to share the wireless network traffic and the client using multiple APs. If this function is enabled and when the number of users exceeds this value, or the network utilization of this AP exceeds the percentage that has been specified, the DAP-2590 will not allow clients to associate with the AP.

- User Limit (0 - 64):** Set the maximum amount of users that are allowed access (zero to 64 users). To use this feature, the Connection Limit above must be enabled. For most users, a limit of **10** is recommended. The default setting is **20**.
- Network Utilization:** Set the maximum utilization of this access point for service. The DAP-2590 will not allow any new clients to associate with the AP if the utilization exceeds the value the user specifies. Select a utilization percentage between **100%**, **80%**, **60%**, **40%**, **20%**, or **0%**. When this network utilization threshold is reached, the device will pause one minute to allow network congestion to dissipate.

Multi-SSID

The device supports up to eight multiple Service Set Identifiers. You can set the Primary SSID in the **Basic > Wireless** section. The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network. When the information for the new SSID is finished, click the **Add** button. Click the **Save** button to let your changes take effect.

- Enable Multi-SSID:

Check to enable support for multiple SSIDs.
- Enable Priority:

Check to enable the priority feature.
- Band:


This read-only value is the current band setting.
- Index:

You can select up to seven multi-SSIDs. With the Primary SSID, you have a total of eight multi-SSIDs.
- SSID:

Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network.
- SSID Visibility:

Enable or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.
- Security:

The Multi-SSID security can be **Open System**, **WPA-Personal**, **WPA-Enterprise**, or **802.1X**. For a detailed description of the Open System parameters please go to page 23. For a detailed description of the WPA-Personal parameters please go to page 24. For a detailed description of the WPA-Enterprise parameters please go to page 25. For a detailed description of the 802.1X parameters please go to page 26.

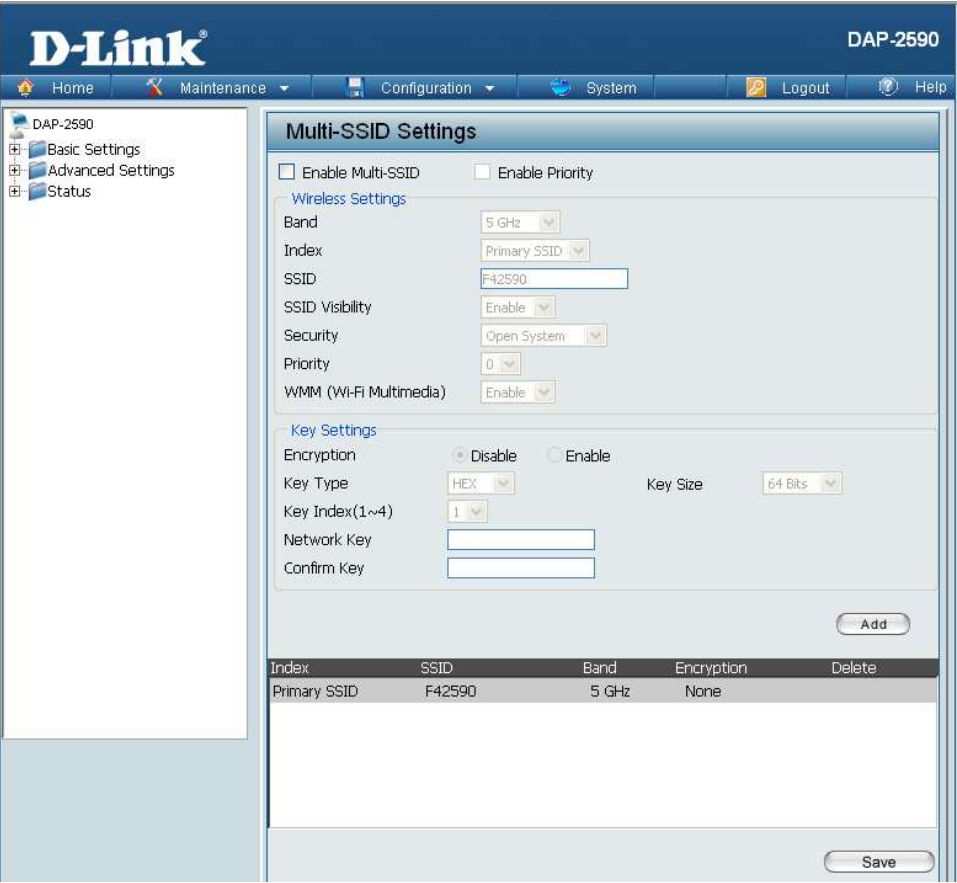

Priority: When the Enable Priority check box is checked at the top of this window, this drop-down menu is used to select a priority between **0** and **7**.

WMM (Wi-Fi Multimedia): Select **Enable** to provide basic Quality of Service features.


VLAN > VLAN List

The DAP-2590 supports VLANs. VLANs can be created with a Name and VID. Mgmt (TCP stack), LAN, Primary/Multiple SSID, and WDS connection can be assigned to VLANs as they are physical ports. Any packet which enters the DAP-2590 without a VLAN tag will have a VLAN tag inserted with a PVID. Once you have made the desired settings, click the **Save** button to let your changes take effect.

The VLAN List tab displays the current VLANs.

VLAN Status: Use the radio button to toggle to Enable. Next, go to the Add/Edit VLAN tab to add or modify an item on the VLAN List tab.

VLAN Mode: The current VLAN mode is displayed.

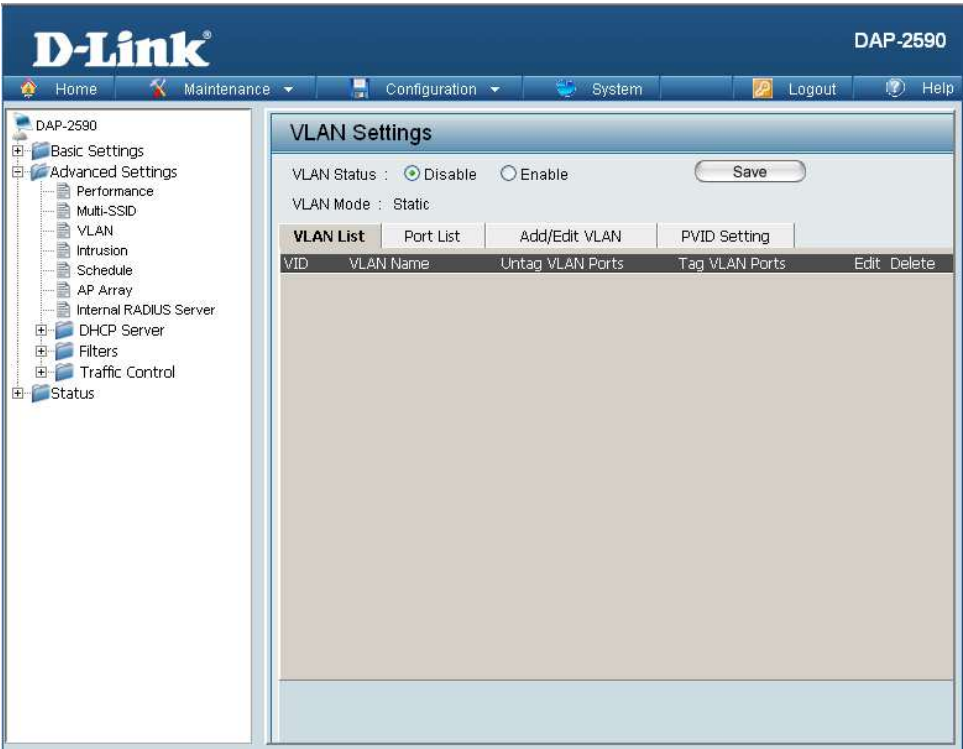

VLAN > Port List

The Port List tab displays the current ports. If you want to configure the guest and internal networks on a Virtual LAN (VLAN), the switch and DHCP server you are using must also support VLANs. As a prerequisite step, configure a port on the switch for handling VLAN tagged packets as described in the IEEE 802.1Q standard. Once you have made the desired settings, click the **Save** button to let your changes take effect.

VLAN Status: Use the radio button to toggle to Enable. Next, go to the Add/Edit VLAN tab to add or modify an item on the VLAN List tab.

VLAN Mode: The current VLAN mode is displayed.

Port Name: The name of the port is displayed in this column.

Tag VID: The Tagged VID is displayed in this column.

Untag VID: The Untagged VID is displayed in this column.

PVID: The Port VLAN Identifier is displayed in this column.

The screenshot shows the D-Link DAP-2590 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of settings: Basic Settings, Advanced Settings, Performance, Multi-SSID, VLAN, Intrusion, Schedule, AP Array, Internal RADIUS Server, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'VLAN Settings' and includes a 'Save' button. Below this, there are tabs for 'VLAN List', 'Port List' (which is selected), 'Add/Edit VLAN', and 'PVID Setting'. The 'Port List' tab displays a table with the following data:

Port Name	Tag VID	Untag VID	PVID
Mgmt			1
LAN			1
F42590			1
dlink			1
dlink			1
dlink			1
dlink			1
dlink			1
dlink			1
W-1			1
W-2			1
W-3			1
W-4			1
W-5			1
W-6			1
W-7			1
W-8			1

VLAN > Add/Edit VLAN


The Add/Edit VLAN tab is used to configure VLANs. Once you have made the desired settings, click the **Save** button to let your changes take effect.

VLAN Status: Use the radio button to toggle to Enable.

VLAN Mode: The current VLAN mode is displayed.

VLAN ID (VID): Provide a number between **1** and **4094** for the Internal VLAN.

VLAN Name: Enter the VLAN to add or modify.

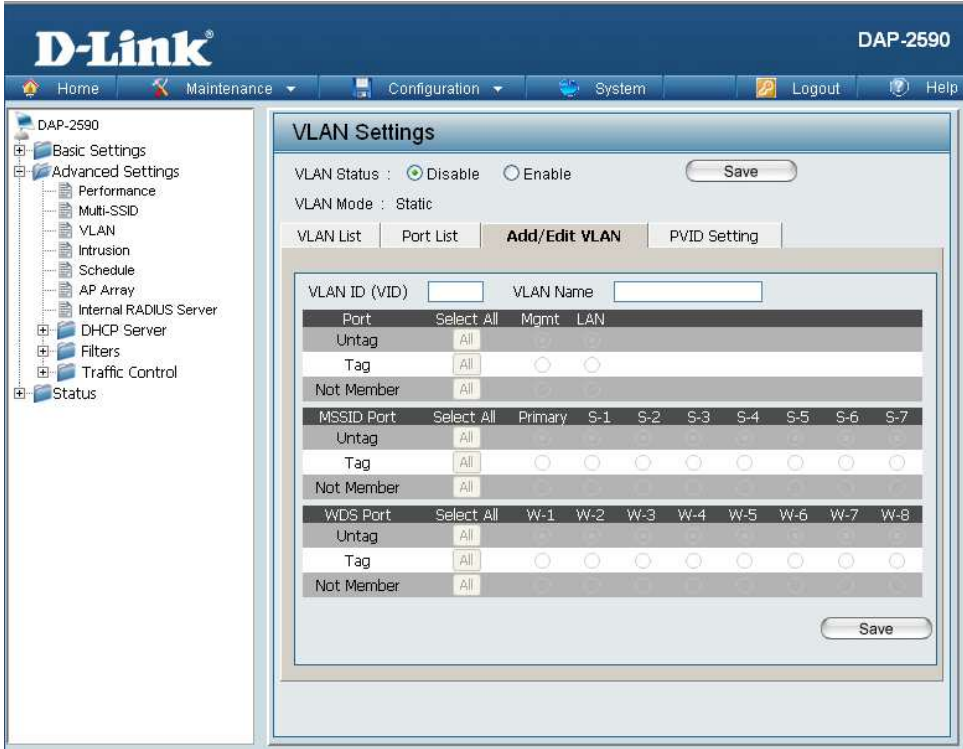

VLAN > PVID Setting

The PVID Setting tab is used to enable/disable the Port VLAN Identifier Auto Assign Status as well as to configure various types of PVID settings. Once you have made the desired settings, click the **Save** button to let your changes take effect.

VLAN Status: Use the radio button to toggle to Enable.

VLAN Mode: The current VLAN mode is displayed.

PVID Auto Assign Status: Use the radio button to toggle PVID auto assign status to Enable.

The screenshot shows the D-Link DAP-2590 web interface. The left sidebar contains a tree view with categories: Basic Settings, Advanced Settings (expanded), Performance, Multi-SSID, VLAN, Intrusion, Schedule, AP Array, Internal RADIUS Server, DHCP Server, Filters, Traffic Control, and Status. The main content area is titled 'VLAN Settings' and includes a 'Save' button. Below this, 'VLAN Status' is set to 'Disable' (radio button) and 'VLAN Mode' is 'Static'. The 'PVID Setting' tab is active, showing 'PVID Auto Assign Status' set to 'Disable' (radio button). Three tables are present for PVID configuration:

Port	Mgmt	LAN
PVID	1	1

MSSID Port	Primary	S-1	S-2	S-3	S-4	S-5	S-6	S-7
PVID	1	1	1	1	1	1	1	1

WDS Port	W-1	W-2	W-3	W-4	W-5	W-6	W-7	W-8
PVID	1	1	1	1	1	1	1	1


A 'Save' button is located at the bottom right of the PVID Setting section.

Intrusion

The Wireless Intrusion Protection window is used to set APs as All, Valid, Neighborhood, Rogue, and New. Once you have made the desired settings, click the **Save** button to let your changes take effect.

AP List: The choices include **All**, **Valid**, **Neighbor**, **Rogue**, and **New**.

Detect Click this button to initiate a scan of the network.

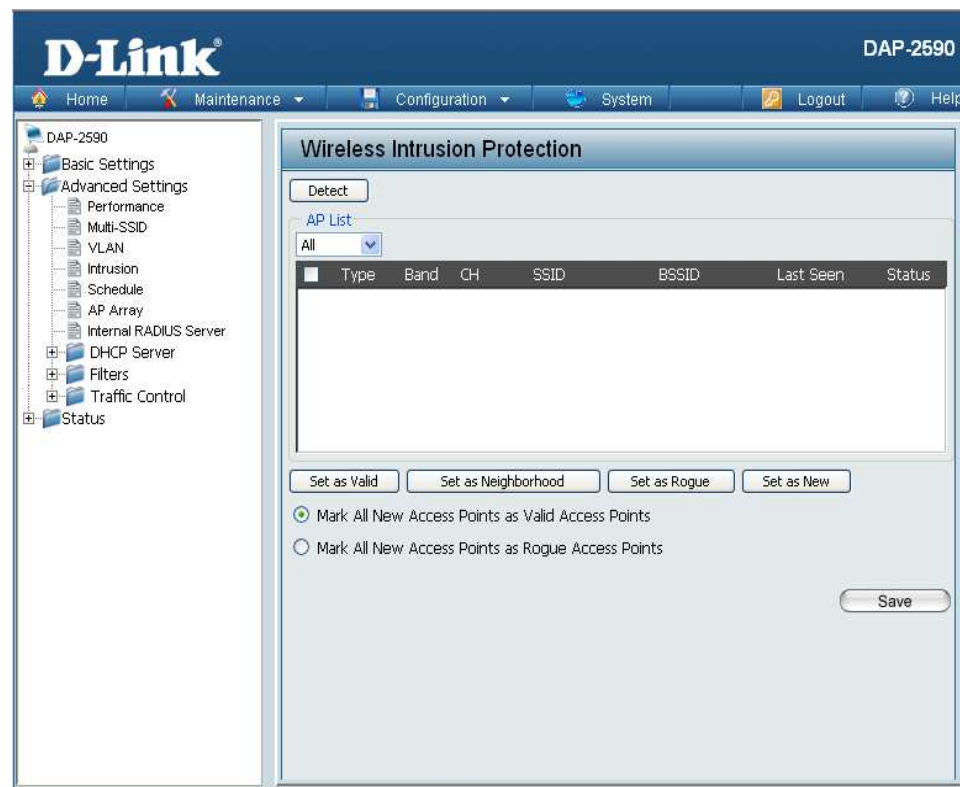

Schedule

The Wireless Schedule Settings window is used to add and modify scheduling rules on the device. When the information for the new schedule rule is finished, click the **Add** button. To discard the new schedule rule settings, click the **Clear** button. Click the **Save** button to let your changes take effect.

Wireless Schedule: Use the drop-down menu to **Enable** the device’s scheduling feature.

Name: Enter a name for the new scheduling rule in the field provided.

Index: Use the drop-down menu to select the desired SSID.


SSID: This read-only field indicates the current SSID in use. To create a new SSID, go to the Wireless Settings window (**Basic Settings > Wireless**).

Day(s): Toggle the radio button between **All Week** and **Select Day(s)**. If the second option is selected, check the specific days you want the rule to be effective on.

All Days(s): Check this box to have settings apply 24 hours a day. If the settings are not to apply 24 hours a day, enter the desired starting and ending times in the next two fields.

Start Time: Enter the beginning hour and minute, using a 24-hour clock.

End Time: Enter the ending hour and minute, using a 24-hour clock.

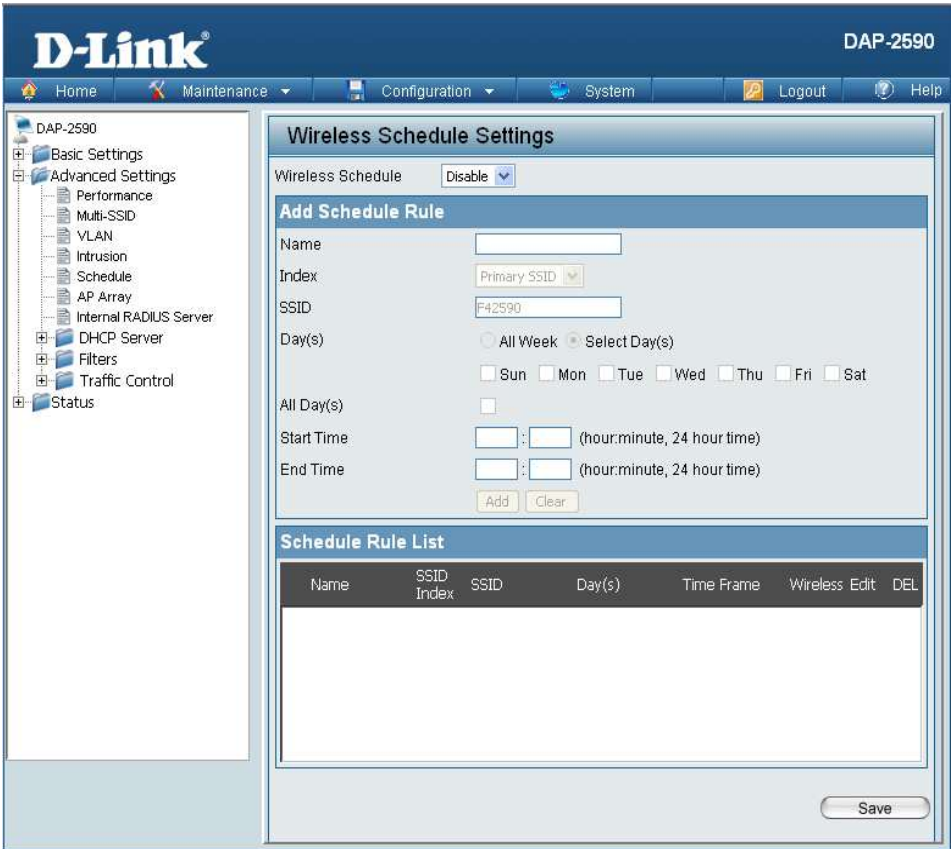

AP Array

The AP Array window allows users to create a set of devices on a network that are organized into a single group in order to increase ease of management. Once a user has made the desired settings, click the **Save** button to let the changes take effect.

- Enable AP Array:


Check this box to enable the AP array function. The three modes that are available are Master, Backup Master, and Slave. APs in the same array will use the same configuration. The configuration will sync the Master AP to the Slave AP and the Backup Master AP when a Slave AP and a Backup Master AP join the AP array
- AP Array Name:

Enter a name for the AP array you have created.
- AP Array Password:

Enter a password that will be used to access the AP array you have created.
- Scan AP Array List:

Click the button to initiate a scan of all the available APs on the network.
- Connection Status:

This displays the status of the current AP array.

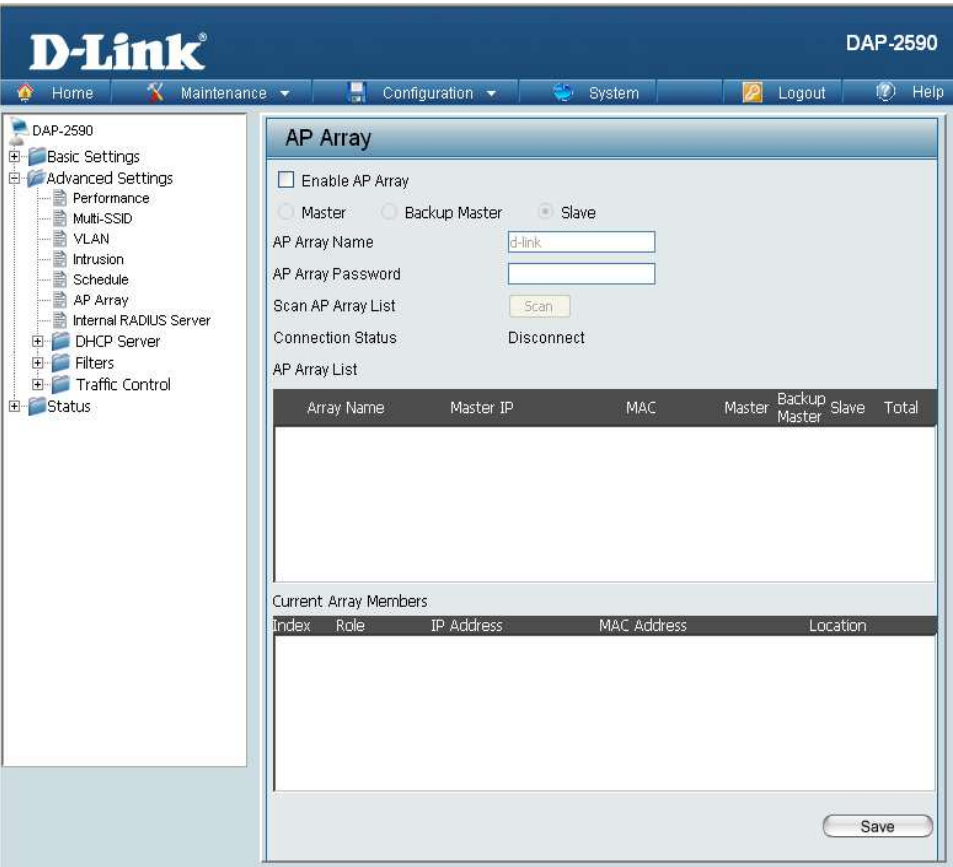

Internal RADIUS Server

The DAP-2590 features a built-in RADIUS server. Once you have finished adding a RADIUS account, click the **Save** button to let your changes take effect. The newly-created account will appear in this RADIUS Account List. The radio buttons allow the user to enable or disable the RADIUS account. Click the icon in the delete column to remove the RADIUS account.

User Name: Enter a name to authenticate user access to the internal RADIUS server.

Password: Enter a password to authenticate user access to the internal RADIUS server.

Status: Toggle the drop-down menu between **Enable** and **Disable**.

The screenshot shows the D-Link DAP-2590 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar lists DAP-2590, Basic Settings, Advanced Settings, and Status. The main content area is titled 'Internal RADIUS Server' and contains two sections: 'Add RADIUS Account' and 'RADIUS Account list'.

Add RADIUS Account

User Name:
Password:
Status:

RADIUS Account list

User Name	Enable	Disable	Delete
Zira(Edit)	☒	☐	

Save

DHCP Server > Dynamic Pool Settings

The DHCP address pool defines the range of the IP address that can be assigned to stations in the network. A Dynamic Pool allows wireless stations to receive an available IP with lease time control. Once a user is finished, click the **Save** button to let the changes take effect.

**Function Enable/
Disable:**

Dynamic Host Configuration Protocol (DHCP) assigns dynamic IP addresses to devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign new IP addresses. Select **Enable** to allow the DAP-2590 to function as a DHCP server.

IP Assigned From:

Input the first IP address available for assignment on your network.

**The Range of Pool
(1-254):**

Enter the number of IP addresses available for assignment. IP addresses are increments of the IP address specified in the "IP Assigned From" field.

SubMask:

All devices in the network must have the same subnet mask to communicate. Enter the submask for the network here.

Gateway:

Enter the IP address of the gateway on the network.

WINS:

Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer that has a dynamically assigned IP address.

DNS:

Enter the IP address of the Domain Name System (DNS) server. The DNS server translates domain names such as www.dlink.com into IP addresses.

The screenshot shows the D-Link DAP-2590 web interface. The left sidebar contains a tree view with categories like Basic Settings, Advanced Settings, and Filters. Under Advanced Settings, 'DHCP Server' is expanded, and 'Dynamic Pool Settings' is selected. The main content area is titled 'Dynamic Pool Settings' and includes the following fields:

- DHCP Server Control:** A dropdown menu set to 'Disable'.
- IP Assigned From:** A text box containing '192.168.0.20'.
- The Range of Pool (1-254):** A text box containing '235'.
- Subnet Mask:** A text box containing '255.255.255.0'.
- Gateway:** An empty text box.
- WINS:** An empty text box.
- DNS:** An empty text box.
- Domain Name:** A text box containing 'dlink-ap'.
- Lease Time (60 - 31536000 sec):** A text box containing '604800'.

A 'Save' button is located at the bottom right of the form.

Domain Name:	Enter the domain name of the network, if applicable. (An example of a domain name is: www.dlink.com.)
Lease Time (60-31536000 sec):	The lease time is the period of time before the DHCP server will assign new IP addresses.

DHCP Server > Static Pool Setting

The DHCP address pool defines the range of IP addresses that can be assigned to stations on the network. A static pool allows specific wireless stations to receive a fixed IP without time control.

Once a user is finished, click the **Save** button to let the changes take effect.

Function Enable/ Disable:

Dynamic Host Configuration Protocol (DHCP) assigns IP addresses to wireless devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign IP addresses. Select **Enable** to allow the DAP-2590 to function as a DHCP server.

Host Name:

Enter the name of the host computer in this text box.

Assigned IP:

Use the Static Pool Settings to assign the same IP address to a device every time you start up. The IP addresses assigned in the Static Pool list must NOT be in the same IP range as the Dynamic Pool. After you have assigned a static IP address to a device via its MAC address, click **Save**; the device will appear in the Assigned Static Pool at the bottom of the window. You can edit or delete the device in this list.

Assigned MAC Address:

Enter the MAC address of the device requesting association here.

Subnet Mask:

Define the subnet mask of the IP address specified in the “IP Assigned From” field.

D-Link DAP-2590

Home Maintenance Configuration System Logout Help

Static Pool Settings

DHCP Server Control

Function Enable/Disable: Disable

Static Pool Setting

Host Name:

Assigned IP:

Assigned MAC Address:

Subnet Mask:

Gateway:

WINS:

DNS:

Domain Name:

Save

Host Name	MAC Address	IP Address	Edit	Delete

Gateway:	Specify the Gateway address for the wireless network.
WINS:	Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer with a dynamically assigned IP address, if applicable.
DNS:	Enter the Domain Name System (DNS) server address for the wireless network. The DNS server translates domain names such as www.dlink.com into IP addresses.
Domain Name:	Specify the domain name for the network.

DHCP Server > Current IP Mapping List

This window displays information about the current assigned DHCP dynamic and static IP address pools. This information is available when you enable DHCP server on the AP and assign dynamic and static IP address pools.

Current DHCP Dynamic Pools: These are IP address pools the DHCP server has assigned using the dynamic pool setting.

Binding MAC Address: The MAC address of a device on the network that is assigned an IP address from the DHCP dynamic pool.


Assigned IP Address: The current corresponding DHCP-assigned IP address of the device.

Lease Time: The length of time that the dynamic IP address will be valid.

Current DHCP Static Pools: These are the IP address pools of the DHCP server assigned through the static pool settings.

Binding MAC Address: The MAC address of a device on the network that is within the DHCP static IP address pool.

Assigned IP Address: The current corresponding DHCP-assigned static IP address of the device.

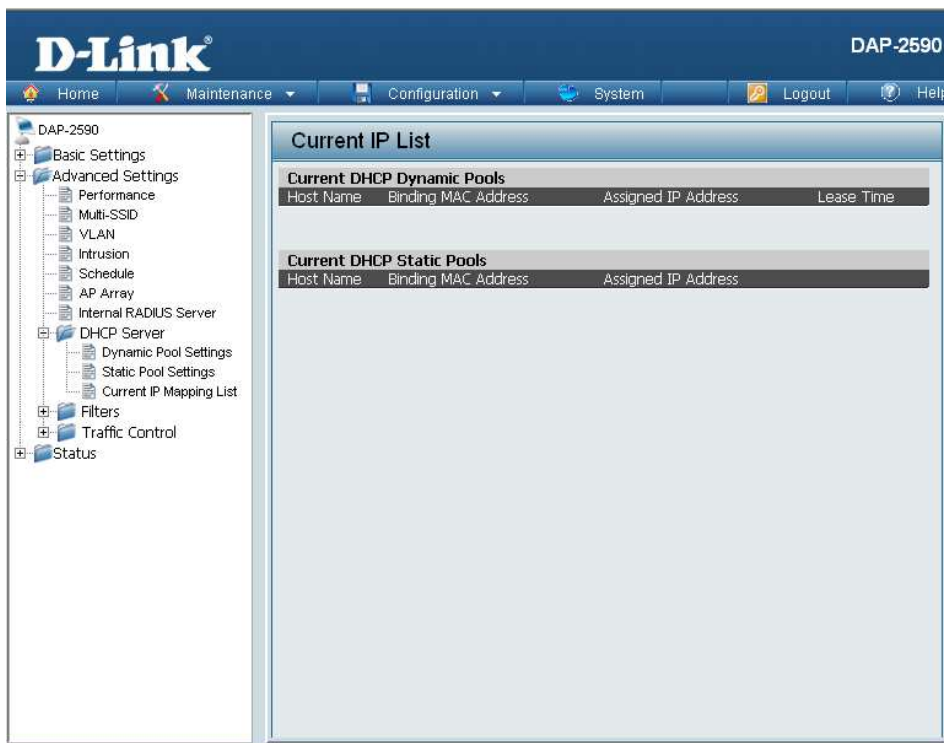

Filters > Wireless MAC ACL

The DAP-2590 features a wireless MAC Access Control List filter. Once a user is finished with these settings, click the **Save** button to let the changes take effect.

Wireless Band: Displays the current wireless band rate.

Access Control List: Select **Disable** to disable the filters function. Select **Accept** to accept only those devices with MAC addresses in the Access Control List. All other devices not on the list will be rejected. Select **Reject** to reject the devices with MAC addresses on the Access Control List. All other devices not on the list will be accepted.

MAC Address: Enter each MAC address that you wish to include in your filter list, and click **Add**.

MAC Address List: When a MAC address is entered, it appears in this list. Highlight a MAC address and click the Delete icon to remove it from this list.

Current Client Information: This table displays information about all the current connected stations.

D-Link® DAP-2590

Home Maintenance Configuration System Logout Help

Wireless MAC ACL Settings

Wireless Band: 5GHz

Access Control List: Disable

MAC Address: [] : [] : [] : [] : [] : [] **Add**

ID	MAC Address	Delete

Current Client Information


MAC Address	SSID	Band	Authentication	Signal	Add

Save

Filters > WLAN Partition

The DAP-2590 features a wireless partition. Once a user is finished with these settings, click the **Save** button to let the changes take effect.


- Wireless Band:** Displays the current wireless band rate.
- Link Integrity:** Select **Enable** or **Disable**. If the Ethernet connection between the LAN and the AP is disconnected, enabling this feature will cause the wireless segment associated with the AP to be disassociated from the AP.
- Ethernet to WLAN Access:** The default is **Enable**. When disabled, all data from the Ethernet to associated wireless devices will be blocked. Wireless devices can still send data to the Ethernet.
- Internal Station Connection:** The default value is **Enable**, which allows stations to intercommunicate by connecting to a target AP. When disabled, wireless stations cannot exchange data on the same Multi-SSID. In Guest mode, wireless stations cannot exchange data with any station on your network.

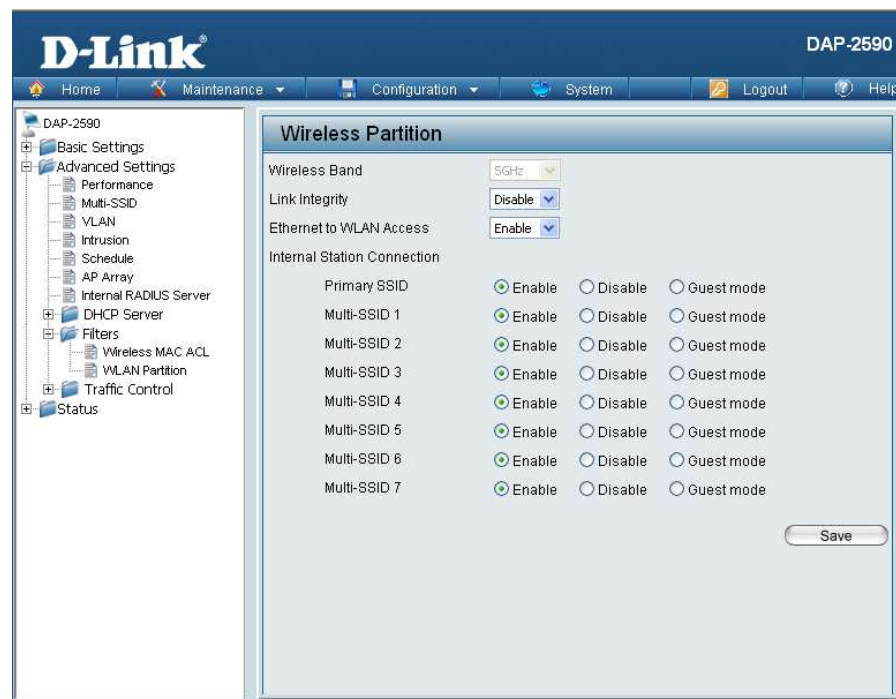

Traffic Control > Uplink/Downlink Setting

The uplink/downlink setting allows users to customize the downlink and uplink interfaces including specifying downlink/uplink bandwidth rates in Mbits per second. These values are also used in the QoS and Traffic Manager windows. Once the desired uplink and downlink settings are finished, click the **Save** button to let your changes take effect.

Downlink Bandwidth:	The downlink bandwidth in Mbits per second.
Uplink Bandwidth:	The uplink bandwidth in Mbits per second.

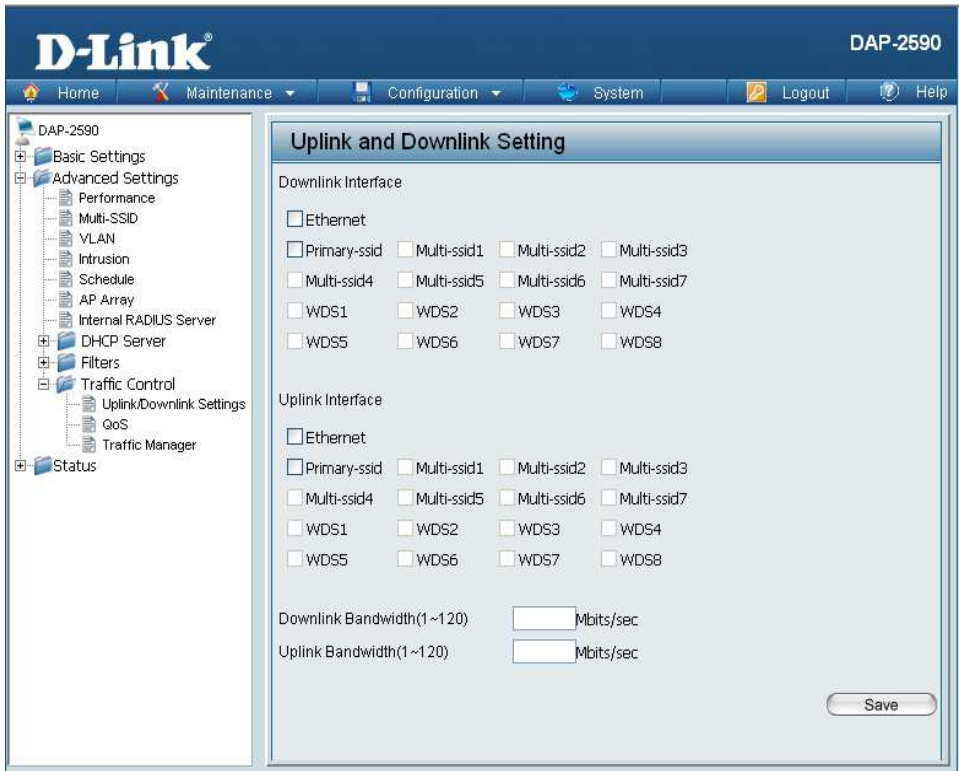

Traffic Control > QoS

Quality of Service (QoS) enhances the experience of using a network by prioritizing the traffic of different applications. The DAP-2590 supports four priority levels. Once the desired QoS settings are finished, click the **Save** button to let your changes take effect.

Enable QoS: Check this box to allow QoS to prioritize traffic. Use the drop-down menus to select the four levels of priority. Click the **Save** button when you are finished.

Downlink Bandwidth: The downlink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

Uplink Bandwidth: The uplink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

D-Link DAP-2590

Home Maintenance Configuration System Logout Help

DAP-2590

- Basic Settings
- Advanced Settings
 - Performance
 - Multi-SSID
 - VLAN
 - Intrusion
 - Schedule
 - AP Array
 - Internal RADIUS Server
 - DHCP Server
 - Filters
 - Traffic Control
 - Uplink/Downlink Settings
 - QoS
 - Traffic Manager
- Status

QoS

Enable QoS ☐

Advanced QoS

Downlink Bandwidth Mbits/sec

Uplink Bandwidth Mbits/sec

ACK/DHCP/ICMP/DNS Priority: Highest Priority Limit: 100 % Port: 53,67,68,546,547

Web Traffic Priority: Third Priority Limit: 100 % Port: 80,443,3128,8080

Mail Traffic Priority: Second Priority Limit: 100 % Port: 25,110,465,995

Ftp Traffic Priority: Low Priority Limit: 100 % Port: 20,21

User Defined-1 Priority: Highest Priority Limit: 100 % Port: 0 - 0

User Defined-2 Priority: Second Priority Limit: 100 % Port: 0 - 0

User Defined-3 Priority: Third Priority Limit: 100 % Port: 0 - 0

User Defined-4 Priority: Low Priority Limit: 100 % Port: 0 - 0

Other Traffic Priority: Low Priority Limit: 100 %

Save

Traffic Control > Traffic Manager

The traffic manager feature allows users to create traffic management rules that specify how to deal with listed client traffic and specify downlink/uplink speed for new traffic manager rules. Click the **Save** button to let your changes take effect.

Traffic Manager: Use the drop-down menu to **Enable** the traffic manager feature.

Unlisted Client Traffic: Toggle the radio buttons between Deny and Forward to determine how to deal with unlisted client traffic.

Downlink Bandwidth: The downlink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

Uplink Bandwidth: The uplink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

The screenshot shows the D-Link DAP-2590 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of settings: Basic Settings, Advanced Settings (Performance, Multi-SSID, VLAN, Intrusion, Schedule, AP Array, Internal RADIUS Server, DHCP Server, Filters, Traffic Control, Uplink/Downlink Settings, QoS, Traffic Manager), and Status. The main content area is titled 'Traffic Manager' and contains the following settings:

- Traffic Manager:** A dropdown menu set to 'Enable'.
- Unlisted Clients Traffic:** Radio buttons for 'Deny' and 'Forward' (selected).
- Downlink Bandwidth:** A text input field with '100' and a unit dropdown set to 'Mbits/sec'.
- Uplink Bandwidth:** A text input field with '100' and a unit dropdown set to 'Mbits/sec'.

Below these settings is a section titled 'Add Traffic Manager Rule' with the following fields:


- Name:** A text input field.
- Client IP(optional):** A text input field.
- Client MAC(optional):** A text input field.
- Downlink Speed:** A text input field with a unit dropdown set to 'Mbits/sec'.
- Uplink Speed:** A text input field with a unit dropdown set to 'Mbits/sec'.

At the bottom of this section are 'Add' and 'Clear' buttons. Below the 'Add Traffic Manager Rule' section is a table titled 'Traffic Manager Rules' with the following columns: Name, Client IP, Client MAC, Downlink Speed, Uplink Speed, Edit, and Del. The table is currently empty. A 'Save' button is located at the bottom right of the page.

Home > Status

Device Information

Device Information: This read-only window displays the configuration settings of the DAP-2590, including the firmware version and the device's MAC address.

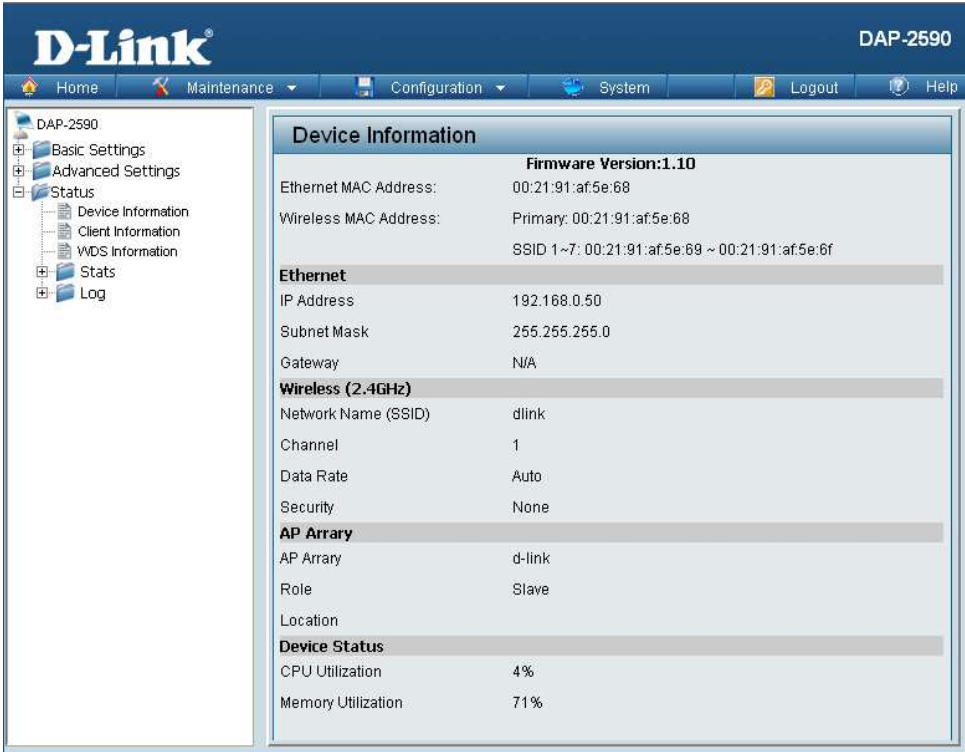


Client Information

Client Information: This window displays the wireless client information for clients currently connected to the DAP-2590.

The following information is available for each client communicating with the DAP-2590.

- SSID:** Displays the SSID of the client.
- MAC:** Displays the MAC address of the client.
- Band:** Displays the wireless band that the client is connected to.
- Authentication:** Displays the type of authentication being used.
- Signal:** Displays the client's signal strength.
- Power Saving Mode:** Displays the status of the power saving feature.

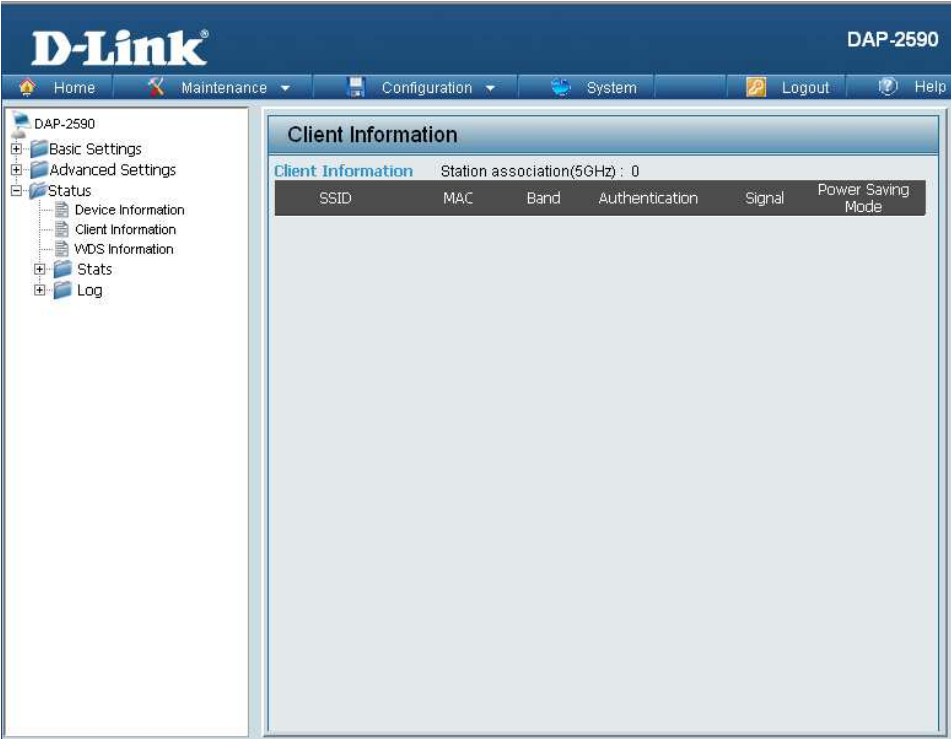


WDS Information

WDS Information: This window displays the Wireless Distribution System information for clients currently connected to the DAP-2590.

The following information is available for each client communicating with the DAP-2590.


- Name:** Displays the name of the client.
- MAC:** Displays the MAC address of the client.
- Authentication:** Displays the type of authentication being used.
- Signal:** Displays the WDS link signal strength.
- Status:** Displays the status of the power saving feature.

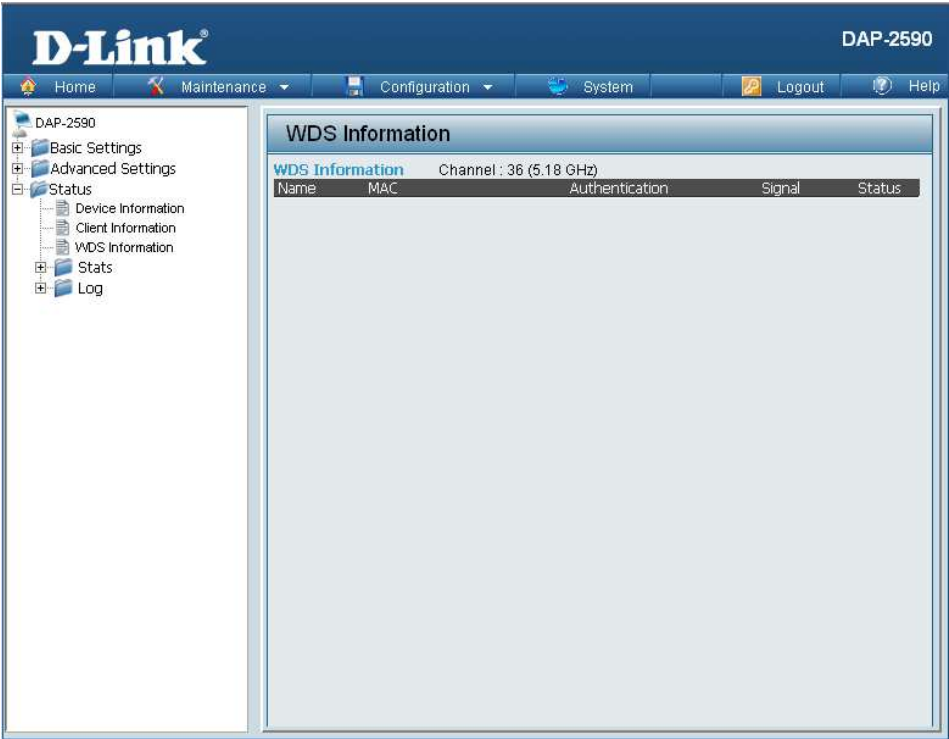

Home > Status


Stats > Ethernet

Ethernet Traffic Statistics: This window displays transmitted and received count statistics for packets and bytes.

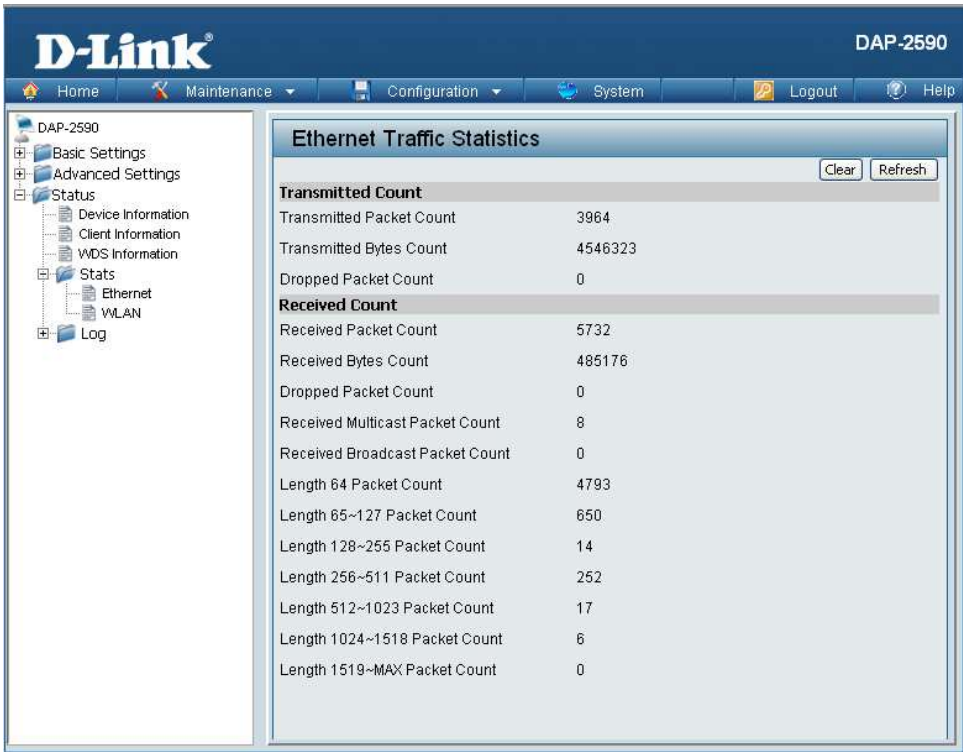


Stats > WLAN

WLAN Traffic Statistics: This window displays wireless network statistics for data throughput, transmitted and received frames, and frame errors.

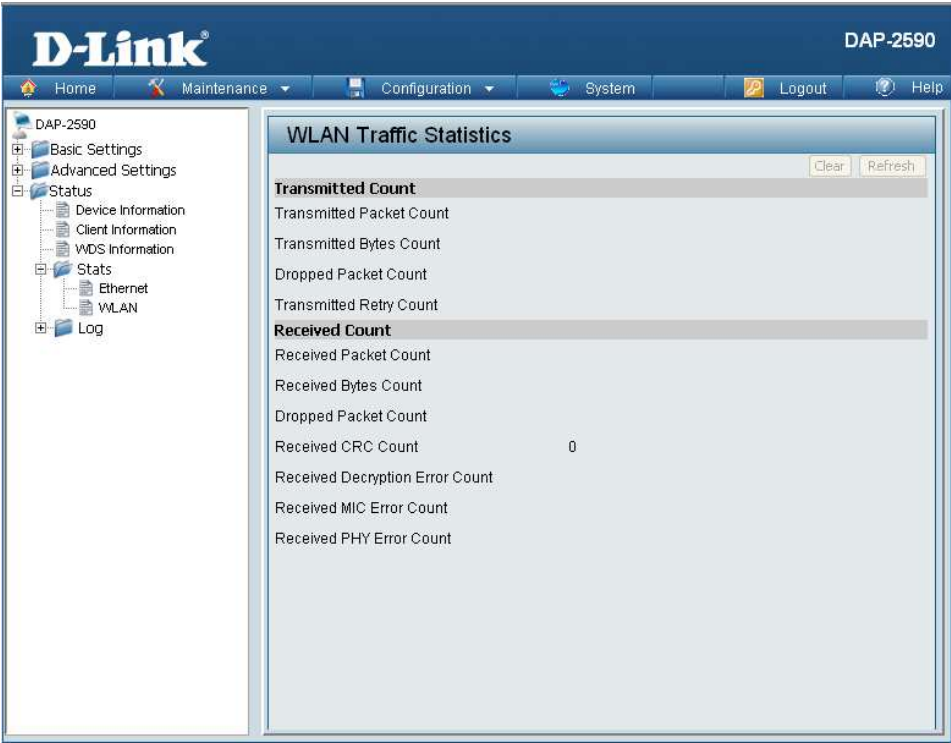

Log > View Log

View Log: The AP's embedded memory displays system and network messages including a time stamp and message type. The log information includes but is not limited to the following items: cold start AP, upgrading firmware, client associate and disassociate with AP, and web login. The web page holds up to 500 logs.

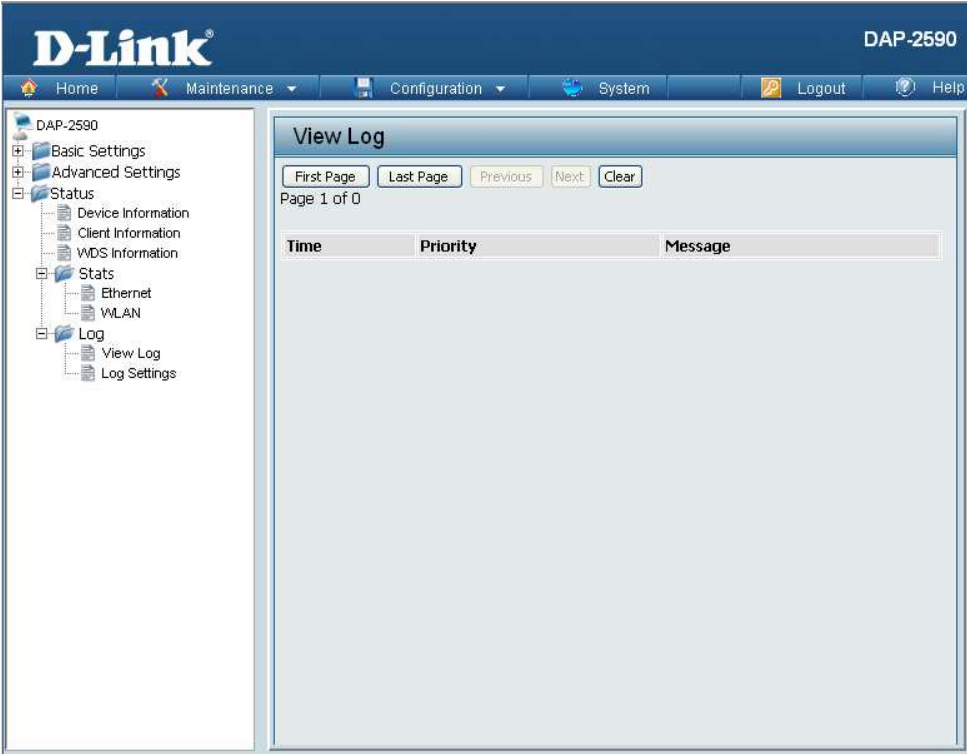

Log > Log Settings

- Log Server/IP Address:** Enter the IP address of the server you would like to send the DAP-2590 log to.
- Log Type:** Check the box for the type of activity you want to log. There are three types: System Activity, Wireless Activity, and Notice.
- Email Notification:** Check the box to enable Simple Mail Transfer Protocol.
- From Email Address:** Enter the e-mail address of the e-mail/SMTP sender.
- To Email Address:** Enter the e-mail address of the e-mail/SMTP recipient.
- Email Server Address:** Enter the IP address of the e-mail/SMTP server.
- SMTP Port:** Enter the desired SMTP port number. The default value is 25.
- User Name:** Enter a user name for the SMTP server.
- Password:** Enter a password for the SMTP server.
- Confirm Password:** Confirm the password for the SMTP server by retyping it.
- Schedule:** Use the pull-down menu to set the e-mail log schedule.

D-Link DAP-2590

Home Maintenance Configuration System Logout Help

Log Settings

Log Server / IP Address:

Log Type: ☒ System Activity ☒ Wireless Activity ☒ Notice

Email Notification

Email Notification: ☐ Enable

From Email Address:

To Email Address:

Email Server Address:

SMTP Port:

User Name:

Password:

Confirm Password:


Email Log Schedule

Schedule: hours or when Log is full

Save

Maintenance > Administrator Settings

Check one or more of the six main categories to display the various hidden administrator parameters and settings displayed on the next six windows.

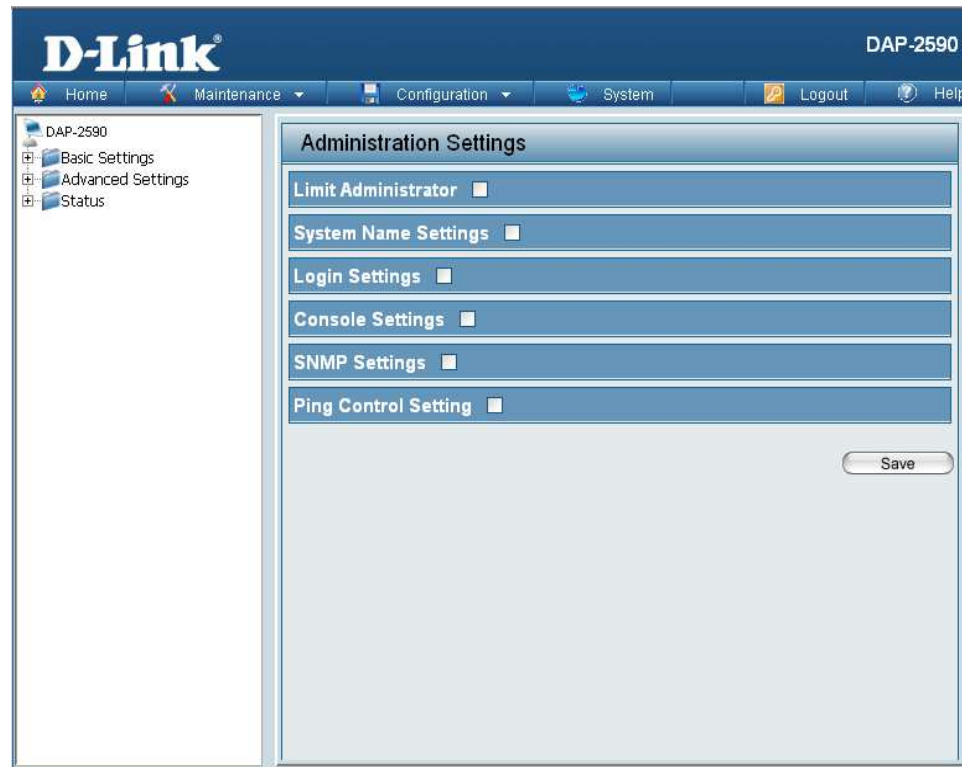

Limit Administrator

Confirm New Password: Confirm by re-entering your new password here.


Each of the six main categories display various hidden administrator parameters and settings.

Limit Administrator

Limit Administrator VLAN ID: Check the box provided and then enter the specific VLAN ID that the administrator will be allowed to log

Limit Administrator IP: Check to enable the Limit Administrator IP address.

IP Range: Enter the IP address range that the administrator will be allowed to log in from and then click the **Add** button.

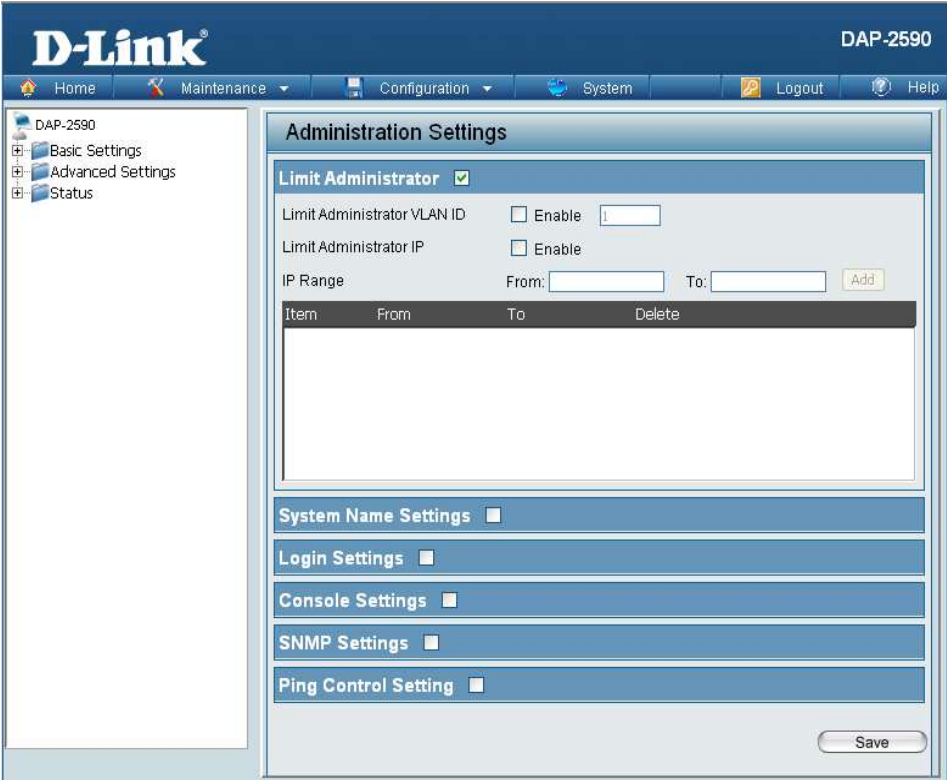

System Name Settings


Confirm New Password: Confirm by re-entering your new password here.

Each of the six main categories display various hidden administrator parameters and settings.

System Name Settings

System Name: The name of the device. The default name is **D-Link DAP-2590**.

Location: The physical location of the device, e.g. “office”.

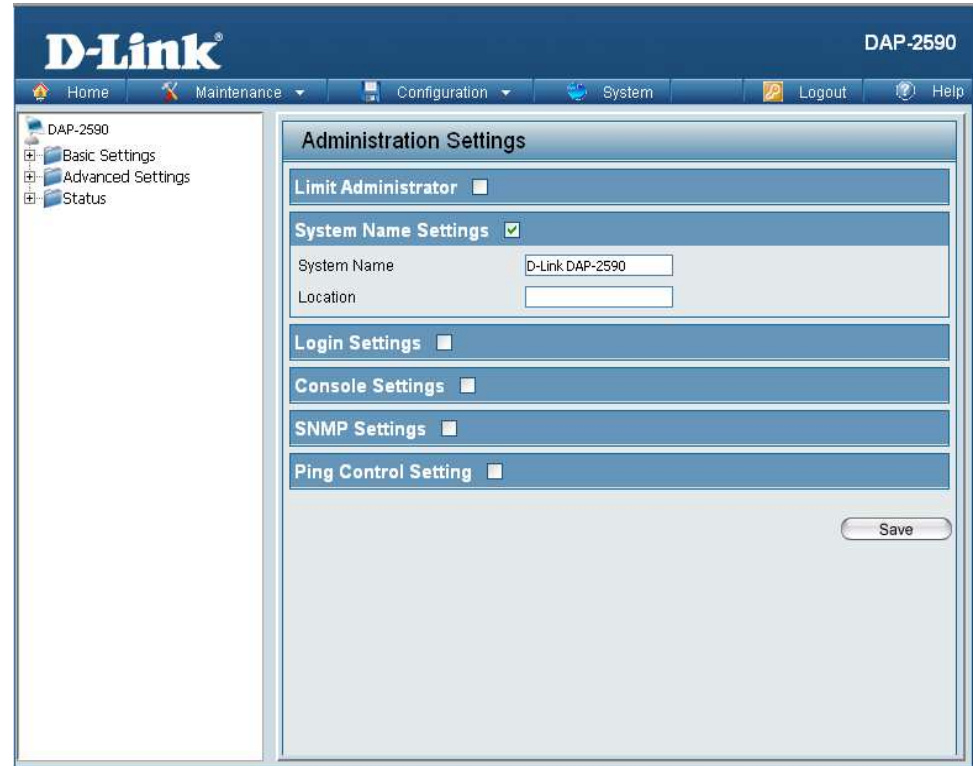

The screenshot displays the D-Link DAP-2590 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. A sidebar on the left lists the main configuration categories: DAP-2590, Basic Settings, Advanced Settings, and Status. The main content area is titled 'Administration Settings' and contains several sub-sections: 'Limit Administrator' (disabled), 'System Name Settings' (active), 'Login Settings' (disabled), 'Console Settings' (disabled), 'SNMP Settings' (disabled), and 'Ping Control Setting' (disabled). The 'System Name Settings' section features two input fields: 'System Name' with the value 'D-Link DAP-2590' and 'Location' which is currently empty. A 'Save' button is located at the bottom right of the settings area.

Login Settings

Confirm New Password: Confirm by re-entering your new password here.

Each of the six main categories display various hidden administrator parameters and settings.

Login Settings

User Name: Enter a user name. The default is **admin**.

Old Password: When changing your password, enter the old password here.

New Password: When changing your password, enter the new password here. The password is case-sensitive. “A” is a different character than “a.” The length should be between 0 and 12 characters.

Confirm Password: Enter the new password a second time for confirmation purposes.

The screenshot displays the D-Link DAP-2590 web interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with 'DAP-2590' selected, containing sub-items: Basic Settings, Advanced Settings, and Status. The main content area is titled 'Administration Settings' and contains several expandable sections: 'Limit Administrator' (collapsed), 'System Name Settings' (collapsed), 'Login Settings' (expanded), 'Console Settings' (collapsed), 'SNMP Settings' (collapsed), and 'Ping Control Setting' (collapsed). The 'Login Settings' section is active and shows four input fields: 'Login Name' (containing 'admin'), 'Old Password', 'New Password', and 'Confirm Password'. A 'Save' button is located at the bottom right of the main content area.

Console Settings

Confirm New Password: Confirm by re-entering your new password here.

Each of the six main categories display various hidden administrator parameters and settings.

Console Settings

Status: Status is enabled by default. Uncheck the box to disable the console.

Console Protocol: Select the type of protocol you would like to use, Telnet or SSH.

Timeout: Set to **1 Min**, **3 Mins**, **5 Mins**, **10 Mins**, **15 Mins** or **Never**.

The screenshot displays the D-Link DAP-2590 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with 'DAP-2590' expanded, containing 'Basic Settings', 'Advanced Settings', and 'Status'. The main content area is titled 'Administration Settings' and contains several sections: 'Limit Administrator' (disabled), 'System Name Settings' (disabled), 'Login Settings' (disabled), 'Console Settings' (enabled), 'SNMP Settings' (disabled), and 'Ping Control Setting' (disabled). The 'Console Settings' section is active and shows 'Status' as 'Enable' (checked), 'Console Protocol' as 'Telnet' (selected over SSH), and 'Timeout' as '3 Mins' (selected from a dropdown). A 'Save' button is located at the bottom right of the settings area.

SNMP Settings

Confirm New Password: Confirm by re-entering your new password here.

Each of the six main categories display various hidden administrator parameters and settings.

SNMP Settings

Status: Check the box to enable the SNMP functions. This is enabled by default.

Public Community String: Enter the public SNMP community string.

Private Community String: Enter the private SNMP community string.

Trap Status: Check the box to enable the trap status.

Trap Server IP: Enter the trap server IP address. This is the IP address of the SNMP manager to receive traps sent from the wireless access point.

The screenshot shows the D-Link DAP-2590 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar lists Basic Settings, Advanced Settings, and Status. The main content area is titled 'Administration Settings' and contains several sections: Limit Administrator, System Name Settings, Login Settings, Console Settings, and SNMP Settings. The SNMP Settings section is expanded, showing a 'Status' checkbox checked (labeled 'Enable'), 'Public Community String' set to 'public', 'Private Community String' set to 'private', 'Trap Status' checkbox unchecked (labeled 'Enable'), and an empty 'Trap Server IP' field. A 'Ping Control Setting' checkbox is also present. A 'Save' button is located at the bottom right of the settings area.


Ping Control Setting

Confirm New Password: Confirm by re-entering your new password here.

Each of the six main categories display various hidden administrator parameters and settings.

Ping Control Setting

Status: Check the box to enable Ping control. Ping works by sending ICMP “echo request” packets to the target host and listening for ICMP echo response replies. The default is enabled.

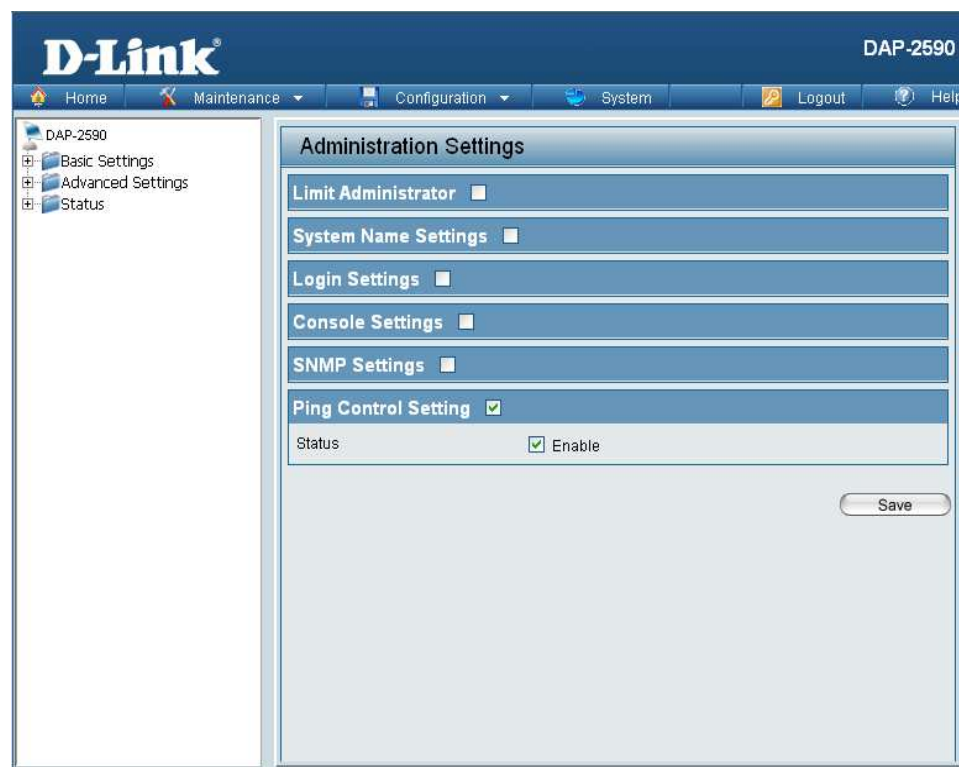

Firmware and SSL Certification Upload

Upload Firmware From Local Hard Drive:

The current firmware version is displayed above the file location field. After downloading the most recent version of firmware for the DAP-2590 from <http://support.dlink.com> to your local computer, use the **Browse** button to locate the firmware file on your computer. Click **Upload** to update the firmware version. Please don't turn the power off while upgrading.

Language Pack Upgrade:

Click **Browse** to locate the language pack upgrade on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2590.

Upload SSL Certification From Local Hard Drive:

Click **Browse** to locate the SSL Certification file on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2590.


The screenshot displays the D-Link DAP-2590 web management interface. The top navigation bar includes links for Home, Maintenance, Configuration, System, Logout, and Help. A sidebar on the left lists navigation options: DAP-2590, Basic Settings, Advanced Settings, and Status. The main content area is titled "Firmware and SSL Certification Upload" and contains three sections:

- Update Firmware From Local Hard Drive:** Shows "Firmware Version 1.10" and a form with a text input field, a "Browse..." button, and an "Upload" button.
- Language Pack Upgrade:** Includes a form with a text input field, a "Browse..." button, and an "Upload" button.
- Update SSL Certification From Local Hard Drive:** Contains two forms. The first has a text input field, a "Browse..." button, and an "Upload" button. The second has a text input field, a "Browse..." button, and an "Upload" button.

Maintenance > Configuration File

Upload File: Click the **Browse** button to locate a previously saved configuration file on your local computer. After selecting the file, click **Upload** to apply the configuration settings to the DAP-2590.

Download Configuration File: Click **Download** to save the current DAP-2590 configuration to your local computer. Note that if you save one configuration with the administrator's password now, after resetting your DAP-2590, and then updating to this saved configuration file, the password will be gone.

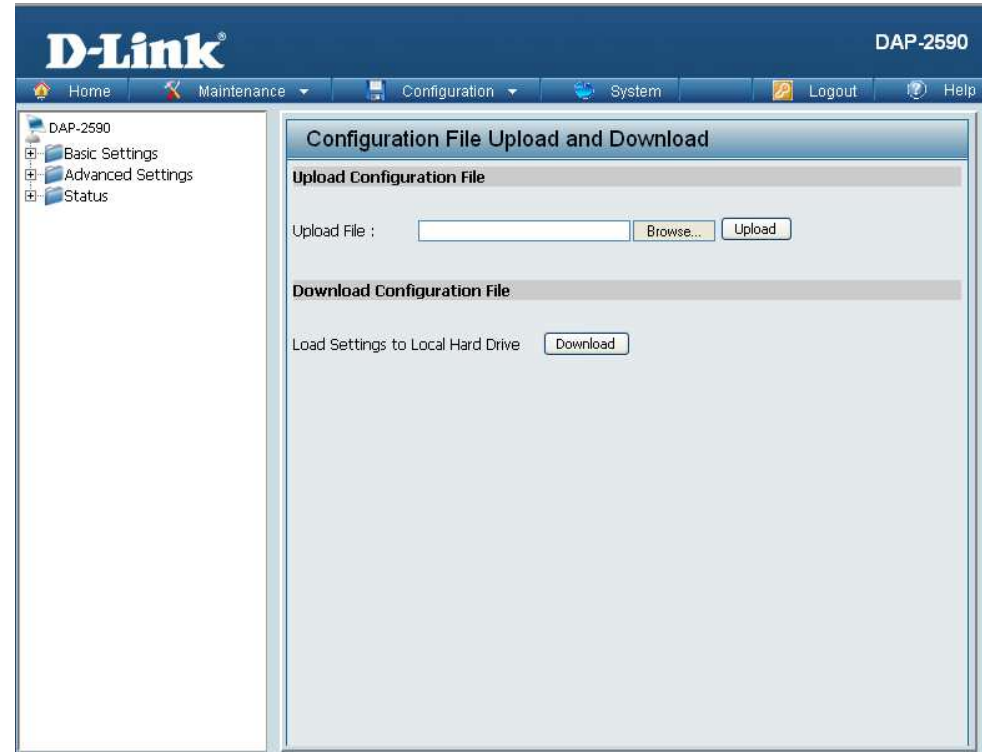

Maintenance > Time and Date

Current Time: Displays the current time and date settings.

Time Zone: Use the drop-down menu to select your correct Time Zone.

Enable Daylight Saving: Check the box to Enable Daylight Saving Time.

Daylight Saving Offset: Use the drop-down menu to select the correct Daylight Saving offset.

Daylight Saving Dates: Use the drop-down menu to select the correct Daylight Saving offset.

Enable NTP Server: Check to enable the AP to get system time from an NTP server.

NTP Server: Enter the NTP server IP address.

Set the Date and Time Manually: A user can either manually set the time for the AP here, or click the **Copy Your Computer's Time Settings** button to copy the time from the computer in use (Make sure that the computer's time is set correctly).

The screenshot shows the D-Link DAP-2590 web interface. The top navigation bar includes Home, Maintenance (selected), Configuration, System, Logout, and Help. The left sidebar shows DAP-2590, Basic Settings, Advanced Settings, and Status. The main content area is titled 'Time and Date Settings' and contains three sections:

- Time Configuration:**
 - Current Time: 12/31/1999 21:22:32
 - Time Zone: (GMT-08:00) Pacific Time (US & Canada); Tijuana
 - Enable Daylight Saving: ☐
 - Daylight Saving Offset: +1:00
 - Daylight Saving Dates:

	Month	Week	Day of Week	Current Time
DST Start	Jan	1st	Sun	12 am
DST End	Jan	1st	Sun	12 am
- Automatic Time Configuration:**
 - Enable NTP Server: ☐
 - NTP Server: << Select NTP Server
- Set the Date and Time Manually:**
 - Date And Time:

Year	Month	Day	Hour	Minute	Second
2009	Mar	16	16	14	15
 - Copy Your Computer's Time Settings


A 'Save' button is located at the bottom right of the page.

Configuration > Save and Activate



The drop-down Configuration menu allows users to save the current changes and reboot the DAP-2590 by clicking "Save and Activate".

If the "Save and Activate" option is selected, the following window will appear to display how many seconds remain before the save settings and reboot system action is completed.

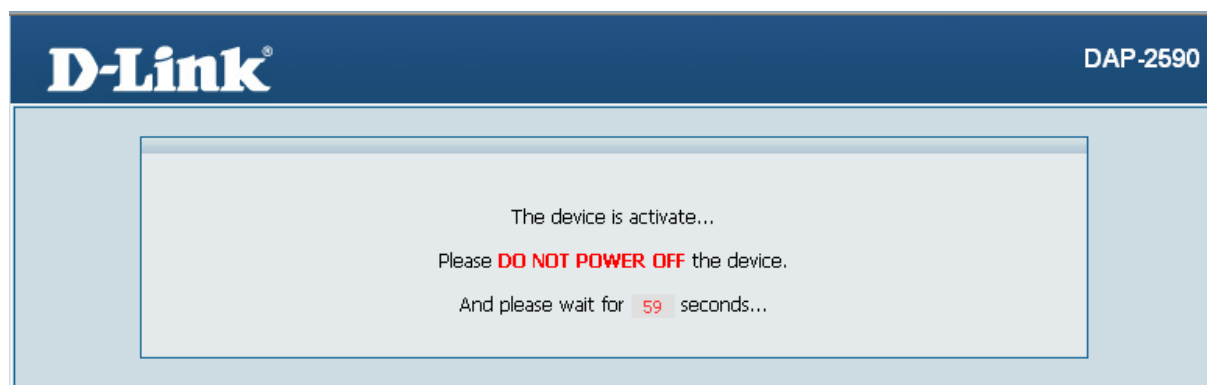

Configuration > Discard Changes



The drop-down Configuration menu allows users to drop the latest changes by clicking "Discard Changes."


System > System Settings

- Restart the Device:

Click **Restart** to restart the DAP-2590.
- Restore to Factory Default Settings:

Click **Restore** to restore the DAP-2590 back to factory default settings.
- Clear Language Pack:

Click **Clear** to remove the DAP-2590 language pack.

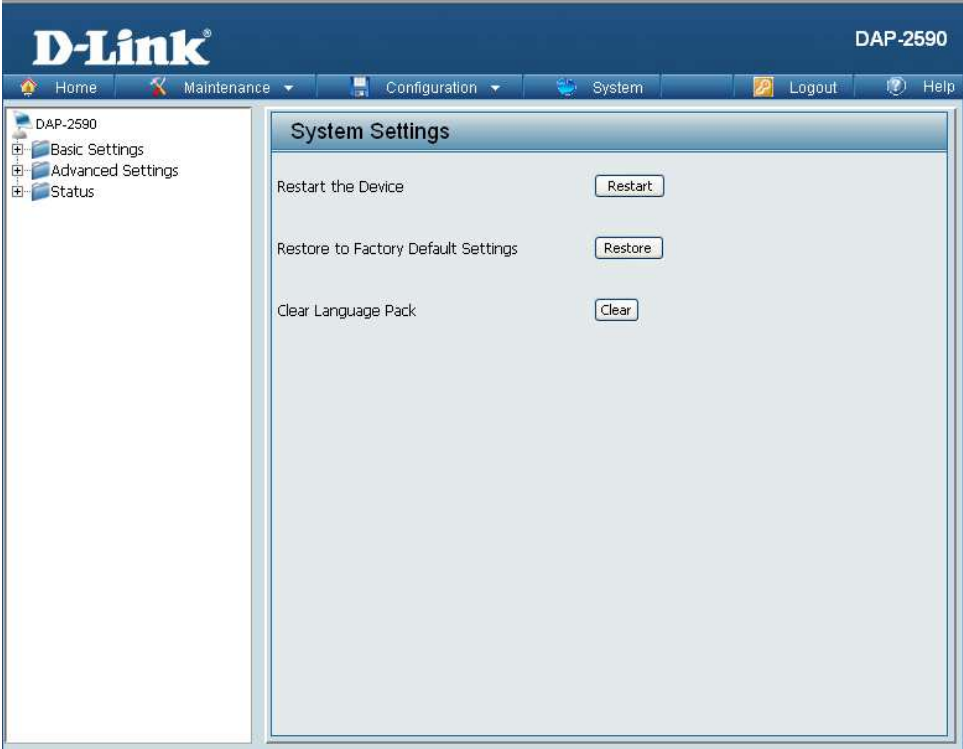

Help

Basic Settings

Wireless Settings

Allow you to change the wireless settings to fit an existing wireless network or to customize your wireless network.

Wireless Band
Operating frequency band. Choose 2.4GHz for visibility to legacy devices and for longer range. Choose 5GHz for least interference; interference can hurt performance. This AP will operate one band at a time.

Mode
Select a function mode to configure your wireless network. Function modes include AP, WDS (Wireless Distribution System) with AP, WDS and Wireless Client. Function modes are designed to support various wireless network topology and applications.

Network Name (SSID)
Also known as the Service Set Identifier, this is the name designated for a specific wireless local area network (WLAN). The factory default setting is "dlink". The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility
Indicate whether or not the SSID of your wireless network will be broadcasted. The default value of SSID Visibility is set to "Enable," which allow wireless clients to detect the wireless network. By changing this setting to "Disable," wireless clients can no longer detect the wireless network and can only connect if they have the correct SSID entered.

Auto Channel Selection
If you check Auto Channel Scan, everytime when AP is booting up, the AP will automatically find the best channel to use. This is enabled by default.

Channel
Indicate the channel setting for the DAP-2590. By default, the AP is set to Auto Channel Scan. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network.

Channel Width
Allows you to select the channel width you would like to operate in. Select 20MHz if you are not using any 802.11n wireless clients. Auto 20/40MHz allows you to use both 802.11n and non-802.11n wireless devices in your network.

Authentication
For added security on a wireless network, data encryption can be enabled. There are several available Authentications type can be selected. The default value for Authentication is set to "Open System".

Open System
For Open System authentication, only the wireless clients with the same WEP key will be able to communicate on the wireless network. The Access Point will remain visible to all devices on the network.

Shared Key
For Shared Key authentication, the Access Point cannot be seen on the wireless network except to the wireless clients that share the same WEP key.

WPA-Personal/WPA2-Personal/WPA-Auto-Personal
Wi-Fi Protected Access authorizes and authenticates users onto the wireless network. It uses TKIP encryption to protect the network through the use of a pre-shared key. WPA and WPA2 uses different algorithm. WPA-Auto allows both WPA and WPA2.

WPA-Enterprise/ WPA2-Enterprise/ WPA-Auto-Enterprise
Wi-Fi Protected Access authorizes and authenticates users onto the wireless network. WPA uses stronger security than WEP and is based on a key that changes automatically at a regular interval. It requires a RADIUS server in the network. WPA and WPA2 uses different algorithm. WPA-Auto allows both WPA and WPA2.

Network Access Protection
Network Access Protection (NAP) is a feature of Windows Server 2008. NAP controls access to network resources based on a client computer's identity and compliance with corporate governance policy. NAP allows network administrators to define granular levels of

Help: | Scroll down the Help page for topics and explanations.

Using the AP Array

The deployment of wireless local area network (WLAN) in a small office environment is often hindered by the lack of simplicity, stability and affordability. Multiple access points (APs) will require more effort in configuration and management, and the complexity of security settings adds to the burden. With limited resources in a small office, solutions provided for bigger organizations will be too complicated and not economical.

D-Link's AP Array is an ideal WLAN management tool for the small office. The WLAN management feature is built within the firmware, making configuration for multiple APs an effortless process. All AirPremier 11n Business APs support this tool, which can manage up to eight stand-alone APs. This will make WLAN deployment easier and more affordable.

Simple WLAN Management Tool

When one needs to set up a wireless local area network (WLAN) in a small office with limited IT resources, D-Link's AP Array is the answer. It allows the efficient deployment of a secured WLAN and easier administration from a single point; thus, minimizing the effort to maintain the wireless network.

Easy Deployment and Management

With D-Link's AP Array, deployment and management of APs are made simple. The following steps show how straightforward it is to deploy the array of APs:

Step 1 - Deployment of Master AP:

- Designate one AP as Master
- Set up Array ID & password
- Configure the AP


Step 2 - Deployment of Slave APs:

- Specify Array ID & password of Master in Slave APs.

Step 3 - Settings Are Synchronized:

- Backup Master & all Slave APs will follow configuration from Master automatically.

AP Array Infrastructure

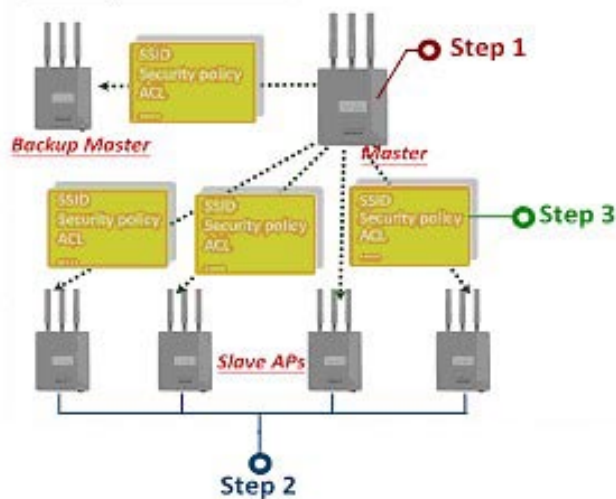

Up to eight stand-alone APs can be managed in an array. Members in the same AP Array group must be on the same subnet of the same model, and each AP is assigned with a unique IP address.

Situations Encountered with the Different Implementations:

- **Multiple Master APs:** If there are two or more Master APs assigned in an array, the AP with the longest run-time will become the Master AP.

Note: The other Master APs will become Backup Master APs.



- **Manually Configured Slave AP:** At intervals of one minute, the Master AP will send out a beacon to check the status of the Slave APs. If any changes are done to the slave APs manually, the Master AP will automatically synchronize its configuration to the slave AP and overwrite it.
- **Master AP Crashed:** In a situation where the Master AP becomes unavailable to the array, the Backup Master AP will take over the Master role and synchronize the configuration to the Slave APs.



- **No Backup Master AP Available:** If the Master AP crashes and there are only Slave APs in the array, the Slave APs will work as stand-alone APs until a new Master joins the array. The administrator may want to configure two Master APs for the array, so that there is always a Backup Master AP available.

Whenever the user makes any changes in the Master AP and selects “Save & Activate”, the Master AP in an array will automatically synchronize its configuration to all Slave APs.

Settings that can be synchronized are:

- Wireless Settings
- Multiple SSID & VLAN
- WiFi Schedule
- MAC Filter
- WLAN Partition
- DHCP Server
- Log Settings
- Time & Date
- QoS Settings
- Performance Settings
- All Administrator Settings

Settings that are not synchronized are:

- Operation Mode
- Radio Channel
- LAN Settings

If required, settings that are not synchronized will have to be configured individually for each AP.

Different AP Roles in an Array

There are three modes for the administrator to define the role of each AP.

- **Master AP**
The Master AP can do all the management settings for members in an array. Each array can only have one Master AP.
- **Backup Master AP**
In an event when the Master AP crashes, the Backup Master AP will take over the Master AP function. Each array can have up to two Backup Master APs.
- **Slave AP**
The Slave AP follows all the settings in the Master AP.

Easy Configuration of D-Link AP Array


The following section shows how simple it is to configure the D-Link AP Array for the different AP roles:

Master AP Role

Click **Advanced Settings > AP Array** to view and edit the information on the AP in an array.

Step 1:

Click **Enable AP Array** and select the **Master** role.

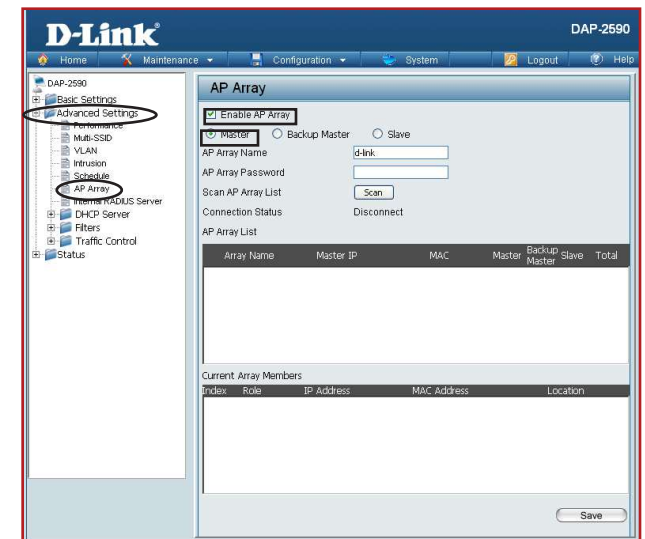

Step 2:

Set up the AP Array **name** and **password**. Click the **Save** button located on the lower right hand side.

Note: Remember to select “Save & Activate”. The AP will not become master until you select “Save & Activate”.

D-Link DAP-2590

AP Array

☒ Enable AP Array

☐ Master ☐ Backup Master ☐ Slave

AP Array Name: 2590array

AP Array Password: *****

Scan AP Array List: Scan

Connection Status: Disconnect

AP Array List

Array Name	Master IP	MAC	Master	Backup slave	Total

Current Array Members

Index	Role	IP Address	MAC Address	Location

Save

Slave AP Role

Click **Advanced Settings** > **AP Array** to view and edit the information on the AP in an array.

Step 1:

Click **Enable AP Array** and select the **Slave** role.

D-Link DAP-2590

AP Array

☒ Enable AP Array

☐ Master ☐ Backup Master ☒ Slave

AP Array Name: 2590array

AP Array Password: *****

Scan AP Array List: Scan

Connection Status: Disconnect

AP Array List

Array Name	Master IP	MAC	Master	Backup slave	Total

Current Array Members


Index	Role	IP Address	MAC Address	Location

Save

Step 2:

Click the **Scan** button to search for an existing array, and enter the array password to join it. Click the **Save** button located on the lower right hand side.

Note: Remember to select “Save & Activate”. The AP will not become slave until you select “Save & Activate”.

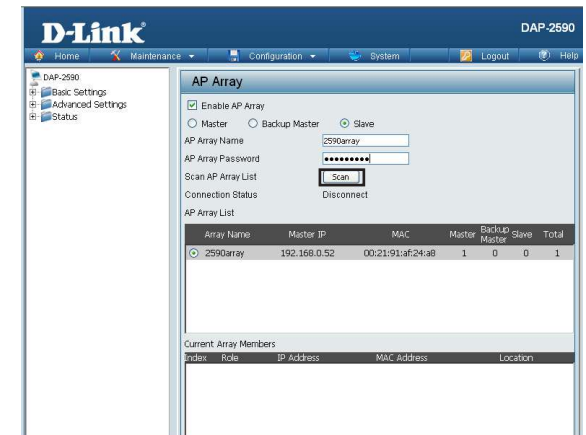

Supported in all D-Link 11n Business APs

D-Link AP Array is supported in all D-Link 11n business APs.

Note: Please refer to your local D-Link website for any new models of D-Link 11n business APs. You may also get the latest AP Array function by doing a firmware update.

Reliable WLAN Management Tool

When you need a reliable WLAN management tool for your small office, the D-Link AP Array will be the ideal choice to provide you with the simplicity to configure and manage an array of APs. Being a free software module that is built in D-Link 11n business APs, it eliminates the need for an extra software or PC.

With auto-synchronization, it means that configuration will only need to be done on the Master AP, and it will automatically be synchronized to the Slave APs.

As AP configuration and management are done within only one Master AP, you will be able to view the deployment of APs as a single wireless network rather than a series of separate wireless devices.

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DAP-2590 Wireless Access Point. We will cover various aspects of the network setup, especially the network adapters. Please read the following if you are having any technical difficulties.

Note: *It is recommended that you use an Ethernet connection to configure the DAP-2590.*


1. The computer used to configure the DAP-2590 cannot access the Configuration menu.

- Check if the LAN LED on the DAP-2590 is ON. If the LED is not ON, check if the cable for the Ethernet connection is securely inserted.
- Check if the Ethernet adapter is working properly. Please see item 3 of this Troubleshooting section to check that the drivers for the network adapters are loaded properly.
- Check if the IP address is in the same range and subnet as the DAP-2590.

Note: *The default IP address of the DAP-2590 is 192.168.0.50. All the computers on the network must have a unique IP address in the same range, e.g. 192.168.0.x. Any computers that have identical IP addresses will not be visible on the network. They must all have the same subnet mask, e.g. 255.255.255.0.*

- Do a Ping test to make sure that the DAP-2590 is responding. Go to **Start>Run>Type** “Command” and at the DOS prompt, type “ping 192.168.0.50”. A successful ping will show four replies.

Note: *If you have changed the default IP address, make sure to ping the correct IP address assigned to the DAP-2590.*

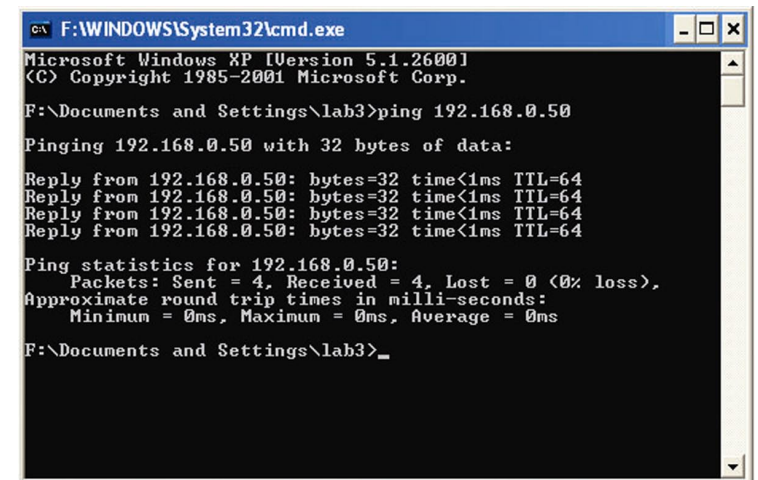

```
C:\F:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab3>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:


Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

F:\Documents and Settings\lab3>
```

2. The wireless client cannot access the Internet within Infrastructure mode.

Make sure the wireless client is associated and joined with the correct access point. To check this connection, right-click on the Local Area Connection icon in the taskbar and select View Available Wireless Networks. The Connect to Wireless Network screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

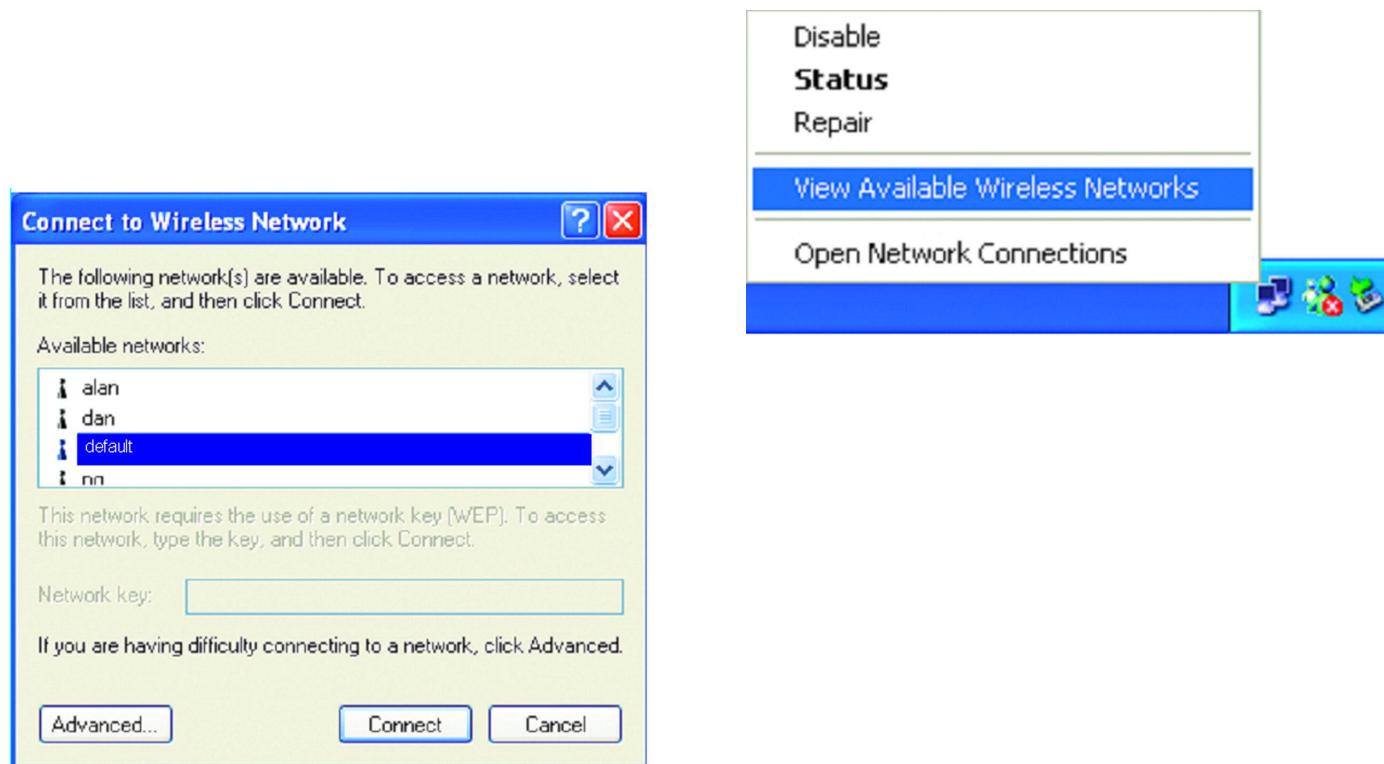

- Check that the IP address assigned to the wireless adapter is within the same IP address range as the access point and gateway. Since the DAP-2590 has an IP address of 192.168.0.50, wireless adapters must have an IP address in the same range, e.g. 192.168.0.x. Each device must have a unique IP address; there may be no two devices with the same IP address. The subnet mask must be the same for all the computers on the network. To check the IP address assigned to the wireless adapter, double-click the Local Area Connection icon in the taskbar, then select the Support tab and the IP address will be displayed.
- If it is necessary to assign a Static IP Address to the wireless adapter. If you are entering a DNS Server address, you must also enter the Default Gateway Address. *Remember that if you have a DHCP-capable router, you will not need to assign a static IP address.*

3. What variables may cause my wireless products to lose reception?

D-Link products let you access your network from virtually anywhere you want, however, the positioning of the products within your environment will affect its wireless range.

4. Why does my wireless connection keep dropping?

- Antenna Orientation - try different antenna orientations for the DAP-2590. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you are using 2.4 GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, or lights, your wireless connection will degrade dramatically or even drop. Try changing the channel of your router, access point and wireless adapter to a different channel to avoid interference.
- Keep your product away - at least 3-6 feet - from electrical devices that generate RF noise like microwaves, monitors, electric motors, etc.

5. Why can't I get a wireless connection?

If you have enabled encryption on the DAP-2590, you must also enable encryption on all wireless clients in order to establish a wireless connection.

- Make sure that the SSID on the AP and the wireless client are exactly the same. If they are not, wireless connection cannot be established.
- Move the DAP-2590 and the wireless client into the same room and then test the wireless connection.
- Disable all security settings.
- Turn off your DAP-2590 and the client. Turn the DAP-2590 back on again, and then turn on the client.
- Make sure that all devices are set to Infrastructure mode.
- Check that the LED indicators are indicating normal activity. If not, check that the AC power and Ethernet cables are firmly connected.
- Check that the IP address, subnet mask, gateway, and DNS settings are correctly entered for the network.
- If you are using 2.4 GHz cordless phones, X-10 equipment, or other home security systems, ceiling fans, or lights, your wireless connection will degrade dramatically or drop altogether. Try changing the channel on your DAP-2590, and on all the devices in your network to avoid interference.
- Keep your product away - at least 3-6 feet - from electrical devices that generate RF noise like microwaves, monitors, electric motors, etc.

Technical Specifications

Standards

- IEEE 802.11a
- IEEE 802.11b
- IEEE 802.11g
- IEEE 802.11n (draft)
- IEEE 802.3
- IEEE 802.3u
- IEEE 802.3ab
- IEEE 802.3af

Network Management

- Web Browser interface
 - HTTP
 - Secure HTTP (HTTPS)
- AP Array
- AP Manager II
- SNMP Support
 - D-View Module
 - Private MIB
- Command Line Interface
 - Telnet
 - Secure SSH Telnet

Data Rates*

For 802.11a:

- 54, 48, 36, 24, 18, 12, 9, and 6 Mbps

For 802.11b:

- 11, 5.5, 2, and 1 Mbps

For 802.11g:

- 54, 48, 36, 24, 18, 12, 9, and 6 Mbps

For 802.11n (draft): HT20/HT40

- 144.4/300, 130/270, 117/243, 104/216, 78/162, 66/135, 58.5/121.5, 52/108, 39/81, 26/54, 19.5/40.5, 12/27, and 6.5/13.5 Mbps

Security

- WPA™ Personal/Enterprise
- WPA2™ Personal/Enterprise
- WEP™ 64-/128-bit
- SSID Broadcast Disable
- MAC Address Access Control

Wireless Frequency Range

- 2.4 to 2.4835 GHz and 5.15 to 5.85 GHz**

Operating Voltage

- 5V/2.5A or PoE

Radio and Modulation Type

For 802.11a/g/n:

BPSK, QPSK, 16QAM, and 64QAM with OFDM

For 802.11b:

DQPSK, DBPSK, DSSS, and CCK

Operating Frequency*

For 802.11a:

5.15 ~ 5.85 GHz

For 802.11b/g:

2400 ~ 2483.5 MHz ISM band

For 802.11n:

2.4 GHz Band: 2.4 ~ 2.4835 GHz

5 GHz Band: 5.15 ~ 5.85 GHz

Dipole Antenna

4dBi Gain @2.4 GHz

6dBi Gain @5 GHz

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

**Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2590 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

LEDs

- Power
- LAN
- 2.4 GHz
- 5 GHz

Temperature

- Operating: 0°C to 40°C
- Storing: -20°C to 65°C

Humidity

- Operating: 10%~90% (non-condensing)
- Storing: 5%~95% (non-condensing)

Certifications

- FCC
- CE
- IC
- C-Tick
- UL
- WiFi

Dimensions

- L = 184.66 mm
- W = 164.59 mm
- H = 31.75 mm

*Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2590 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

Contacting Technical Support

U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. DAP-2590)
- Hardware Revision (located on the label on the bottom of the Access Point (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the Access Point).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

For customers within the United States:

Phone Support:

(877) 354-6555

Internet Support:

<http://support.dlink.com>

For customers within Canada:

Phone Support:

(877) 354-6560

Internet Support:

<http://support.dlink.com>

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. (“D-Link”) provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty:

D-Link warrants that the hardware portion of the D-Link product described below (“Hardware”) will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below (“Warranty Period”), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty:

D-Link warrants that the software portion of the product (“Software”) will substantially conform to D-Link’s then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days (“Software Warranty Period”), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer’s sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link’s option, to replace the non-conforming Software (or defective media) with software that substantially conforms to

D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by DLink in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty:

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim:

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow DLink to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-354-6555, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. DLink will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible

for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered:

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties:

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability:

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR

LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law:

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks:

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement:

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2009 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If this device is going to be operated in 5.15 ~ 5.25GHz frequency range, then it is restricted in indoor environment only.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Industry Canada Notice:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device has been designed to operate with an antenna having a maximum gain of 6 dB. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 1.2
May 15, 2009