

Quick Start Guide




Step A *Connect*

Step B *Setup*


Step C *Enjoy*

What's in the Box?


You should find these items upon opening the box.

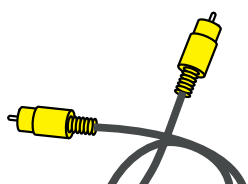


Composite video cable

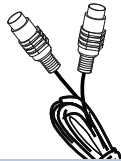

DIN cable

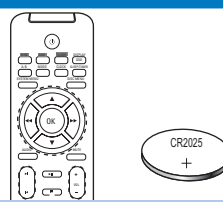

Remote control with one
CR2025 battery loaded

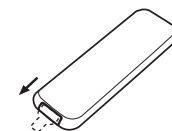


Remove the insulation plastic tab
before use



AC power cord



FM wire antenna

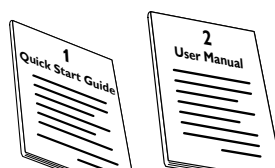

Quick start guide
User manual

PHILIPS


Step A Connect

Important!

- This set can only be operated after the supplied DIN cable has been connected.

Tips


- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

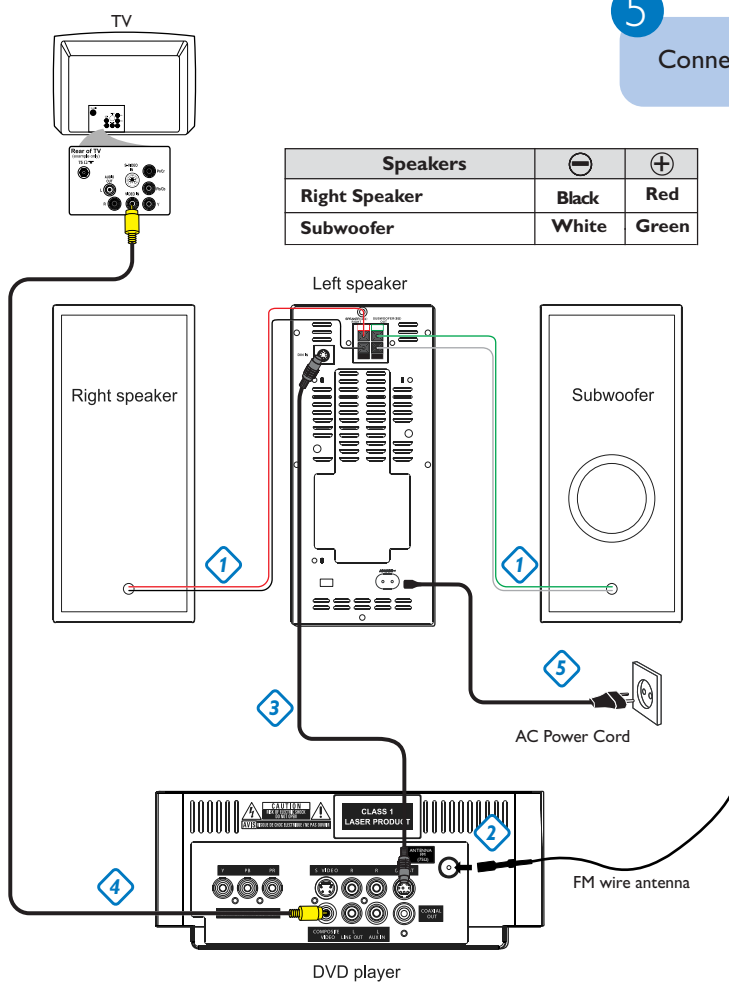

- 1 Connect the speaker wires of the right speaker and subwoofer to the left speaker.
- 2 Connect the supplied FM wire antenna.
- 3 Connect the left speaker and the DVD player by using the supplied DIN cable.
- 4 Connect the DVD player to your TV using the supplied composite video cable.
- 5 Connect the AC power cord to the wall socket.

Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or AUX, for example).
- Then select the desired function (▶II, ◀I, ▶I for example).

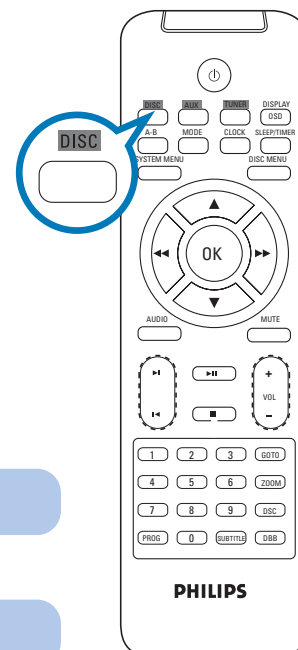

Step B Setup

Setting up the TV

- 1 Press **SOURCE** (DISC on the remote) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

Step B Setup


Setting the clock

1 In standby or power on mode, press and hold **CLOCK** on the remote control. The clock digits flash on the display.

2 Press **◀/▶** repeatedly to set the hours.

3 Press **◀◀/▶▶** repeatedly to set the minutes.

4 Press **CLOCK** again to store the setting.

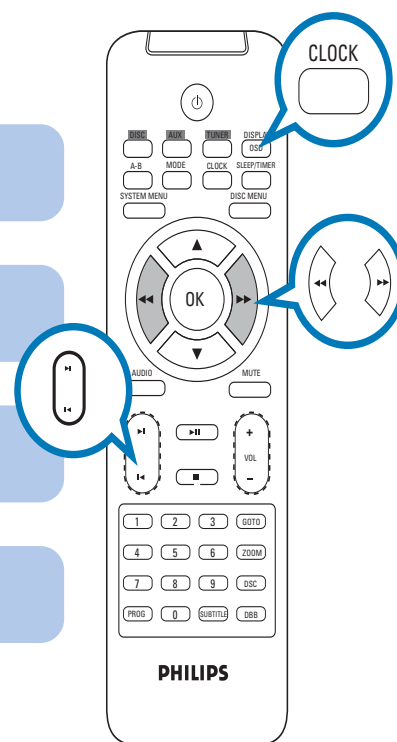







Setting DVD menu options

IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the video cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode then turn on to interlaced mode.
- 2) Select "OFF" in PROGRESSIVE menu of the system setup menu to turn off progressive scan, then press SYSTEM MENU on the remote to exit the system menu.

Or, to turn off progressive scan, you may also first open the disc door, then hold down ▶ on the front panel, and press numeric key "1" on the remote.

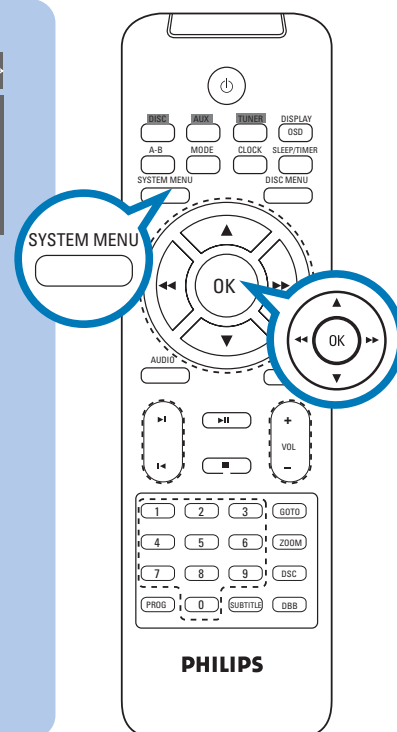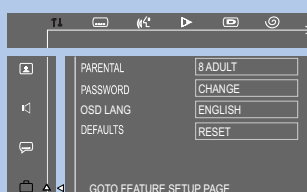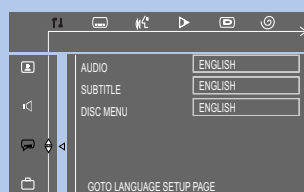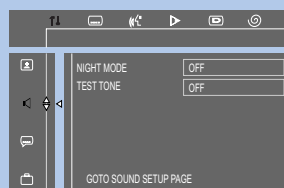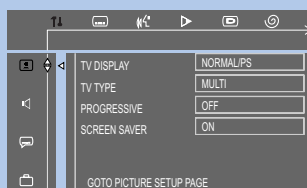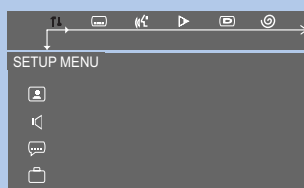

Tip

See chapters "Getting Started" and "DVD menu operations" in the User Manual for detailed descriptions.

Playing a disc

1

Push **OPEN /CLOSE**  to open the disc door.

2


Load in a disc with the label side facing up, then close the disc door.

3

Playback will start automatically. If not, press **▶ II**.

4

To stop playback, press **■**.

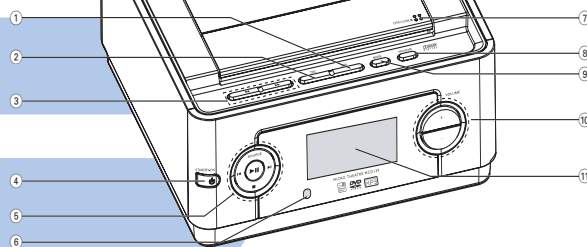

To switch on the system, press **STANDBY ON**  / **SOURCE** on the set, or **DISC/TUNER/AUX** on the remote.

Programming and tuning to radio stations

1

Press **SOURCE** (**TUNER** on the remote) to select tuner source (FM).

2

Press **PROGRAM** on the set for more than two seconds to program all available stations in order of waveband.

3

Press **◀ / ▶** (**Numeric keys** on the remote) until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompanied user manual.

