

Mini Hi-Fi System

FWM153



Quick start guide

1

Connect

2

Setup

 
3

Enjoy

PHILIPS

EN

What's in the box




Remote Control



MP3 link cable



AC power
adaptor

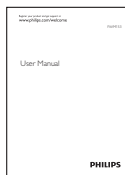

User manual



Quick Start Guide


1 Connect

A Prepare the remote control

- 1 Open the battery compartment.
- 2 Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

Note

- Before you press any function button on the remote control, press a source button to select source with the remote control.

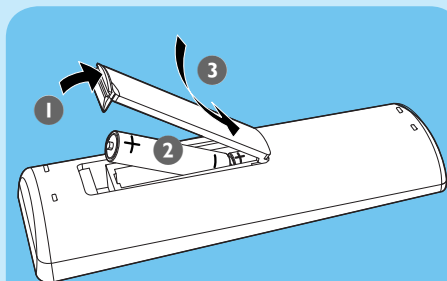

B Connect Speaker


Note

- Ensure that the colors of the speaker wires and terminals are matched.

- 1 Connect the speaker wires to the matching speaker terminals on the main unit.

Tip

- See the User Manual for how to connect other equipment to this system.

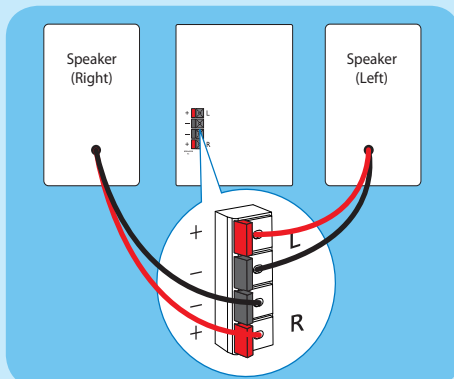


1 Connect

C Connect power

! Caution

- If your power supply voltage is 110V-127V, adjust the voltage selector (on the back of the main unit) to 110V-127V.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC power cord, ensure you have completed all other connections.

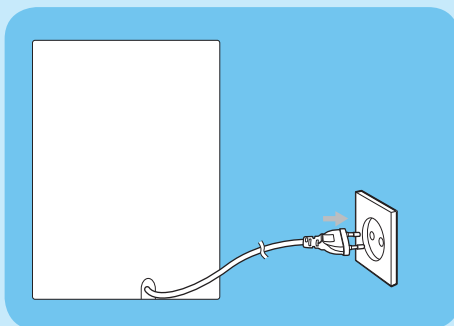

- 1 Connect the power cord to the wall outlet.


2 Setup

A Set clock

- 1 In standby mode, press and hold **CLOCK**.
↳ The hour digits are displayed and begin to blink.
- 2 Press **◀/▶** on the remote control to set the hours.
- 3 Press **CLOCK**.
↳ The minute digits are displayed and begin to blink.
- 4 Press **◀/▶** to set the minutes.
- 5 Press **CLOCK** to confirm the time.

* Tip


- During play, you can press **DISPLAY** on the remote control to view the clock.

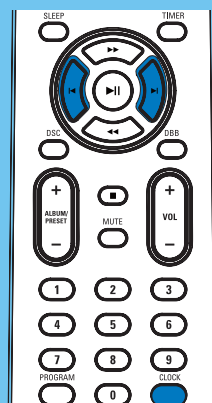

3 Enjoy

A Play disc

- 1 Press **DISC** to select the disc source.
- 2 Press **OPEN/CLOSE**▲ on the front panel to open the disc tray.
- 3 Insert a disc with the printed side facing up, then close the disc tray.
 - ↳ Play starts automatically.
 - To pause/resume play, press ►||.
 - To stop play, press ■.
 - To skip to a track, press ◀|▶.
 - To search within a track, press and hold ◀◀|▶▶. Release to resume normal play.

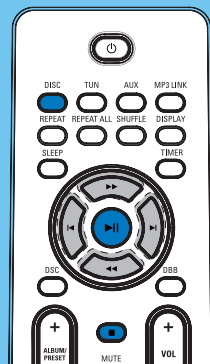

B Program radio stations automatically

Note

You can program a maximum of 40 preset radio stations (20 FM radio stations and 20 AM radio stations).

- 1 In tuner mode, press and hold **PROGRAM** for 2 seconds to activate automatic program mode.
 - ↳ [AUTO] (auto) begins to blink.
 - ↳ All available stations are programmed in the order of waveband reception strength.

↳ The first programmed radio station is broadcast automatically.

Tip

Detailed features and additional functions are described in the user manual.



© Royal Philips Electronics N.V. 2009
All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Printed in China

PDCC-2009

 100% recycled paper
100% papier recyclé