



FS-1100

FS-1300D

PARTS LIST

Published in October 2007

2HSPL070

842HS120

First Edition

NOTES

1. Indicate parts number and parts description together with the machine model name when placing an order.

e.g.	Parts Number	Parts Name	Machine Model	Quantity
	302H508010	BASE BYPASS	FS-1100	1
	302HS08050	BASE MPF	FS-1300D	1

2. Symbols in the "Parts Number" column.

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.

e.g.	Parts Number	Parts Name	Parts Number	Parts Name
	302HS93080	CT-130	•302F909031	LEVER BASE CAS REAR
			•302F909040	SPRING BASE CAS REAR

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

e.g.	Parts Number	Parts Name	Parts Number	Parts Name
	•302HS94000	PLATE BOTTOM ASSY	••302F909210	PAD BOTTOM
			••302HS09110	PLATE BOTTOM

- Parts with "⊙" indicate regular maintenance parts.

—— CONTENTS ——

FIG. 1	Covers	2
FIG. 2	Frames (Simplex model)	4
FIG. 2	Frames (Duplex model)	6
FIG. 3	Paper Cassette	8
FIG. 4	Paper Feed Section 1	10
FIG. 5	Paper Feed Section 2	12
FIG. 6	Image Formation Section	14
FIG. 7	Developing Section	16
FIG. 8	Fuser Section	18
FIG. 9	Drive Section (Simplex model)	20
FIG. 9	Drive Section (Duplex model)	22
FIG. 10	Duplex Section (Duplex model)	24
FIG. 11	Electrical Components	26
FIG. 12	Parts Package	28
	• INDEX	29

FIG. 1 Covers

2H5/2HS

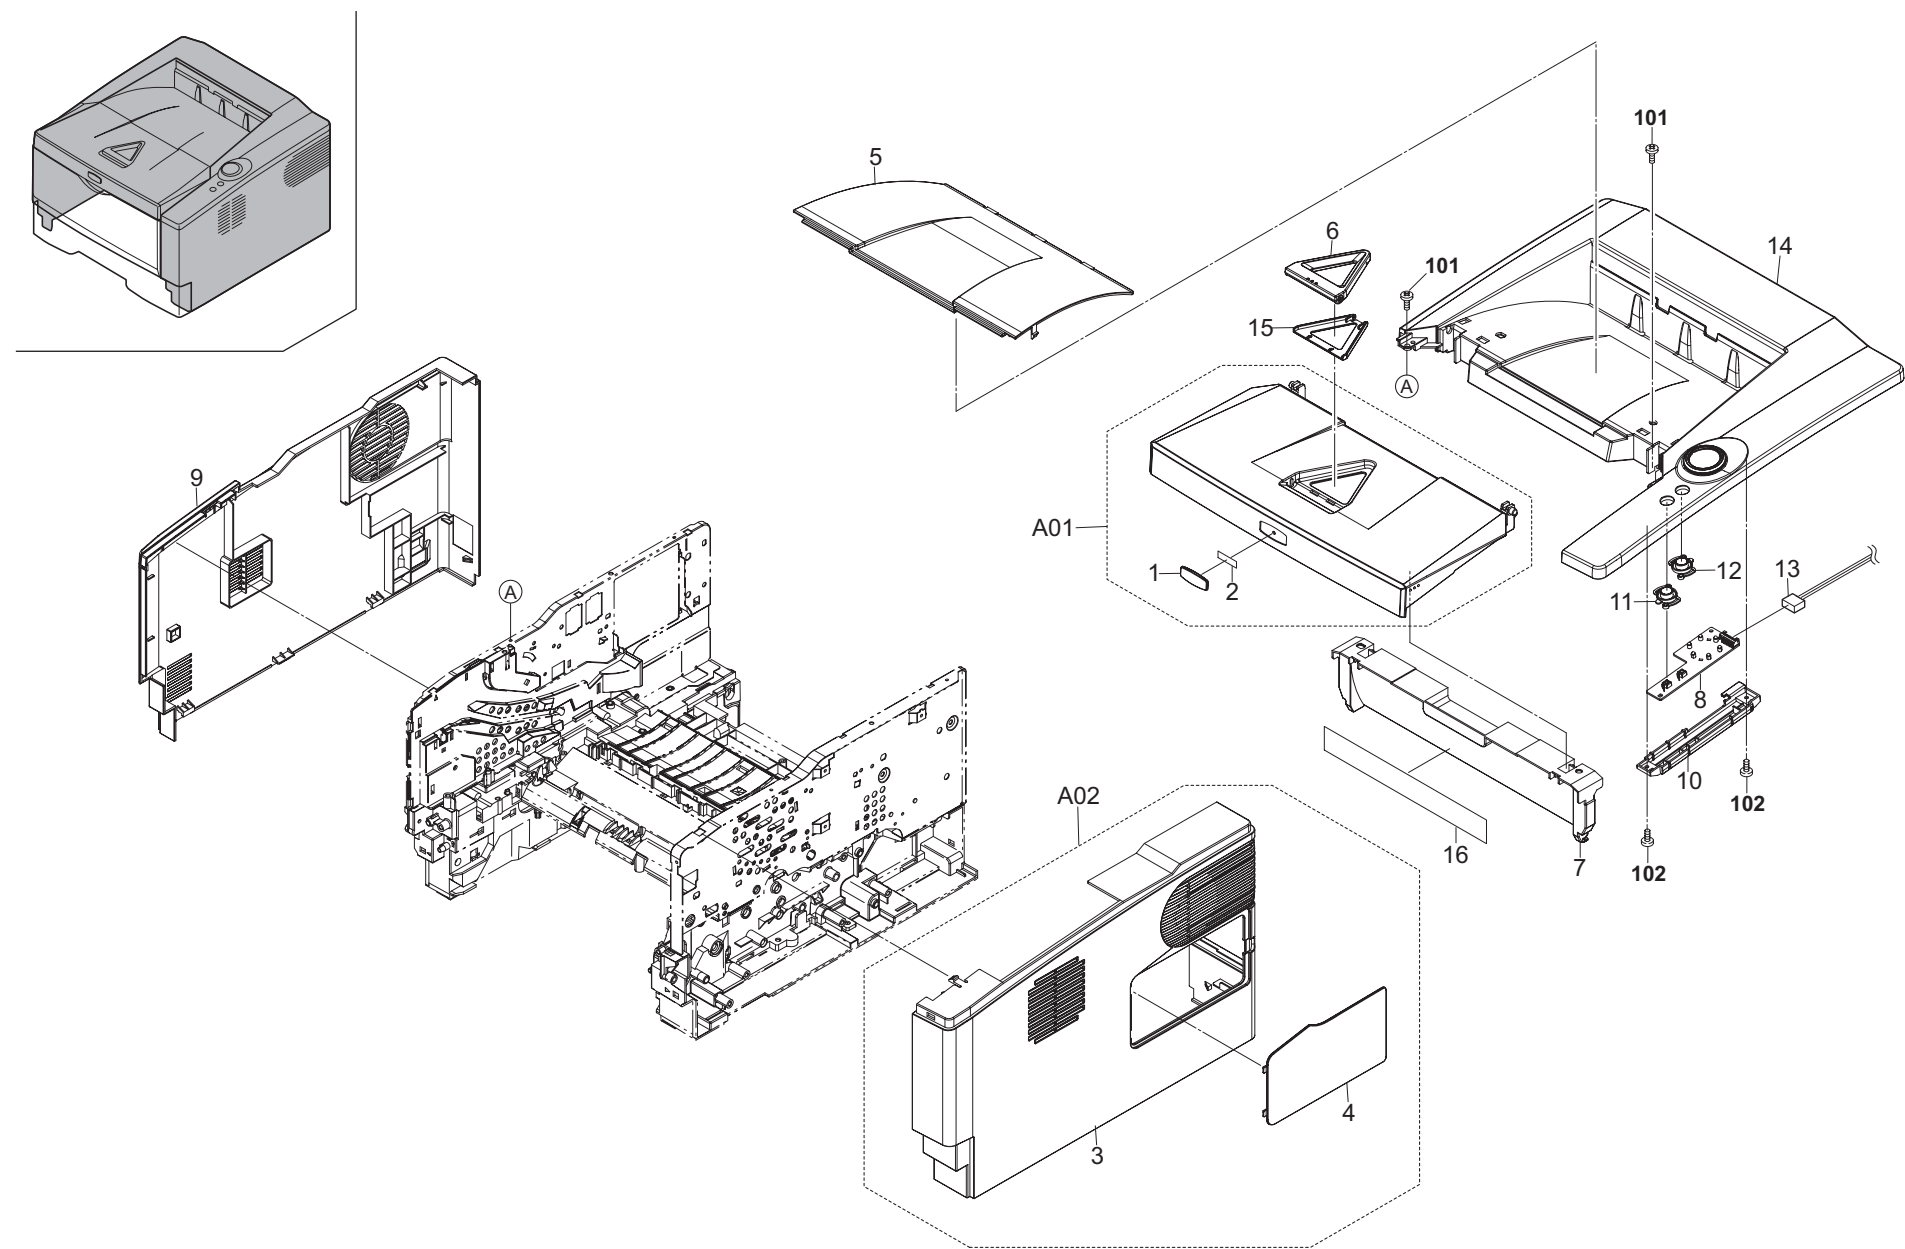


FIG. 1 Covers

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	A01	302HS94020	2HS94020	LID TOP ASSY	1	1	1
	1	*302F904120	2F904120	EMBLEM KYOCERA	1	1	1
	2	*302F904130	2F904130	TAPE EMBLEM	1	1	1
⊙	A02	302HS00030	2HS00030	COVER RIGHT ASSY (Duplex model)	1	1	1
⊙	A02	302HS00010	2HS00010	COVER RIGHT ASSY (Simplex model)	1	1	1
	3	*302HS04040	2HS04040	COVER RIGHT (Duplex model)	1	1	1
	3	*302HS04010	2HS04010	COVER RIGHT (Simplex model)	1	1	1
	4	*302HS04060	2HS04060	COVER DIMM	1	1	1
⊙	5	302HS04050	2HS04050	COVER TOP B	1	1	1
⊙	6	302HS04070	2HS04070	COVER RACK	1	1	1
⊙	7	302HS04130	2HS04130	COVER FRONT	1	1	1
⊙	8	302HS01030	2HS01030	P.W.B BOARD ASSY PANEL	1	1	1
⊙	9	302HS04030	2HS04030	COVER LEFT	1	1	1
	10	302HS04080	2HS04080	COVER PANEL	1	1	1
	11	302HS04100	2HS04100	BUTTON ENTER	1	1	1
	12	302HS04110	2HS04110	BUTTON CANCEL	1	1	1
	13	302HS46230	2HS46230	CONN.CORD ASSY PANEL-RELAY S03353	1	1	1
⊙	14	302HS94010	2HS94010	COVER TOP ASSY	1	1	1
⊙	15	302HS04160	2HS04160	COVER RACK B	1	1	1
⊙	16	302HS34080	2HS34080	LABEL JAM TK OPERATION (Duplex model)	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
	101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			
	102	5MBTPB3008PW++R	B1A63080	BIND T.T SCREW(+)/ M3 X 8 CRFREE P-T			

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 2 Frames (Simplex model)

2H5/2HS

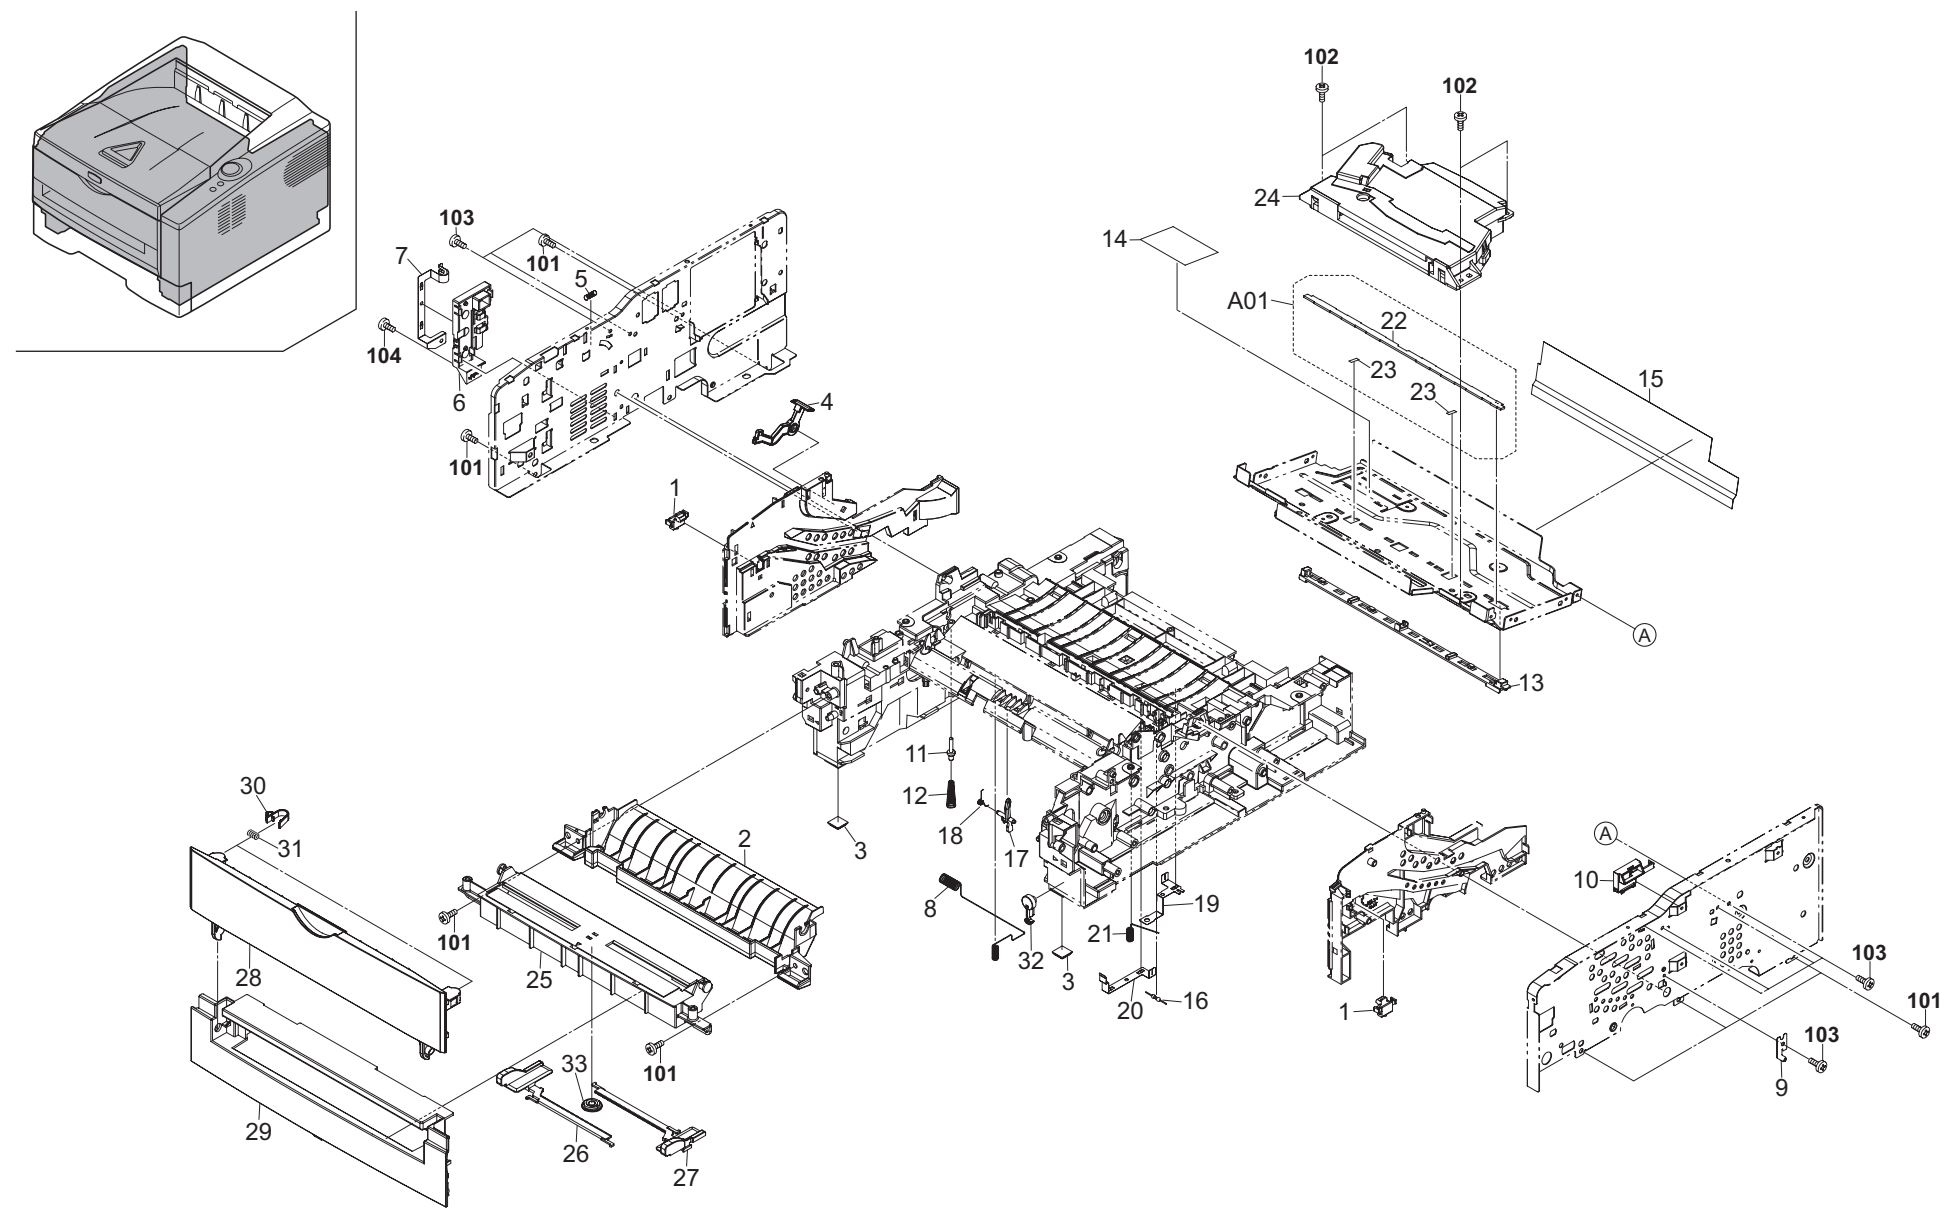


FIG. 2 Frames (Simplex model)

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	1	302F902420	2F902420	LOCK COVER TOP R	2	2	2
	2	302HS08040	2HS08040	GUIDE TURN MPF	1	1	1
	3	5MVX221RB014	2BS03110	FOOT /43307C0007 A4	2	2	2
	4	302HS02090	2HS02090	LEVER STOPPER DLP	1	1	1
	5	302HS02100	2HS02100	SPRING STOPPER DLP	1	1	1
	6	302HS02130	2HS02130	HOLDER MC	1	1	1
	7	302HS02140	2HS02140	PLATE CONTACT MC	1	1	1
	8	302HS02160	2HS02160	SPRING MC	1	1	1
	9	302HS02290	2HS02290	PLATE EARTH DRUM	1	1	1
	10	302HS02350	2HS02350	COVER CABLE B	1	1	1
	11	302HS02460	2HS02460	PIN CONTACT BIAS	1	1	1
	12	302HS02470	2HS02470	SPRING PIN BIAS	1	1	1
	13	302HS02500	2HS02500	HOLDER ERASER	1	1	1
	14	302HS02580	2HS02580	SHEET DUCT LSU	1	1	1
	15	302HS02590	2HS02590	SHEET DUCT FD	1	1	1
	16	7RHA2H10701+H01	RH043740	M.GLAZE R. 100MJ 1/2W	1	1	1
	17	302HS24060	2HS24060	ACTUATOR REGIST	1	1	1
	18	302HS24070	2HS24070	SPRING ACTUATOR REG	1	1	1
	19	302HS24080	2HS24080	PLATE EARTH HV	1	1	1
	20	302HS24110	2HS24110	PLATE ERATH PAPER CHUTE	1	1	1
	21	302HS24300	2HS24300	SPRING CONTACT TC	1	1	1
	A01	302HS94110	2HS94110	ERASER KIT	1	1	1
	22	*302HS01050	2HS01050	P.W.BOARD ASSY /ERASER	1	1	1
	23	*302HS02630	2HS02630	TAPE ERASER	2	2	2
	24	302HS93090	2HS93090	LK-130	1	1	1
	25	302H508010	2H508010	BASE BYPASS	1	1	1
	26	302H508020	2H508020	GUIDE BYPASS L	1	1	1
	27	302H508030	2H508030	GUIDE BYPASS R	1	1	1
	28	302H508040	2H508040	COVER BYPASS UP	1	1	1
	29	302H508050	2H508050	COVER BYPASS LOW	1	1	1
	30	302F908200	2F908200	LOCK COVER	2	2	2
	31	302F925780	2F925780	SPRING DU	2	2	2
	32	302HS02650	2HS02650	HOOK PF	1	1	1
	33	5MVG137DN032	2A806720	GEAR MPF /A-49 MPF A4	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
	101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			
	102	7BB600308H	BB055190	+BIND SCREW M3X8 CRFREE SR			
	103	5MBTPB3006TW++R	B1A53060	BIND T.T SCREW(+)/ M3 X 6 CRFREE S-T			
	104	5MBTPB3008PW++R	B1A63080	BIND T.T SCREW(+)/ M3 X 8 CRFREE P-T			

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 2 Frames (Duplex model)

2H5/2HS

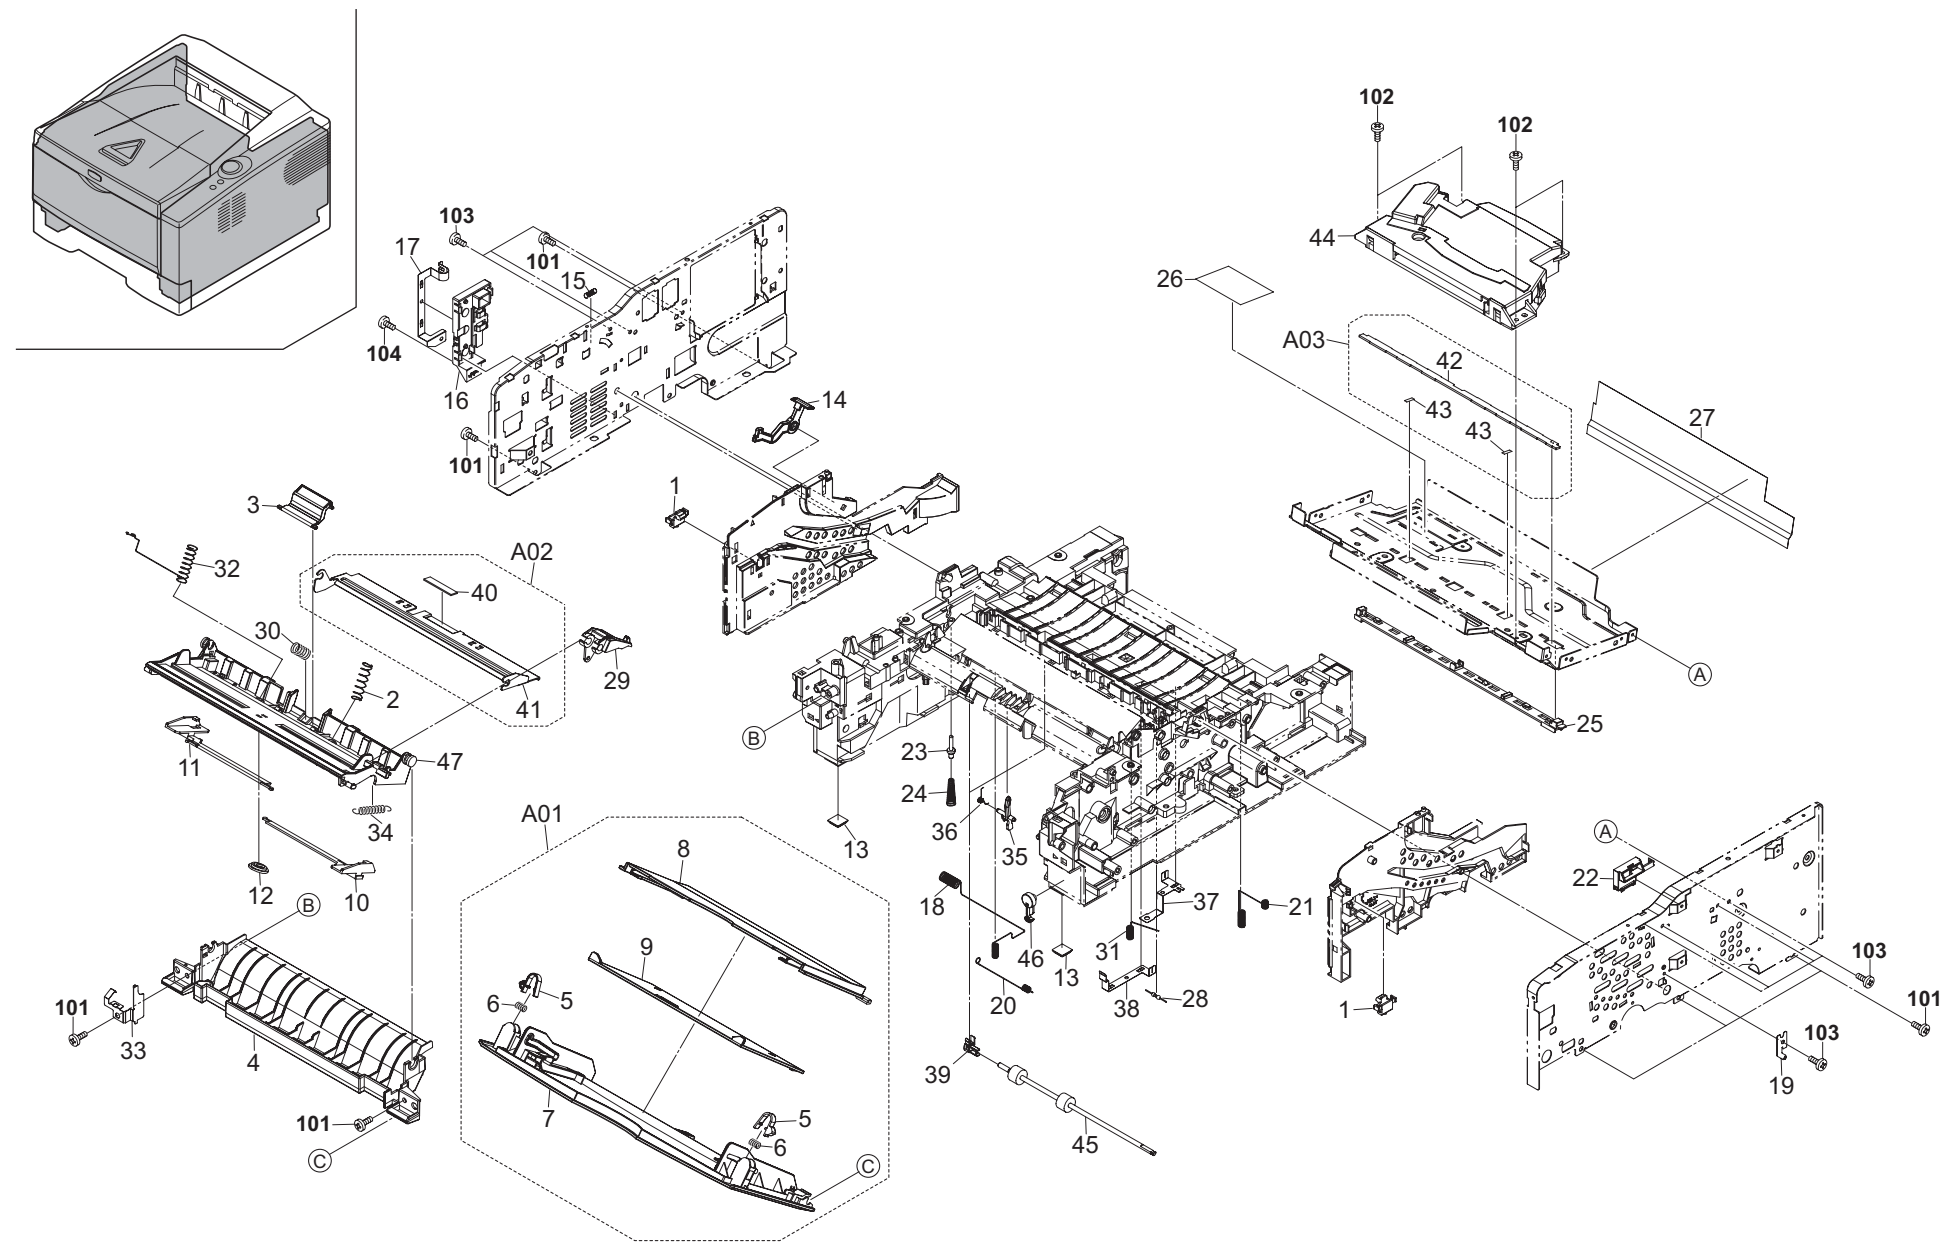


FIG. 2 Frames (Duplex model)

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	1	302F902420	2F902420	LOCK COVER TOP R	2	2	2
	2	302F908270	2F908270	SP BOTTOM MPF L	1	1	1
⊙	3	302HS94040	2HS94040	SEPARATOR MPF ASSY	1	1	1
	4	302HS08040	2HS08040	GUIDE TURN MPF	1	1	1
⊙	A01	302HS00010	2HS00010	TRAY MPF ASSY	1	1	1
	5	*302F908200	2F908200	LOCK COVER	2	2	2
⊙	6	*302F925780	2F925780	SPRING DU	2	2	2
	7	*302HS08020	2HS08020	COVER MPF KM	1	1	1
⊙	8	*302HS08060	2HS08060	TRAY MPF MID	1	1	1
	9	*302HS08220	2HS08220	TRAY MPF TOP	1	1	1
⊙	10	302HS08240	2HS08240	GUIDE MPF R	1	1	1
	11	302HS08250	2HS08250	GUIDE MPF L	1	1	1
⊙	12	5MVG137DN032	2A806720	GEAR MPF /A-49 MPF A4	1	1	1
	13	5MVX221RB014	2BS03110	FOOT /43307C0007 A4	2	2	2
⊙	14	302HS02090	2HS02090	LEVER STOPPER DLP	1	1	1
	15	302HS02100	2HS02100	SPRING STOPPER DLP	1	1	1
⊙	16	302HS02130	2HS02130	HOLDER MC	1	1	1
	17	302HS02140	2HS02140	PLATE CONTACT MC	1	1	1
⊙	18	302HS02160	2HS02160	SPRING MC	1	1	1
	19	302HS02290	2HS02290	PLATE EARTH DRUM	1	1	1
⊙	20	302HS02310	2HS02310	SPRING EARTH DU FEED	1	1	1
	21	302HS02330	2HS02330	SPRING EARTH DU PLATE	1	1	1
⊙	22	302HS02350	2HS02350	COVER CABLE B	1	1	1
	23	302HS02460	2HS02460	PIN CONTACT BIAS	1	1	1
⊙	24	302HS02470	2HS02470	SPRING PIN BIAS	1	1	1
	25	302HS02500	2HS02500	HOLDER ERASER	1	1	1
⊙	26	302HS02580	2HS02580	SHEET DUCT LSU	1	1	1
	27	302HS02590	2HS02590	SHEET DUCT FD	1	1	1
⊙	28	7RHA2H10701+H01	RH043740	M.GLAZE R. 100MJ 1/2W	1	1	1
	29	302HS08100	2HS08100	BRACKET BOTTOM	1	1	1
⊙	30	302HS08170	2HS08170	SPRING SEPARATOR	1	1	1
	31	302HS24300	2HS24300	SPRING CONTACT TC	1	1	1
⊙	32	302HS08210	2HS08210	SPRING EARTH MPF	1	1	1
	33	302HS08230	2HS08230	PLATE EARTH BOTTOM	1	1	1
⊙	34	302HS08270	2HS08270	SPRING BRACKET	1	1	1
	35	302HS24060	2HS24060	ACTUATOR REGIST	1	1	1
⊙	36	302HS24070	2HS24070	SPRING ACTUATOR REG	1	1	1
	37	302HS24080	2HS24080	PLATE EARTH HV	1	1	1
⊙	38	302HS24110	2HS24110	PLATE ERATH PAPER CHUTE	1	1	1
	39	302HS24130	2HS24130	BUSH 4 DU ROLL	2	2	2
⊙	A02	302HS94050	2HS94050	PLATE BOTTOM MPF ASSY	1	1	1
	40	*302F908310	2F908310	PAD FRICTION MPF	1	1	1
⊙	41	*302HS08180	2HS08180	PLATE BOTTOM MPF	1	1	1
	A03	302HS94110	2HS94110	ERASER KIT	1	1	1
⊙	42	*302HS01050	2HS01050	P.W.BOARD ASSY /ERASER	1	1	1
	43	*302HS02630	2HS02630	TAPE ERASER	2	2	2
⊙	44	302HS93090	2HS93090	LK-130	1	1	1
	45	302HS24160	2HS24160	ROLLER DU	2	2	2
⊙	46	302HS02650	2HS02650	HOOK PF	1	1	1
	47	302HS08050	2HS08050	BASE MPF	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			
	102	7BB600308H	BB055190	+BIND SCREW M3X8 CRFREE SR			
⊙	103	5MBTPB3006TW++R	B1A53060	BIND T.T SCREW(+)/ M3 X 6 CRFREE S-T			
	104	5MBTPB3008PW++R	B1A63080	BIND T.T SCREW(+)/ M3 X 8 CRFREE P-T			

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 3 Paper Cassette

2H5/2HS

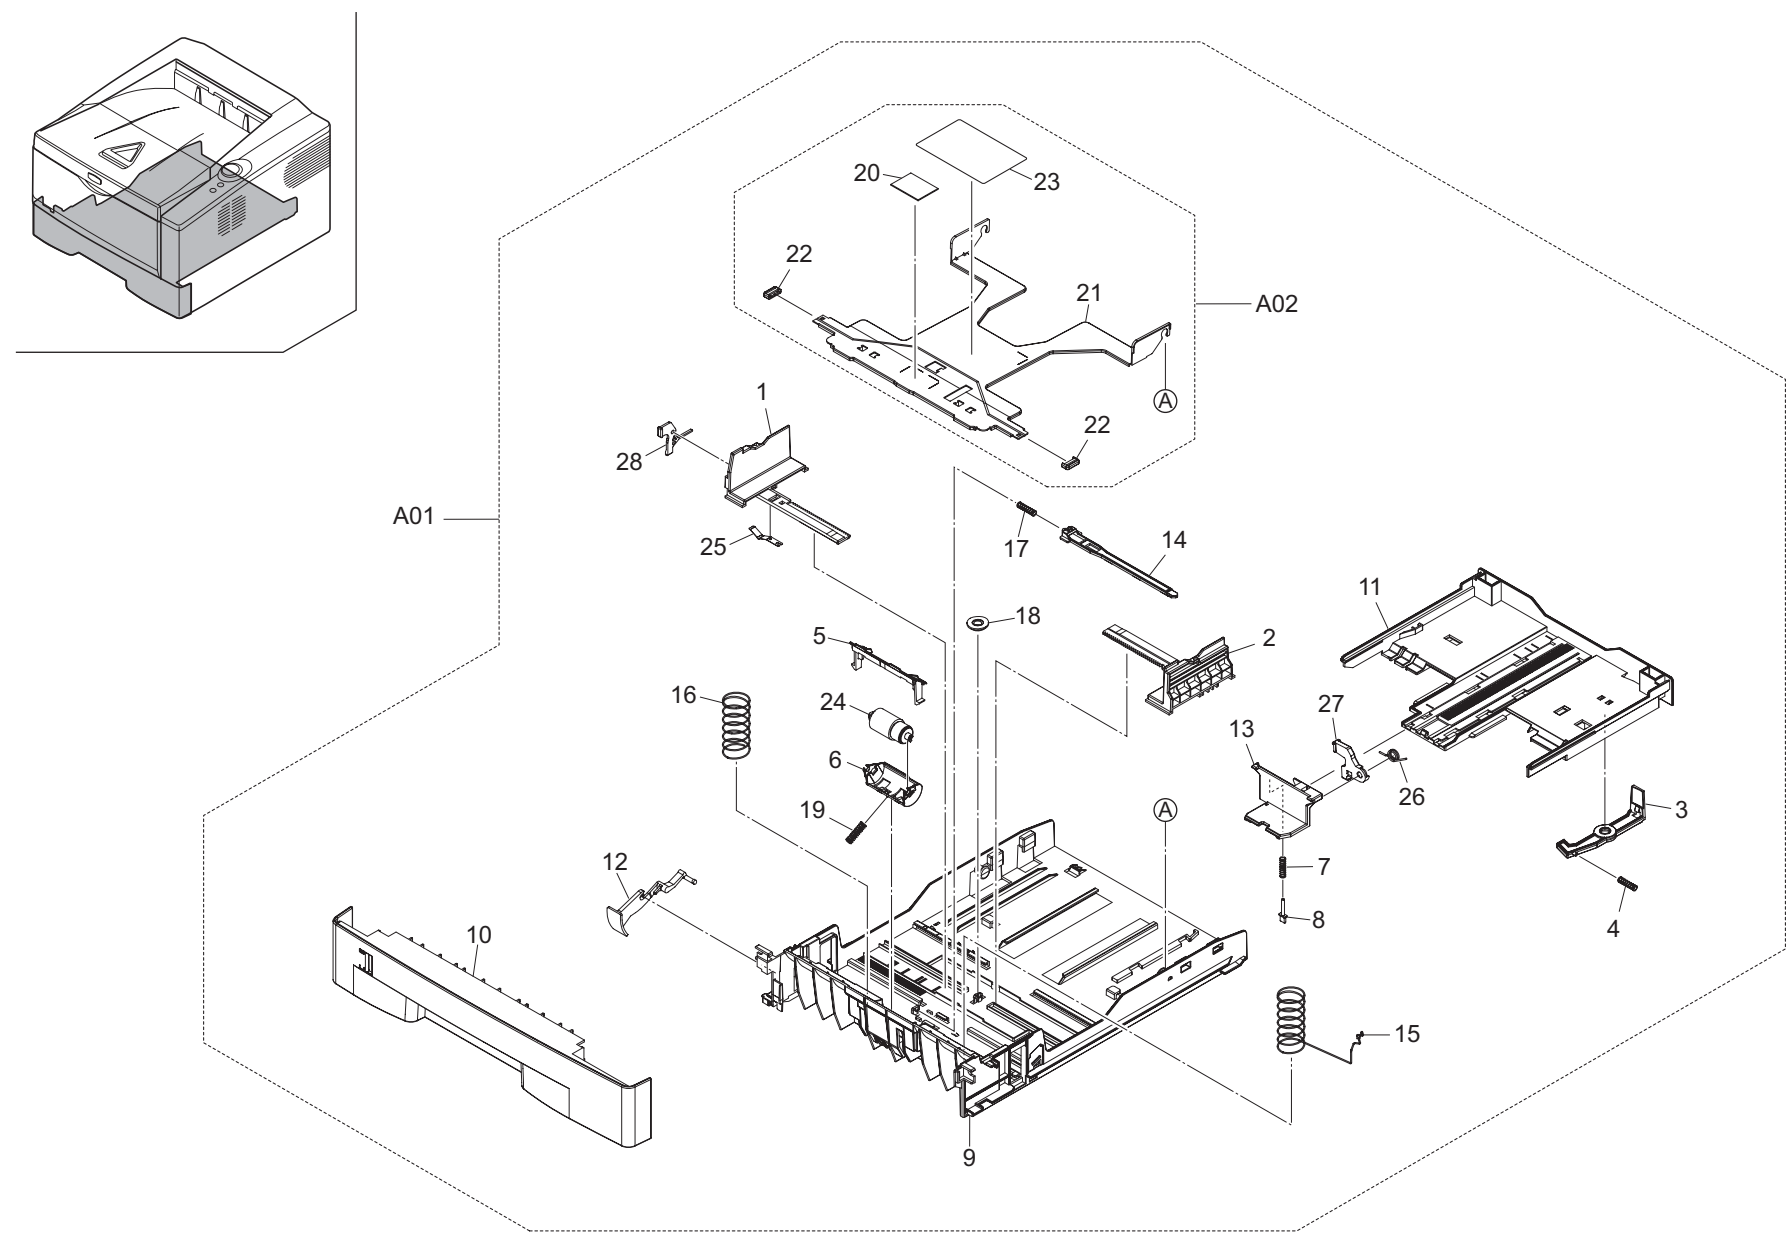


FIG. 3 Paper Cassette

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	A01	302HS93080	2HS93080	CT-130	1	1	1
	1	*2FM06010	5MVX765SH004	GUIDE SIDE L /B-11 CASSETTE A2	1	1	1
	2	*2FM06020	5MVX765SH005	GUIDE SIDE R /B-11 CASSETTE A2	1	1	1
	3	*302F909031	2F909031	LEVER BASE CAS REAR	1	1	1
	4	*302F909040	2F909040	SPRING BASE CAS REAR	1	1	1
	5	*302GJ09110	2GJ09110	GUIDE RETARD	1	1	1
	6	*302GJ09120	2GJ09120	HOLDER RETARD	1	1	1
	7	*302HN09190	2HN09190	SPRING FIX	1	1	1
	8	*302HN09240	2HN09240	SIZE FIX	1	1	1
	9	*302HS09010	2HS09010	BASE CASSETTE	1	1	1
	10	*302HS09020	2HS09020	COVER CASSETTE KM	1	1	1
	11	*302HS09040	2HS09040	BASE CASSETTE REAR	1	1	1
	12	*302HS09070	2HS09070	PAPER INDICATOR	1	1	1
	13	*302HS09080	2HS09080	CURSOR END	1	1	1
	14	*302HS09100	2HS09100	LOCK BOTTOM	1	1	1
	15	*302HS09120	2HS09120	SPRING BOTTOM L	1	1	1
	16	*302HS09130	2HS09130	SPRING BOTTOM R	1	1	1
	17	*302HS09140	2HS09140	SPRING LOCK BOTTOM	1	1	1
	18	*302HS09160	2HS09160	GEAR CASSETTE	1	1	1
	19	*302HS09180	2HS09180	SPRING RETARD	1	1	1
	A02	*302HS94000	2HS94000	PLATE BOTTOM ASSY	1	1	1
	20	**302F909210	2F909210	PAD BOTTOM	1	1	1
	21	**302HS09110	2HS09110	PLATE BOTTOM	1	1	1
	22	**302HS09170	2HS09170	CAP BOTTOM	2	2	2
	23	**302HS34030	2HS34030	LABEL OPERATION	1	1	1
	24	*5AAVROLL+052	2BR06520	RETARD ROLL ASSY /43487V0005 A4	1	1	1
	25	*5MMP141LD002	2A807510	PLATE SIDE GUIDE /A49 CASSETTE A4	1	1	1
	26	*5MMW171LD006	2A807530	SPRING STOPPER /A49 CASSETTE A4	1	1	1
	27	*5MVX541DG002	2A807191	LEVER REAR /A-49 CASSETTE A3	1	1	1
	28	*5MVX541DG003	2A807161	LEVER SIDE /A-49 CASSETTE A3	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 4 Paper Feed Section 1

2H5/2HS

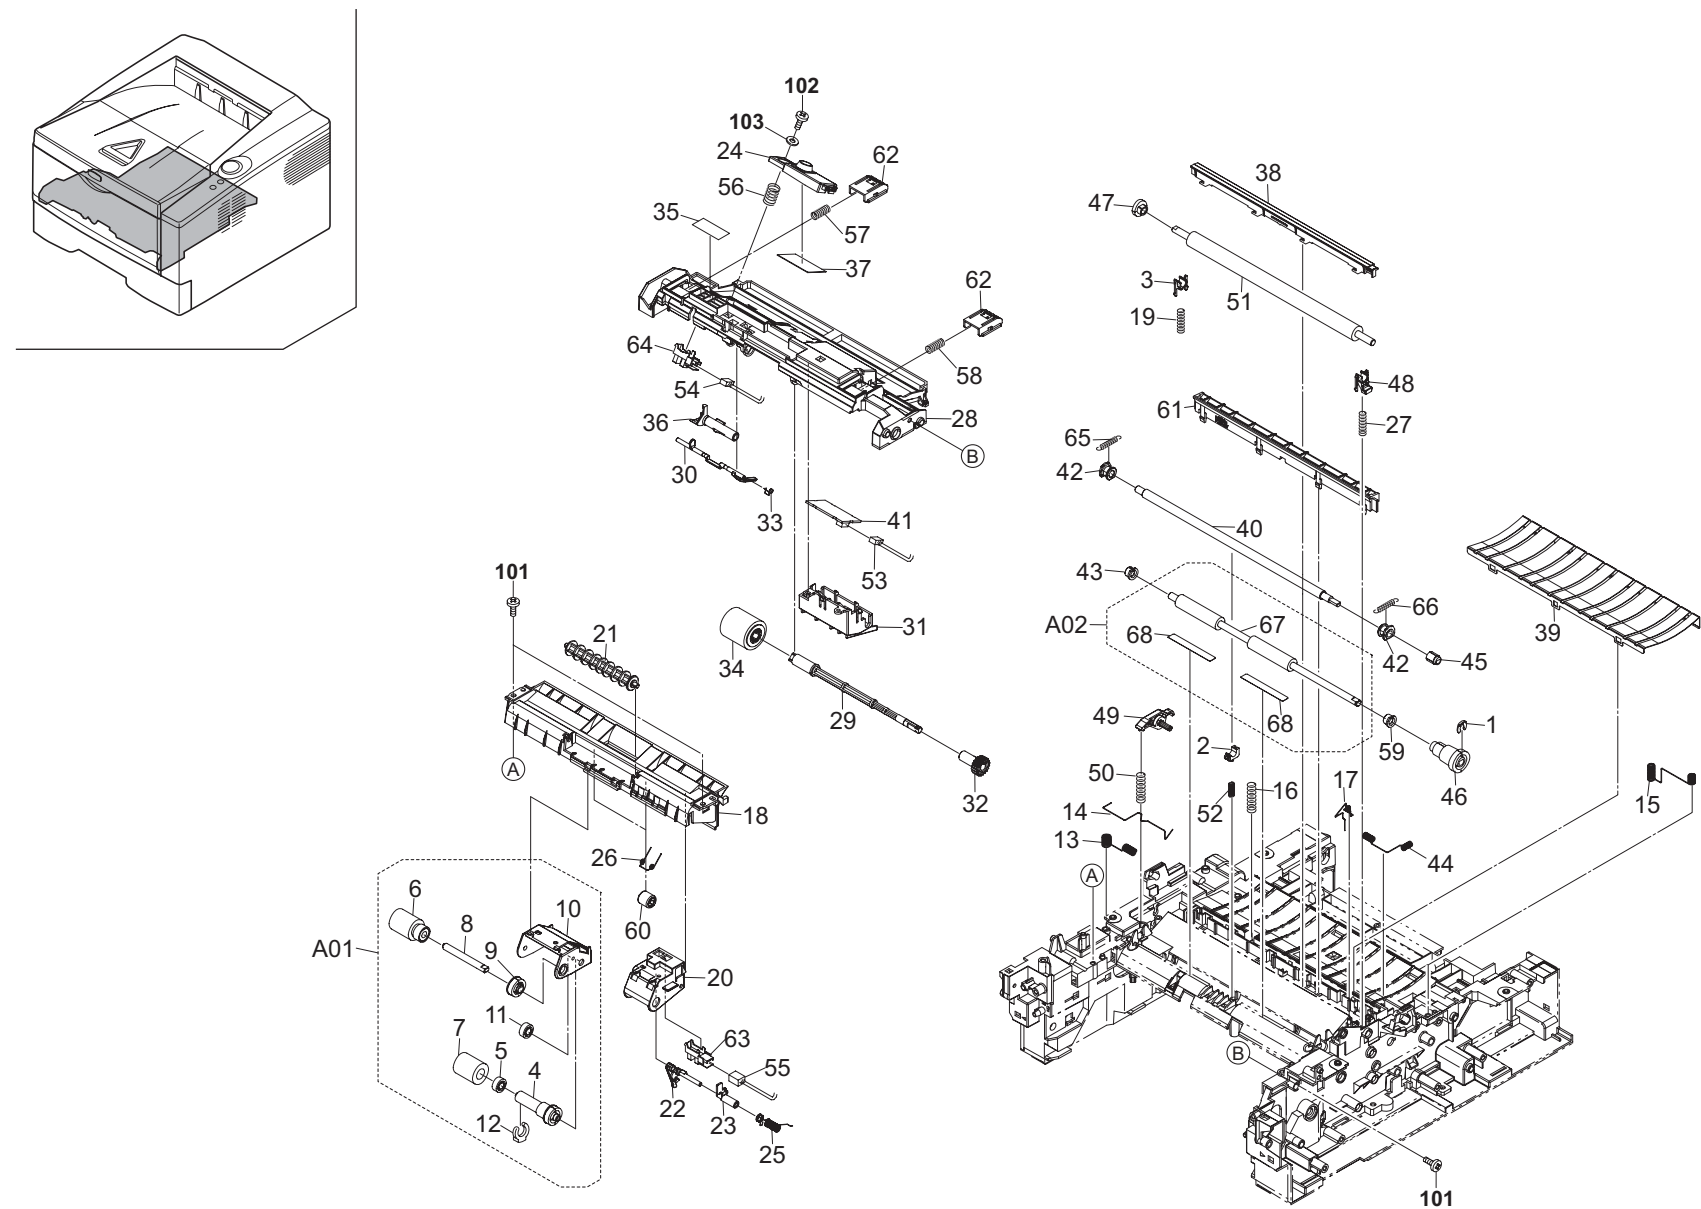


FIG. 4 Paper Feed Section 1

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
	1	2BC06980		STOPPER 5	1	1	1
	2	2FM02180		BUSH REGIST C /B-11 FRAME A3	1	1	1
⊙	3	302A816031	5MVX221DN020	BUSH TC R /A-49 FEED A4	1	1	1
	3	302A816031	2A816031	BUSH TC R /A-49 FEED A4	1	1	1
⊙	A01	302HS94030	2HS94030	HOLDER FEED ASSY	1	1	1
	4	*302F906170	2F906170	JOINT PICKUP A	1	1	1
	5	*302F906180	2F906180	JOINT PICKUP B	1	1	1
	6	*302F906230	2F906230	PULLEY FEED ASSY	1	1	1
	7	*302F906240	2F906240	PULLEY PICKUP ASSY	1	1	1
	8	*302F906270	2F906270	SHAFT FEED L	1	1	1
	9	*302F906280	2F906280	GEAR FEED Z30H	1	1	1
	10	*302HS06020	2HS06020	HOLDER FEED	1	1	1
⊙	11	*302HS06090	2HS06090	GEAR Z22S FEED	1	1	1
	12	*5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	1	1	1
	13	302HS02250	2HS02250	SPRING EARTH REG UP	1	1	1
	14	302HS02260	2HS02260	SPRING EARTH REG LOW	1	1	1
	15	302HS02340	2HS02340	SPRING EARTH RIGHT	1	1	1
	16	302HS02410	2HS02410	SPRING EARTH DU MID (Duplex model)	1	1	1
	17	302HS02440	2HS02440	SPRING EARTH DLP PLATE	1	1	1
	18	302HS06010	2HS06010	FRAME FEED	1	1	1
	19	302G622010	2G622010	SPRING TC L	1	1	1
	20	302HS06040	2HS06040	GUIDE FEED R	1	1	1
	21	302HS06050	2HS06050	PULLEY FEED	1	1	1
	22	302HS06060	2HS06060	ACTUATOR EMPTY A	1	1	1
⊙	23	302HS06070	2HS06070	ACTUATOR EMPTY B	1	1	1
	24	302HS01060	2HS01060	P.W.BOARD ASSY /EMPTY SENSOR	1	1	1
	25	302HS06120	2HS06120	SPRING ACTUATOR	1	1	1
	26	302HS06130	2HS06130	SPRING PULLEY (Duplex model)	2	2	2
	27	302FV02490	2FV02490	SPRING TC R	1	1	1
	28	302HS08010	2HS08010	FRAME MPF	1	1	1
	29	302HS08080	2HS08080	SHAFT FEED MPF (Duplex model)	1	1	1
	30	302HS08110	2HS08110	ACTUATOR MPF (Duplex model)	1	1	1
⊙	31	302HS08140	2HS08140	BASE IC PWB	1	1	1
	32	302HS08160	2HS08160	GEAR Z20S MPF (Duplex model)	1	1	1
	33	302HS08190	2HS08190	SPRING ACTUATOR (Duplex model)	1	1	1
	34	302HS08260	2HS08260	ROLLER M/P ASSY (Duplex model)	1	1	1
	35	302HS08290	2HS08290	FILM SENSOR (Duplex model)	1	1	1
	36	302HS08300	2HS08300	HOLDER FEED M/P (Duplex model)	1	1	1
⊙	37	302HS08310	2HS08310	FILM TE SENSOR	1	1	1
	38	302HS24010	2HS24010	GUIDE PAPER CHUTE	1	1	1
	39	302HS24020	2HS24020	GUIDE EARTH	1	1	1
	40	302HS24040	2HS24040	ROLLER REGIST UP	1	1	1
	41	302HS01130	2HS01130	P.W.B RFID WITH SOFTWARE	1	1	1
	42	302HS24120	2HS24120	BUSH REGIST	2	2	2
	43	302HS24140	2HS24140	BUSH 6 EW	1	1	1
	44	302HS24310	2HS24310	SPRING EARTH BRUSH	1	1	1
⊙	45	302HS24190	2HS24190	GEAR Z14R REG UP	1	1	1
	46	302HS24200	2HS24200	GEAR Z21L-Z23L REG LOW	1	1	1
	47	302HS24210	2HS24210	GEAR Z16L TC	1	1	1
	48	302HS24250	2HS24250	BUSH TC R	1	1	1
⊙	49	302HS24260	2HS24260	LEVER RELEASE TC L	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
	50	302HS24280	2HS24280	SPRING RELEASE TC L	1	1	1
	51	302HS24170	2HS24170	ROLLER TRANSFER E	1	1	1
⊙	51	302HS24340	2HS24340	ROLLER TRANSFER U	1	1	1
	52	302HS24360	2HS24360	SPRING REGIST C	1	1	1
	53	302HS46050	2HS46050	CONN.CORD ASSY CONTROL-RFID S03244	1	1	1
	54	302HS46150	2HS46150	CONN.CORD ASSY CONTROL-MPFSSENSOR S03251 (Duplex model)	1	1	1
	55	302HS46160	2HS46160	CONN.CORD ASSY CONTROL-P.SENSOR S033	1	1	1
	56	5MMW261LD036	2A814570	SPRING TE SENSOR /A-49 DLP A4	1	1	1
	57	5MMW261LD067	2FV02270	SPRING LEVER LOCK L	1	1	1
	58	5MMW261LD068	2FV02280	SPRING LEVER LOCK R	1	1	1
	59	5MVM176DN016	2BR20170	BUSH A /45309P0135 A4	1	1	1
	60	5MVM273DB005	2A820100	PULLEY EXIT /A-49 FUSER A3 (Duplex model)	2	2	2
⊙	61	302HS94060	2HS94060	HOLDER DC BRUSH ASSY	1	1	1
	62	5MVX431DN005	2FV02100	LEVER LOCK DLP	2	2	2
	63	7NXSG2481+++H01	NX052600	SENSOR OPT.	1	1	1
	64	7NXSG2481+++H01	NX052600	SENSOR OPT. (Duplex model)	1	1	1
⊙	65	302HS24350	2HS24350	SPRING REGIST L	1	1	1
	66	302HS24240	2HS24240	SPRING REGIST R	1	1	1
⊙	A02	302HS94080	2HS94080	REGIST LOW KIT	1	1	1
	67	*302HS24050	2HS24050	ROLLER REGIST LOW	1	1	1
	68	*302HS24180	2HS24180	SHEET REGIST	2	2	2
	101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			
	102	BAA63080		+TP TAP-TITE P SCREW M3X08			
	103	7BC00030A080H01	BC046150	WASHER M3X10X0.8T			

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 5 Paper Feed Section 2

2H5/2HS

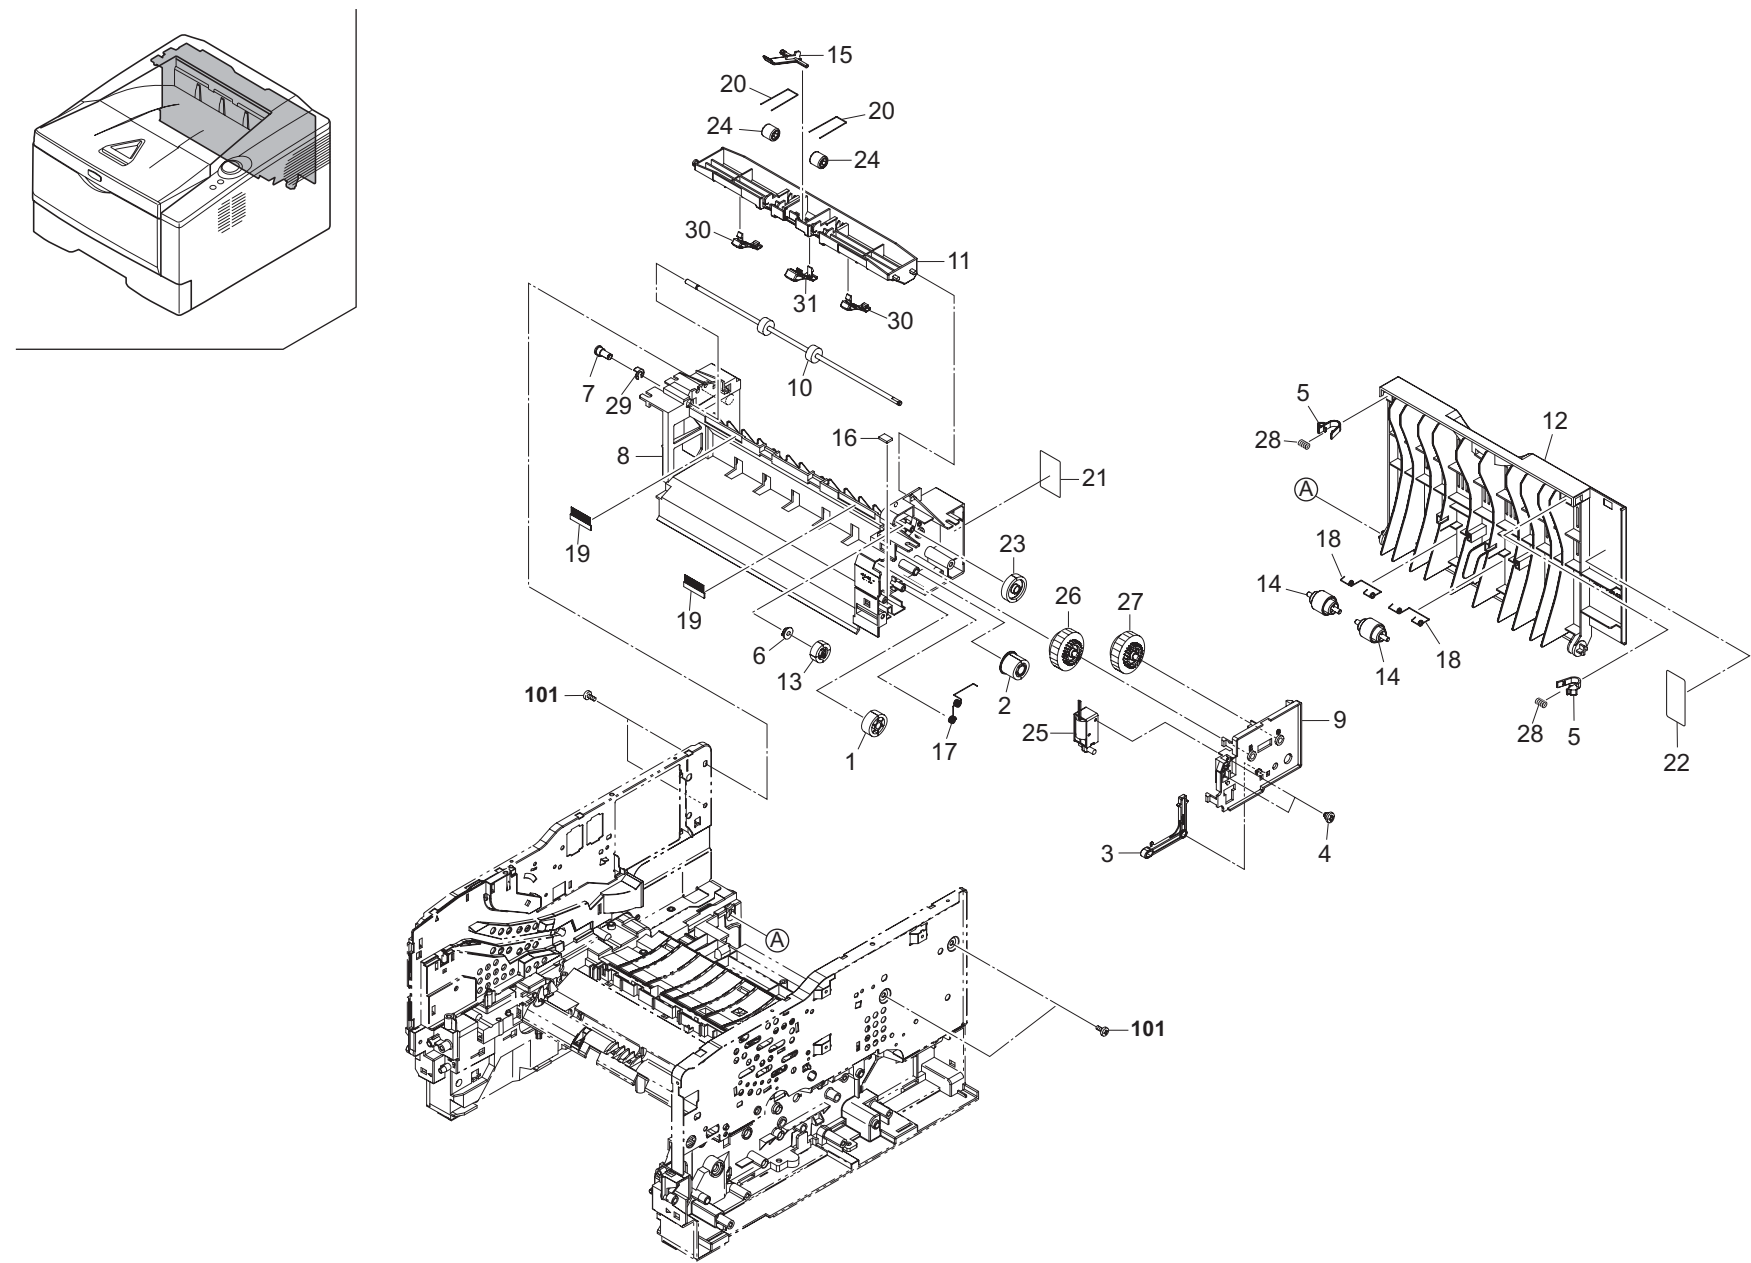


FIG. 5 Paper Feed Section 2

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	1	2BL06380		GEAR Z25 JOINT	1	1	1
⊙	2	2FM02350	5MVG133DN022	GEAR Z22 /B-11 FRAME A4	1	1	1
	3	2FM20050	5MVX651DN001	LEVER SOLENOID /B-11 FD A3	1	1	1
	4	302F325010	2F325010	STUD SCREW M3 (Duplex model)	2	2	2
	5	302F908200	2F908200	LOCK COVER	2	2	2
	6	302F929140	2F929140	BUSH DU	1	1	1
	7	302HN29050	2HN29050	BUSH DU	1	1	1
	8	302HS28010	2HS28010	FRAME FD	1	1	1
	9	302HS28020	2HS28020	COVER FRAME FD	1	1	1
⊙	10	302HS28030	2HS28030	ROLLER FD UP	1	1	1
	11	302HS28040	2HS28040	COVER FD	1	1	1
⊙	12	302HS28050	2HS28050	COVER REAR	1	1	1
⊙	13	302HS28060	2HS28060	GEAR Z21S	1	1	1
	14	302HS28070	2HS28070	PULLEY EXIT	2	2	2
	15	302HS28080	2HS28080	ACTUATOR PAPER	1	1	1
	16	5MVS217SN002	2A806280	PAD SOLENOID /FS-1000 A4 (Duplex model)	1	1	1
	17	302HS28110	2HS28110	SPRING EARTH	1	1	1
	18	302HS28120	2HS28120	SPRING EXIT	2	2	2
⊙	19	302HS28130	2HS28130	DISCHARGER FD	2	2	2
	20	302HS28140	2HS28140	SPRING PULLEY	2	2	2
	21	302HS34010	2HS34010	LABEL FUSER CAUTION	1	1	1
	22	302HS34020	2HS34020	LABEL FUSER JAM	1	1	1
⊙	23	5MVG138DN048	2BD02270	GEAR FD Z29 /43397B0051 A4	1	1	1
	24	5MVM273DB005	2A820100	PULLEY EXIT /A-49 FUSER A3	2	2	2
⊙	25	302G680110	2G680110	SOLENOID ASSY (Duplex model)	1	1	1
⊙	26	2FM68250		GEAR CLUTCH ASSY A	1	1	1
⊙	27	2FM68260		GEAR CLUTCH ASSY B (Duplex model)	1	1	1
	28	302F925780	2F925780	SPRING DU	2	2	2
	29	5MVX111DN007	2BT11070	STOPPER 3 /2BT1107 A4	1	1	1
	30	302HS28150	2HS28150	GUIDE FD SIDE (Duplex model)	2	2	2
	31	302HS28160	2HS28160	GUIDE FD CENTER (Duplex model)	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
	101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

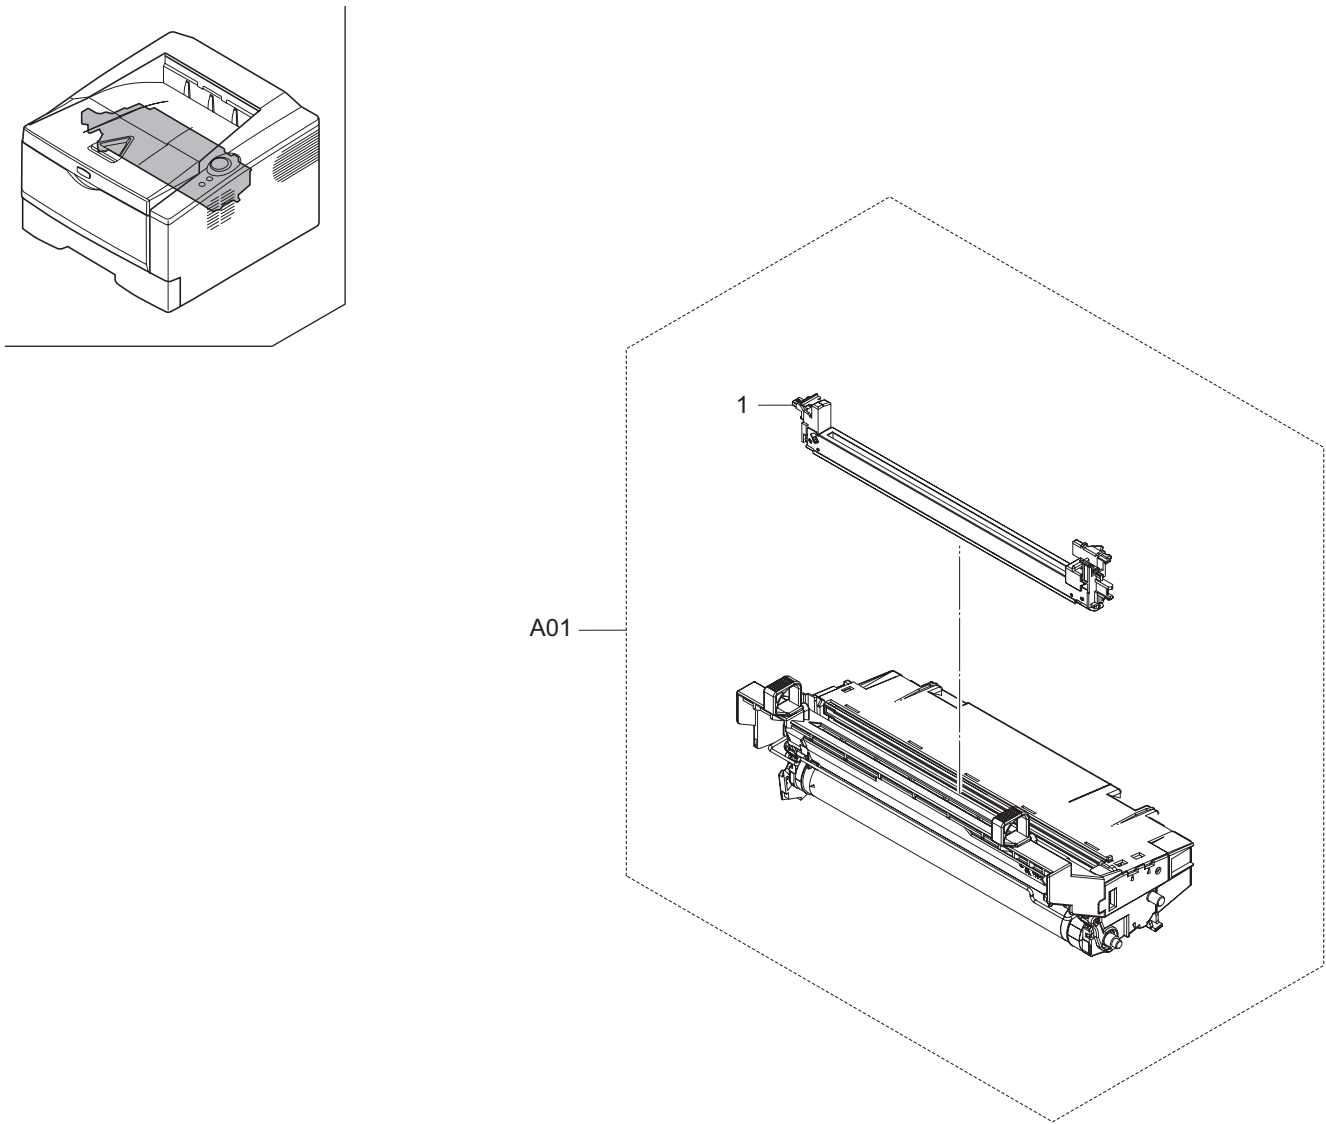


FIG. 6 Image Formation Section

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	A01	302HS93010	2HS93010	DK-130	1	1	1
⊙	1	•302HS93070	2HS93070	MC-130	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

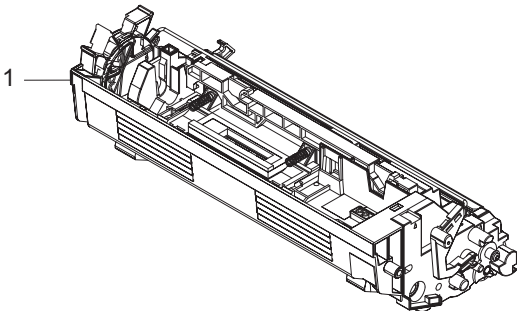
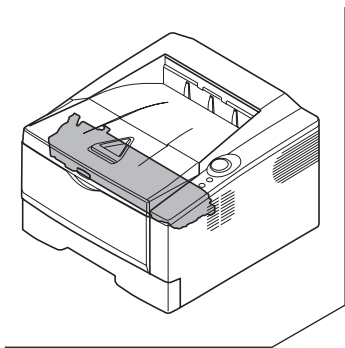


FIG. 7 Developing Section

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	1	302H593020	2H593020	DV-142(U) (Simplex model)	1		
⊙	1	302HS93100	2HS93100	DV-132(U) (Duplex model)	1		
⊙	1	302H593010	2H593010	DV-140(E) (Simplex model)		1	
⊙	1	302HS93020	2HS93020	DV-130(E) (Duplex model)		1	
⊙	1	302H593030	2H593030	DV-144(AO) (Simplex model)			1
⊙	1	302HS93140	2HS93140	DV-134(AO) (Duplex model)			1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "• •" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 8 Fuser Section

2H5/2HS

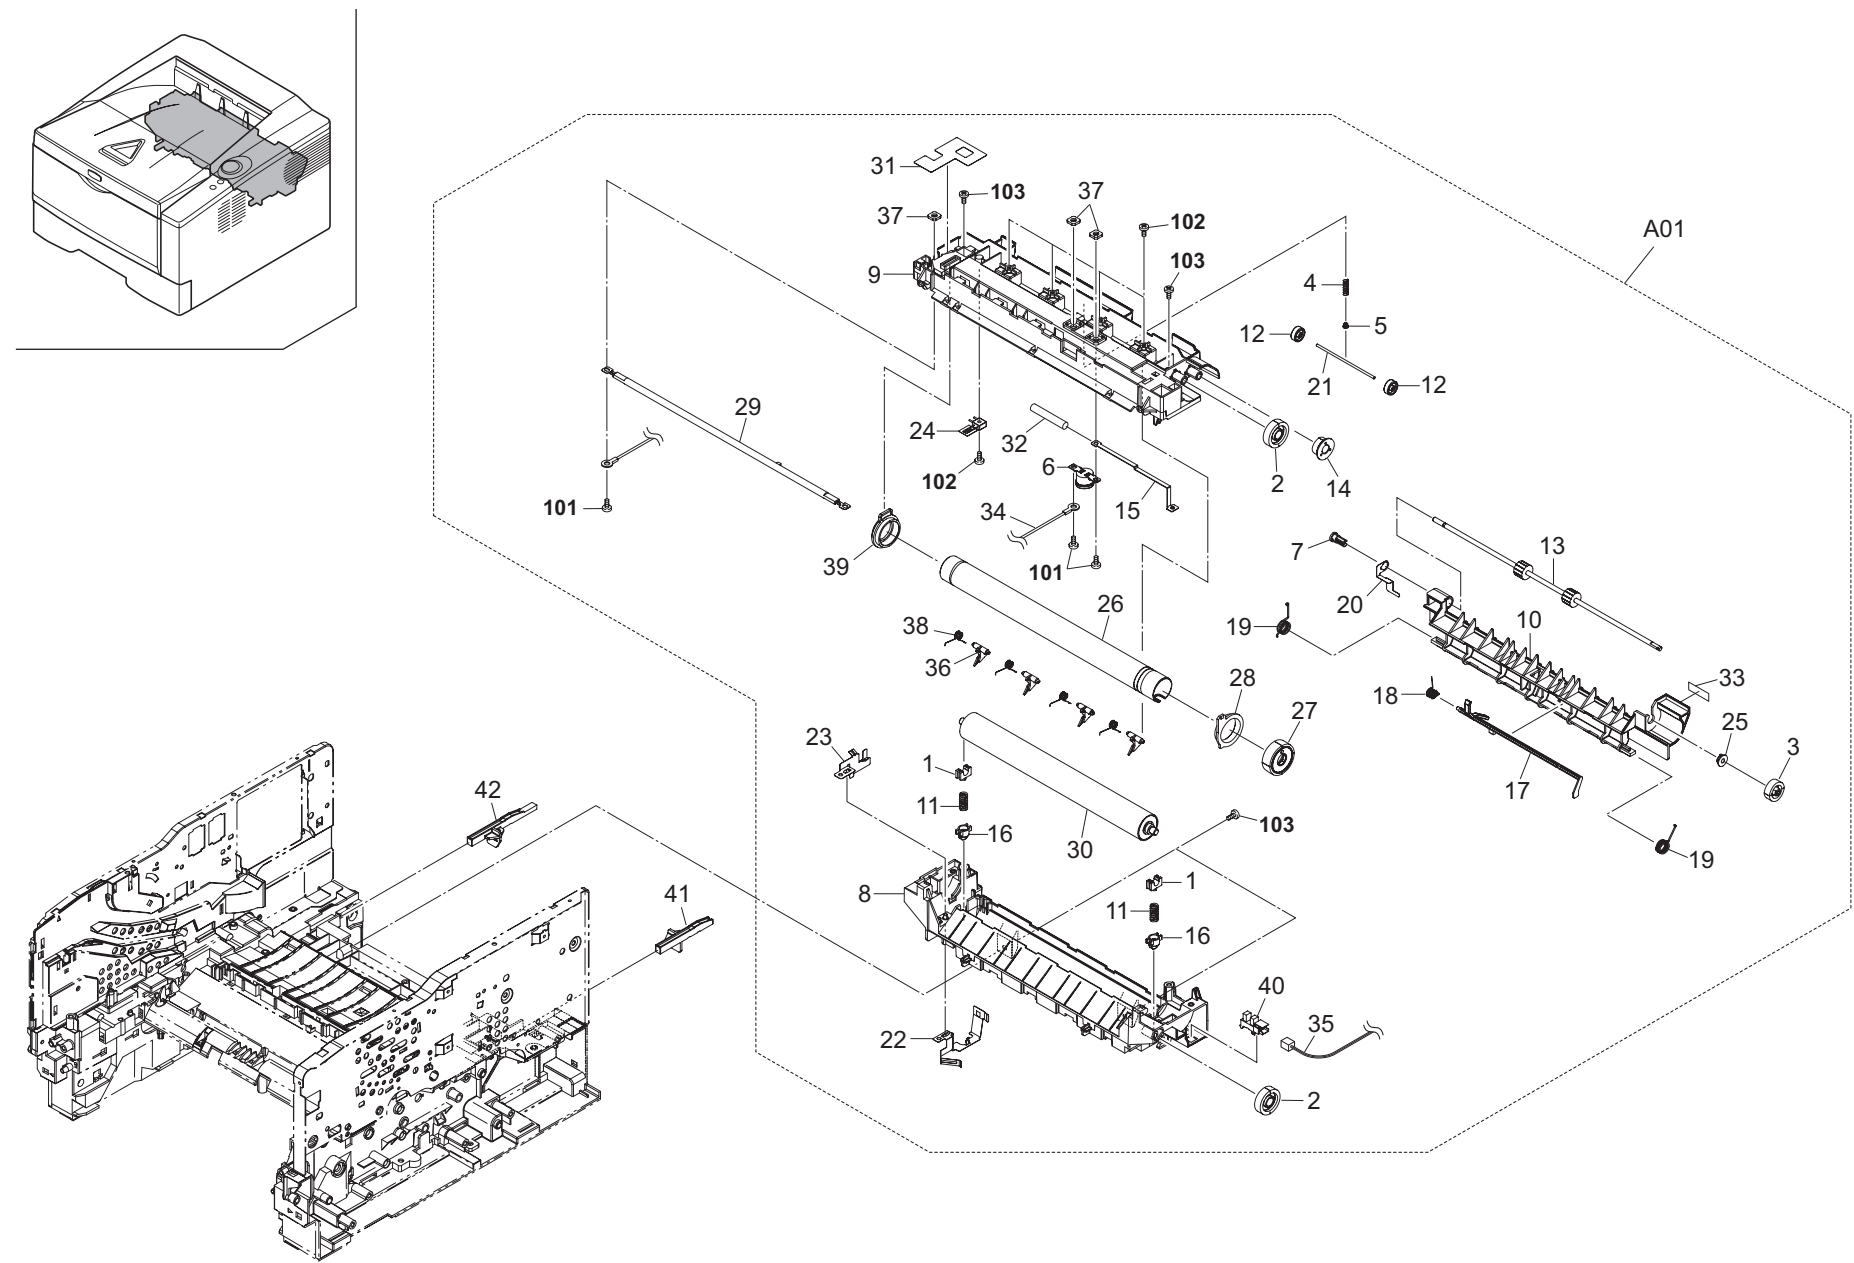


FIG. 8 Fuser Section

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	A01	302HS93050	2HS93050	FK-130(U)	1		
⊙	A01	302HS93040	2HS93040	FK-130(E)		1	1
⊙	1	*2BY20070	5MVX221XN004	BUSH PRESS /49523A0152 A4	2	2	2
⊙	2	*302F925080	2F925080	GEAR IDLE A Z29	2	2	2
⊙	3	*302F925140	2F925140	GEAR EXIT Z21	1	1	1
	4	*302F925340	2F925340	SPRING EXIT	1	1	1
	5	*302F925901	2F925901	CAP SPRING EXIT	1	1	1
⊙	6	*302GR25290	2GR25290	THERMOSTAT M FUSER	1	1	1
	7	*302HN25450	2HN25450	BUSH EXIT	1	1	1
	8	*302HS25010	2HS25010	FRAME FUSER LOW	1	1	1
	9	*302HS25020	2HS25020	FRAME FUSER UP	1	1	1
	10	*302HS25030	2HS25030	GUIDE EXIT LOW	1	1	1
	11	*302HS25040	2HS25040	SPRING PRESSURE	2	2	2
⊙	12	*302HS25050	2HS25050	PULLEY EXIT FUSER	2	2	2
⊙	13	*302HS25060	2HS25060	ROLLER EXIT	1	1	1
⊙	14	*302HS25070	2HS25070	GEAR Z18S IDLE	1	1	1
	15	*302HS25080	2HS25080	PLATE CODE	1	1	1
	16	*302HS25100	2HS25100	HOLDER SPRING PRESS	2	2	2
	17	*302HS25110	2HS25110	ACTUATOR FUSER	1	1	1
	18	*302HS25120	2HS25120	SPRING ACTUATOR	1	1	1
	19	*302HS25130	2HS25130	SPRING EXIT L	2	2	2
	20	*302HS25140	2HS25140	PLATE EARTH EXIT	1	1	1
	21	*302HS25150	2HS25150	SHAFT EXIT	1	1	1
	22	*302HS25160	2HS25160	PLATE EARTH L	1	1	1
	23	*302HS25170	2HS25170	PLATE EARTH ROLLER	1	1	1
⊙	24	*302HS25190	2HS25190	THERMISTOR FUSER	1	1	1
	25	*302HS25220	2HS25220	BUSH FUSER	1	1	1
⊙	26	*302HS25230	2HS25230	ROLLER HEAT	1	1	1
⊙	27	*302HS25260	2HS25260	GEAR Z36S HEAT	1	1	1
⊙	28	*302HS25280	2HS25280	BUSH HEAT R	1	1	1
⊙	29	*302HS25300	2HS25300	HEATER LAMP U	1		
⊙	29	*302HS25240	2HS25240	HEATER LAMP E		1	1
⊙	30	*302HS25360	2HS25360	ROLLER PRESS	1	1	1
	31	*302HS25400	2HS25400	SHEET FUSER	1	1	1
	32	*302HS25410	2HS25410	TUBE PLATE CODE	1	1	1
	33	*302HS34120	2HS34120	LABEL FUSER OPERATION (Duplex model)	1	1	1
	34	*302HS46110	2HS46110	CONN.CORD ASSY PWS-HEATER(U) S03306	1		
	34	*302HS46100	2HS46100	CONN.CORD ASSY PWS-HEATER(E) S03305		1	1
	35	*302HS46140	2HS46140	CONN.CORD ASSY CONTROL-EXITSENSOR S0	1	1	1
⊙	36	*5AAVSEPR015	2A820360	SEPARATOR ASSY /FS-1000 A4	4	4	4
	37	*5MMS111SL002	2BY20050	NUT FUSER A /FS-1800/3800 A4	3	3	3
	38	*5MMW261LD055	2A820350	SPRING SEPARATOR /FS-1000 A4	4	4	4
⊙	39	*5MVX441XN001	2BR20180	BUSH HEAT L /43307P0003 A4	1	1	1
	40	*7NXSG2481+++H01	NX052600	SENSOR OPT.	1	1	1
	41	302HS25200	2HS25200	LEVER FUSER R	1	1	1
	42	302HS25210	2HS25210	LEVER FUSER L	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
	101	5MBSP43006NW++R	B4A03060	TP HEAD SCREW(+) / M3 X 6 DRFREE			
	102	5MBTPB3012PW++R	B1A63120	BIND T.T SCREW(+) / M3 X 12 CRFREE P-T			
	103	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+) / M4 X 10 CRFREE P-T			

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 9 Drive Section (Simplex model)

2H5/2HS

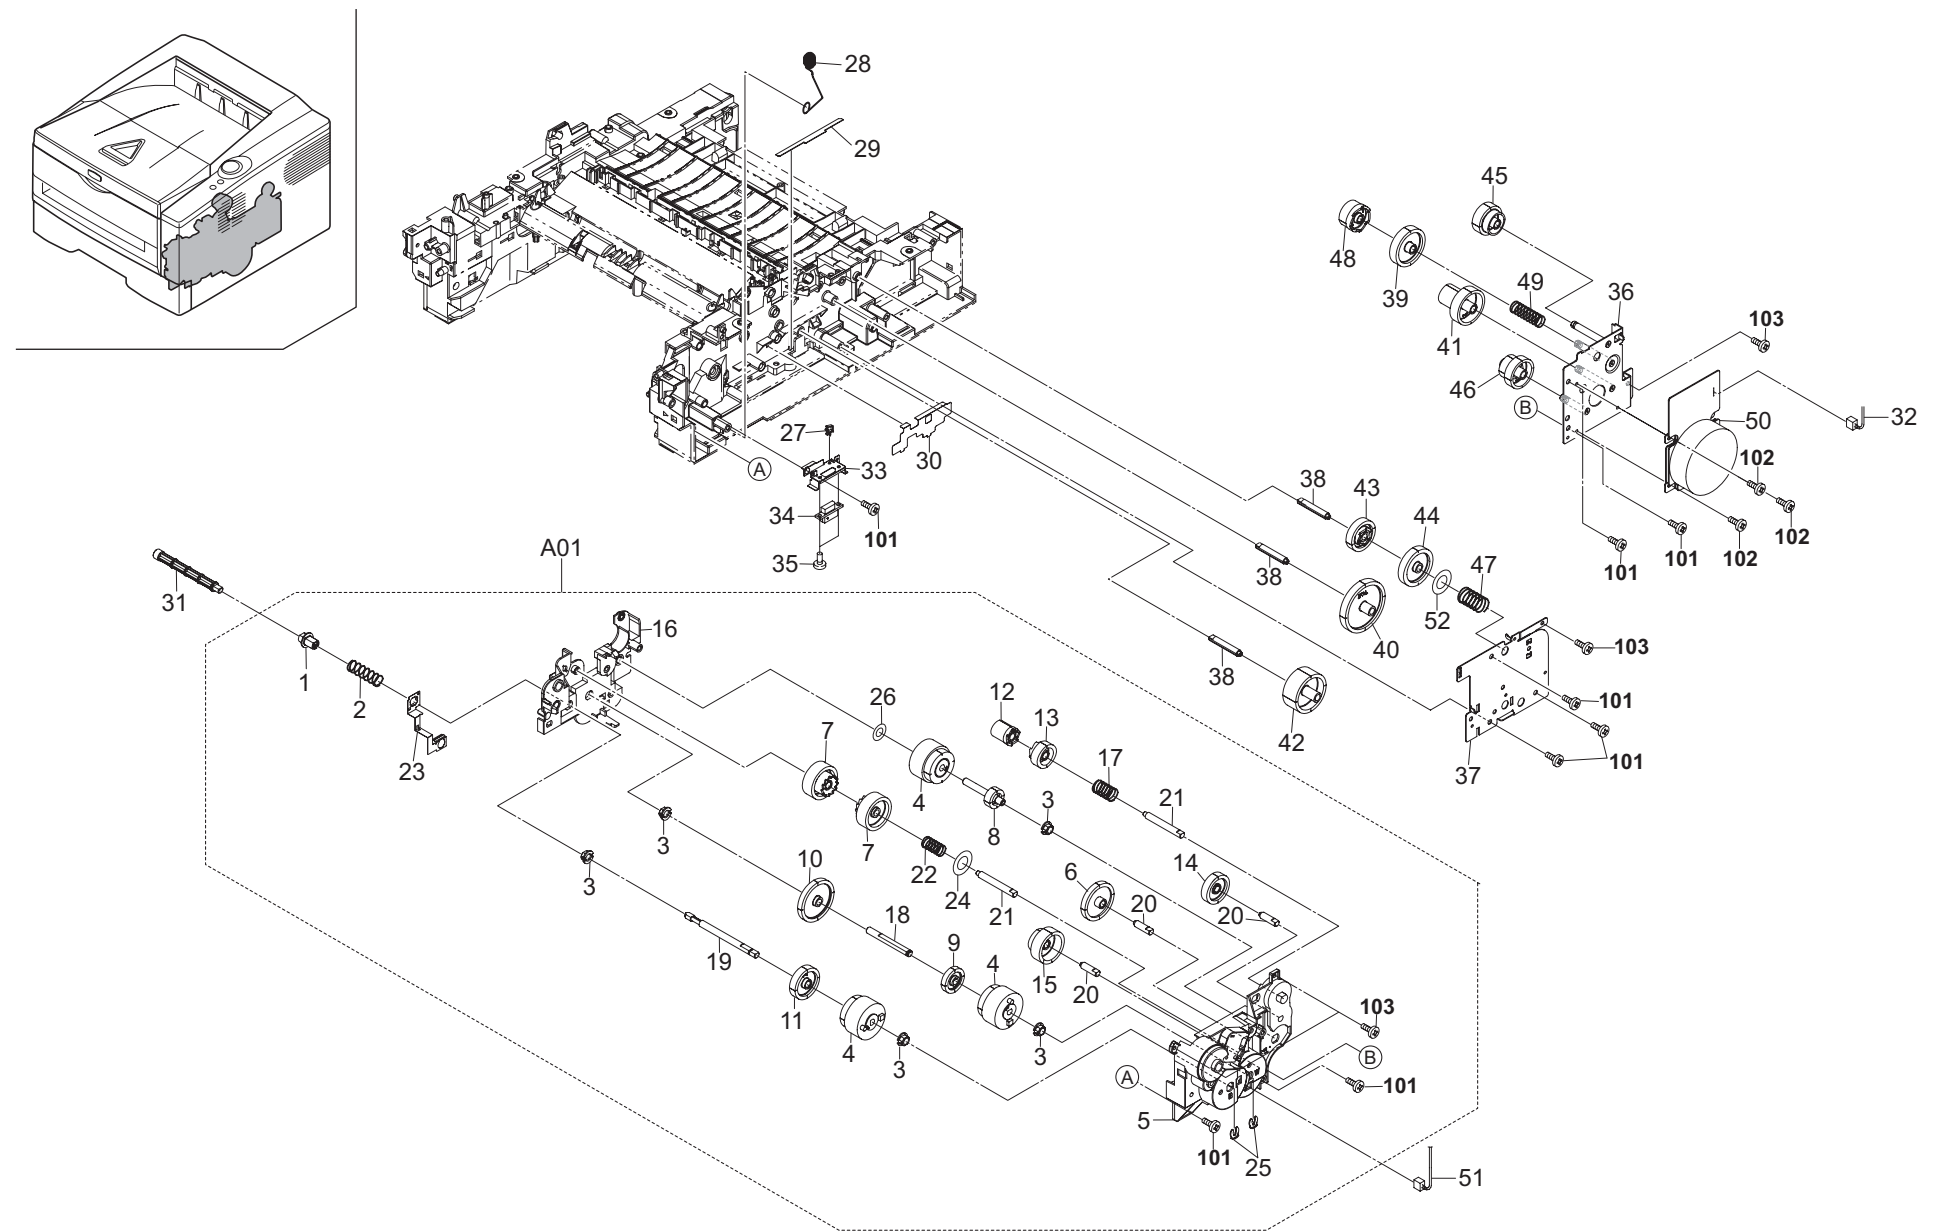


FIG. 9 Drive Section (Simplex model)

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	A01	302H593040	2H593040	DR-140	1	1	1
	1	*302F931350	2F931350	JOINT SHAFT CASSETTE	1	1	1
	2	*302F931450	2F931450	SPRING FEED	1	1	1
	3	*302F931490	2F931490	BUSH FEED DRIVE	5	5	5
⊙	4	*302HN44110	2HN44110	CLUTCH FEED	3	3	3
	5	*302HS31030	2HS31030	DRIVE HOLDER	1	1	1
⊙	6	*302HS31080	2HS31080	GEAR Z42R	1	1	1
⊙	7	*302HS31090	2HS31090	GEAR Z37L FREE	2	2	2
⊙	8	*302HS31100	2HS31100	GEAR Z20L CLUTCH	1	1	1
⊙	9	*302HS31120	2HS31120	GEAR Z27L CLUTCH	1	1	1
⊙	10	*302HS31130	2HS31130	GEAR Z45R CLUTCH	1	1	1
⊙	11	*302HS31140	2HS31140	GEAR Z35R IDLE	1	1	1
⊙	12	*302HS31190	2HS31190	GEAR Z17R FREE	1	1	1
⊙	13	*302HS31200	2HS31200	GEAR Z26L FREE	1	1	1
⊙	14	*302HS31260	2HS31260	GEAR Z32R	1	1	1
⊙	15	*302HS31270	2HS31270	GEAR Z34L-Z24L	1	1	1
	16	*302HS31290	2HS31290	DRIVE HOLDER COVER	1	1	1
	17	*302HS31320	2HS31320	SPRING FREE MAG	1	1	1
	18	*302HS31330	2HS31330	PIN CLUTCH	1	1	1
	19	*302HS31340	2HS31340	SHAFT CASSETTE	1	1	1
	20	*302HS31360	2HS31360	PIN HOLDER A	3	3	3
	21	*302HS31370	2HS31370	PIN HOLDER B	2	2	2
	22	*302HS31410	2HS31410	SPRING FREE Z37L	1	1	1
	23	*302HS31420	2HS31420	EARTH PLATE DRIVE	1	1	1
	24	*302HS31430	2HS31430	POLYSLIDER 9.5	1	1	1
⊙	25	*5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	2	2	2
	26	*7BC06062C020H01	BC045240	POLY SLIDER WASHER M6.2X12X0.2T	1	1	1
	27	7YZM610007++H01	YZ023340	ACCESS.SADDLE	1	1	1
	28	302HS02370	2HS02370	SPRING EARTH CASSETTE	1	1	1
	29	302HS02520	2HS02520	COVER CABLE E	1	1	1
	30	302HS02530	2HS02530	COVER CABLE F	1	1	1
	31	302HS06110	2HS06110	SHAFT FEED	1	1	1
	32	302HS46040	2HS46040	CONN.CORD ASSY CONTROL-MAIN MOTOR S0	1	1	1
	33	302HS02380	2HS02380	PLATE PF CONNECTOR	1	1	1
	34	302HS46030	2HS46030	CONN.CORD ASSY CONTROL-PF S03247	1	1	1
	35	302HS02540	2HS02540	PIN DRAWER	2	2	2
⊙	36	302HS31020	2HS31020	PLATE DRIVE	1	1	1
	37	302HS31040	2HS31040	PLATE GEAR DRIVE	1	1	1
	38	302HS31060	2HS31060	PIN GEAR DRIVE	3	3	3
⊙	39	302HS31070	2HS31070	GEAR Z42R FREE 2	1	1	1
⊙	40	302HS31110	2HS31110	GEAR Z58L	1	1	1
⊙	41	302HS31170	2HS31170	GEAR Z64R-Z21L	1	1	1
⊙	42	302HS31180	2HS31180	GEAR Z44R	1	1	1
⊙	43	302HS31210	2HS31210	GEAR Z35S FREE	1	1	1
⊙	44	302HS31220	2HS31220	GEAR Z42R FREE	1	1	1
⊙	45	302HS31240	2HS31240	GEAR Z32L DRUM	1	1	1
⊙	46	302HS31250	2HS31250	GEAR Z54R-Z24R	1	1	1
	47	302HS31310	2HS31310	SPRING FREE FUSER	1	1	1
⊙	48	302HS31390	2HS31390	GEAR Z27R FREE 2	1	1	1
	49	302HS31400	2HS31400	SPRING FREE DRUM	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	50	302HS44010	2HS44010	MOTOR MAIN	1	1	1
	51	302HS46210	2HS46210	CONN.CORD ASSY CONTROL-F/RCLUTCH S03	1	1	1
	52	302HS31430	2HS31430	POLYSLIDER 9.5	1	1	1
	101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			
	102	BAB53060		+TP TAP-TITE S SCREW M3X06			
	103	5MBTPB3006TW++R	B1A53060	BIND T.T SCREW(+)/ M3 X 6 CRFREE S-T			

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "•" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 9 Drive Section (Duplex model)

2H5/2HS

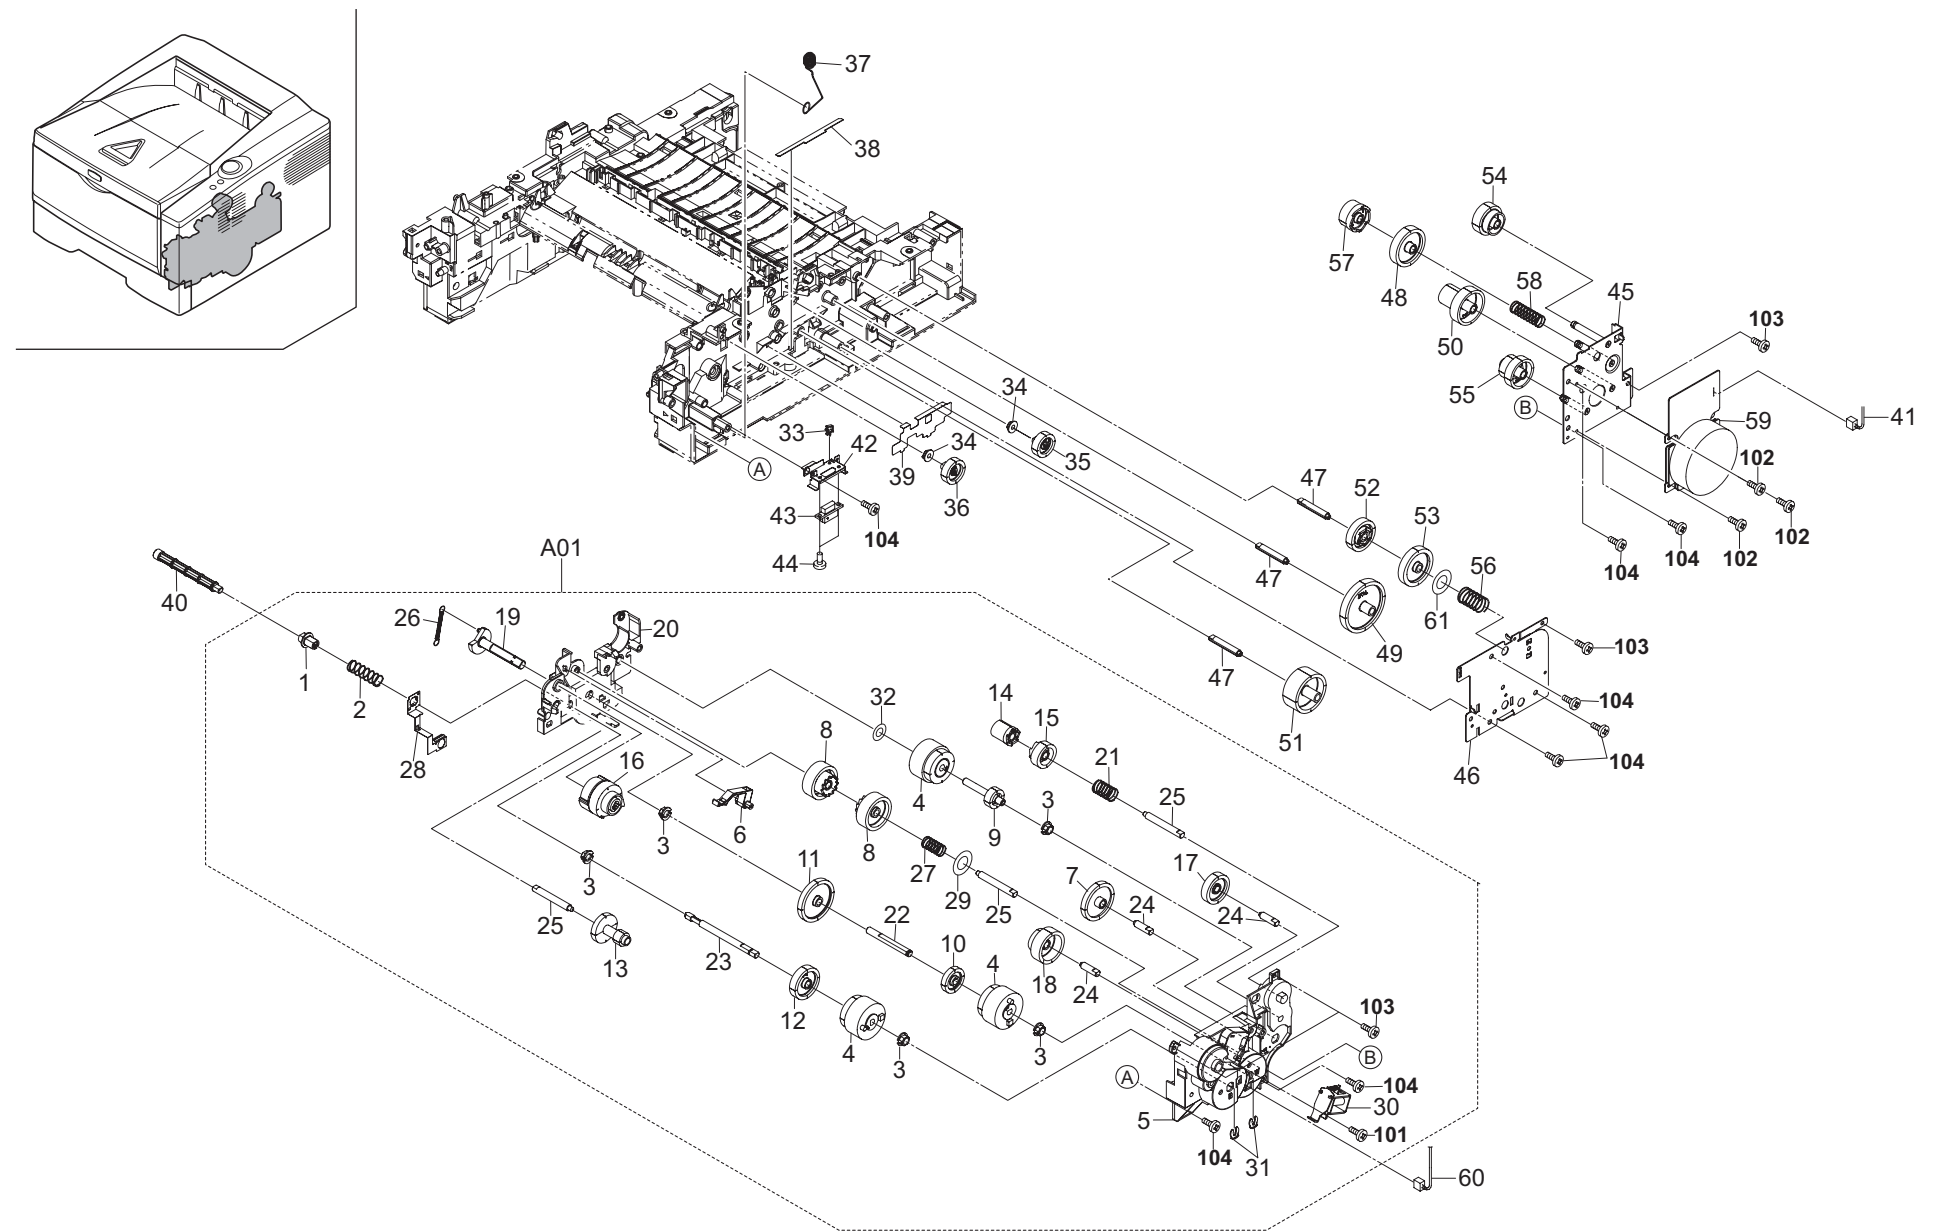


FIG. 9 Drive Section (Duplex model)

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	A01	302HS93060	2HS93060	DR-130	1	1	1
	1	*302F931350	2F931350	JOINT SHAFT CASSETTE	1	1	1
	2	*302F931450	2F931450	SPRING FEED	1	1	1
	3	*302F931490	2F931490	BUSH FEED DRIVE	5	5	5
⊙	4	*302HN44110	2HN44110	CLUTCH FEED	3	3	3
	5	*302HS31030	2HS31030	DRIVE HOLDER	1	1	1
	6	*302HS31050	2HS31050	LEVER LIFT BOTTOM	1	1	1
⊙	7	*302HS31080	2HS31080	GEAR Z42R	1	1	1
⊙	8	*302HS31090	2HS31090	GEAR Z37L FREE	2	2	2
⊙	9	*302HS31100	2HS31100	GEAR Z20L CLUTCH	1	1	1
⊙	10	*302HS31120	2HS31120	GEAR Z27L CLUTCH	1	1	1
⊙	11	*302HS31130	2HS31130	GEAR Z45R CLUTCH	1	1	1
⊙	12	*302HS31140	2HS31140	GEAR Z35R IDLE	1	1	1
⊙	13	*302HS31150	2HS31150	GEAR Z31L-Z14S	1	1	1
⊙	14	*302HS31190	2HS31190	GEAR Z17R FREE	1	1	1
⊙	15	*302HS31200	2HS31200	GEAR Z26L FREE	1	1	1
⊙	16	*302HS31230	2HS31230	GEAR Z38S MPF	1	1	1
⊙	17	*302HS31260	2HS31260	GEAR Z32R	1	1	1
⊙	18	*302HS31270	2HS31270	GEAR Z34L-Z24L	1	1	1
	19	*302HS31280	2HS31280	LIFT BOTTOM	1	1	1
	20	*302HS31290	2HS31290	DRIVE HOLDER COVER	1	1	1
	21	*302HS31320	2HS31320	SPRING FREE MAG	1	1	1
	22	*302HS31330	2HS31330	PIN CLUTCH	1	1	1
	23	*302HS31340	2HS31340	SHAFT CASSETTE	1	1	1
	24	*302HS31360	2HS31360	PIN HOLDER A	3	3	3
	25	*302HS31370	2HS31370	PIN HOLDER B	3	3	3
	26	*302HS31380	2HS31380	SPRING LIFT BOTTOM	1	1	1
	27	*302HS31410	2HS31410	SPRING FREE Z37L	1	1	1
	28	*302HS31420	2HS31420	EARTH PLATE DRIVE	1	1	1
	29	*302HS31430	2HS31430	POLYSLIDER 9.5	1	1	1
⊙	30	*302HS44020	2HS44020	SOLENOID MPF	1	1	1
⊙	31	*5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	2	2	2
	32	*7BC06062C020H01	BC045240	POLY SLIDER WASHER M6.2X12X0.2T	1	1	1
	33	7YZM610007++H01	YZ023340	ACCESS.SADDLE	1	1	1
	34	302F929140	2F929140	BUSH DU	2	2	2
⊙	35	302HS24220	2HS24220	GEAR Z25R DU FEED	1	1	1
⊙	36	302HS24230	2HS24230	GEAR Z26L DU MID	1	1	1
	37	302HS02370	2HS02370	SPRING EARTH CASSETTE	1	1	1
	38	302HS02520	2HS02520	COVER CABLE E	1	1	1
	39	302HS02530	2HS02530	COVER CABLE F	1	1	1
	40	302HS06110	2HS06110	SHAFT FEED	1	1	1
	41	302HS46040	2HS46040	CONN.CORD ASSY CONTROL-MAIN MOTOR S0	1	1	1
	42	302HS02380	2HS02380	PLATE PF CONNECTOR	1	1	1
	43	302HS46030	2HS46030	CONN.CORD ASSY CONTROL-PF S03247	1	1	1
	44	302HS02540	2HS02540	PIN DRAWER	2	2	2
⊙	45	302HS31020	2HS31020	PLATE DRIVE	1	1	1
	46	302HS31040	2HS31040	PLATE GEAR DRIVE	1	1	1
	47	302HS31060	2HS31060	PIN GEAR DRIVE	3	3	3
⊙	48	302HS31070	2HS31070	GEAR Z42R FREE 2	1	1	1
⊙	49	302HS31110	2HS31110	GEAR Z58L	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	51	302HS31170	2HS31170	GEAR Z64R-Z21L	1	1	1
⊙	50	302HS31180	2HS31180	GEAR Z44R	1	1	1
⊙	52	302HS31210	2HS31210	GEAR Z35S FREE	1	1	1
⊙	53	302HS31220	2HS31220	GEAR Z42R FREE	1	1	1
⊙	54	302HS31240	2HS31240	GEAR Z32L DRUM	1	1	1
⊙	55	302HS31250	2HS31250	GEAR Z54R-Z24R	1	1	1
	56	302HS31310	2HS31310	SPRING FREE FUSER	1	1	1
⊙	57	302HS31390	2HS31390	GEAR Z27R FREE 2	1	1	1
	58	302HS31400	2HS31400	SPRING FREE DRUM	1	1	1
⊙	59	302HS44010	2HS44010	MOTOR MAIN	1	1	1
	60	302HS46210	2HS46210	CONN.CORD ASSY CONTROL-F/RCLUTCH S03	1	1	1
	61	302HS31430	2HS31430	POLYSLIDER 9.5	1	1	1
	101	5MBTPB3008PW++R	B1A63080	BIND T.T SCREW(+)/ M3 X 8 CRFREE P-T			
	102	BAB53060		+TP TAP-TITE S SCREW M3X06			
	103	5MBTPB3006TW++R	B1A53060	BIND T.T SCREW(+)/ M3 X 6 CRFREE S-T			
	104	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			

- Parts with "*" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 10 Duplex Section (Duplex model)

2H5/2HS

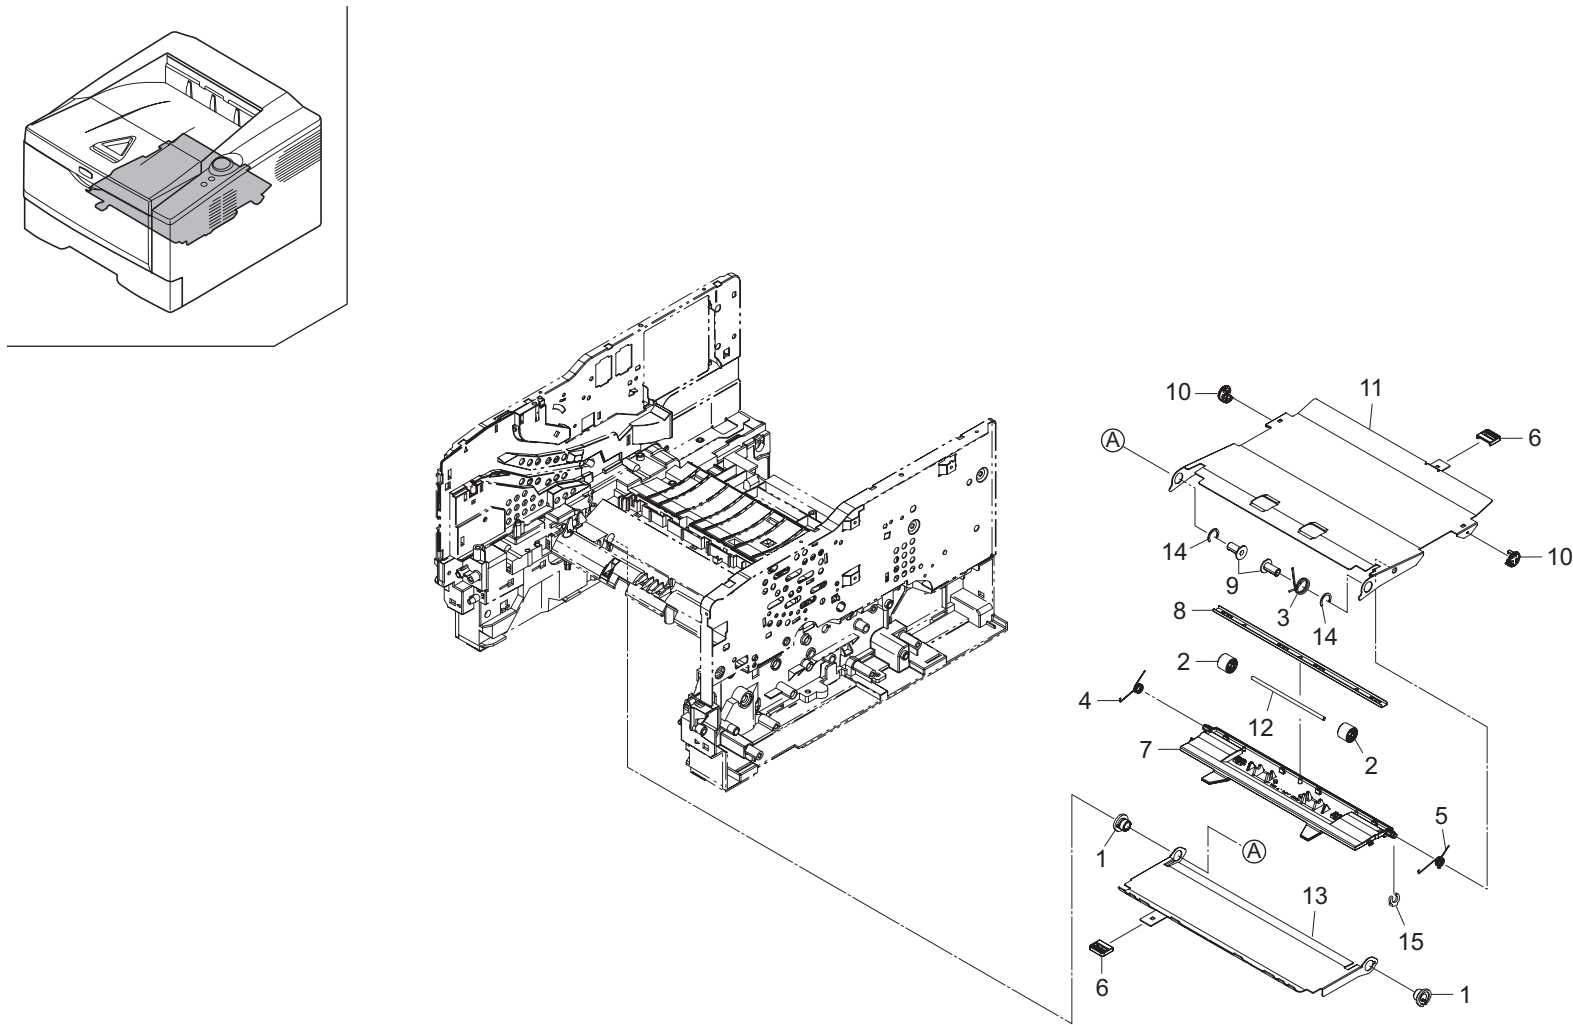


FIG. 10 Duplex Section (Duplex model)

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	1	2FM02140	5MVM786XB001	BUSH DU /B-11 FRAME A3	2	2	2
	2	2FM02210	5MVM274DN002	PULLEY MID /B-11 FRAME A4	2	2	2
	3	2FM02500	5MMW176SD002	SPRING DU R /B-11 FRAME A4	1	1	1
	4	2FM02510	5MMW166SD002	SPRING HOLDER L /B-11 FRAME A4	1	1	1
	5	2FM02520	5MMW166SD003	SPRING HOLDER R /B-11 FRAME A4	1	1	1
	6	2FM02690	5MVX221DG002	LEVER DU /B-11 DU A3	2	2	2
	7	2FM21010	5MVX861XB001	HOLDER DU /B-11 DU A1	1	1	1
	8	2FM21020	5MML821SD009	STAY DU /B-11 DU A3	1	1	1
	9	2FM21030	5MVM276DN017	STOPPER BUSH /B-11 DU A4	2	2	2
	10	2FM21050	5MVX173DN001	COLLER DU /B-11 DU A3	2	2	2
	11	302HS29020	2HS29020	PLATE COVER DU B	1	1	1
	12	302FM02421	2FM02421	SHAFT PULLEY /B-11 FRAME A4	1	1	1
	13	302HS29010	2HS29010	PLATE COVER DU	1	1	1
	14	5MBCK9560XSC	D4103700	C STOP RING /X9.5 X 0.6T S-CR	2	2	2
	15	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	1	1	1

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

FIG. 11 Electrical Components

2H5/2HS

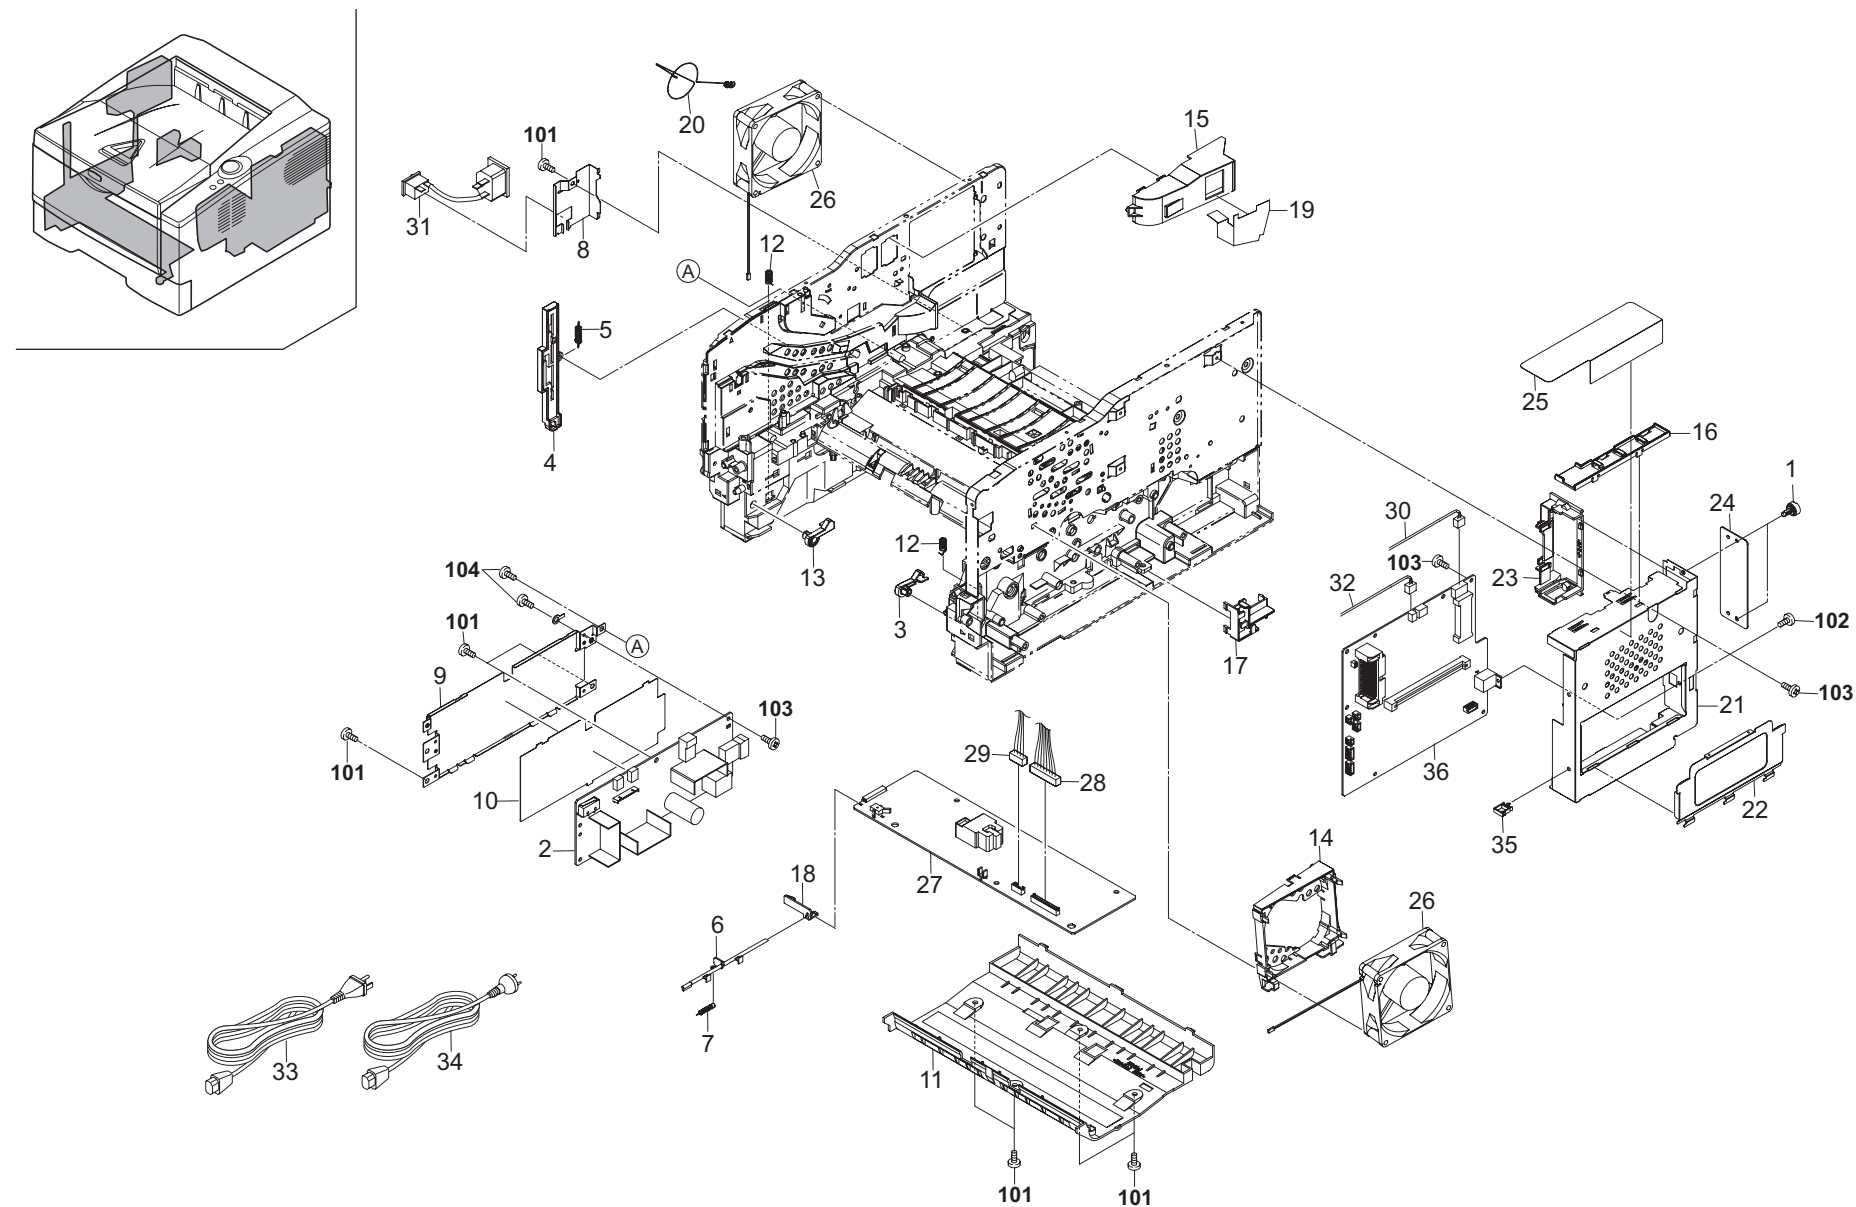


FIG. 11 Electrical Components

2H5/2HS

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
⊙	1	302F939081	2F939081	SCREW BOX	2	2	2
	2	302HS45020	2HS45020	SWITCHING REGULATOR 120V	1		
	2	302HS45010	2HS45010	SWITCHING REGULATOR 230V		1	1
	3	302HS02070	2HS02070	LEVER LOCK CASSETTE	1	1	1
	4	302HS02110	2HS02110	LEVER INTERLOCK SW	1	1	1
	5	302HS02120	2HS02120	SPRING INTERLOCK SW	1	1	1
	6	302HS02180	2HS02180	PIN CASSETTE	1	1	1
	7	302HS02190	2HS02190	SPRING PIN CASSETTE	1	1	1
	8	302HS02200	2HS02200	PLATE MAIN SW	1	1	1
	9	302HS02210	2HS02210	PLATE POWER SUPPLY	1	1	1
	10	302HS02240	2HS02240	FILM POWER SUPPLY	1	1	1
	11	302HS02280	2HS02280	COVER BASE LOW	1	1	1
	12	302HS02360	2HS02360	SPRING LOCK CASSETTE	2	2	2
	13	302HS02390	2HS02390	LEVER LOCK CASSETTE L	1	1	1
	14	302HS02420	2HS02420	BKT FAN R	1	1	1
	15	302HS02450	2HS02450	BKT FAN L	1	1	1
	16	302HS02490	2HS02490	COVER CABLE C	1	1	1
	17	302HS02510	2HS02510	COVER CABLE D	1	1	1
	18	302HS02560	2HS02560	HOLDER PIN CASSETTE	1	1	1
	19	302HS02610	2HS02610	SHEET DUCT BKT FAN	1	1	1
	20	302HS02620	2HS02620	SPRING EARTH FAN	1	1	1
	21	302HS39010	2HS39010	BOX CONTROLLER	1	1	1
	22	302HS39020	2HS39020	COVER BOX	1	1	1
	23	302HS39030	2HS39030	GUIDE OPTION SLOT	1	1	1
	24	302HS39040	2HS39040	PLATE OPTION	1	1	1
	25	302HS39050	2HS39050	FILM COVER CABLE	1	1	1
	26	302HS44050	2HS44050	MOTOR FAN 80	2	2	2
	27	302HS45030	2HS45030	HIGH VOLTAGE UNIT	1	1	1
	28	302HS46060	2HS46060	CONN.CORD ASSY CONTROL-H.V.UNIT S03240	1	1	1
	29	302HS46070	2HS46070	CONN.CORD ASSY CONTROL-H.V.UNIT S03303	1	1	1
	30	302HS46090	2HS46090	CONN.CORD ASSY CONTROL-RELAY S03243	1	1	1
	31	302HS46120	2HS46120	CONN.CORD ASSY PWS-INLET S03238	1	1	1
	32	302HS46130	2HS46130	CONN.CORD ASSY CONTROL-ERASER S03252	1	1	1
	33	2DC27410		AC CORD 120 ASSY	1		
	34	302FV45020	2FV45020	AC CORD ASSY		1	1
	35	7YZM610008++H01	YZ037940	ACCESS.SADDLE	1	1	1
	35	302HS94090	2HS94090	P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP) (Duplex model)	1	1	1
	36	302H594010	2H594010	P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP) (Simplex model)	1	1	1

	Ref. No.	Part.No.	Alternative.	Description	Quantity		
					120	230	240
	101	5MBTPB4010PW++R	B1A64100	BIND T.T SCREW(+)/ M4 X 10 CRFREE P-T			
	102	5MBSPB3006NW++R	B1B03060	BIND HEAD SCREW(+)/ M3 X 6 CRFREE			
	103	5MBTPB3006TW++R	B1A53060	BIND T.T SCREW(+)/ M3 X 6 CRFREE S-T			
	104	5MBTPB4006TW++R	B1A54060	BIND T.T SCREW(+)/ M4 X 6 CRFREE S-T			

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- Parts with "••" are component parts or sub-assembly with "•" appearing immediately above them.

2H5/2HS

- Parts with "•" are component parts or sub-assemblies of the assembly appearing immediately above them.
- Parts with "⊙" indicate regular maintenance parts.

- 28 -

INDEX

2H5/2HS

	Part.No.	Alternative.	Description	Fig.No.
	2BC06980		STOPPER 5	4
⊙	2BL06380		GEAR Z25 JOINT	5
⊙	2BY20070	5MVX221XN004	BUSH PRESS /49523A0152 A4	8
	2DC27410		AC CORD 120 ASSY	11
	2FM02140	5MVM786XB001	BUSH DU /B-11 FRAME A3	10
	2FM02180	5MVX221DN020	BUSH REGIST C /B-11 FRAME A3	4
⊙	2FM02210	5MVM274DN002	PULLEY MID /B-11 FRAME A4	10
⊙	2FM02350	5MVG133DN022	GEAR Z22 /B-11 FRAME A4	5
	2FM02500	5MMW176SD002	SPRING DU R /B-11 FRAME A4	10
	2FM02510	5MMW166SD002	SPRING HOLDER L /B-11 FRAME A4	10
	2FM02520	5MMW166SD003	SPRING HOLDER R /B-11 FRAME A4	10
	2FM02690	5MVX221DG002	LEVER DU /B-11 DU A3	10
	2FM06010	5MVX765SH004	GUIDE SIDE L /B-11 CASSETTE A2	3
	2FM06020	5MVX765SH005	GUIDE SIDE R /B-11 CASSETTE A2	3
	2FM20050	5MVX651DN001	LEVER SOLENOID /B-11 FD A3	5
	2FM21010	5MVX861XB001	HOLDER DU /B-11 DU A1	10
	2FM21020	5MML821SD009	STAY DU /B-11 DU A3	10
	2FM21030	5MVM276DN017	STOPPER BUSH /B-11 DU A4	10
	2FM21050	5MVX173DN001	COLLER DU /B-11 DU A3	10
⊙	2FM68250		GEAR CLUTCH ASSY A	5
⊙	2FM68260		GEAR CLUTCH ASSY B	5
⊙	302A816031	2A816031	BUSH TC R /A-49 FEED A4	4
	302F325010	2F325010	STUD SCREW M3	5
	302F902420	2F902420	LOCK COVER TOP R	2
	302F904120	2F904120	EMBLEM KYOCERA	1
	302F904130	2F904130	TAPE EMBLEM	1
	302F906170	2F906170	JOINT PICKUP A	4
	302F906180	2F906180	JOINT PICKUP B	4
	302F906230	2F906230	PULLEY FEED ASSY	4
	302F906240	2F906240	PULLEY PICKUP ASSY	4
	302F906270	2F906270	SHAFT FEED L	4
	302F906280	2F906280	GEAR FEED Z30H	4
	302F908200	2F908200	LOCK COVER	2,5
	302F908270	2F908270	SP BOTTOM MPF L	2
	302F908310	2F908310	PAD FRICTION MPF	2
	302F909031	2F909031	LEVER BASE CAS REAR	3
	302F909040	2F909040	SPRING BASE CAS REAR	3
	302F909210	2F909210	PAD BOTTOM	3
⊙	302F925080	2F925080	GEAR IDLE A Z29	8
⊙	302F925140	2F925140	GEAR EXIT Z21	8
	302F925340	2F925340	SPRING EXIT	8
	302F925780	2F925780	SPRING DU	2,5
	302F925901	2F925901	CAP SPRING EXIT	8
	302F929140	2F929140	BUSH DU	5,9
	302F931350	2F931350	JOINT SHAFT CASSETTE	9
	302F931450	2F931450	SPRING FEED	9
	302F931490	2F931490	BUSH FEED DRIVE	9
	302F939081	2F939081	SCREW BOX	11
	302FM02421	2FM02421	SHAFT PULLEY /B-11 FRAME A4	10
	302FV02490	2FV02490	SPRING TC R	4

	Part.No.	Alternative.	Description	Fig.No.
	302FV45020	2FV45020	AC CORD ASSY	11
	302G622010	2G622010	SPRING TC L	4
⊙	302G680110	2G680110	SOLENOID ASSY	5
	302GJ09110	2GJ09110	GUIDE RETARD	3
	302GJ09120	2GJ09120	HOLDER RETARD	3
⊙	302GR25290	2GR25290	THERMOSTAT M FUSER	8
⊙	302H500010	2H500010	COVER RIGHT ASSY	1
	302H504010	2H504010	COVER RIGHT	1
	302H508010	2H508010	BASE BYPASS	2
	302H508020	2H508020	GUIDE BYPASS L	2
	302H508030	2H508030	GUIDE BYPASS R	2
⊙	302H508040	2H508040	COVER BYPASS UP	2
⊙	302H508050	2H508050	COVER BYPASS LOW	2
	302H580010	2H580010	PACKING ASSY	12
⊙	302H593010	2H593010	DV-140(E)	7
⊙	302H593020	2H593020	DV-142(U)	7
⊙	302H593030	2H593030	DV-144(AO)	7
⊙	302H593040	2H593040	DR-140	9
⊙	302H594010	2H594010	P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP)	11
	302HN09190	2HN09190	SPRING FIX	3
	302HN09240	2HN09240	SIZE FIX	3
	302HN25450	2HN25450	BUSH EXIT	8
	302HN29050	2HN29050	BUSH DU	5
⊙	302HN44110	2HN44110	CLUTCH FEED	9
⊙	302HS00010	2HS00010	TRAY MPF ASSY	2
⊙	302HS00030	2HS00030	COVER RIGHT ASSY	1
⊙	302HS01030	2HS01030	P.W.B BOARD ASSY PANEL	1
⊙	302HS01050	2HS01050	P.W.BOARD ASSY /ERASER	2
⊙	302HS01060	2HS01060	P.W.BOARD ASSY /EMPTY SENSOR	4
	302HS01130	2HS01130	P.W.B RFID WITH SOFTWARE	4
⊙	302HS02070	2HS02070	LEVER LOCK CASSETTE	11
⊙	302HS02090	2HS02090	LEVER STOPPER DLP	2
	302HS02100	2HS02100	SPRING STOPPER DLP	2
⊙	302HS02110	2HS02110	LEVER INTERLOCK SW	11
	302HS02120	2HS02120	SPRING INTERLOCK SW	11
	302HS02130	2HS02130	HOLDER MC	2
	302HS02140	2HS02140	PLATE CONTACT MC	2
	302HS02160	2HS02160	SPRING MC	2
⊙	302HS02180	2HS02180	PIN CASSETTE	11
	302HS02190	2HS02190	SPRING PIN CASSETTE	11
	302HS02200	2HS02200	PLATE MAIN SW	11
⊙	302HS02210	2HS02210	PLATE POWER SUPPLY	11
	302HS02240	2HS02240	FILM POWER SUPPLY	11
	302HS02250	2HS02250	SPRING EARTH REG UP	4
	302HS02260	2HS02260	SPRING EARTH REG LOW	4
	302HS02280	2HS02280	COVER BASE LOW	11
	302HS02290	2HS02290	PLATE EARTH DRUM	2
	302HS02310	2HS02310	SPRING EARTH DU FEED	2
	302HS02330	2HS02330	SPRING EARTH DU PLATE	2
	302HS02340	2HS02340	SPRING EARTH RIGHT	4

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.		Part.No.	Alternative.	Description	Fig.No.
	302HS02350	2HS02350	COVER CABLE B	2		302HS08100	2HS08100	BRACKET BOTTOM	2
	302HS02360	2HS02360	SPRING LOCK CASSETTE	11	⊙	302HS08110	2HS08110	ACTUATOR MPF	4
	302HS02370	2HS02370	SPRING EARTH CASSETTE	9		302HS08140	2HS08140	BASE IC PWB	4
⊙	302HS02380	2HS02380	PLATE PF CONNECTOR	9	⊙	302HS08160	2HS08160	GEAR Z20S MPF	4
	302HS02390	2HS02390	LEVER LOCK CASSETTE L	11		302HS08170	2HS08170	SPRING SEPARATOR	2
	302HS02410	2HS02410	SPRING EARTH DU MID	4		302HS08180	2HS08180	PLATE BOTTOM MPF	2
	302HS02420	2HS02420	BKT FAN R	11		302HS08190	2HS08190	SPRING ACTUATOR	4
	302HS02440	2HS02440	SPRING EARTH DLP PLATE	4		302HS08210	2HS08210	SPRING EARTH MPF	2
	302HS02450	2HS02450	BKT FAN L	11		302HS08220	2HS08220	TRAY MPF TOP	2
	302HS02460	2HS02460	PIN CONTACT BIAS	2		302HS08230	2HS08230	PLATE EARTH BOTTOM	2
	302HS02470	2HS02470	SPRING PIN BIAS	2		302HS08240	2HS08240	GUIDE MPF R	2
	302HS02490	2HS02490	COVER CABLE C	11		302HS08250	2HS08250	GUIDE MPF L	2
	302HS02500	2HS02500	HOLDER ERASER	2	⊙	302HS08260	2HS08260	ROLLER M/P ASSY	4
	302HS02510	2HS02510	COVER CABLE D	11		302HS08270	2HS08270	SPRING BRACKET	2
	302HS02520	2HS02520	COVER CABLE E	9		302HS08290	2HS08290	FILM SENSOR	4
	302HS02530	2HS02530	COVER CABLE F	9		302HS08300	2HS08300	HOLDER FEED M/P	4
	302HS02540	2HS02540	PIN DRAWER	9	⊙	302HS08310	2HS08310	FILM TE SENSOR	4
	302HS02560	2HS02560	HOLDER PIN CASSETTE	11		302HS09010	2HS09010	BASE CASSETTE	3
	302HS02580	2HS02580	SHEET DUCT LSU	2	⊙	302HS09020	2HS09020	COVER CASSETTE KM	3
	302HS02590	2HS02590	SHEET DUCT FD	2		302HS09040	2HS09040	BASE CASSETTE REAR	3
	302HS02610	2HS02610	SHEET DUCT BKT FAN	11		302HS09070	2HS09070	PAPER INDICATOR	3
	302HS02620	2HS02620	SPRING EARTH FAN	11		302HS09080	2HS09080	CURSOR END	3
	302HS02630	2HS02630	TAPE ERASER	2		302HS09100	2HS09100	LOCK BOTTOM	3
⊙	302HS02650	2HS02650	HOOK PF	2		302HS09110	2HS09110	PLATE BOTTOM	3
⊙	302HS04030	2HS04030	COVER LEFT	1		302HS09120	2HS09120	SPRING BOTTOM L	3
	302HS04040	2HS04040	COVER RIGHT	1		302HS09130	2HS09130	SPRING BOTTOM R	3
⊙	302HS04050	2HS04050	COVER TOP B	1		302HS09140	2HS09140	SPRING LOCK BOTTOM	3
	302HS04060	2HS04060	COVER DIMM	1		302HS09160	2HS09160	GEAR CASSETTE	3
⊙	302HS04070	2HS04070	COVER RACK	1		302HS09170	2HS09170	CAP BOTTOM	3
	302HS04080	2HS04080	COVER PANEL	1		302HS09180	2HS09180	SPRING RETARD	3
	302HS04100	2HS04100	BUTTON ENTER	1		302HS24010	2HS24010	GUIDE PAPER CHUTE	4
	302HS04110	2HS04110	BUTTON CANCEL	1		302HS24020	2HS24020	GUIDE EARTH	4
⊙	302HS04130	2HS04130	COVER FRONT	1	⊙	302HS24040	2HS24040	ROLLER REGIST UP	4
⊙	302HS04160	2HS04160	COVER RACK B	1		302HS24050	2HS24050	ROLLER REGIST LOW	4
	302HS06010	2HS06010	FRAME FEED	4		302HS24060	2HS24060	ACTUATOR REGIST	2
	302HS06020	2HS06020	HOLDER FEED	4		302HS24070	2HS24070	SPRING ACTUATOR REG	2
	302HS06040	2HS06040	GUIDE FEED R	4		302HS24080	2HS24080	PLATE EARTH HV	2
	302HS06050	2HS06050	PULLEY FEED	4		302HS24110	2HS24110	PLATE ERATH PAPER CHUTE	2
⊙	302HS06060	2HS06060	ACTUATOR EMPTY A	4		302HS24120	2HS24120	BUSH REGIST	4
⊙	302HS06070	2HS06070	ACTUATOR EMPTY B	4		302HS24130	2HS24130	BUSH 4 DU ROLL	2
⊙	302HS06090	2HS06090	GEAR Z22S FEED	4		302HS24140	2HS24140	BUSH 6 EW	4
	302HS06110	2HS06110	SHAFT FEED	9	⊙	302HS24160	2HS24160	ROLLER DU	2
	302HS06120	2HS06120	SPRING ACTUATOR	4	⊙	302HS24170	2HS24170	ROLLER TRANSFER E	4
	302HS06130	2HS06130	SPRING PULLEY	4		302HS24180	2HS24180	SHEET REGIST	4
	302HS08010	2HS08010	FRAME MPF	4	⊙	302HS24190	2HS24190	GEAR Z14R REG UP	4
	302HS08020	2HS08020	COVER MPF KM	2	⊙	302HS24200	2HS24200	GEAR Z21L-Z23L REG LOW	4
	302HS08040	2HS08040	GUIDE TURN MPF	2	⊙	302HS24210	2HS24210	GEAR Z16L TC	4
	302HS08050	2HS08050	BASE MPF	2	⊙	302HS24220	2HS24220	GEAR Z25R DU FEED	9
	302HS08060	2HS08060	TRAY MPF MID	2	⊙	302HS24230	2HS24230	GEAR Z26L DU MID	9
	302HS08080	2HS08080	SHAFT FEED MPF	4	⊙	302HS24240	2HS24240	SPRING REGIST R	4

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.
⊙	302HS24250	2HS24250	BUSH TC R	4
	302HS24260	2HS24260	LEVER RELEASE TC L	4
	302HS24280	2HS24280	SPRING RELEASE TC L	4
	302HS24300	2HS24300	SPRING CONTACT TC	2
	302HS24310	2HS24310	SPRING EARTH BRUSH	4
⊙	302HS24340	2HS24340	ROLLER TRANSFER U	4
⊙	302HS24350	2HS24350	SPRING REGIST L	4
	302HS24360	2HS24360	SPRING REGIST C	4
	302HS25010	2HS25010	FRAME FUSER LOW	8
	302HS25020	2HS25020	FRAME FUSER UP	8
	302HS25030	2HS25030	GUIDE EXIT LOW	8
	302HS25040	2HS25040	SPRING PRESSURE	8
⊙	302HS25050	2HS25050	PULLEY EXIT FUSER	8
⊙	302HS25060	2HS25060	ROLLER EXIT	8
⊙	302HS25070	2HS25070	GEAR Z18S IDLE	8
	302HS25080	2HS25080	PLATE CODE	8
	302HS25100	2HS25100	HOLDER SPRING PRESS	8
	302HS25110	2HS25110	ACTUATOR FUSER	8
	302HS25120	2HS25120	SPRING ACTUATOR	8
	302HS25130	2HS25130	SPRING EXIT L	8
	302HS25140	2HS25140	PLATE EARTH EXIT	8
	302HS25150	2HS25150	SHAFT EXIT	8
	302HS25160	2HS25160	PLATE EARTH L	8
	302HS25170	2HS25170	PLATE EARTH ROLLER	8
⊙	302HS25190	2HS25190	THERMISTOR FUSER	8
	302HS25200	2HS25200	LEVER FUSER R	8
	302HS25210	2HS25210	LEVER FUSER L	8
	302HS25220	2HS25220	BUSH FUSER	8
⊙	302HS25230	2HS25230	ROLLER HEAT	8
⊙	302HS25240	2HS25240	HEATER LAMP E	8
⊙	302HS25260	2HS25260	GEAR Z36S HEAT	8
⊙	302HS25280	2HS25280	BUSH HEAT R	8
⊙	302HS25300	2HS25300	HEATER LAMP U	8
⊙	302HS25360	2HS25360	ROLLER PRESS	8
	302HS25400	2HS25400	SHEET FUSER	8
	302HS25410	2HS25410	TUBE PLATE CODE	8
	302HS28010	2HS28010	FRAME FD	5
	302HS28020	2HS28020	COVER FRAME FD	5
⊙	302HS28030	2HS28030	ROLLER FD UP	5
	302HS28040	2HS28040	COVER FD	5
⊙	302HS28050	2HS28050	COVER REAR	5
⊙	302HS28060	2HS28060	GEAR Z21S	5
	302HS28070	2HS28070	PULLEY EXIT	5
	302HS28080	2HS28080	ACTUATOR PAPER	5
	302HS28110	2HS28110	SPRING EARTH	5
	302HS28120	2HS28120	SPRING EXIT	5
⊙	302HS28130	2HS28130	DISCHARGER FD	5
	302HS28140	2HS28140	SPRING PULLEY	5
	302HS28150	2HS28150	GUIDE FD SIDE	5
	302HS28160	2HS28160	GUIDE FD CENTER	5

	Part.No.	Alternative.	Description	Fig.No.
	302HS29010	2HS29010	PLATE COVER DU	10
	302HS29020	2HS29020	PLATE COVER DU B	10
⊙	302HS31020	2HS31020	PLATE DRIVE	9
	302HS31030	2HS31030	DRIVE HOLDER	9
	302HS31040	2HS31040	PLATE GEAR DRIVE	9
	302HS31050	2HS31050	LEVER LIFT BOTTOM	9
	302HS31060	2HS31060	PIN GEAR DRIVE	9
⊙	302HS31070	2HS31070	GEAR Z42R FREE 2	9
⊙	302HS31080	2HS31080	GEAR Z42R	9
⊙	302HS31090	2HS31090	GEAR Z37L FREE	9
⊙	302HS31100	2HS31100	GEAR Z20L CLUTCH	9
⊙	302HS31110	2HS31110	GEAR Z58L	9
⊙	302HS31120	2HS31120	GEAR Z27L CLUTCH	9
⊙	302HS31130	2HS31130	GEAR Z45R CLUTCH	9
⊙	302HS31140	2HS31140	GEAR Z35R IDLE	9
⊙	302HS31150	2HS31150	GEAR Z31L-Z14S	9
⊙	302HS31170	2HS31170	GEAR Z64R-Z21L	9
⊙	302HS31180	2HS31180	GEAR Z44R	9
⊙	302HS31190	2HS31190	GEAR Z17R FREE	9
⊙	302HS31200	2HS31200	GEAR Z26L FREE	9
⊙	302HS31210	2HS31210	GEAR Z35S FREE	9
⊙	302HS31220	2HS31220	GEAR Z42R FREE	9
⊙	302HS31230	2HS31230	GEAR Z38S MPF	9
⊙	302HS31240	2HS31240	GEAR Z32L DRUM	9
⊙	302HS31250	2HS31250	GEAR Z54R-Z24R	9
⊙	302HS31260	2HS31260	GEAR Z32R	9
⊙	302HS31270	2HS31270	GEAR Z34L-Z24L	9
	302HS31280	2HS31280	LIFT BOTTOM	9
	302HS31290	2HS31290	DRIVE HOLDER COVER	9
	302HS31310	2HS31310	SPRING FREE FUSER	9
	302HS31320	2HS31320	SPRING FREE MAG	9
	302HS31330	2HS31330	PIN CLUTCH	9
	302HS31340	2HS31340	SHAFT CASSETTE	9
	302HS31360	2HS31360	PIN HOLDER A	9
	302HS31370	2HS31370	PIN HOLDER B	9
	302HS31380	2HS31380	SPRING LIFT BOTTOM	9
⊙	302HS31390	2HS31390	GEAR Z27R FREE 2	9
	302HS31400	2HS31400	SPRING FREE DRUM	9
	302HS31410	2HS31410	SPRING FREE Z37L	9
	302HS31420	2HS31420	EARTH PLATE DRIVE	9
	302HS31430	2HS31430	POLYSLIDER 9.5	9
	302HS34010	2HS34010	LABEL FUSER CAUTION	5
	302HS34020	2HS34020	LABEL FUSER JAM	5
	302HS34030	2HS34030	LABEL OPERATION	3
⊙	302HS34080	2HS34080	LABEL JAM TK OPERATION	1
	302HS34120	2HS34120	LABEL FUSER OPERATION	8
	302HS39010	2HS39010	BOX CONTROLLER	11
	302HS39020	2HS39020	COVER BOX	11
	302HS39030	2HS39030	GUIDE OPTION SLOT	11
	302HS39040	2HS39040	PLATE OPTION	11

• Parts with "⊙" indicate regular maintenance parts.

	Part.No.	Alternative.	Description	Fig.No.		Part.No.	Alternative.	Description	Fig.No.
	302HS39050	2HS39050	FILM COVER CABLE	11		5MMW261LD055	2A820350	SPRING SEPARATOR /FS-1000 A4	8
⊙	302HS44010	2HS44010	MOTOR MAIN	9		5MMW261LD067	2FV02270	SPRING LEVER LOCK L	4
⊙	302HS44020	2HS44020	SOLENOID MPF	9		5MMW261LD068	2FV02280	SPRING LEVER LOCK R	4
⊙	302HS44050	2HS44050	MOTOR FAN 80	11		5MVG137DN032	2A806720	GEAR MPF /A-49 MPF A4	2
⊙	302HS45010	2HS45010	SWITCHING REGULATOR 230V	11	⊙	5MVG138DN048	2BD02270	GEAR FD Z29 /43397B0051 A4	5
⊙	302HS45020	2HS45020	SWITCHING REGULATOR 120V	11		5MVM176DN016	2BR20170	BUSH A /45309P0135 A4	4
⊙	302HS45030	2HS45030	HIGH VOLTAGE UNIT	11		5MVM273DB005	2A820100	PULLEY EXIT /A-49 FUSER A3	4,5
	302HS46030	2HS46030	CONN.CORD ASSY CONTROL-PF S03247	9		5MVS217SN002	2A806280	PAD SOLENOID /FS-1000 A4	5
	302HS46040	2HS46040	CONN.CORD ASSY CONTROL-MAIN MOTOR S03245	9	⊙	5MVX111DN003	2A806250	RING STOPPER /A-49 FEED A4	4,9,10
	302HS46050	2HS46050	CONN.CORD ASSY CONTROL-RFID S03244	4		5MVX111DN007	2BT11070	STOPPER 3 /2BT1107 A4	5
	302HS46060	2HS46060	CONN.CORD ASSY CONTROL-H.V.UNIT S03240	11	⊙	5MVX221RB014	2BS03110	FOOT /43307C0007 A4	2
	302HS46070	2HS46070	CONN.CORD ASSY CONTROL-H.V.UNIT S03303	11	⊙	5MVX431DN005	2FV02100	LEVER LOCK DLP	4
	302HS46090	2HS46090	CONN.CORD ASSY CONTROL-RELAY S03243	11	⊙	5MVX441XN001	2BR20180	BUSH HEAT L /43307P0003 A4	8
	302HS46100	2HS46100	CONN.CORD ASSY PWS-HEATER(E) S03305	8		5MVX541DG002	2A807191	LEVER REAR /A-49 CASSETTE A3	3
	302HS46110	2HS46110	CONN.CORD ASSY PWS-HEATER(U) S03306	8		5MVX541DG003	2A807161	LEVER SIDE /A-49 CASSETTE A3	3
	302HS46120	2HS46120	CONN.CORD ASSY PWS-INLET S03238	11		7BC06062C020H01	BC045240	POLY SLIDER WASHER M6.2X12X0.2T	9
	302HS46130	2HS46130	CONN.CORD ASSY CONTROL-ERASER S03252	11		7NXSG2481+++H01	NX052600	SENSOR OPT.	4,8
	302HS46140	2HS46140	CONN.CORD ASSY CONTROL-EXITSSENSOR S03248	8		7RHA2H10701+H01	RH043740	M.GLAZE R. 100MJ 1/2W	2
	302HS46150	2HS46150	CONN.CORD ASSY CONTROL-MPFSENSOR S03251	4		7YZM610007++H01	YZ023340	ACCESS.SADDLE	9
	302HS46160	2HS46160	CONN.CORD ASSY CONTROL-P.SENSOR S03304	4		7YZM610008++H01	YZ037940	ACCESS.SADDLE	11
	302HS46210	2HS46210	CONN.CORD ASSY CONTROL-F/RCLUTCH S03308	9					
	302HS46230	2HS46230	CONN.CORD ASSY PANEL-RELAY S03353	1					
	302HS80020	2HS80020	PACKING ASSY	12					
⊙	302HS93010	2HS93010	DK-130	6					
⊙	302HS93020	2HS93020	DV-130(E)	7					
⊙	302HS93040	2HS93040	FK-130(E)	8					
⊙	302HS93050	2HS93050	FK-130(U)	8					
⊙	302HS93060	2HS93060	DR-130	9					
⊙	302HS93070	2HS93070	MC-130	6					
⊙	302HS93080	2HS93080	CT-130	3					
⊙	302HS93090	2HS93090	LK-130	2					
⊙	302HS93100	2HS93100	DV-132(U)	7					
⊙	302HS93140	2HS93140	DV-134(AO)	7					
⊙	302HS94000	2HS94000	PLATE BOTTOM ASSY	3					
⊙	302HS94010	2HS94010	COVER TOP ASSY	1					
⊙	302HS94020	2HS94020	LID TOP ASSY	1					
⊙	302HS94030	2HS94030	HOLDER FEED ASSY	4					
⊙	302HS94040	2HS94040	SEPARATOR MPF ASSY	2					
⊙	302HS94050	2HS94050	PLATE BOTTOM MPF ASSY	2					
⊙	302HS94060	2HS94060	HOLDER DC BRUSH ASSY	4					
⊙	302HS94080	2HS94080	REGIST LOW KIT	4					
⊙	302HS94090	2HS94090	P.W.BOARD ASSY CONTROL WITH SOFTWARE(SP)	11					
	302HS94110	2HS94110	ERASER KIT	2					
⊙	5AAVR0LL+052	2BR06520	RETARD ROLL ASSY /43487V0005 A4	3					
⊙	5AAVSEPRT015	2A820360	SEPARATOR ASSY /FS-1000 A4	8					
	5MBCK9560XSC	D4103700	C STOP RING /X9.5 X 0.6T S-CR	10					
	5MMP141LD002	2A807510	PLATE SIDE GUIDE /A49 CASSETTE A4	3					
	5MMS111SL002	2BY20050	NUT FUSER A /FS-1800/3800 A4	8					
	5MMW171LD006	2A807530	SPRING STOPPER /A49 CASSETTE A4	3					
	5MMW261LD036	2A814570	SPRING TE SENSOR /A-49 DLP A4	4					

• Parts with "⊙" indicate regular maintenance parts.

KYOCERA MITA EUROPE B.V.

Hoeksteen 40, 2132 MS Hoofddorp,
The Netherlands
Phone: +31.20.654.0000
Home page: <http://www.kyoceramita-europe.com>
Email: info@kyoceramita-europe.com

KYOCERA MITA NEDERLAND B.V.
Beechavenue 25, 1119RA Schiphol-Rijk
The Netherlands
Phone: +31.20.58.77.200

KYOCERA MITA (UK) LTD
8 Beacontree Plaza
Gillette Way Reading Berks RG2 0BS,
U.K.
Phone: +44.1189.311.500

KYOCERA MITA ITALIA S.p.A.
Via G. Verdi, 89 / 91, 20063 Cernusco s/N
Milano, Italy
Phone: +39.02.92179.1

S.A. KYOCERA MITA BELGIUM N.V.
Hermestraat 8A, 1930 Zaventem,
Belgium
Phone: +32.2.720.9270

KYOCERA MITA FRANCE S.A.
Parc Les Algorithmes Saint Aubin
91194 GIF-SUR-YVETTE,
France
Phone: +33.1.6985.2600

KYOCERA MITA ESPAÑA S.A.
Edificio Kyocera, Avda de Manacor No. 2,
28290 Las Matas (Madrid),
Spain
Phone: +34.91.631.8392

KYOCERA MITA FINLAND OY
Kirvesmiehenkatu 4, 00880 Helsinki,
Finland
Phone: +358.9.4780.5200

KYOCERA MITA (SCHWEIZ)
Hohlstrasse 614, 8048 Zürich
Switzerland
Phone: +41.1.908.4949

KYOCERA MITA DEUTSCHLAND GMBH
Otto-Hahn-Str. 12 D-40670 Meerbusch,
Germany
Phone: +49.2159.918.0

KYOCERA MITA GMBH AUSTRIA
Eduard-Kittenberger-Gasse 95,
1230 Wien,
Austria
Phone: +43.1.86338.210

KYOCERA MITA SVENSKA AB
Esbogatan 16B 164 75 Kista,
Sweden
Phone: +46.8.546.55000

KYOCERA MITA NORGE
Postboks 150 Oppsal, NO 0619 Oslo
Olaf Helsetsvæi 6, NO 0694 Oslo,
Norway
Phone: +47.22.62.73.00

KYOCERA MITA DANMARK A/S
Ejby Industrivej 1, DK-2600 Glostrup,
Denmark
Phone: +45.5687.1100

KYOCERA MITA PORTUGAL LDA.
Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisbon,
Portugal
Phone: +351.21.842.9100

KYOCERA MITA SOUTH AFRICA (PTY) LTD.
527 Kyalami Boulevard,
Kyalami Business Park Midrand,
South Africa
Phone: +27.(0)11.540.2600

KYOCERA MITA AMERICA, INC.

Headquarters:
225 Sand Road,
Fairfield, New Jersey 07004-0008,
U.S.A.
Phone: (973) 808-8444

KYOCERA MITA AUSTRALIA PTY. LTD.
Level 3, 6-10 Talavera Road, North Ryde,
N.S.W. 2113 Australia
Phone: (02) 9888-9999

KYOCERA MITA NEW ZEALAND LTD.
1-3 Parkhead Place, Albany
P.O. Box 302 125 NHPC, Auckland,
New Zealand
Phone: (09) 415-4517

KYOCERA MITA (THAILAND) CORP., LTD.
9/209 Ratchada-Prachachem Road,
Bang Sue, Bangkok 10800, Thailand
Phone: (02) 586-0320

KYOCERA MITA SINGAPORE PTE LTD.
121 Genting Lane, 3rd Level,
Singapore 349572
Phone: 67418733

KYOCERA MITA HONG KONG LIMITED
11/F., Mita Centre,
552-566, Castle Peak Road,
Tsuen Wan, New Territories,
Hong Kong
Phone: 24297422

KYOCERA MITA TAIWAN Corporation.
7F-1~2, No.41, Lane 221, Gangchi Rd.
Neihu District, Taipei, Taiwan, 114. R.O.C.
Phone: (02) 87511560

KYOCERA MITA Corporation

2-28, 1-chome, Tamatsukuri, Chuo-ku
Osaka 540-8585, Japan
Phone: (06) 6764-3555
<http://www.kyoceramita.com>

KYOCERA MITA AMERICA, INC.

Headquarters:

225 Sand Road,
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-6000

New York Branch:

1410 Broadway 23rd floor
New York, NY 10018
TEL : (917) 286-5400
FAX : (917) 286-5402

Northeastern Region:

225 Sand Road,
Fairfield, New Jersey 07004-0008
TEL : (973) 808-8444
FAX : (973) 882-4401

Midwestern Region:

201 Hansen Court Suite 119
Wood Dale, Illinois 60191
TEL : (630) 238-9982
FAX : (630) 238-9487

Western Region:

14101 Alton Parkway,
Irvine, California 92618-7006
TEL : (949) 457-9000
FAX : (949) 457-9119

Southeastern Region:

1500 Oakbrook Drive,
Norcross, Georgia 30093
TEL : (770) 729-9786
FAX : (770) 729-9873

Southwestern Region:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 550-8987
FAX : (972) 252-9786

National Operation Center & National Training Center:

2825 West Story Road,
Irving, Texas 75038-5299
TEL : (972) 659-0055
FAX : (972) 570-5816

Latin America Division:

8240 N.W. 52nd. Terrace Dawson Building,
Suite 108 Miami, Florida 33166
TEL : (305) 421-6640
FAX : (305) 421-6666

KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,
Ontario L5T 1S8, Canada
TEL : (905) 670-4425
FAX : (905) 670-8116

KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407
Col. Santa Inés,
Azcapotzalco México,
D.F. 02130, México
TEL : (55) 5383-2741
FAX : (55) 5383-7804

©2007 KYOCERA MITA Corporation

<http://www.kyoceramita.com>

 **KYOCERA** is a trademark of Kyocera Corporation

Printed in U.S.A.