

DVD Mini-HiFi System

FWD876

User manual

Руководство пользователя



PHILIPS

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

DEMO MODE

To turn ON

Press & HOLD

 


button

for 5 seconds

To turn OFF

Press & HOLD



button

for 5 seconds

PLUG & PLAY -for tuner installation

1



Plug in the unit

2



Follow instructions
in the display

3



Press "PLAY"

English	4
---------------	---

Русский	52
---------------	----

Manufactured under license from Dolby Laboratories. "Dolby", "Pro-logic" and the double-D symbol are trademarks of Dolby Laboratories.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.



DivX, DivX Certified, and associated logos are trademarks of DivX Networks Inc. and are used under license.

'CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS FULLY COMPATIBLE THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUT TV SET COMPATIBILITY WITH THIS MODEL 525P AND 625P DVD PLAYER, PLEASE CONTACT OUT CUSTOMER SERVICE CENTER.'

MANUFACTURED UNDER LICENSE FROM DIGITAL THEATER SYSTEMS, INC. US PAT. NO 5,451,94; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 AND OTHER U.S. AND WORLDWIDE PATENTS ISSUED AND PENDING. "DTS" AND "DTS DIGITAL SURROUND" ARE REGISTERED TRADEMARKS OF DIGITAL THEATER SYSTEMS, INC. COPYRIGHT 1996, 2003 DIGITAL THE-ATER SYSTEMS, INC. ALL RIGHTS RESERVED.

Contents

General Information/ Maintenance

Features	8
Discs for playback	8
Region codes	
Supplied accessories	8
Environmental information	9
Care and safety information	9

Connections

Step 1: Placing speakers and subwoofer	10
Step 2: Connecting speakers and subwoofer	10
Step 3: Connecting TV set	11~12
Using Video In jack (CVBS)	
Using Component Video In jack (Pr Pb Y)	
Using S-Video In jack	
Using an accessory RF modulator	
Step 4: Connecting FM/MW antennas	13
Step 5: Connecting the power cord	13
Step 6: Connecting a VCR or cable/satellite box	14
Step 7: Connecting digital audio equipment .	14

Functional Overview

Controls on the system	15
Remote control	16~17

Basic Functions

Plug and Play (for tuner installation)	18
Demonstration mode	18

Preparations

Step 1: Inserting batteries into the remote control	19
Step 2: Setting the clock	19~20
Step 3: Setting the TV set	20
Step 4: Setting speakers	21
Step 5: Setting language preference	21

Disc Operations

Playing discs	22
Using the disc menu	22
Basic playback controls	23

Skipping to another title (track)/chapter	
Fast search	
Continuing playback from the last stop point	
Selecting various mode functions	23~24
Repeat play mode	
Shuffle play mode	
Repeating a section within a chapter/track	
Programming favorite tracks	24
Special DVD/VCD features	25~27
Changing subtitle language	
Changing audio language	
Searching for a particular passage	
Displaying the disc information during playback	
Moving to another title (track) / chapter	
Playing from a selected point	
Using the system menu	
Playing in slow motion mode	
Viewing from another angle	
Advancing by frames	
Checking the contents of DVD	
Special VCD/SVCD features	27
Playback control (PBC)	

MP3/ DIVX/ WMA/ Picture Disc Operations

Playing MP3/ WMA/ Picture disc (Kodak, JPEG)	28
Playing DIVX disc	29

DVD Menu Operations

Using the menu bar	30
Using the setup menu	31~35
Setting the TV shape	
Using progressive scan to improve image quality	
Setting the screen saver	
Night mode - turning on/off	
Test Tone	
Kara score	
DivX(R) VOD	
Changing the password	
Restricting playback by setting parental level	

Tuner Operations

Tuning to radio stations	36
Presetting radio stations	36~37
Automatic preset programming	
Manual preset programming	
Selecting a preset radio station	37
Deleting a preset radio station	
Changing tuning grid	37

Tape Operation/Recording

Tape playback	38
General information on recording	38
Preparation for recording	39
Disc synchro recording	39

AUX Operations

Listening to an external source	40
---------------------------------------	----

USB Operations

Using a USB device	41
General information on USB device	41
USB playback	42

Clock/Timer Operations

Viewing clock	43
Setting the timer	43~44
Viewing the timer	44
Setting the sleep timer	44

Sound and Volume Controls

Sound control	45
MAX Sound	
DBB (Dynamic Bass Boost)	
Selecting sound effect	
Selecting surround sound effect	
Volume control	45
Changing the volume level	
Switching off the volume temporarily	

Other Functions

Switching on/off	46
Switching the system on	
Switching the system to standby mode	
Power saving automatic standby	
Dimming the display	46
Vocal	46
Key control	47
Echo	47
Karaoke	47
Listening to external sources	47

Specifications	48
----------------------	----

Troubleshooting	49~50
-----------------------	-------

Glossary	51
----------------	----

General Information/Maintenance

Features

Your DVD Mini Hi-Fi System with 5.1-channel full digital amplifier creates the same dynamic sound qualities that you find in full-fledged cinemas and incorporates some of the best features in home theater technology.

Other features include:

Built-in DTS and Dolby Digital decoder, supporting virtual surround and stereo.

Additional Component Connections

Lets you connect other audio and audio/visual components to the system so you can use the system's surround sound speakers.

Night mode

Lets you compress the dynamic range, reducing the difference in loudness between different sounds in Dolby Digital mode.

Parental control (rating level)

Lets you set a rating level so that your children cannot watch a DVD that has a rating higher than you set.

Sleep timer

Enables the system to switch to standby mode automatically at a preset time.

Progressive Scan

Provides high quality flicker-free images for film based sources. When a picture refreshes, its vertical resolution can double to 525 lines.

Note:

– To fully enjoy the progressive scan feature, you need a progressive scan TV.

Discs for playback

Your DVD Mini Hi-Fi System will play:

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- SuperVideo CDs (SVCDs)
- Digital Video Discs + Rewritable (DVD+RW)
- Compact Discs (CDs)
- Picture (Kodak, JPEG) files on CDR(W)
- DivX(R) disc on CD-R(W):
- DivX 3.11, 4.x and 5.x
- WMA
- Supported MP3-CD format.
- Max. nested directory is 8 levels.
- The max. album number is 32.
- ISO 9660 / UDF format

- Max. title/album name –12 characters
- Max. title number plus album is 255.
- The max. MP3 track number is 999.
- Supported sampling frequencies for MP3 disc: 32 kHz, 44.1 kHz, 48 kHz.
- Supported Bit-rates of MP3 disc are: 32, 64, 96, 128, 192, 256 (kbps).
- Following formats can't be supported
- The files like *.VMA, *.AAC, *.DLF, *.M3U, *.PLS, *.WAV
- Non-English Album/Title name
- The discs recorded under Joliet format
- MP3 Pro and MP3 with ID3 tag



Region codes

DVDs must be labeled for **ALL regions** or for **Region 5** in order to play on this system. You cannot play discs that are labeled for other regions.



Notes:

- For mixed mode discs, only one mode will be selected for playback according to the recording format.
- If you are having trouble playing a certain disc, remove the disc and try a different one. Improperly formatted discs will not play on this system.

Supplied accessories

- Composite video cable (yellow)
- Component video cables (red/blue/green)
- Audio cables (white, red)
- FM wire antenna
- FM T-Type antenna (not for all countries)
- MW loop antenna
- Remote Control and two AAA batteries
- AC power cable (2 pieces)
- DIN OUT cable
- This instruction booklet and a Quick Use Guide



Environmental information

Any unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Care and safety information

Avoid high temperatures, moisture, water and dust


- Do not expose the system, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight). Always keep disc trays closed to avoid dust buildup on the lens.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

Avoid condensation problem

- The lens may cloud over when the player is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the player in the warm environment until the moisture evaporates.

Do not block the vents

- Do not operate the system in an enclosed cabinet and allow about 10 cm (4 inches) of free space all around the player for adequate ventilation.

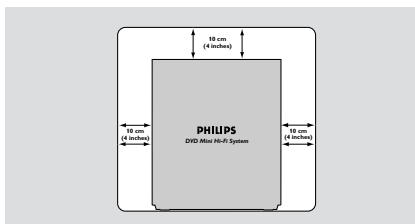

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

Cleaning the cabinet

- Use soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning discs

- To clean a CD, wipe it in a straight line from the center towards the edge using soft and lint-free cloth. A cleaning agent may damage the disc.
- Write only on the printed side of a CDR(W) and only with a soft felt-tipped pen.
- Handle the disc by its edge. Do not touch the surface.



Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Finding a suitable location


- Place the player on a flat, hard, stable surface.

Cleaning the head and the tape paths

- To ensure good recording and playback quality, clean the head (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You also can clean the head by playing a cleaning tape once.

Demagnetising the head


- Use a demagnetising tape available at your dealer.
- The standby switch does not disconnect the apparatus from mains.

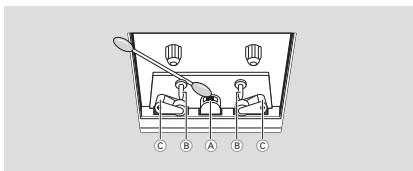

- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Install this unit near the AC outlet and where the AC Power can be reached easily.
- When the system is switched to standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall sockets.


Connections

Step 1: Placing speakers and subwoofer

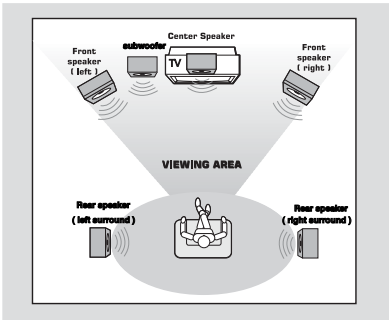

For best possible surround sound, all speakers (except subwoofer) should be placed at the same distance from the listening position .

•Retrieve the speaker grilles from the packing box and fix onto the active speakers as show below:

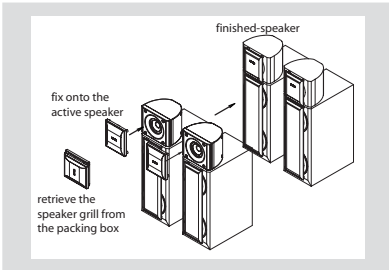

- Place the front left and right speakers at equal distances from the TV set and at an angle of approximately 45 degrees from the listening.
- place the center speaker above the TV set or the system so the center channel's sound is localized.
- Place the surround speaker at normal listening ear level facing each other or mounted on the set .
- Place the subwoofer on the floor near the TV set.

Notes:


- To avoid magnetic interference, do not position the front speakers too close to your TV set.
- Allow adequate ventilation around the DVD Mini Hi-Fi System.

IMPORTANT!

The type plate is located on the rear of the system.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it.

Step 2: Connecting speakers and subwoofer

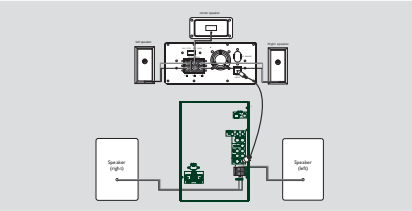



- Connect the speaker wires to the SPEAKERS (FRONT) terminals, right speaker to "R" and left speaker to "L", coloured (marked) wire to "+" and black (unmarked) wire to "-". Fully insert the stripped portion of the speaker wire into the terminal as shown.
- Connect the Surround Speakers and Center Speaker system using the supplied speaker cable to the speaker jacks on the SUBWOOFER by matching the colours of the jacks and speaker plugs.
- Connect the subwoofer using the supplied speaker cable to the DIN OUT jack on the DVD Mini Hi-Fi System.
- Connect the AC MAINS .

Speakers	⊖	⊕
Front Left (L)	Black	White
Front Right (R)	Black	Red
Center	Black	Green
Surround(rear) Left(L)	Black	Blue
Surround(rear) Right(R)	Black	Grey

Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/- speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Step 3: Connecting TV set

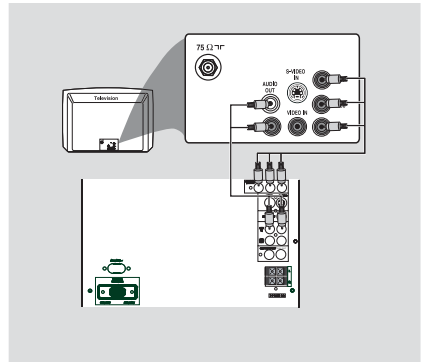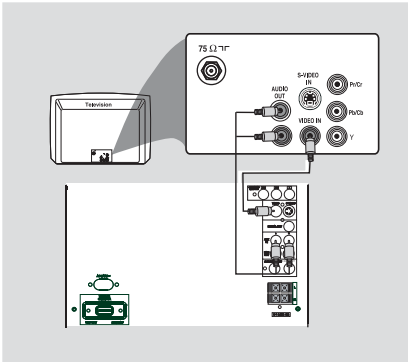

IMPORTANT!

- You only need to make one video connection from the following options, according to the capabilities of your TV system.
- **S-Video or Component Video connection provides higher picture quality. These options must be available on your TV set.**
- **Connect the system directly to the TV set.**


Using Video In jack (CVBS)

- Use the composite video cable (yellow) to connect the system's **VIDEO** jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red) to connect **AUX IN (L/R)** jacks to the corresponding AUDIO OUT jacks on the TV set.
- Deactivate Progressive Scan through SYSTEM MENU. Refer to "Using the Setup Menu- Using Progressive Scan to improve image quality".

Using component Video In jack (Pr Pb Y)


- Use the component video cables (red/blue/green) to connect the system's **Pr Pb Y** jacks to the corresponding Component video input jacks (or labeled as Pr/Cr Pb/Cb Y or YUV) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red) to connect **AUX IN** jacks to the corresponding AUDIO OUT jacks on the TV set.
- If you are using a Progressive Scan TV set (TV with Progressive Scan or ProScan capability), activate the PROGRESSIVE SCAN function through SYSTEM MENU.

Connections

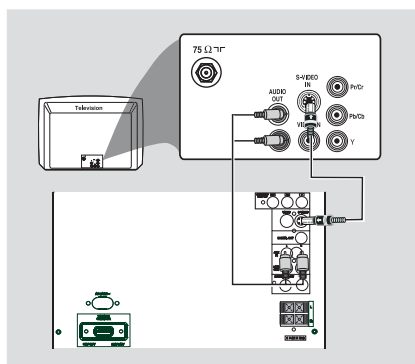

Using S-Video In jack

- Use the S-Video cable (not supplied) to connect the system's **S-VIDEO** jack to the S-Video input jack (or labeled as Y/C or S-VHS) on the TV set.
- To listen to TV channels through this system, use the audio cables (white/red) to connect **AUX IN** jacks to the corresponding AUDIO OUT jacks on the TV set.
- Deactivate Progressive Scan through **SYSTEM MENU**. Refer to "Using the Setup Menu- Using Progressive Scan to improve image quality".

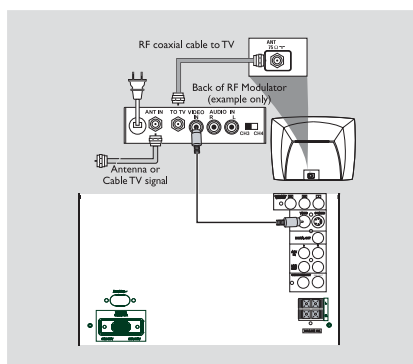


IMPORTANT!

– If your TV set only has a single **Antenna In jack** (or labeled as **75 ohm** or **RF In**), you will need a **RF modulator** in order to view the DVD playback via TV. See your electronics retailer or contact **Philips** for details on **RF modulator** availability and operations.

Using an accessory RF modulator


- Use the composite cable (yellow) to connect the system's **VIDEO** jack to the video input jack on the RF modulator.
- Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.
- Deactivate Progressive Scan through **SYSTEM MENU**. Refer to "Using the Setup Menu- Using Progressive Scan to improve image quality".

Step 4: Connecting FM/MW antennas

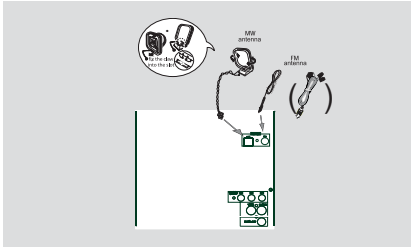


- Connect the supplied MW loop antenna to the **MW** jack. Place the MW loop antenna on a shelf or attach it to a stand or wall.
- Connect the supplied FM antenna to the **FM** jack. Extend the FM antenna and fix its end to the wall.

For better FM stereo reception, connect an outdoor FM antenna to the FM ANTENNA terminal.

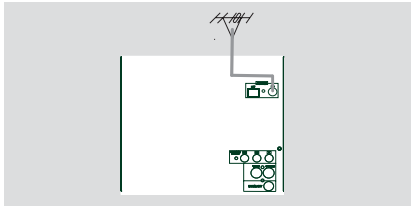

Notes:


- Adjust the position of the antennas for optimal reception.
- Position the antennas as far as possible from your TV set, VCR or other radiation sources to prevent unwanted interference.
- Connect the T-TYPE antenna (not for all countries) to the **FM** jack at the back panel of the unit. and then fix it to the wall as shown.

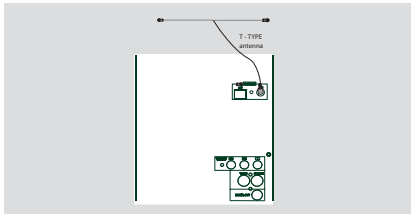

Notes:

- For better reception, please make sure that the two prongs of the T-TYPE antenna are in alignment with each other.

Step 5: Connecting the power cord

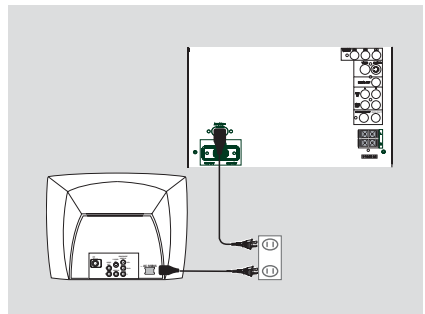



After everything is connected properly, plug in the AC power cord to the power outlet.

Never make or change any connection with the power switched on.

On the DVD Mini Hi-Fi System


"AUTO INSTALL - PRESS PLAY" may appear on the display panel. Press **▶II** on the front panel to search and store all available radio stations or press **■** to exit (See page 36, Tuner Operations- Presetting radio stations).

 If your system is equipped with a Voltage Selector, set the VOLTAGE SELECTOR to the local power line voltage.

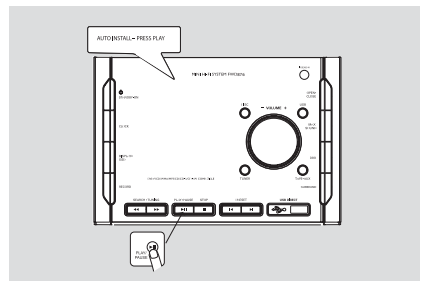

Connections

Step 6: Connecting a VCR or cable/satellite box

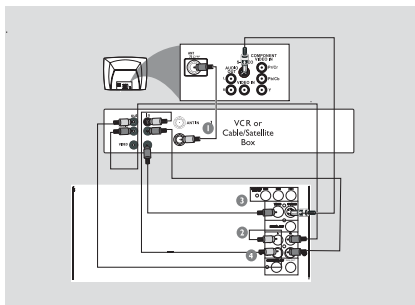

Viewing and listening to playback

- 1 Connect the VCR or Cable/Satellite Box to the TV system as shown.
- 2 Connect the system's **AUX IN** jacks to the **AUDIO OUT** jacks on the VCR or Cable/Satellite box.

Before starting operation, press **AUX** on the remote control to select "AUX" in order to activate the input source.

Using the VCR for recording DVDs


Some DVDs are copy-protected. You cannot record or dub protected discs using a VCR.

- 3 Connect the system's **VIDEO** jack to the **VIDEO IN** jack on the VCR.
- 4 Connect the system's **LINE OUT (R/L)** jacks to the **AUDIO IN** jacks on the VCR. This will allow you to make analog stereo (two channel, right and left) recording.

To view DVD playback while recording

You must connect the system to your TV system using the S-VIDEO (as shown above) or the Component (Pr Pb Y) video connection.

Step 7: Connecting digital audio equipment

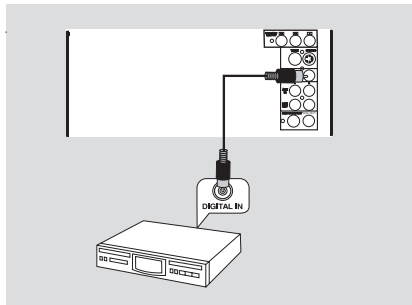

Recording (digital)

Connect the system's **DIGITAL OUT** jack to the **DIGITAL IN** jack on a digital recording device (DTS-Digital Theater System compatible, with a Dolby Digital decoder, for example).

Controls on the system

① **STANDBY ON**

- to switch the system on or to Standby mode.

② **CLOCK**

- to view or to set clock.

③ **DISPLAY SCREEN**

- to view the current status of the system.

④ **DISPLAY OSD**

- to view the time, title or chapter information.

⑤ **RECORD**

- to start recording on tape deck .

⑥ **SEARCH•TUNING ◀◀ / ▶▶ (ALBUM – / +)**

for DISC to search backward/forward.

to select previous/next
album in MP3/WMA stop
mode (with MENU ON).

for TAPE to rewind or fast forward.

for TUNER to tune to a lower or higher
radio frequency.

for CLOCKto set the minute.

⑦ **▶II (PLAY/PAUSE)**

for DISC to start or interrupt playback.

for TAPE to start or interrupt playback.

for PLUG&PLAY ... (on the system only) to initiate
plug & play mode.

⑧ **■ (STOP)**

for DISC to stop playback or to clear a
programme.

for TAPE to stop playback.

for DEMO (in Standby mode) to activate/
deactivate demonstration.

for PLUG&PLAY ... (on the system only) to exit
plug&play mode.

⑨ **◀▶ (PRESET) (TITLE – / +)**

for DISC to select previous/next title,
chapter or track during
playback.

for TUNER to select a preset radio
station.

for CLOCK to set the hour.

⑩ **USB DIRECT**

- to insert a USB device.

⑪ **SOURCE**

- to select the following:

DISC

- to select disc.

USB

- to select the USB.

TUNER

- to select waveband: FM and MW.

TAPE-AUX

- to select tape deck or to select a connected
external source AUX (auxiliary).

⑫ **SURROUND**

- to select various surround sound effect.

⑬ **DBB**

- to set various sound effect.

⑭ **–VOLUME +**

- to increase or decrease the volume.

⑮ **MAX SOUND**

- to activate or deactivate MAX sound.

⑯ **OPEN•CLOSE**

- to open or close the disc tray.

⑰ **IR SENSOR**

- point the remote control towards this sensor.

⑱ **DISC TRAYS**

⑲ **OPEN.CLOSE**

- to open or close the tape deck door.

⑳ **TAPE DECK**

㉑ **OPEN.CLOSE**

- to open or close the microphone door.

㉒ **MIC VOL**


- to adjust the mixing level for karaoke or
microphone recording.

㉓ **MIC IN 1/2**

- to connect microphone jack.

Functional Overview

Remote control

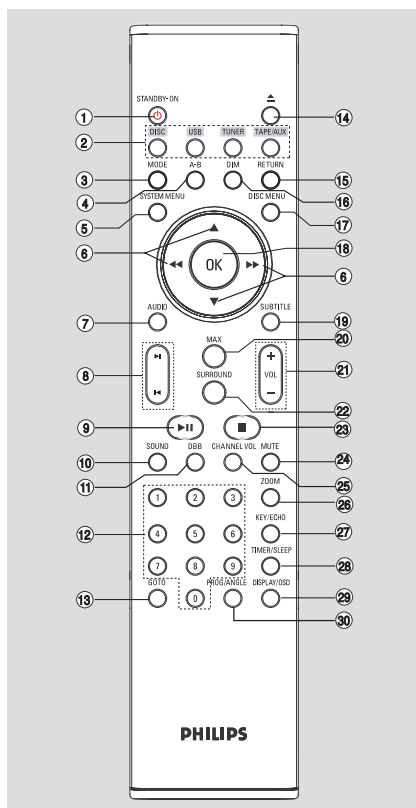

Notes:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or USB, for example).
- Then select the desired function (▶▶, ◀◀ or ▶ for example).

① STANDBY-ON

- to switch to standby mode.

② SOURCE

- to select the relevant active mode: DISC, USB, TUNER or TAPE/AUX.
- TUNER: toggles between FM and MW band.

③ MODE

- to select REPEAT or SHUFFLE function.

④ A-B

- to repeat a specific section in the same track/ chapter

⑤ SYSTEM MENU (disc mode only)

- to enter or exit the system menu bar.

⑥ ◀◀ / ▶▶ / ▲ / ▼

- to select movement direction in disc contents menu/system menu bar.
- in tuner mode, to tune to lower or higher radio frequency. (◀◀ / ▶▶)
- in Disc mode, press to fast reverse/forward the disc. (◀◀ / ▶▶)

⑦ AUDIO

- to select the audio channel.

⑧ ◀ / ▶

- in Disc mode, press to skip to the previous/next chapter/track.
- in Tuner mode, to select a preset radio station number

⑨ PLAY/PAUSE ▶||

- to start or interrupt disc playback.
- to resume playback from last stop point.

⑩ SOUND

- to select various sound effect.

⑪ DBB (Dynamic Bass Boost)

- to select the desired DBB level (DBB 1, DBB 2, DBB3 or DBB OFF).

⑫ Numeric Keypad (0-9)

- to enter a track/title number of the disc.
- to enter a number of preset radio stations.

⑬ GOTO

- to go direct to desired title, chapter or time.

⑭ OPEN•CLOSE

- to open or close the disc tray.

⑮ RETURN

- go back to title menu (for DVD only).
- go back to PBC menu (for VCD/SVCD with PBC ON).

⑯ DIM

- to select different brightness for VFD.

⑰ DISC MENU (disc mode only)

- back to root menu (for DVD only)
- to switch on or off the playback control mode (for VCD/USB)

⑱ OK

- to exit or confirm the selection.

⑲ SUBTITLE

- to select desired subtitle.

⑳ MAX

- To activate or deactivate MAX sound.

㉑ VOL +/-

- adjust the volume level.
- adjust key control/ ECHO level in karaoke mode.

㉒ SURROUND

- to select various surround sound effect.

㉓ STOP ■

- to stop playing the disc.

②④ **MUTE**

- to interrupt or resume sound reproduction,

②⑤ **CHANNELVOL**

- to adjust single channel volume respectively.

②⑥ **ZOOM**

- to access the Zoom function.

②⑦ **KEY/ECHO**

- to change the tone level to suit your vocal range
or to adjust the echo level in karaoke mode.

②⑧ **TIMER/SLEEP**

- to view and set timer or to set the sleep (auto-off) timer function.

②⑨ **DISPLAY (OSD)**

- to view the time, title or chapter information.

③⑩ **PROG/ANGLE**

- in Disc mode, to program favorite tracks.
(PROG)
- in Tuner mode, to program favorite
stations.(PROG)
- to select the angles cyclically.

Basic Functions

Plug and Play (for tuner installation)

Plug and play allows you to store all available radio stations automatically.

If plug and play has not been installed

- 1 When you turn on the system, "AUTO INSTALL - PRESS PLAY" will be displayed.
- 2 Press ►II on the system to start installation.
 - "TUNER" will be displayed and followed by "AUTO".
 - **PROG** will start to flash.
 - The system will search all radio stations on the FM band, and then the MW band.
 - All available radio stations with strong signal strength will be stored automatically.
 - The system will stop searching when all available radio stations are stored or when the memory for 40 preset radio stations is full.
 - The first preset radio station will play when Plug and Play is completed.

To exit without storing the plug and play

- Press ■ on the system.

Notes:

- When the power is turned on, the disc tray may open and close to initialize the system.
- If Plug and Play installation is not completed, it will be reinitiated the next time you power on the system.
- If auto-install is not preset, the system will store the radio station automatically.

Demonstration mode

The system has a demonstration mode that shows various features offered by the system.

Activating demonstration

- In Standby mode, press and hold **STOP ■** for more than 5 seconds to activate demo mode.
 - "DEMO ON" is displayed.
 - Demonstration will begin.

Deactivating demonstration

- Press and hold **STOP ■** on the system until "DEMO OFF" is displayed.
 - The system will switch to Standby mode.


Note:

- Even if you remove the AC power cord and reconnect it to the wall socket, the demonstration will remain off until you activate it again.

IMPORTANT!

– Make sure to complete the preparation procedures before operating the system.

Step 1: Inserting batteries into the remote control

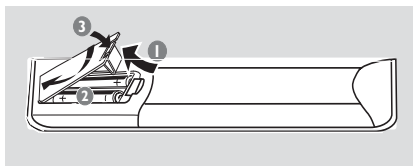

- 1 Open the battery compartment.
- 2 Place two batteries (AAA) in the compartment with the correct polarity as indicated by “+” and “-” symbols.
- 3 Close the cover.

Using the remote control to operate the system

- 1 Point the remote control directly at the remote sensor (IR) on the front panel.
- 2 Select the source you wish to control by pressing one of the source select buttons on the remote control (for example TAPE, TUNER).
- 3 Then select the desired function (for example **▶||**, **◀** or **▶**).



CAUTION!

– Remove batteries if they are exhausted or will not be used for a long time.


– Do not use old and new or different types of batteries in combination.

– Batteries contain chemical substances, so they should be disposed of properly.

Step 2: Setting the clock

The clock can be set in either 12-hour or 24-hour mode. (“PM 00:00” or “00:00” for example).

- 1 The clock can be set in standby mode.
→ If you have not set the clock, “--:--” will be shown on the display.

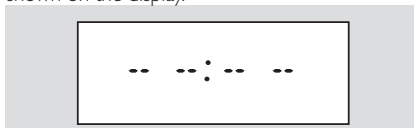

- 2 Press and hold **CLOCK** on the system to enter clock setting mode, then press **DISPLAY/OSD** on the system to select 12-hour or 24-hour mode.
→ The current time is flashing on the display.
→ If you have not set the clock, “--:--” will appear on the display.
- 3 Press **◀** or **▶** on the system (or on the remote control) to set the hours.
- 4 Press **◀◀** or **▶▶** on the system (or on the remote control) to set the minutes.
- 5 Press **CLOCK** to confirm your setting. Clock will be shown on the display till you press any source key to power on system. The system will store the setting automatically.
→ The time setting becomes effective.

Note:

– **CLOCK** must be set in the standby mode.

To exit the setting without storing (in standby mode)

- Press **■** on the system to exit.
→ “CANCEL” will appear on the display.
- Press **STANDBY ON** to exit setting mode.
- You can also press **DISC, OPEN/CLOSE** to exit setting mode and go into disc mode.
- The system will also exit setting mode and go to TUNER, TAPE/AUX or USB mode when you press the corresponding source button.

Viewing the clock in any source mode

- When you have set the clock, press **CLOCK** on the system to view clock.
→ The time will be displayed for 5 seconds and then go back to it's previous status.

Preparations

Notes:

– During clock setting, if no button is pressed within 10 seconds, the system will exit the setting mode and go back to its previous status.

Step 3: Setting the TV set


IMPORTANT!

– **Make sure you have completed all the necessary connections.**

- 1 Press **DISC** on the front panel (or press **DISC** on the remote control).
- 2 Turn on the TV set and set to the correct Video-In channel. You should see the blue Philips DVD background screen on the TV set.
 - You may go to channel 1 on your TV set, then press the channel down button repeatedly until you see the Video In channel.
 - Or, you can use the TV remote control to select different video modes.
 - Or, set TV to channel 3 or 4 if you are using an RF modulator.

Selecting the color system that matches your TV set

This DVD Mini Hi-Fi System is compatible with both NTSC and PAL. For the playback of a DVD disc on this DVD Mini Hi-Fi System, the color systems of the DVD, TV set and DVD Mini Hi-Fi System should match.

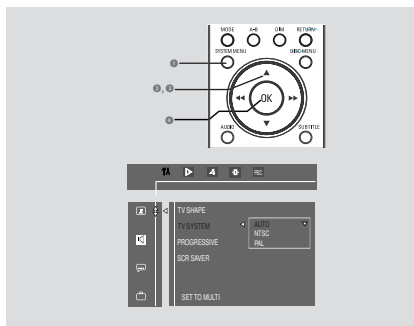

- 1 In disc mode, stop playback and press **SYSTEM MENU**.
- 2 Select **TA** icon and press ▼.

- 3 Press ◀◀ / ▶▶ / ▲ / ▼ keys on the remote control to toggle through the functions and select your preferred option.
 - Move to **TA** and press ▶▶.
 - Move to "TV SYSTEM" and press ▶▶.

AUTO

– Select this if the connected TV set is compatible with both NTSC and PAL (multi system). The output format will be consistent with the video signal of the disc.

NTSC

– Select this if the connected TV set is NTSC system. It will change the video signal of a PAL video disc and output to NTSC system.

PAL

– Select this if the connected TV set is PAL system. It will change the video signal of an NTSC disc and output to PAL format.

- 4 Select an item and press **OK**.
 - the screen messages for further setting confirmation may appear. Follow the on-screen instructions to proceed to confirm the setting or not.

To remove the menu


Press **SYSTEM MENU**.

Step 4: Setting speakers

IMPORTANT!

– This function is only available when you have connected other 3.1-channel speakers.

You can adjust the delay time (center and rear only) for individual speakers to optimize the sound effect according to your surroundings and setup. Speaker settings are only active on effective in the case of Multi-channel audio output.

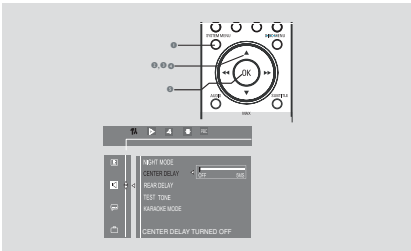

- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select icon and press **▼**.
- 3 Press **◀▶ / ▶▶ / ▲ / ▼** keys on the remote control to select your preferred option.
 - Move to and press **▶▶**.
 - Move to "CENTER DELAY" or "REAR DELAY" and press **▶▶**.
- 4 Press **▶▶** to set CENTER DELAY or REAR DELAY values you want.
 - Use longer delay time if the surround speakers are closer to the listener than the front speakers.
- 5 Press **OK** to confirm.

To remove the menu

Press **SYSTEM MENU**.

Step 5: Setting language preference

You can select your preferred language settings so that this DVD Mini Hi-Fi System will automatically switch to the language for you whenever you load a disc. If the language selected is not available on the disc, the language set by default will be used instead. But the menu language of the DVD Mini Hi-Fi System cannot be changed once selected.



- 1 In disc mode, stop playback and press **SYSTEM MENU**.
- 2 Select icon and press **▼**.
- 3 Press **◀▶ / ▶▶ / ▲ / ▼** keys on the remote control to select your preferred option.
 - Move to and press **▶▶**.
 - Move to one of the following and press **▶▶**.
 - Audio (disc's soundtrack)
 - Subtitle (disc's subtitles)
 - Disc Menu (disc's menu)
- 4 Press **▲ / ▼** to select a language and press **OK**.
- 5 Repeat **steps 3~4** for other settings.

To remove the menu

Press **SYSTEM MENU**.

Disc Operations

IMPORTANT!

- This system is designed for regular discs. Therefore, do not use any accessories such as disc stabiliser rings or disc treatment sheets, etc., as offered on the market, because they may jam the disc mechanism.
- Do not move the system during playback. Doing so may damage the system.
- Do not push on the disc tray or put any object other than disc on the disc tray. Doing so may cause the system to malfunction.
- DVD discs and players are designed with regional restrictions. Before playing a disc, make sure the disc matches the regional code of your player.
- According to the format requirement of DVD or VCD, some operations may be different or restricted.

Playing discs

- 1 Press **STANDBY ON** on the system to switch on the system, and then press **DISC** to select disc mode.
- 2 Power on the TV system and set to the correct Video In channel (See Setting the TV set).
→ You should see the blue Philips DVD background screen on the TV set.
- 3 Press **OPEN/CLOSE** to open the disc tray and load a disc .
→ Make sure the disc label is facing up. For double-sided discs, load the side you want to play facing up.
- 4 Press **OPEN•CLOSE** to close the disc tray.
→ "CLOSE" will appear for 2 seconds then "LOADING" will be displayed on the VFD.



→ If the disc is locked by parental control, you must enter your four-digit password (See Restricting playback by setting parental level).

- 5 Press **▶||** to start playback.

For MP3/ DIVX/WMA

- Load an MP3/ DIVX/ WMA disc in the disc tray.
→ Press **DISC MENU** to select menu on/off.
→ In stop mode to select desired title, please refer to "MP3/ DIVX/ WMA/Picture Disc Operations".

Notes:

- Load discs with the label side facing up.
- To ensure good system performance, wait until disc reading is completed before proceeding.

Using the disc menu

For disc with Table Of Contents, a menu may appear on the TV screen once you load the disc.

To select a playback feature or item

- Press **◀◀ / ▶▶ / ▲ / ▼** or **numeric keys (0-9)** on the remote control, then press **▶||** or **OK** to start playback.

To access or remove the menu

- Press **DISC MENU** on the remote control.

Disc Operations

Basic playback controls

To play discs in the disc tray

- Press **▶II**.
 - The available disc will play once, then stop.
 - During playback, elapsed playing time of the current track will appear on the display.

To start playback from the disc tray

- Press **DISC**

To interrupt playback

- Press **▶II**.
- To resume playback, press **▶II** again.

To stop playback

- Press **■**.

Skipping to another title (track) / chapter

- Press **◀** or **▶** on the front panel or on the remote control repeatedly during playback to skip previous or next. Each press will take the disc to the beginning of the previous or next title (track) / chapter:

Note:

– If the player has been set to repeat chapter (track), pressing this button will replay the same chapter (track) from its beginning.

To go directly to any title (track) / chapter

For CD/VCD(PBC OFF)/MP3

- Use the **numeric keys (0-9)** to enter the number of the desired track.

For DVD

- Please see "Moving to another title(track)/chapter".

Fast search

- 1 Press **◀◀** or **▶▶** on the front panel (or on the remote control) to fast reverse or forward the disc.
- 2 To resume normal play, press **▶II**.

Continuing playback from the last stop point

- In stop mode and before the disc is removed, press **▶II** to resume playback from where you have stopped.

To cancel the resume mode

- Press **■** again, or go into **STANDBY, POWER OFF** or press **OPEN/CLOSE** key.

Notes:

- Resume information will be erased if you have changed the disc, opened the disc tray, changed source or disconnected the system from the power supply.
- This function is not available for MP3/DIVX/WMA disc.

Selecting various mode functions

Repeat/Shuffle play mode

For DVD - repeat chapter/title

- Press **MODE** repeatedly to select the following:
REPEAT CHAPTER → REPEAT TITLE → REPEAT OFF

For SVCD/VCD/CD - repeat track/disc, shuffle disc/repeat shuffle disc

- Press **MODE** repeatedly to select the following:
REPEAT TRACK → REPEAT DISC → SHUFFLE DISC → REPEAT SHUFFLE DISC → SHUFFLE OFF → REPEAT OFF

During program playback

- Press **MODE** repeatedly to select the following:
REPEAT TRACK → REPEAT PROGRAM → REPEAT OFF

For MP3/DIVX/WMA repeat - track/album/disc, shuffle on/off

MENU ON:

- Press **MODE** repeatedly to select the following:
REPEAT TRACK → REPEAT ALBUM → REPEAT DISC → SHUFFLE ON → SHUFFLE OFF → REPEAT OFF

Disc Operations

MENU OFF:

- Press **MODE** repeatedly to select the following:
REPEAT TRACK → REPEAT DISC → SHUFFLE
ON → SHUFFLE OFF → REPEAT OFF

Notes:

- In Tuner, Tape or AUX mode, this button does not function.
- When you open the disc tray, the Repeat/shuffle function will be cancelled automatically.
- For SVCD and VCD 2.0 discs, the Repeat/shuffle function is not available when the PBC function is set to ON.
- If discs of different formats are loaded, the Repeat function is only available for the current disc.

Repeating a section within a chapter/track

You can play a specific section in a chapter/track repeatedly.

- 1 Press **A-B** at your chosen start point.
- 2 Press **A-B** again at your chosen end point.
→ The passage will now repeat continuously.
- 3 To resume normal play, press **A-B** again. "A TO B CANCELLED" will be shown on the TV screen.

Note:

- The REPEAT A-B function can only be set within the same chapter or track.

Programming favorite tracks

You can play the contents of the disc in the order you want. At most 99 tracks can be stored.

- 1 Load the desired discs on the disc tray.
- 2 Press the **DISC** button to playback.
- 3 While playback is stopped, press **PROG/ANGLE** to enter program mode.
→ "PROG" will blink and "P 00 :00" is displayed on the VFD.
- 4 Use the **numeric keys (0-9)** to input the track number in the order you want.
→ If you attempt to program more than 99 tracks, "FULL" is displayed.

- 5 Press **OK** to store the track.
- Repeat **steps 4-5** to store other tracks.
- 6 Press **▶||** to play the program.
- 7 To stop playback, press **■** once.
- 8 To exit the program mode, press **■** again.

Note:

- This function is not available for DVD or MP3/DIVX/WMA discs.

Disc Operations

Special DVD/VCD features

Changing subtitle language

This operation only works on DVDs with multiple subtitle languages.

- 1 Press **SUBTITLE** to select the desired language.

Changing Audio language

This operation only works on DVDs with multiple audio languages.

- 1 Press **AUDIO** to select the desired language.

For VCD:

- 1 Press **AUDIO** to select the desired audio channels for sound. This function is only available for discs recorded with different channels.

When microphone plugged in:
LEFT VOCAL → RIGHT VOCAL → MONO
LEFT → MONO RIGHT → STEREO

When unplugged microphone:
MONO LEFT → MONO RIGHT → STEREO

Note:

– If your desired language is not set in the disc, you cannot select the language via this function.

Searching for a particular passage

- 1 Press **◀◀** or **▶▶** on the system (or on the remote control) to select fast reverse search or fast forward search respectively.
- 2 Press **◀◀** or **▶▶** on the system repeatedly to select the required search speed:

For DVD

(reverse): FR X2 → FR X4 → FR X6 → FR X8
→ PLAY
(forward): FF X2 → FF X4 → FF X6 → FF X8
→ PLAY

For MP3/WMA

(reverse): FR X2 → FR X4 → FR X6 → FR X8
→ PLAY

(forward): FF X2 → FF X4 → FF X6 → FF X8
→ PLAY

For SVCD, VCD or CD

(reverse): FR X1 → FR X2 → FR X3 → FR X4
→ PLAY

(forward): FF X1 → FF X2 → FF X3 → FF X4
→ PLAY

- 3 To resume normal play, press **▶II**.

Displaying the disc information during playback

- 1 In disc mode, press **DISPLAY/OSD** repeatedly to select the following display information:

DVD	VCD (PBC ON)	VCD (PBC OFF)
TITLE ELAPSED 00:20:01	SINGLE ELAPSED 00:20:01	SINGLE ELAPSED 00:20:01
TITLE REMAIN 00:01:15	SINGLE REMAIN 00:01:15	SINGLE REMAIN 00:01:15
CHAPTER ELAPSED 00:22:12	OFF	TOTAL ELAPSED 00:20:12
CHAPTER REMAIN 00:30:45		TOTAL REMAIN 00:30:45
OFF		OFF

Moving to another title (track) / chapter

Some discs may contain more than one title or chapter. If the disc has a title or chapter menu recorded on it, you can start playback from the selected item.

- 1 Press **GOTO** on the remote control to display the message of title and chapter; use **◀◀** or **▶▶** to highlight an item.
- 2 Use **numeric keys (0-9)** to select a desired title/chapter number.
- 3 Press **OK** to start playback.

Note:

– Selecting a title or chapter might not be possible on certain discs.

Disc Operations

Playing from a selected point

This function allows you to start playback at any chosen time on the disc.

For DVD

- 1 Press **GOTO** twice to activate time menu.
- 2 Enter hours, minutes and seconds from left to right in the time edit box using the **numeric keys (0-9)**.
- 3 Press **OK** to start playback.

For SVCD, VCD or CD

- 4 Press **GOTO** to activate time menu, "GOTO -- : --" will be displayed on the TV screen.
- 5 Enter minutes and seconds from left to right in the time edit box using the **numeric keys (0-9)**.
- 6 Press **OK** to start playback.

Notes:

- In repeat disc or repeat all mode, you can search a desired time point.
- This function only available in PBC OFF mode.
- This function is not available for MP3/WMA disc.

Using the System Menu

Some operations can be carried out directly via the menu bar on the TV screen without interrupting disc playback.

- 1 Press **SYSTEM MENU**.
→ The menu bar will be displayed across the top of the TV screen.
- 2 Press **◀◀** or **▶▶** to select:
SETUP MENU → SLOW → ANGLE → STEP
→ PBC ON/OFF
- 3 Press **▼** to select your preferred option.
- 4 To exit, press **SYSTEM MENU**.

IMPORTANT!

Some operations may be different or restricted according to the disc format. Refer to the jacket or case of the disc you are playing.

Note:

- When you press a button and  appears on the TV screen, this means the function is not available on the current disc or at the current time.

Playing in slow motion mode



For DVD

- 1 Select  from the menu bar and press **▼** repeatedly to select the required slow motion speed:
SF X 2 → SF X 4 → SF X 8 → SR X 2 → SR X 4 → SR X 8 → PLAY
SF = slow forward
SR = slow reverse

For VCD

- 1 Press **▼** to select the required slow motion speed:
(forward): SF X 1 → SF X 2 → SF X 3 → PLAY
- 2 Press **▶▶** to cancel the slow function.


Note:

- This function is not available for CD or MP3/WMA disc.

Disc Operations


Viewing from another angle

If the playing DVD disc is recorded with multiple camera angles, the ANGLE mark on the setup page will be set to ON automatically. This allows you to view the picture from different angles. Angle selection is determined by the disc format.

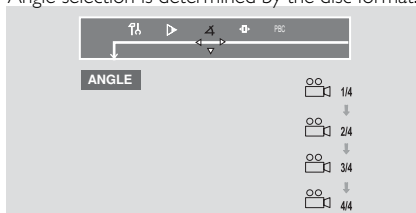

- Select **ANGLE** from the menu bar and press **▼** buttons to select the desired angle: 1/4, 2/4, 3/4 or 4/4.
→ Playback changes to the selected angle.

 Advancing by frames



- 1 Select **STEP** from the menu bar and press **▼** to play the disc step by step (one frame each step).
- 2 To resume normal play, press **▶II**.

Note:

– This function is not available for CD or MP3/ WMA disc.

Checking the contents of DVD

- 1 Press **DISC MENU** on the remote control.
→ If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu will be displayed.
- 2 Press **◀◀ / ▶▶ / ▲ / ▼** to select the desired title or chapter, and then press **▶II** or **OK**.
→ Playback starts from the selected title or chapter.
- 3 Press **DISC MENU** on the remote control to go to disc menu of the disc.

Note:

– If no title menu or root menu is recorded in the DVD disc, pressing this button will restart playback from the first track.

Special VCD/SVCD features

Playback control (PBC)

PBC playback allows you to play Video CD interactively, following the menu on the display.



- Select **PBC** from the menu bar and press **▼** to toggle between PBC ON and PBC OFF.

Playing a disc with PBC function

- If PBC OFF, the system will start playback automatically.
- If PBC ON, the PBC menu (if available) will appear on the TV screen for selection. Use the **numeric keys (0-9)** to enter your choice.

Note:

– This function is not available for CD/DVD or MP3/ DIVX/ WMA disc.

MP3/ DIVX/ WMA/ Picture Disc Operations

Playing MP3/ WMA/ Picture disc (Kodak, JPEG)

IMPORTANT!

– You have to turn on your TV set and set to the correct Video In channel. (See Setting the TV set.)

MP3/ WMA/ JPEG Picture disc

- ① Load an MP3/WMA/ Picture (JPEG) disc.
→ The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- ② The album/picture menu will appear on the TV screen. If not, press **DISC MENU** on the remote control.

(example for MP3 disc menu)

SMART NAVI		
Root	ROOT	0
	TITLE NAME1	1
	TITLE NAME2	2
	TITLE NAME3	3
	TITLE NAME4	4
	TITLE NAME5	5

- ③ In stop mode, Press ◀▶ / ▲ / ▼ on remote control to select a desired album/title, then press **OK** or ▶|| to confirm (for MP3/ WMA disc only).
 - You can also use the **numeric keys (0-9)** to enter your choice.
 - ④ To stop playback, press ■.
 - ⑤ Press ◀▶ or ▶|| on the system to select previous/next album.
If the MP3/WMA menu is switched off
 - You can only play the current title by pressing ▶||. While in playback mode, press ◀ or ▶ to select the previous/next title.
→ The title number will appear.
- Note:**
- No album search function in menu off mode.

- ⑥ During JPEG or Kodak Picture disc playback, press **PROG/ANGLE** repeatedly to select different slideshow view options. There are 12 options for selection. The selected option will be displayed on the TV screen.

Kodak Picture disc

- ① Load a Kodak Picture disc.
→ The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- ② Playback will start automatically.
- ③ Press ■.
→ 9 thumbnail pictures will appear on the TV screen.

(example for picture disc menu)

1	2	3
4	5	6
7	8	9

- ④ Press ◀ or ▶ to view the previous/next page (if available).
- ⑤ Press ◀◀ / ▶▶ / ▲ / ▼ to move within the menu and press **OK** to select the desired picture to play.
- ⑥ Press **PROG/ANGLE** to start the slide-show playback.

During playback, you can:

- Press ◀ or ▶ to select another title/picture in the current folder.
- Press ◀◀ / ▶▶ / ▲ / ▼ on the remote control to rotate or flip the picture files.
- Select "ZOOM ON" and press ◀/▶ on the system (press ◀◀ / ▶▶ on the remote control)to zoom the picture in and out.
- Press ▶|| to pause/resume playback.

Notes:


- Due to the recording nature of Digital Audio MP3 (DAM), only digital audio music will play.
- It is normal to experience an occasional "skip" while you are listening to your MP3 discs.
- For multi-session discs with different formats, only the first session can be read and played.
- DISC MENU does not function during Kodak Picture disc playback.

MP3/WMA/ DivX/ Picture Disc Operations

Playing DivX disc

There are two types of subtitle available on DivX disc: embedded subtitle and external subtitle.

- 1 Load a DivX disc.
 → Press **DISC MENU** to set the menu on.
 → In stop mode, the SMART NAVI appears on the TV screen.

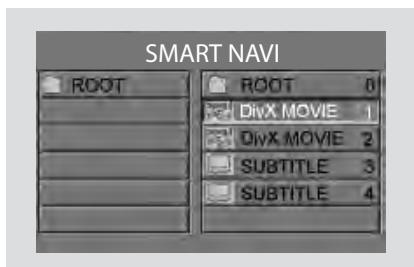

When playing DivX disc with embedded subtitle

- 2 Press **▲ / ▼** to select DivX Movie, and then press **OK** to start playback.
- 3 When playing disc, press **SUBTITLE** button on the remote control to select: SUBTILTE 1/8 → SUBTILTE 2/8 → SUBTILTE 3/8 → SUBTILTE 4/8 → SUBTILTE 5/8 → SUBTILTE 6/8 → SUBTILTE 7/8 → SUBTILTE 8/8 → SUBTILTE OFF.

Note:

- The maximum number of subtitle languages stipulated by the manufacturer is 8/8.

When playing DivX disc with external subtitle

- 4 Press **▲ / ▼** on the remote control to select an external subtitle option .
- 5 Press **SUBTITLE** to select subtitle file .
 - "DivX SUBTITLE SELECTED" appears on the TV screen.
- 6 Press **▲ / ▼** to highlight the movie file, and press **OK** to confirm.
 → The playback will start accordingly.


Notes:

- During playback, press **SUBTITLE** button on remote control to select available font: **SUBTITLE 1/1, ENCODING LATIN 1, ENCODING LATIN 2, ENCODING CYRILLIC, SUBTITLE OFF.**
- If an external subtitle has been selected, the DivX embedded subtitle will be deactivated.
- This model supports **LATIN 1, LATIN 2, and LATIN CYRILLIC** fonts.
- **LATIN 1** font supports the following languages: Albanian, Basque, Catalan, Danish, Dutch, English, Faeroese, Finnish, German, Icelandic, Irish, Italian, Norwegian, Portuguese, Rhaeto-Romanic, Scottish, Spanish, Swedish, Afrikaans and Swahili.
- **LATIN 2** supports the following languages: Bosnian, Croatian, Czech, Hungarian, Polish, Romanian, Serbian, Serbo-Croatian, Slovak, Slovenian, Upper Sorbian and Lower Sorbian.
- **LATIN CYRILLIC** font supports the following languages: Russian, Ukrainian and Belarusian.
- Subtitle files with the following filename extension are supported: **.sub, .srt and .smi.**

DVD Menu Operations

Using the menu bar

You can continue some operations directly via the menu bar on the TV screen without interrupting the disc playback. But when you enter **■** (SETUP MENU), the playback will pause.

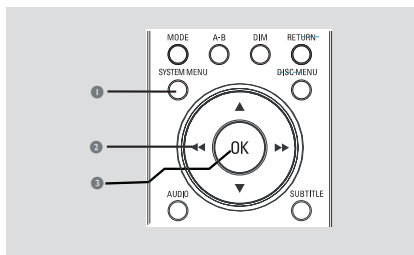

- 1 In disc mode, press **SYSTEM MENU**.
→ The menu bar will appear across the top of the TV set screen.



- 2 Press the **◀◀ / ▶▶ / ▲ / ▼** on the remote control to navigate in the menu.
→ Press **◀◀ / ▶▶** to move through the menu bar.
→ Press **▼** to enter the selection.

To remove the menu

Press **SYSTEM MENU** or **OK**.

IMPORTANT!


– Some operations may be different or restricted according to the disc format. Refer to the jacket or care of the disc you are playing.

▶	Slow Motion The slow motion speed will display. Press ▼ repeatedly to select a reverse or forward slow motion speed. To cancel the slow function, press ▶▶.
↗	ANGLE Press ▼ to view the same scene from different angles if the DVD is recorded with multi-angles.
◀◀	STEP Press ▼ repeatedly to play forward the disc step by step (one frame every step). To cancel the step function, press ▶▶.
PBC	PBC Press ▼ to select PBC ON or OFF, and then playback will replay automatically. (Only for VCD/SVCD discs.)


DVD Menu Operations

Using the setup menu (user preference settings)

This DVD setup is carried out via your TV set, enabling you to customize the DVD Mini Hi-Fi System to suit your particular requirements.

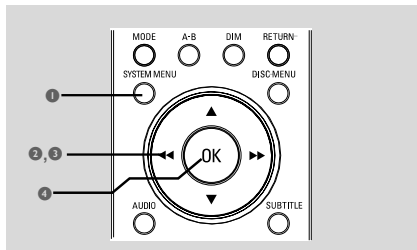

- 1 In disc mode, press **SYSTEM MENU**.
→ The menu bar will appear across the top of the TV screen.
- 2 Select **TA** icon and press ▼ to enter the setup menu. Then press ▲ / ▼ to select one of the setup menu options and press ►► to enter the menu.
→ Playback will pause.

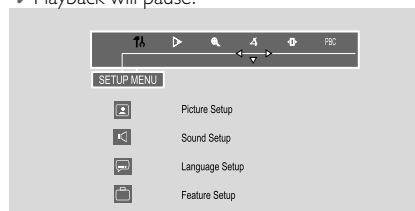

- 3 Press ◀◀ / ▶▶ / ▲ / ▼ on the remote control to navigate in the menu.
- 4 Press **OK** to confirm your selection.
→ Playback will resume or begin automatically.

Removing the menu


Press **SYSTEM MENU** or **OK**.

Note:

— Some features of the Setup Menu are described in “Preparations”.

Setting the TV shape

Make sure the format you need is available on the disc. If not, your setting will be invalid.

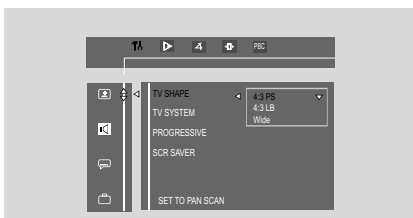

4:3 PS (Pan and Scan mode)

Select this if you have a conventional TV set and your DVD is not formatted for wide screen viewing. A wide picture will display on the whole TV screen with a portion automatically cut off.

4:3 LB (Letterbox mode)

Select this if you have a conventional TV set and your DVD is formatted for wide screen viewing. Black bars appear on the upper and lower portions of the TV screen.

16:9 (Wide-screen TV)

Select this if you have a wide-screen TV set (you must also set your wide screen TV to “full size”).

16:9 (Wide screen)



4:3 LB (Letter Box)



4:3 PS (Pan Scan)



Note:

— Setting the TV shape is only available when the disc is in the stop position.

DVD Menu Operations

Using progressive scan to improve image quality

This feature is only available when you have connected this system, through the Component Video jacks, to a Progressive Scan TV system.



OFF

Select this if a conventional TV set is connected to your system.

ON



To enjoy the full quality potential offered by progressive scan feature.

Notes:

- A progressive scan TV set is required.
- The progressive scan video quality is only possible through PrPbY output connection.

Helpful Hints:

- If a blank/ distorted TV screen appears, wait for 15 seconds for auto recover.
- To deactivate the progressive scan function, use the menu on the TV screen.

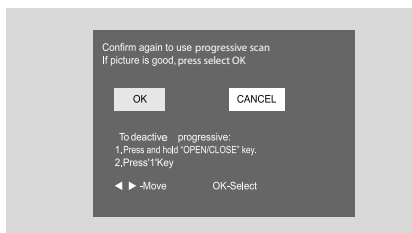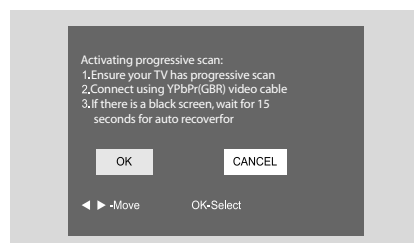


To deactivate Progressive Scan manually

If the progressive function is activated, but your TV does not support progressive function or PrPbY cable is not connected accordingly, there will be a blank screen.


- 1 In open mode, press and hold **OPEN/CLOSE** on the front panel.
- 2 Press numeric key "1".
→ The blue Philips DVD background appears on the TV screen.

Setting the screen saver

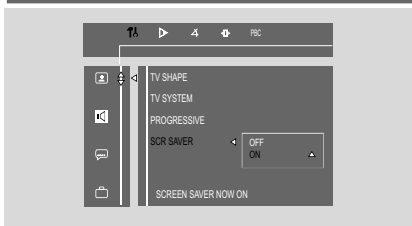

If set to ON, the screen saver will be activated when you leave the system in stop or pause mode for 5 minutes. The default setting is ON.

Night mode - turning on/off

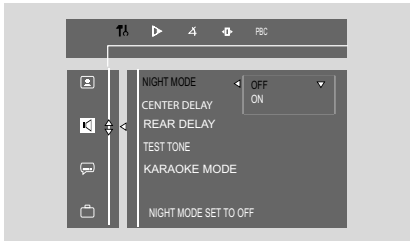


Off

Select this when you want to enjoy the surround sound with its full dynamic range.

On

Select this to level out the volume. High volume output will be softened and low volume output will be brought upward to an audible level. This feature is only available for movies with Dolby Digital mode.

Test Tone

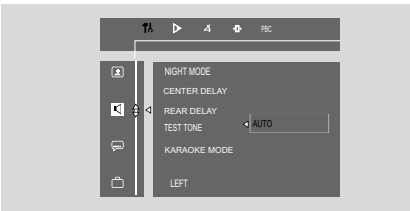


The system will start testing the speaker from left speaker to center, right speaker, right surround, left surround, subwoofer cyclically until you exit tone test.

Notes:

- You can press ◀◀ to exit test tone mode at any time.
- Main volume can be adjusted during tone test

Kara Score

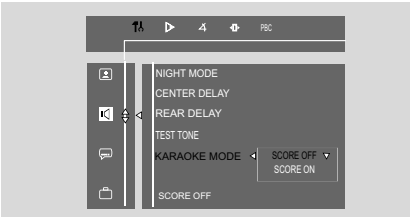

SCORE OFF

Select this when you want to cancel the kara score function.


SCORE ON

Select this when you want to singing with microphone, the system will record your kara score.

DivX(R) VOD

Philips provide you the DivX(R) VOD (Video On Demand) registration code that allows you to rent and purchase videos using the DivX(R) VOD service.

For more information, visit:
www.divx.com/vod.

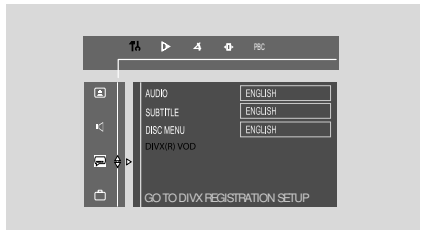


- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select **TEST TONE** icon and press **▼**.
- 3 Press **◀◀** / **▶▶** / **▲** / **▼** on the remote control to navigate in the menu.

→ Move to **TEST TONE** icon and press **▶▶**.

→ Move to "DivX (R) VOD"

→ Press **OK** on the remote control, the registration code will appear:

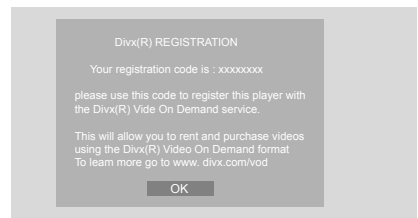

- 4 Use the registration code to purchase or rent the videos from DivX(R) VOD service www.divx.com/vod.

Follow the instruction and download the video onto a CD-R for playback on this system.


Helpful Hint:

– All the download videos DivX(R) VOD can only be played back on this system.


DVD Menu Operations

Changing the password


You can change the four-digit code used as Password.

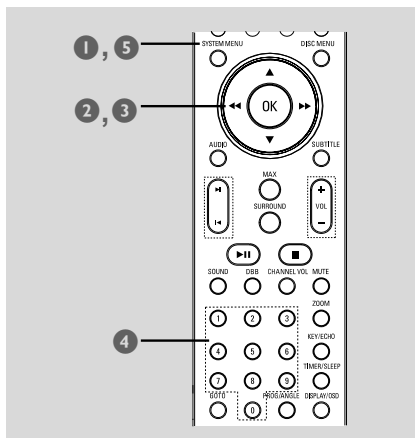

- ❶ In disc mode, press **SYSTEM MENU**.
- ❷ Select  icon and press ▼.
- ❸ Press ◀◀ / ▶▶ / ▲ / ▼ on the remote control to navigate in the menu.
 - Move to  icon and press ▶▶.
 - Move to "PASSWORD" and press ▶▶.

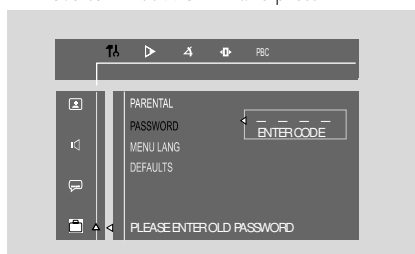

- ❹ Use the **numeric keys (0-9)** to enter your four-digit code.
 - The password supplied by default is 1234.
 - If you forget the four-digit code, press ■ four times, the system will change back to the default password.
- ❺ Go to "Password" and enter your new code. Then, enter the same code again to confirm.

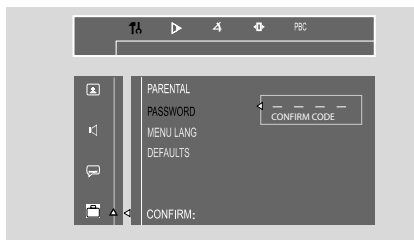


- ❻ Press **SYSTEM MENU** again to remove the menu.


DVD Menu Operations

Restricting playback by setting parental level


Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country specific. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

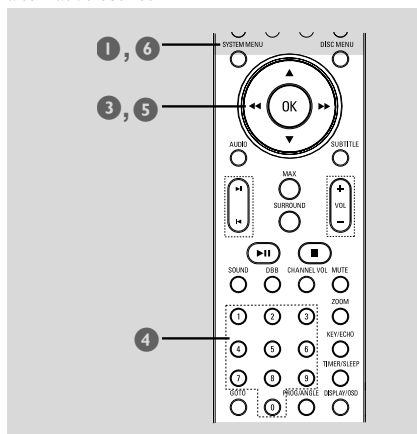

- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select  icon and press **▼**.
- 3 Use **◀◀ / ▶▶ / ▲ / ▼** on the remote control to navigate in the menu.
 - Move to  icon and press **▶▶**.
 - Move to "PARENTAL" and press **▶▶**.

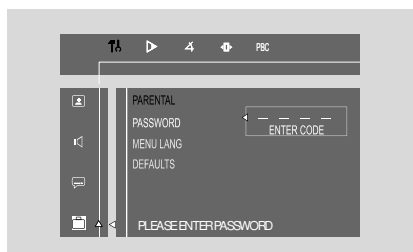

- 4 Use the **numeric keys (0-9)** to enter the four-digit code. You may have to enter the same code twice.
 - If not successful, see Using the Setup Menu - Changing the password.
- 5 Press **▲ / ▼** to select a rating level between 1-8 and press **OK**.
 - DVDs rated above the level you select will not play unless you enter your four-digit password or choose a higher level rating. Select 'No Parental' to deactivate Parental level and have all discs play.

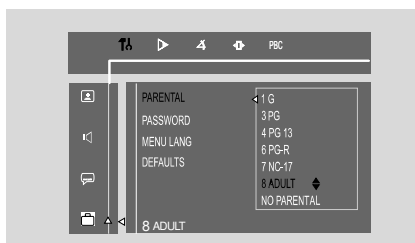

- 6 Press **SYSTEM MENU** again to remove the menu.

Rating explanations

NO PARENTAL – It will play all discs.

8 ADULT – material for adults only; viewed only by adults due to graphic sexual scenes, violence, or language.

7 NC-17 – No children under age 17; not recommended for children under age 17.

6 PG-R – Parental Guidance – Restricted; recommended that parents restrict children under 17 from viewing or allow them to view only when supervised by a parent or adult guardian.

4 PG 13 – Material is unsuitable for children under age 13.

3 PG – Parental Guidance suggested.

1 G – General Audience; recommended as acceptable for viewers of all ages.

– Menu language

To set the screen display language. The default setting is English.

– Default

If RESET is selected, all the items in the setup menu will be reset to default setting, except Progressive, Parental Setting and Password.

Tuner Operations

IMPORTANT!

- **Make sure FM and MW antennas are connected.**

Tuning to radio stations

- 1 Press **TUNER** to select "FM XX" or "MW XX".
- 2 Press and hold ◀◀ / ▶▶ on the system , "SEARCH" will be displayed on the VFD.
→ The next radio station will be tuned automatically.
- 3 To tune a weak station, press ◀◀ / ▶▶ on the system to search until a radio station with sufficient signal strength is found.

Presetting radio stations

You can store up to 40 preset radio stations in the memory, starting from FM and followed by MW bands.

Automatic preset programming

You can start automatic presetting from a selected preset number:

- 1 Press **TUNER** (BAND) to select TUNER mode.
→ The current radio frequency will appear on the display.

To begin automatic preset from a desired preset number

- Press ◀◀ / ▶▶ or **numeric keys (0-9)** to select the desired preset number.
- 2 Press and hold **PROG/ANGLE** for 3 seconds, "AUTO " appears on the display.

→ **PROG** will start to flash.

→ The system will start to search all radio stations on the FM band, then MW band.

→ All radio stations with strong signal strength will be stored automatically.

→ The system will stop searching when all available radio stations are stored or when the memory of 40 preset radio stations is full.

→ The first preset radio station will then be played when completed.

Note:

- *If no preset number is selected, automatic preset will begin from "1" and all your former presets will be overridden.*

Tuner Operations

Manual preset programming

- 1 Press **TUNER** (BAND) repeatedly to select the desired tuner band: FM or MW.
- 2 Press and hold ◀◀ / ▶▶ on the system to search a radio frequency.
- 3 Press **PROG/ANGLE**.
→ "PROG" and "POD" will display.
- 4 Press ◀ / ▶ or **numeric keys (0-9)** to select the desired preset number.
- 5 After selecting an address number, press **PROG/ANGLE** again to store the radio station.
- Repeat **steps 3-5** to store other preset radio stations.

Note:

– If you attempt to store more than 40 preset radio stations, "FULL" will be displayed.

Selecting a preset radio station

- In tuner mode, press ◀ / ▶ or use the **numeric keys (0-9)** to select the desired preset number.
→ The preset number, radio frequency, and waveband are displayed.

Deleting a preset radio station

- 1 Press ◀ or ▶ to select the preset radio station to be erased.
- 2 Press ■ on the system, "DELETED" appears on the display.
→ The preset numbers of all other preset radio stations in the band with higher numbers are also decreased by one.
- Repeat **steps 1-2** to erase other preset radio stations.

Changing tuning grid

In some countries, the frequency step between adjacent channels in the MW band is 9 kHz (10 kHz in some areas). The preset frequency step in the factory is 9 kHz.

- 1 Plug the AC power cord.
- 2 Press **TUNER** to select MW mode.
- 3 Press and hold ■ on the system for more than 3 seconds.
→ "STEP XX" appears.

Note:

– All preset stations will be lost and need to be reprogrammed.


Tape Operation/Recording

IMPORTANT!

- Before playing a tape, check and tighten slack tape with a pencil. Slack tape may get jammed or may burst in the mechanism.
- Store tapes at room temperature and do not put them too close to a magnetic field (for example, a transformer, TV set or speaker).

Tape playback

- 1 Press **OPEN/CLOSE** to open the tape deck door.
- 2 Insert a recorded tape and close the tape door.
- 3 Load the tape with the open side down and the full spool to the left.

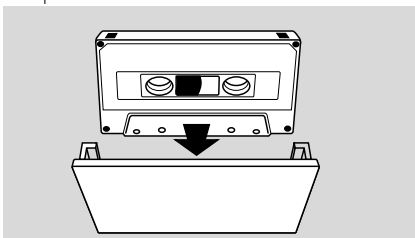

- 3 Press **TAPE/AUX** on the system or on the remote control repeatedly to select tape mode
- 4 Press **▶II** to start playback.

To stop playback

- Press **■**.

Rewinding or forwarding fast when playback is stopped


- 1 Press **◀◀** or **▶▶** on the front panel
- 2 Press **■** when you reach the desired passage.

Resetting tape counter number

- In stop mode, press **■**.

General information on recording

- If you don't intend to record via the microphone, unplug it to avoid unwanted recording source.
- For recording, only use tape of IEC type I (normal tape).
- The recording level is set automatically, regardless of the position of the Volume, Vocal, Key control and so forth.
- The tape is secured at both ends with leader tape. At the beginning and end of the tape, nothing will be recorded for seven seconds.
- To prevent accidental recording, break out the tab on the left shoulder of the tape side you want to protect.

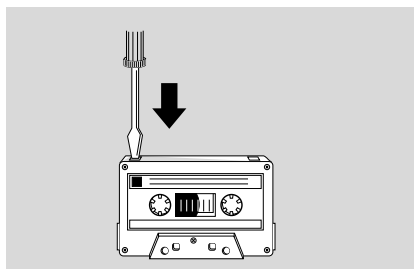

- Press **REC** in Disc, Tuner/AUX mode, "TAPE" will display on the VFD if there is no recordable tape in tape deck.

Tape Operation/Recording

IMPORTANT!

- Recording is permissible if copyright or other rights of third parties are not infringed upon.
- Recording is possible only in tape deck

Preparation for recording

- 1 Load a recordable tape into tape deck with the full spool to the left.
- 2 Prepare the source to be recorded.
DISC – load the disc(s)
TUNER – tune to the desired radio station.
AUX – connect external equipment.

- 3 Press **DISC, TUNER, AUX** to select the source.
- 4 Start to play the selected source.
- 5 Press **REC** to start recording.

To stop recording

- Press ■ on the system.

Disc synchro recording

- 1 Press **DISC** to select the disc.
- You can record programmed tracks in the order you want.
- 2 Press **REC** to start recording.
 → "REC" will flash, but the first 7 seconds of the start passage will not be recorded.

Selecting another track during recording

- 1 Press ►||
- 2 Press ◀◀ or ▶▶ to select another track.

To stop recording

- Press ■.
- Recording and disc playback will stop simultaneously.



Be responsible
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

AUX Operation

AUX (Listening to an external source)

You can listen to the sound of the connected external device through your FWD876.

- ❶ Check the external device has been properly connected (See **Installation** , **Connecting an additional appliance**).
- ❷ Press **TAPE/AUX** once or twice on the system to select AUX (or on the remote control).
- ❸ To avoid noise distortion , turn down the volume on your external device.
- ❹ Press the **PLAY** key on the connected device to start playback.
- ❺ To adjust the sound and volume , use the sound controls on your external device and the FWD876.

Using a USB device

By inserting a USB device to the Hi-Fi system , you can enjoy the device's stored music or picture through the powerful speakers of Hi-Fi system.

General information on USB device

Compatible USB device

With the Hi-Fi system , you can use

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this Hi-Fi system)

Note:

– *In some USB flash players (or memory devices) , the stored contents are recorded using copyright protection technology. Such protected contents will be unplayable on any other devices (such as this Hi-Fi system)*

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512-65,536 bytes)
- MP3 bit rate (data rate); 32-320 kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums / folders; maximum 99
- Number of tracks / titles maximum: 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length : 128 bytes)

The system will not play or support the following:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and will not be shown in the display.
- Non- supported file formats are skipped .This means that e.g. Word documents. doc or MP3 files with extension .dif are ignored and will not be played.
- AAC, WAV, PCM audio files.
- DRM protected WMA files
- WMA files in Lossless format

How to organize your MP3/WMA files on the USB device

This Hi-Fi system will browse the MP3/WMA files in the folders/sub-folders/titles order:

Example:

Organize your MP3/WMA files in different folders or subfolders as required.

Note:

- If you have not organized MP3/WMA into any albums on your disc, an album "00" will be automatically assigned for all those files.
- Make sure that the file names of MP3 files end with .mp3 . and the file names of WMA files end with . wma .
- For DRM protected WMA files , use Windows Media Player 10 (or later) for conversion. Visit www.microsoft.com for details about Windows Media Player and WM DRM (Windows Media Digital Rights Management).

USB Operation

USB playback

- 1 Check the USB device has been properly connected .



- 2 Press **USB** on the system (or **USB** on the remote control), "USB" will display 2 seconds on the VFD and "USB INIT" will display 6 seconds, then "READING" will be displayed.

Note:

- If there was no USB device inserted, "NO USB" will be display.

- 3 Play the USB's audio files as you do with the albums/tracks on a MP3 disc.

Note:

- For compatibility reasons, the album/track information may differ from what it is displayed through flash players' music management software.

- File names or ID3 tags will be displayed as —If they are not in English.

— Compatibility of the USB connection on this product:

a) This product supports most USB Mass storage devices (MSD) that are compliant to the USB MSD standards.

i) Most common Mass storage class devices are flash drives, memory sticks, jump drives and etc.

ii) If you see a "Disc Drive" show up on your computer after you plugged the mass storage device into your computer, most likely it is MSD compliant and it will work with this product.

b) If your Mass storage device required a battery/ power source. Please make sure you have a fresh battery in it or charge the USB device first and then plug it into the product again.

— Supported Music type:

a) This device only supports unprotected music with the following file extension:

.mp3

.wma


b) Music bought from on-line music stores are not supported because they are secured by Digital Rights Management protection (DRM).

c) File name extensions that end with the following are not supported:

.wav; .m4a; .m4p; mp4; .aac and etc.

— No Direct connection can be made from

Computer USB port to the product even you have either or both mp3 or wma files in your computer.

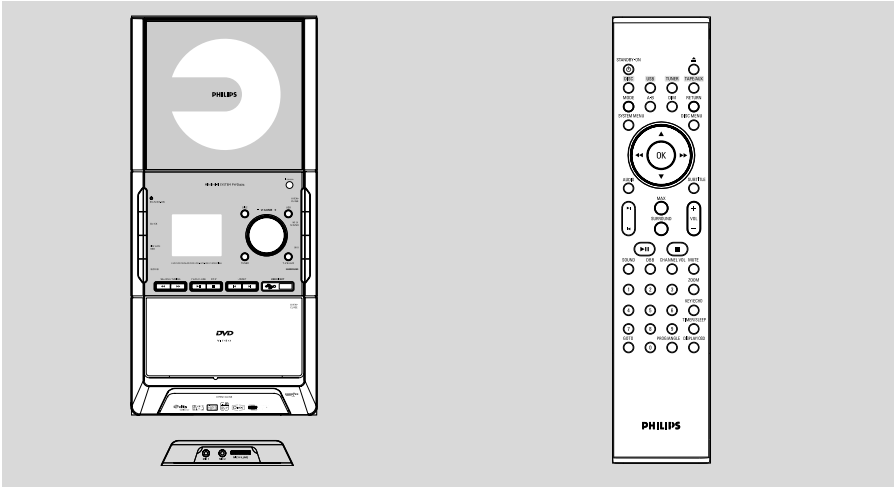

Viewing the clock

The clock (if it is set) will be shown in Standby mode. Press **CLOCK** on the system to view clock in any source mode.

Setting the clock - see **Preparations**.

Setting the timer

The system can switch to DISC, TUNER, USB or TAPE mode automatically at a preset time, serving as an alarm to wake you up.

IMPORTANT !

- Before setting the timer, ensure that the clock is set correctly.
- The timer will always be switched on once set.
- The timer will not start if a recording is in progress.
- The time can be set in 24-hour mode.

- 1 In standby mode, press and hold **TIMER/SLEEP** on the remote control more than 3 seconds .
→ The selected source will be displayed.
- 2 Press **DISC, TUNER, USB or TAPE/AUX** to select timer mode. The corresponding source will appear on the display.

DISC - load the disc.

TUNER - Tune to the desired radio station.

USB - Play USB directly.

TAPE - Load the prerecorded tape into tape

deck .

- 3 Press **◀** or **▶** on the system (or on the remote control) to set the hours
- 4 Press **◀◀** or **▶▶** on the system (or on the remote control) to set the minutes.
- 5 Press **TIMER/SLEEP** to store the setting.
→ "TIMER ON" will be displayed for 5 seconds.
→ The timer will start to work.
→ The timer will always be switched on once it has been set.

Note:

- The timer must be set in standby mode.

To exit without storing the setting

- Press **■** on the system.

To deactivate the timer

- When the timer has been set, press and hold **TIMER /SLEEP** for more than 3 seconds to enter timer setting mode, and then press and hold **TIMER /SLEEP** again for more than 3 seconds to deactivate the timer:
→ "TIMER OFF" will be displayed.

Timer Operations

Notes:

- If the source is disc mode, playback will begin with the first track of the disc. If the disc tray is empty, the system will automatically switch to Tuner mode.
- During timer setting, if no button is pressed within 10 seconds, the system will exit timer setting mode automatically.
- When the system is powered on, if the memorized volume level is more than 12, the system will automatically adjust to 12.

Viewing the timer

- 1 In standby mode, Press **TIMER/SLEEP** on the remote control to view timer. Timer will be shown on the display for 5 seconds and then go back to its previous status.
- 2 If timer has not been set, "NO TIMER" will be displayed for 5 seconds.

Setting the sleep timer

The sleep timer enables the system to switch to Standby mode automatically at a preset time.

- In any source mode, Press **TIMER/SLEEP** on the remote control repeatedly and stop at the desired preset turn-off time.
 - Following options are available (time in minutes):
 - 15 MIN → 30 MIN → 45 MIN → 60 MIN
 - 90 MIN → 120 MIN → OFF
 - "ZZZ" icon will show on the display panel unless "OFF" is selected.

To check or change the setting

- Press **SLEEP** once to show the remaining time before switching off. If you continue pressing the SLEEP button, the next Sleep Timer option will appear on the display.

To cancel the sleep timer

- Press **TIMER/SLEEP** repeatedly until "OFF" is displayed, or press the **STANDBY ON** button.

Sound and Volume Controls

Sound control

MAX Sound

MAX sound provides the best mixture of various sound features.

- Press **MAX SOUND** on the system or **MAX** button on the remote control to achieve optimal sound.
 - When MAX sound is activated, **MAX** will be lighted and "MAX ON" will appear on the VFD for 3 seconds.
- Press **MAX SOUND** or **MAX** button again to deactivate MAX function.
 - When MAX sound is deactivated, "MAX OFF" will appear on the display for 3 seconds, and **MAX** icon turn off.

Note:

– When MAX sound is selected, other sound modes will be switched off automatically.

DBB (Dynamic Bass Boost)

To enhance the bass response, press DBB once or more to select your option: DBB 1, DBB 2, DBB 3 or DBB OFF.

- Display shows DBB level briefly if DBB is activated.
- "DBB OFF" appears if DBB is deactivated.

Note:

– Some discs or tapes might be recorded in high modulation, which causes a distortion at high volume. If this occurs, deactivate DBB or reduce the volume.

Selecting sound effect

The digital sound effect allows you to select from various preset modes that control the frequency bands of sound to optimize certain musical styles. It greatly enhances the excitement and enjoyment of your favorite music.

- Press **SOUND** repeatedly to select the available sound effect.

Playing a DVD/VCD

- You can select Virtual Ambience Control (VAC) as follows:
 - CONCERT, ACTION, DRAMA, SCI-FI.

Playing a CD/MP3/WMA or in TUNER, TAPE or AUX mode

- You can select Digital Sound Control (DSC):
 - OPTIMAL, TECHNO, ROCK, JAZZ.

Selecting surround sound effect

- Press **SURROUND** to select multi-channel surround or stereo.
 - The availability of the various surround sound modes depends on the sound available on the disc.
 - The center and rear speakers operate only in multi-channel surround mode.
 - The available output modes for multi-channel include: DTS surround, Dolby Digital, Dolby Pro-Logic surround.
 - Stereo broadcasts or recordings will produce some surround channel effects when played in a surround mode.

Volume control

Changing the volume level

- Rotate **VOLUME** clockwise / anti-clockwise (or press **VOL +/-**) to increase or decrease the volume level.
 - "VOL MIN" is displayed at minimum level.
 - "VOL MAX" is displayed at maximum level.

Switching off the volume temporarily

- Press **MUTE**.
 - "MUTE ON" is displayed.
- Press **MUTE** again to cancel the MUTE mode.
 - "MUTE OFF" will appear.

Note:

Press **MUTE** again or increase/ decrease the volume level to cancel the MUTE mode.

Other Functions

Switching on/off

Switching the system ON

In Standby/ Demonstration mode

- Press **STANDBY ON**
→ The system will go back to its previous status.
- Press **DISC, TUNER, TAPE/AUX, USB**
→ The system will switch to the selected source.

Switching the system to STANDBY mode

In demonstration mode

- Press and hold **STOP ■** on the system.

In any other source mode

- Press **STANDBY ON** (or  on the remote control).
→ The time will appear on the display when the system is in Standby mode.

Power saving automatic standby

In disc mode, as a power-saving feature, the system will automatically switch to Standby mode if no disc in the disc tray or stop play mode, while you don't press any button within 30 minutes.

Dimming the display

- Press **DIM** repeatedly to select different levels of brightness for the display: HIGH, MID or LOW.

Vocal

This function allows you to fade out the original vocal from a karaoke. Press AUDIO key to select different audio modes.

For DVD karaoke discs:

AUDIO 1, AUDIO 2, AUDIO 1 VOCAL,
AUDIO 2 VOCAL.

For VCD karaoke discs:

LEFT VOCAL, RIGHT VOCAL, MONO LEFT,
MONO RIGHT or STEREO.

Other Functions

Echo

This feature allows you to add echo while singing or talking through a microphone.

- Press **KEY/ECHO**.
 - "ECHO CONTROL ON" will be display on the TV screen for 8 seconds.
 - Press **VOL +/-** to change the echo level between 1 and 7.
 - Select OFF to switch off Echo.

Notes:


- Echo will be disabled automatically when the microphone is unplugged.
- "PLEASE INSERT MIC" is displayed on your TV screen if you have not connected the microphone to the system in ECHO CONTROL ON mode.

Key control

This feature allows you to change the key tone when you play a DVD or VCD disc.

- Press **KEY/ECHO** twice.
 - "KEY CONTROL ON" will be displayed on the TV screen for 8 seconds.
 - The Key Control indicator will flash when you press **VOL +/-** to change the key tone level.
 - If you don't adjust the key control level within 5 seconds, the indicator will turn off.

Karaoke

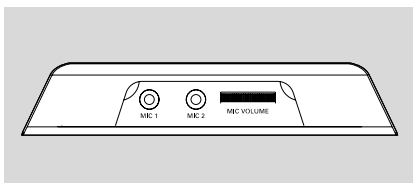

Connect a microphone (not supplied) to the system to sing along with the music source.

- ① Connect a microphone to the MIC jack.
 - "MICROPHONE PLUG IN" will display on your TV screen.
- Before connecting the microphone, set the **MIC VOLUME** to the minimum level to prevent howling.
- ② Press **DISC** or **TAPE/AUX**
- ③ Adjust the volume of the source through VOLUME control.

- ④ Adjust the microphone volume through **MIC VOLUME** control.

Notes:

- Keep the microphone away from the speakers to prevent howling.
- "MICROPHONE PLUG OUT" will display on your TV screen when you plug out the microphone.

Listening to external sources

- ① Connect the audio out terminals of the external equipment (TV, VCR, Laser Disc player, DVD player or CD Recorder) to the AUX IN terminals of your system.
- ② Press **TAPE/AUX** repeatedly to select AUX mode directly.
 - "AUX" will be displayed.

Notes:

- You are advised not to listen to and record from the same source simultaneously.
- All navigation sound control features are available.

Specifications

AMPLIFIER SECTION

Total output power	8000W PMPO
5.1Dolby Digital surround mode.....	
.....600W RMS(5x80W/ch+200W/ch)	
Frequency Response . 150 Hz - 18 kHz / $\pm$ 3 dB	
Signal-to-Noise Ratio	> 62dB (A-weighted)
Input Sensitivity	
AUX In	800 mV

TUNER SECTION

Tuning Range	
.....FM 87.5 – 108 MHz (50 kHz steps)	
..... MW 531 – 1602 kHz (9 kHz steps)	
..... MW 530 – 1710 kHz (10 kHz steps)	
Signal-to-Noise Ratio	FM $\geq$ 50 dB
..... MW $\geq$ 35 dB	

TAPE SECTION

Frequency Response	
Normal tape	80-12500 Hz
Signal-to-Noise Ratio	
Normal tape	$\geq$ 45 dBA
Wow and flutter	$\geq$ 0.35%

DVD SECTION

Laser Type	Semiconductor
Disc Diameter	12cm / 8cm
Video Decoding	MPEG-2 / MPEG-1
Video DAC	10 Bits
Signal System	PAL / NTSC
Video Format	4:3 / 16:9
Video S/N	56 dB (minimum)
Composite Video Output	1.0Vp-p, 75 Ω
S-Video Output	Y - 0.714Vp-p, 75 Ω
..... C - 0.286Vp-p, 75 Ω	
Audio DAC	24 Bits / 96 kHz
Frequency Response 4 Hz - 20 kHz (44.1kHz)	
..... 4 Hz - 22 kHz (48kHz)	
..... 4 Hz - 44 kHz (96kHz)	

MAIN UNIT

Power Supply Rating	110 - 127 / 220 - 240 V
.....	60/50HZ Switchable
Power Consumption	
Active	100 W
Standby	<10 W
Dimensions (w x h x d)	
.....	190.6x 411.8x 315.2(mm)
Weight	5.5 kg

Packaging Dimensions (w x h x d)	
.....	565 x 627 x 397 (mm)
Gross weight	35.7Kg

SPEAKERS

Front speakers	
System	3-way, Bass reflex
Impedance	4 Ω
Speaker drivers	2x13cm+8cm woofer
.....	5cm tweeter
Frequency response	50 Hz – 20 kHz
Dimensions (w x h x d)	
.....	165.2 x 554.04x 283.2 (mm)
Weight	13.5kg/each

Center or Surround speakers

System.....	2 multi directional driver
Impedance.....	4 Ω (center) / 4 Ω (surround)
Speaker drivers.....	1x10cm full range(surround)
.....	2x8cm full range(center)
Frequency response	.150HZ--18KHZ
Dimensions(w x h x d).....	
.....	165.2x 138.6 x 161.9mm (surround speaker)
.....	190.2 x109.7x 144.9mm (center speaker)
Weight	1.425 kg (center speaker)
.....	1.002kg/ each (surround speaker)

SUBWOOFER

Impedance.....	6 Ω
Speaker driver.....	1x20cm woofer
Frequency response.	30-200 HZ
Dimensions(w x h x d).....	
.....	230 x 551.5 x 317.5 (mm)
Weight	10.77 kg

Specifications and external appearance are subject to change without notice.

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
No power.	✓ Check if the AC power cord is properly connected.
"NO DISC" is displayed.	✓ Check if the disc is inserted upside down. ✓ Wait until the moisture condensed at the lens has cleared. ✓ Replace or clean the disc, see "Maintenance". ✓ Use a readable disc or correctly recorded format MP3-CD.
No picture.	✓ Select the appropriate video input mode on the TV set. ✓ Check if the TV set is switched on. ✓ Check the video connection. ✓ Check if the system is securely connected.
Distorted or poor picture.	✓ Sometimes a slight picture distortion may appear. This is not a malfunction. ✓ Clean the disc. ✓ Connect the system to the S-video input of your TV set.
The aspect ratio of the screen cannot be changed even though you have set the TV shape.	✓ The aspect ratio is fixed on the DVD disc. ✓ The aspect ratio may not be changed for some TV systems.
The DVD player does not start playback.	✓ Insert a readable disc. ✓ Check the disc type, color system and region code. ✓ Clean the disc. ✓ Place the disc with the playback side down. ✓ Press SYSTEM MENU to turn off the setup menu. ✓ Cancel the parental control rating function or change the rating level. ✓ Moisture has condensed inside the system. Remove the disc and leave the system turned on for about an hour.
The system does not respond when the buttons are pressed.	✓ Disconnect the power plug from the jack, and insert again.

Troubleshooting

Problem	Solution
The language for the sound or subtitle cannot be changed when playing a DVD.	✓ Multi-language sound or subtitle is not recorded on the DVD. ✓ Changing the language for the sound or subtitle is prohibited on the DVD.
No image is output when a function is selected.	✓ Make sure the component is connected correctly. ✓ Press the correct function button for the input source.
Sound cannot be heard or is of poor quality	✓ Adjust the volume. ✓ Disconnect the headphones. ✓ Check that the speakers are connected correctly. ✓ Check if the stripped speaker wire is clamped. ✓ If the system is in pause, slow motion or fast forward/reverse mode, press ► to resume the normal play mode. ✓ Make sure the MP3-CD was recorded within 32-256 kbps bit rate with sampling frequencies at 48 kHz, 44.1 kHz or 32 kHz.
Poor radio reception.	✓ If the signal is too weak, adjust the antenna or connect an external antenna for better reception. ✓ Increase the distance between the System and your TV set or VCR.
Recording or playback cannot be made	✓ Clean deck parts, see "Maintenance". ✓ Use only NORMAL tape. ✓ Apply a piece of adhesive tape over the missing tab space.
The tape deck door cannot open	✓ Remove and reconnect the AC power plug and switch on the system again.
Left and right sound outputs are reversed.	✓ Check the speaker connections and location.
The remote control does not function.	✓ Select the correct source (DISC or USB for example) before pressing the function button, ✓ Point the remote control at the remote control sensor of the unit. ✓ Reduce the distance to the player. ✓ Remove any possible obstacles. ✓ Replace the batteries with new ones. ✓ Check that the batteries are loaded correctly.
The display is dark	✓ Press DIM again.
The timer is not working	✓ Set the clock correctly. ✓ If recording is in progress, stop it
The Clock/Timer setting is erased	✓ Power has been interrupted or the power cord has been disconnected. Reset the clock/timer.

Analog: Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

Aspect ratio: The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

AUDIO OUT Jacks: Jacks on the back of the DVD System that send audio to another system (TV set, Stereo, etc.).

Bit Rate: The amount of data used to hold a given length of music; measured in kilobits per second, or kbps. Or, the speed at which you record. Generally, the higher the bit rate better the sound quality. However, higher bit rates use more space on a Disc.

Chapter: Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

Component Video Out Jacks: Jacks on the back of the DVD System that sends high-quality video to a TV set that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

Disc menu: A screen display prepared for the selection of images, sound, subtitles, multi-angles, etc recorded on a DVD.

Digital: Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

Dolby Digital: A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right and center).

DTS: Digital Theater Systems. This is a surround sound system, but different from Dolby Digital. The formats were developed by different companies.

JPEG: A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

MP3: A file format with a sound data compression system, "MPE" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. Through the MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

Multichannel: DVD is specified to have all sound tracks constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

Parental control: A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

PCM (Pulse Code Modulation): A system for converting analog sound signal to digital signal for later processing without data compression.

Playback control (PBC): Refers to the signal recorded on video CDs or SVCDs for reproduction control. By using screen menus recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

Progressive Scan (P-Scan): It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution. A progressive scan TV set is needed to receive progressive scan output from the system.

Region code: A system allowing discs to be played only in preset regions. This unit will only play discs that have compatible region codes. You can find the region code of your unit from the product label. Some discs are compatible with more than one region (or ALL regions).

S-Video: Produces a clear picture by sending separate signals for luminance and the color. You can use S-Video only if your TV set has S-Video In jack.

Sampling Frequency: Frequency of data sampling when analog data is converted to digital data. Sampling frequency numerically represents how many times the original analog signal is sampled per second.

Surround: A system for users to create realistic three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

Title: The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.

VIDEO OUT jack: Jack on the back of the DVD System that sends video to TV.