

Philips GoGear MP3 video player

SA2CAM04
SA2CAM08
SA2CAM16

Quick start guide

Przewodni szybkiego startu

Guía de inicio rápido

Snabbstartsinstruktioner

Schnellstartanleitung

Quick start guide

Stručný návod k rychlému použití

คู่มือเริ่มต้นใช้งานอย่างย่อ 快速入门指南

Guide de démarrage rapide

Handleiding voor snel gebruik

 

快速入門指南 Hızlı Başlama Kılavuzu

Guida di riferimento rapido

Быстрый запуск

Guia para início rápido

PHILIPS

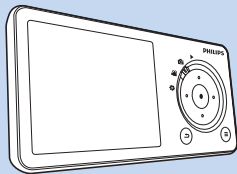

 2000 / XP / Vista / 7




 
500Mb



www

1

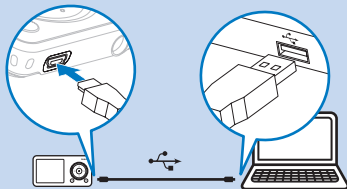



XP



Vista

PHILIPS


Philips Songbird





3








4

 

 
 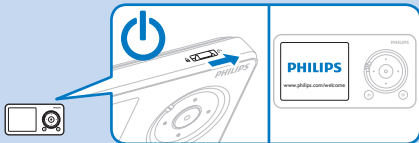



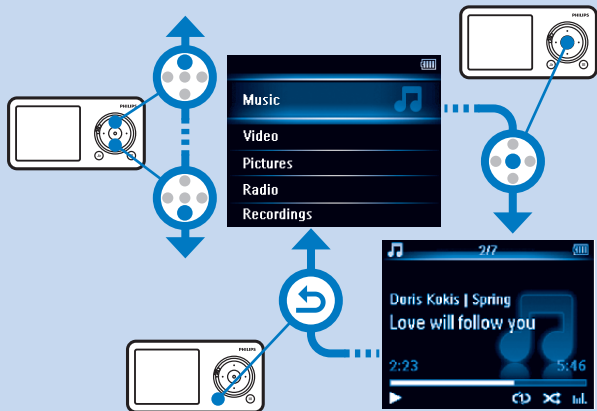



 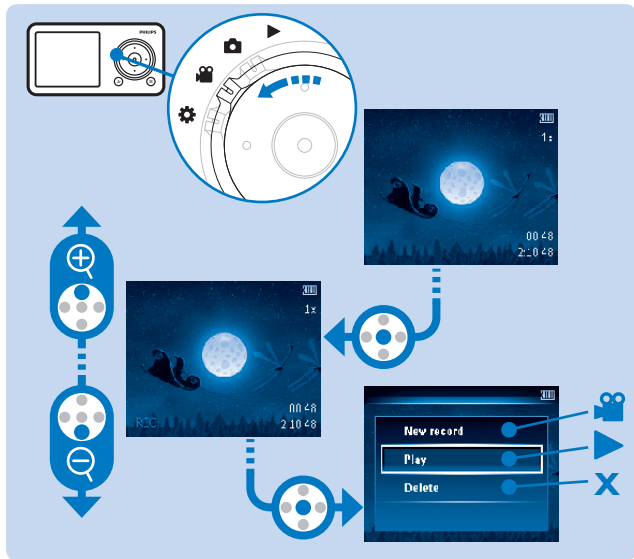


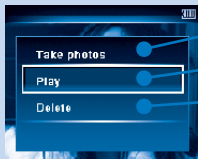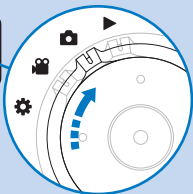

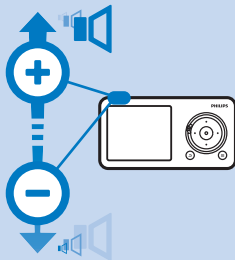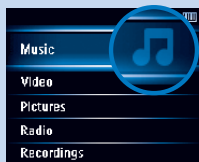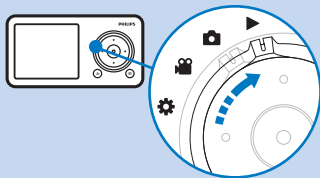

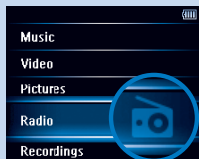

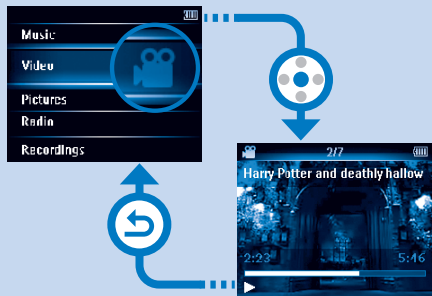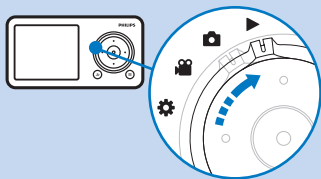

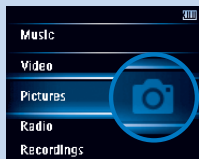



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or
their respective owners

© 2010 Koninklijke Philips Electronics N.V.

All rights reserved.

www.philips.com



Printed in China

wk10073

SA2CAM_00_QSG_V1.0