

Philips Micro Jukebox

SA9100

SA9200

Quick start guide



- 1 Install
- 2 Connect and charge
- 3 Transfer
- 4 Enjoy

PHILIPS

Need help?

Look up our Support Centre website

www.philips.com/usasupport

or

Call our Customer Care helpline in your country

Besoin d'aide ?

Visitez la page Web de notre centre
d'assistance à l'adresse

www.philips.com/usasupport

ou

Appelez le centre client de votre pays

¿Necesita ayuda?

Consulte nuestro sitio Web de Soporte técnico,

www.philips.com/usasupport



Llame a nuestra Línea de atención al cliente de su país

Support?

Besuchen Sie unser Support Center auf

www.philips.com/usasupport

oder

wenden Sie sich einfach an den telefonischen Kundendienst
Ihres jeweiligen Landes

Pays	Assistance	Tarification / mn	Soyez prêt
Europe			
Austria	0820 901115	€0.20	Das Kaufdatum, Modellnummer und Serial nummer
Belgium	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Czech Republic	800142100	Mistní tarif	Datum zakoupení, číslo modelu a sériové číslo
Denmark	3525 8761	Lokal tarif	Indkøbsdato, type-, model- og serienummer
Finland	09 2290 1908	Paikallinen hinta	Ostopaivä ja tarkka mallinnumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Germany	0180 5 007 532	€0.12	Das Kaufdatum, Modellnummer und Serial nummer
Greek	0 0800 3122 1223	1 αυστική μονάδα	Την ημερομηνία αγοράς και τον ακριβή κωδικό μοντέλου και τον αριθμό σειράς του προϊόντος σας
Hungary	06 80 018544	Helyi tarifa	A vásárlás dátuma, modell szám és száriaszám
Ireland	01 601 1161	Local tariff	Date of Purchase, Model number and Serial number
Italy	199 404 042	€0.25	La data di acquisto, numero di modello e numero di serie
Luxembourg	26 84 30 00	Tarification locale	La date d'achat, la référence et le numéro de série du produit
Netherlands	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummer
Norway	2270 8250	Lokal tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Poland	022 3491504	Cena połączenia lokalnego	Data zakupu, Numer modelu i numer seryjny
Portugal	2 1359 1440	Preço local	A data de compra, número do modelo e número de série
Russia	(495) 961-1111 8 800 200-0880	по России звонок бесплатный	Дата покупки, Номер модели и Серийный номер
Slovakia	0800004551	Miestna tarifa	Dátum zakúpenia, číslo modelu a sériové číslo
Spain	902 888 785	€0.15	Fecha de compra y número del modelo y número de serie
Sweden	08 632 0016	Lokal kostnad	Inköpsdatum, modellnummer och serienummer
Switzerland	02 2310 2116	Ortstarif	Das Kaufdatum, Modellnummer und Serial nummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
North America			
Canada	0820 901115 (Francophone) 1-888-744-5477 (English / Spanish)	€0.20	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	€0.17	Date of Purchase, Model number and Serial number
South America			
Argentina	11 4544 2047	Tarifa local	Fecha de compra y número del modelo y número de serie
Brazil	0800 701 02 03 (Except Sao Paulo) 2121 0203 (Sao Paulo)	Grátis	A data de compra, número do modelo e número de série
Chile	600 744 5477	Tarifa local	Fecha de compra y número del modelo y número de serie
Mexico	01 800 504 6200	Gratis	Fecha de compra y número del modelo y número de serie
Asia			
China	4008 800 008	本地费率	购买日期、型号及序号
Hong Kong	2619 9663	本地费率	購買日期、型號及序號
Korea	02 709 1200	관세	구매일자, 모델 번호, 시리얼 번호

- 2 Is there a manual?
- 2 Register your product
- 2 Don't forget about upgrades
- 3 What's in the box
- 4 Connect and charge
- 4 Install
- 5 Transfer
 - 5 Music transfer
 - 6 Photo transfer
- 8 Enjoy
 - 8 Power on and play
 - 9 Use the vertical touch strip
 - 10 Other features
- 10 Troubleshooting
 - 10 How do I reset my player?
 - 10 How do I repair my device?
- 10 Disposal of your old product

Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your GoGear. You can also download the same file from this website: www.philips.com/support or www.philips.com/usasupport (for US residents).

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/register or www.philips.com/usasupport (for US residents) so we can inform you as soon as new free upgrades become available.

Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support or www.philips.com/usasupport for free upgrades of the latest software and Device Plug-in for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

What's in the box



Headphones



USB cable



CD-ROM containing Windows Media Player 10, Philips Device Manager, Philips Device Plug-in, User Manual, Tutorials and Frequently Asked Questions



Protective pouch



Quick start guide

What else you'll need?



 
Computer

Computer with:
Windows XP (SP2 or above)
Pentium Class 300MHz processor or higher
CD-ROM drive
128 MB RAM
500MB Hard Disk space
USB Port
Internet connection (preferable)
Microsoft Internet Explorer 6.0 or later

1 Install

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the onscreen instructions to complete the installation of **Windows Media Player 10** and **Philips Device Manager**.

2 Connect and charge


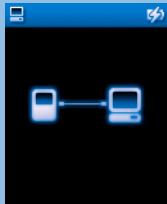


Your player will be charged while connected to your computer via the USB connection.

- 1 Connect the player to your computer using the supplied USB cable.
- > You will see the charging animation in the top right corner of your player's display.
The player is fully charged when the charging animation stops and the above icon is displayed.



3 Transfer

  A Music transfer

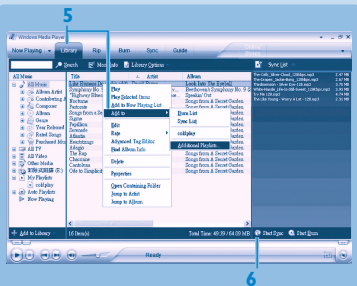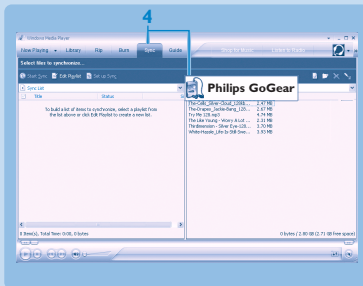

- 1 Connect the player to your computer using the supplied USB cable.
- 2 Start **Windows Media Player 10**.
- 3 Choose **Manual** in Device Setup Wizard screen. (you can also do an automatic synchronization, refer to user manual on the CD for instructions).
- 4 Select **Sync** tab. In the pull down menu on the right pane, select **Philips** or **Philips GoGear** as the destination. If they are not in the list, press **F5** to refresh and try again.
- 5 Select the **Library** tab to access the media library.
Click to highlight a song you want to copy. Right click on the item and select **Add to > Sync List**.
OR
Drag and drop the song into the **Sync List** on the right pane.
- 6 Click the **Start Sync** button to start synchronization. The progress will be displayed.
- 7 When the transfer is finished, you can disconnect your player from the computer.

  B Photo transfer

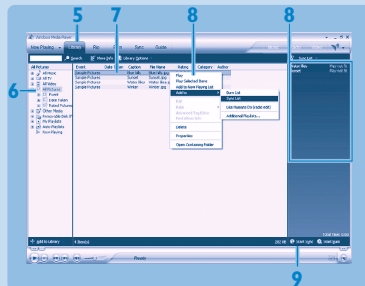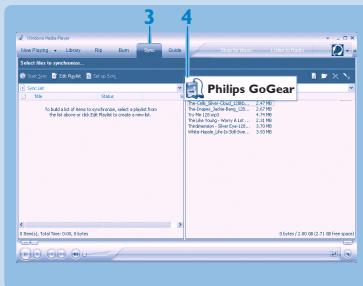


Remember to install **Philips Device Plug-in for Windows Media Player** (can be found in the supplied CD ROM) in your computer before transferring photos.

- 1 Connect the player to your computer.
 - 2 Start **Windows Media Player 10**.
 - 3 Select **Sync** tab.
 - 4 In the pull-down menu on the right pane, select **Philips** or **Philips GoGear** as the destination.
 - 5 Select the **Library** tab to access the media library.
 - 6 Click **All Pictures** on the left pane to display the list of photos.
 - 7 Click to highlight the photo you want to copy to your player.
 - 8 Drag and drop the photo into the **Sync List** on the right pane.
 - 9 Click **Start Sync** button at the bottom of the screen to start synchronization.
- > The progress will be displayed just above the **Start Sync** button.

B Photo transfer (continued)

 IMPORTANT Photos can only be transferred using **Windows Media Player 10**. If they were dragged and dropped using **Windows Explorer**, they will not show on your player.

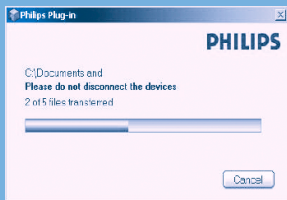


A pop-up message will be displayed, notifying you of the synchronization progress. When the pop-up disappears, the transfer is completed and you can disconnect your player.

For more information and tips on transferring music and pictures with **Windows Media Player 10**, please refer to the user manual on the supplied CD.

4 Enjoy

 
A Power on and play

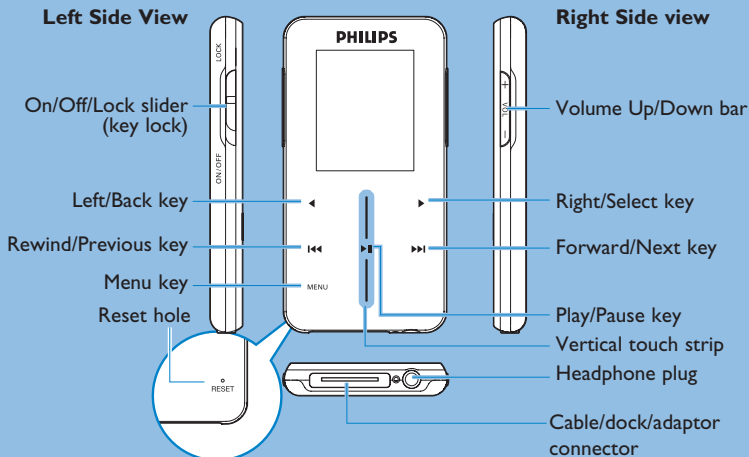

- 1 To power on, slide down and hold **ON/OFF LOCK** slider to **ON/OFF** position until the player powers on.
- 2 Use the **VERTICAL TOUCH STRIP** to scroll through the main menu.
- 3 Select **Music**, **Pictures** or **Settings** by pressing **▶**.
- 4 Use the **VERTICAL TOUCH STRIP** and **◀▶** buttons to navigate.
- 5 Once you have found a song you would like to play, press **▶||**.

B Use the vertical touch strip

 Your player has touch sensitive controls that respond to the touch of your fingers. The **VERTICAL TOUCH STRIP** (see picture) is used to scroll through lists. It responds to the following finger movements.

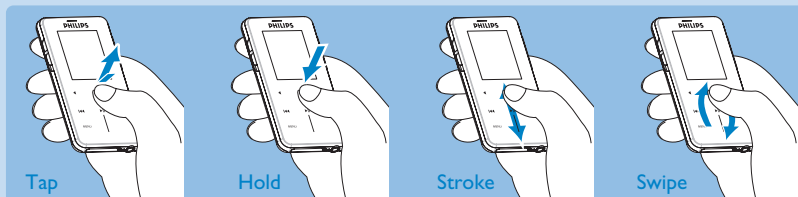

	To	Press
General	Power on/off	Slide down and hold ON/OFF LOCK slider to ON/OFF position
	Scroll through lists	Use the vertical touch strip
	Select option	►
	Return to previous menu/option	◄
	Access list of menu options	MENU
	Go back to the library to browse	◄
Music	Play/Pause songs	►
	Jump to next song	►►
	Move back to previous song	◄◄
	Add song to Playlist on the go	Select or play a song, press MENU and select add to playlist on the go
Pictures	Start a slide show	Press MENU , select Start slide show and press ►
	Stop a slide show	◄

Other features

For other features, please refer to the user manual provided in the by-packed CD ROM for details.

Troubleshooting

How do I reset my player?

In the unlikely event that your player hangs, do not panic. Insert a small pin or other sharp object into the reset hole located at the back of the player. Hold until the player shuts down.

How do I repair my device?

In case of a device error, connect your player to the computer and use **Philips Device Manager** to restore your player.

- 1 Launch **Philips Device Manager** from **Start > Programs > Philips Device Manager**.
- 2 Select your device.
- 3 Select **Repair** tab.
- 4 Click **Repair**.
- 5 After the repair process is completed, click **OK** and disconnect your player.
- 6 The player is ready for use again after restart.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is



covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

 Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners

2006 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

wk6244



Printed in China