



快速入门指南

ZH-CN

Quick start guide

EN





PHILIPS

播放 USB 闪存设备中的内容

Play from the USB flash device

Quickjump

Quickjump

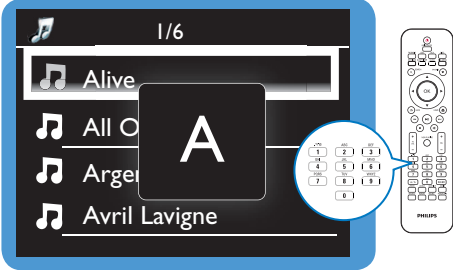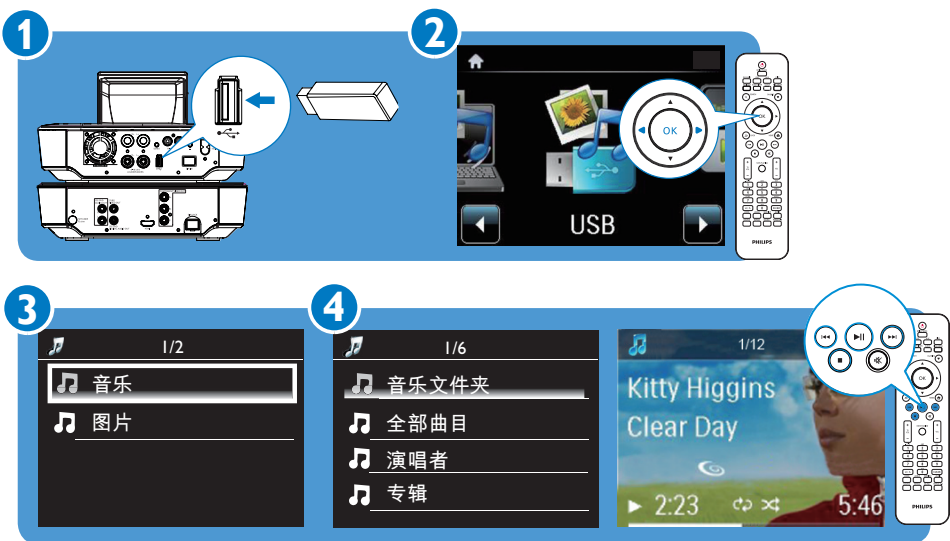

要转到以特定字母开头的第一个项目，请按一次或重复按几次对应于该字母的按钮，直到字母出现。
要搜索以下一个字母开头的第一个项目，请按 **▶**。
要搜索以上一个字母开头的第一个项目，请按 **◀**。

To reach the first item that starts with a certain letter, on the button corresponding to the letter, press once or repeatedly until the letter appears.
To reach the first item that starts with the next letter, press **▶**.
To reach the first item that starts with the previous letter, press **◀**.



搜索 USB 闪存盘中的音乐/照片

Search for music/pictures in the USB flash device

字母数字搜索

Alphanumeric search

要开始字母数字搜索，
• 按遥控器上的 **SEARCH**；
• 使用遥控器输入字符；
• 按 **OK**。
To start alphanumeric search,
• Press **SEARCH** on the remote control;
• Enter characters by using the remote control;
• Press **OK**.

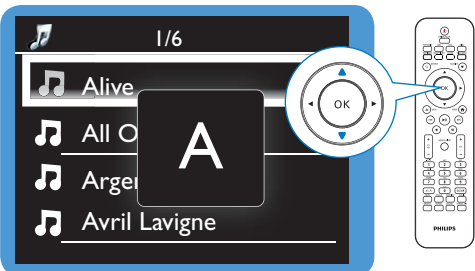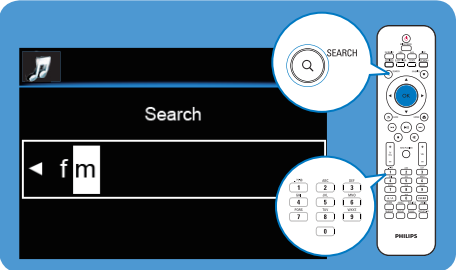

• 按住 **▲▼** 启动 Superscroll。
• 到达所需字母后，释放 **▲▼**。
• Press and hold **▲▼** to start Superscroll.
• Release **▲▼** when you reach the desired letter.

播放 FM 收音机

Play FM radio

设置时钟

Set clock

自动设置


Automatic setting

注


在 FM 收音机模式下，确保您完成了 [自动存储]，并在 [预设电台] 下第一个位置保存了传输时间信号的 FM RDS 电台。
在提供RDS(无线电数据系统)服务的国家或地区方可搜索到 RDS调频电台。

Note



In the FM radio mode, ensure you have completed [Auto store], and saved in the first location under [Presets] an FM RDS station that transmits time signals.
FM RDS stations are available in countries or areas where the RDS (Radio Data System) service is provided.

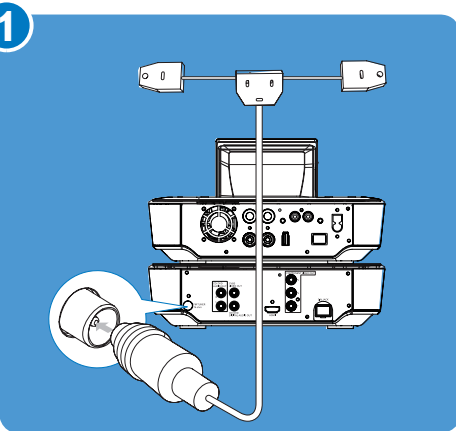

首次调谐至 FM 电台时，选择 **[自动存储]** 可搜索并在 **[预设电台]** 中存储可用的电台。
转到 **[预设电台]** 选择预设电台。
The first time you tune to FM radio stations, select **[Auto store]** to search for and store available stations in **[Presets]**.
Go to **[Presets]** to select a preset radio station.

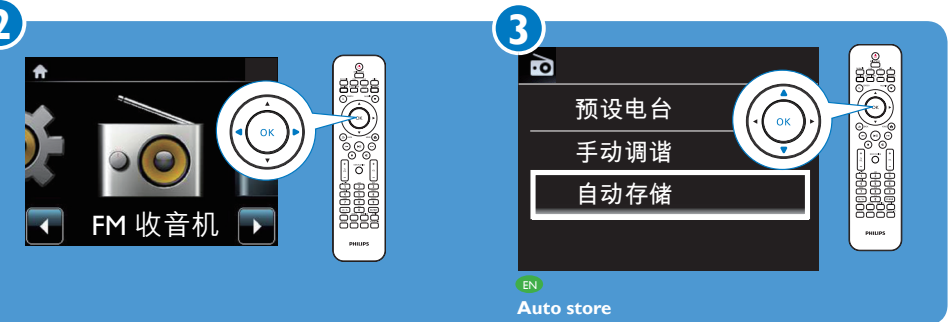


Auto store

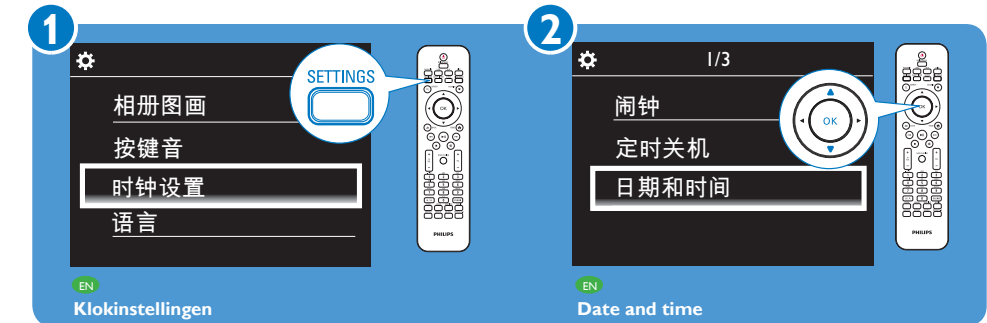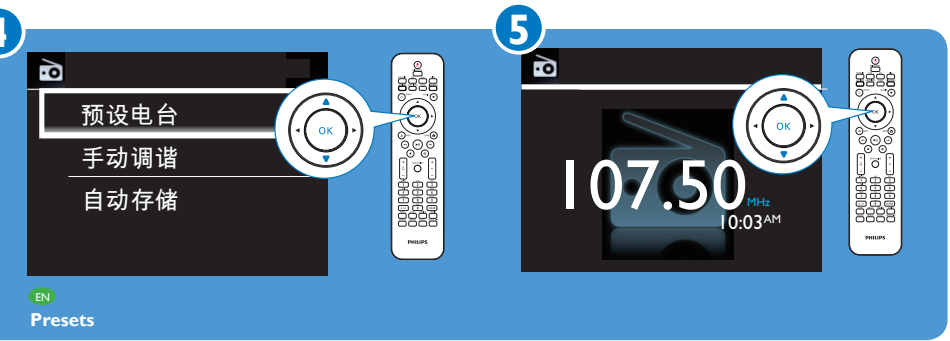

Klokinstellingen

Date and time

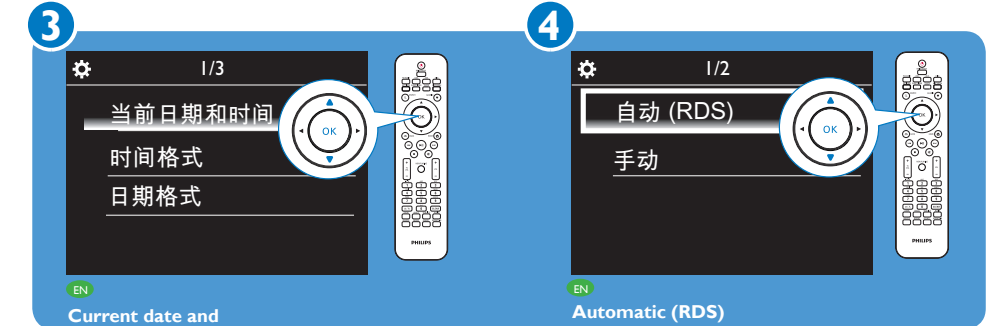

Current date and

Automatic (RDS)

提示
• 要手动设置时钟，请选择 [手动] (在步骤 4 中)。

Tip
• To set clock manually, select **[Manual]** in Step 4.

在以下网站上注册产品并获得支持
Register your product and get support at

www.philips.com/welcome




Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners
© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.
www.philips.com





Printed in China
MCD900_93_QSG_www1033.3

包装盒内物品
What's in the Box

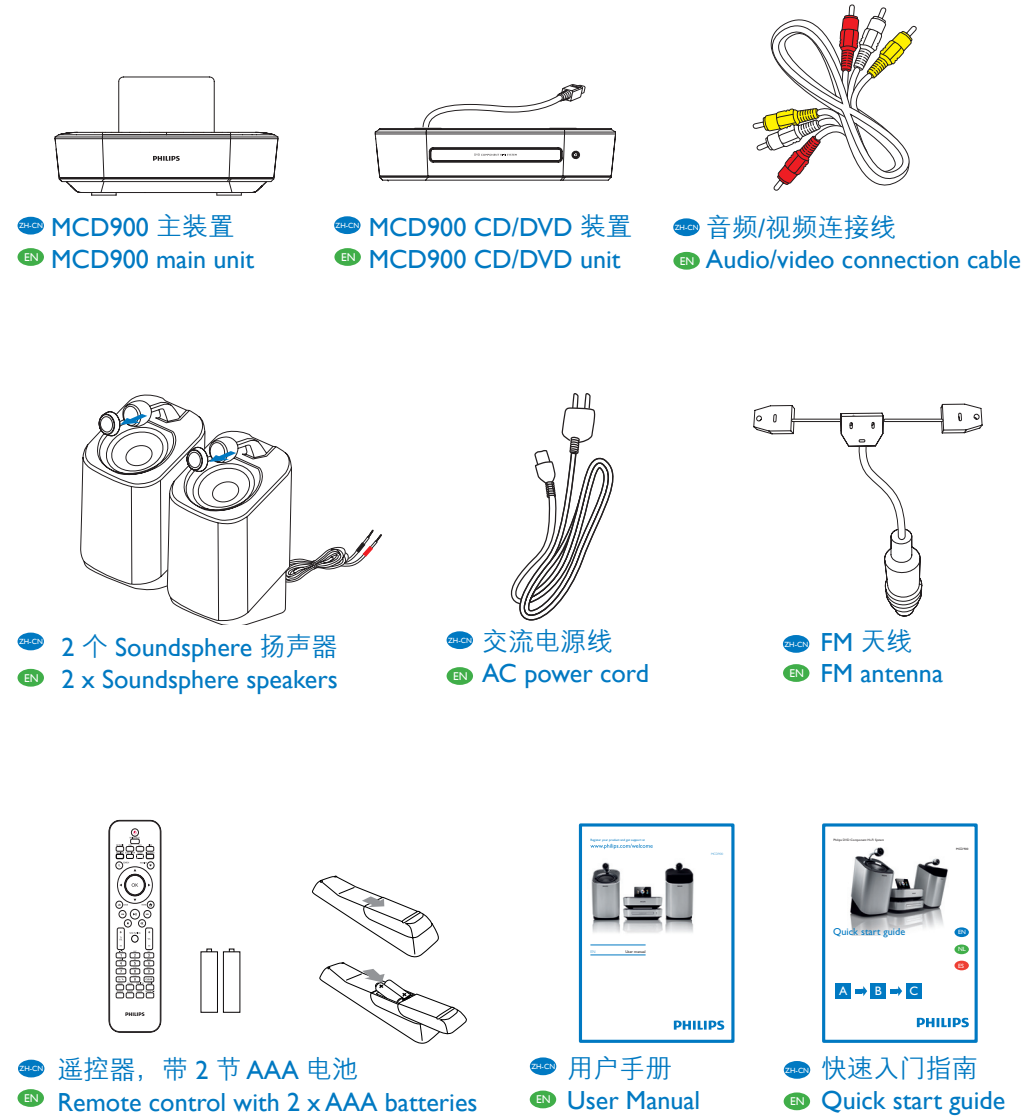


Start
准备
Prepare

安装和连接扬声器
Place and connect the speakers

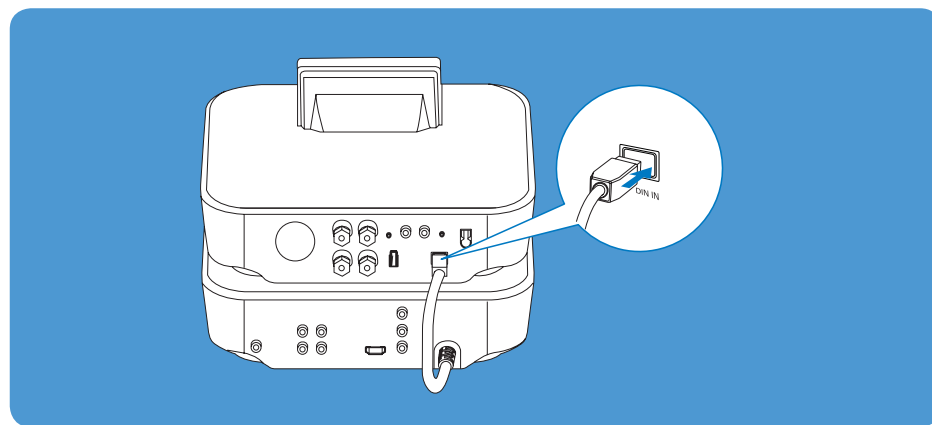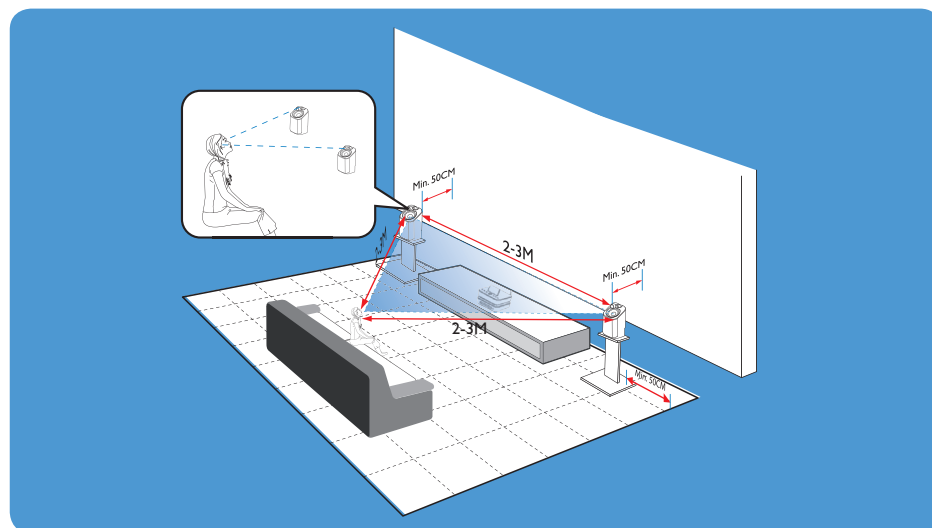


扬声器连接
Speaker connections

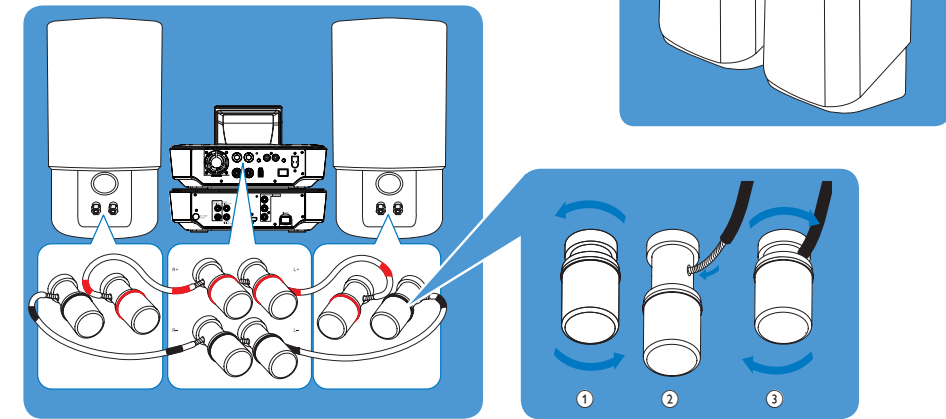


电视机连接
TV connections

- ① 使用音频/视频连接线 (随附)
② 使用 HDMI 线缆 (另售)
- ① Using the audio/video connection cable (supplied)
② Using the HDMI cable (sold separately)

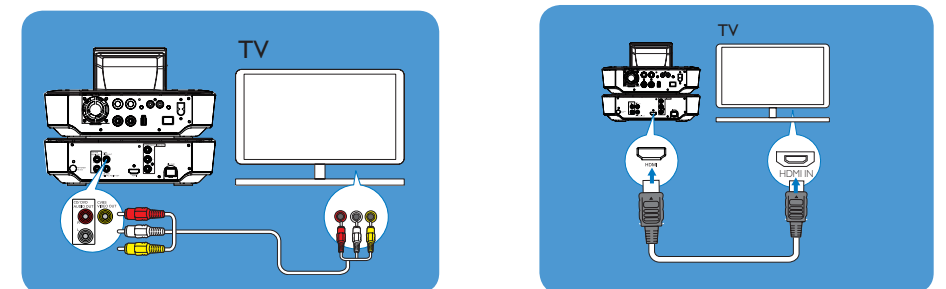


B 开机
Turn on

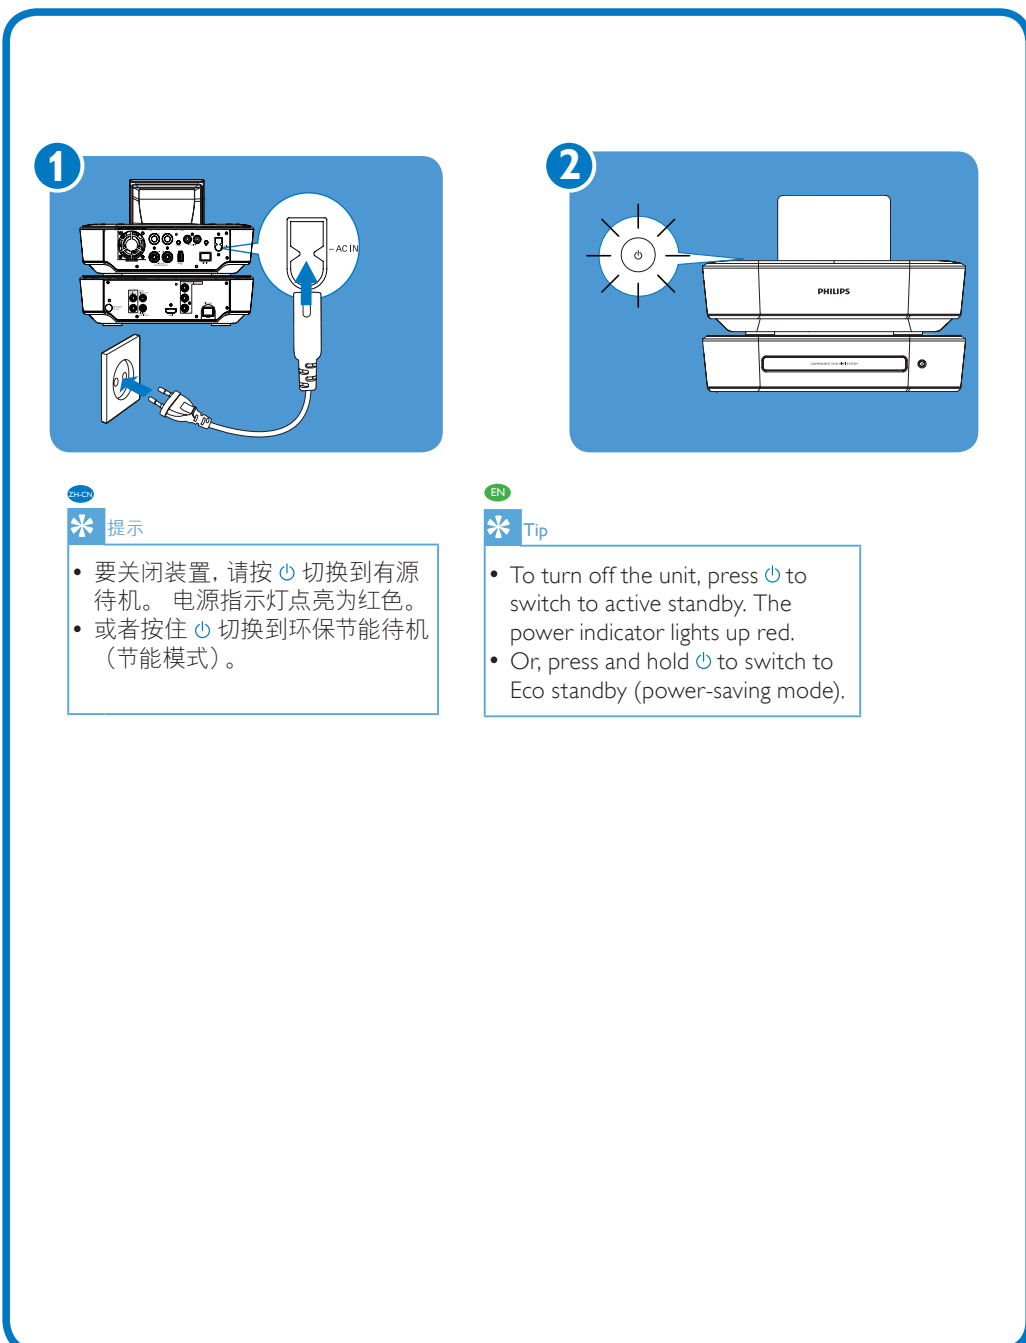

C 欣赏
Enjoy

播放 DVD
Play movie DVDs

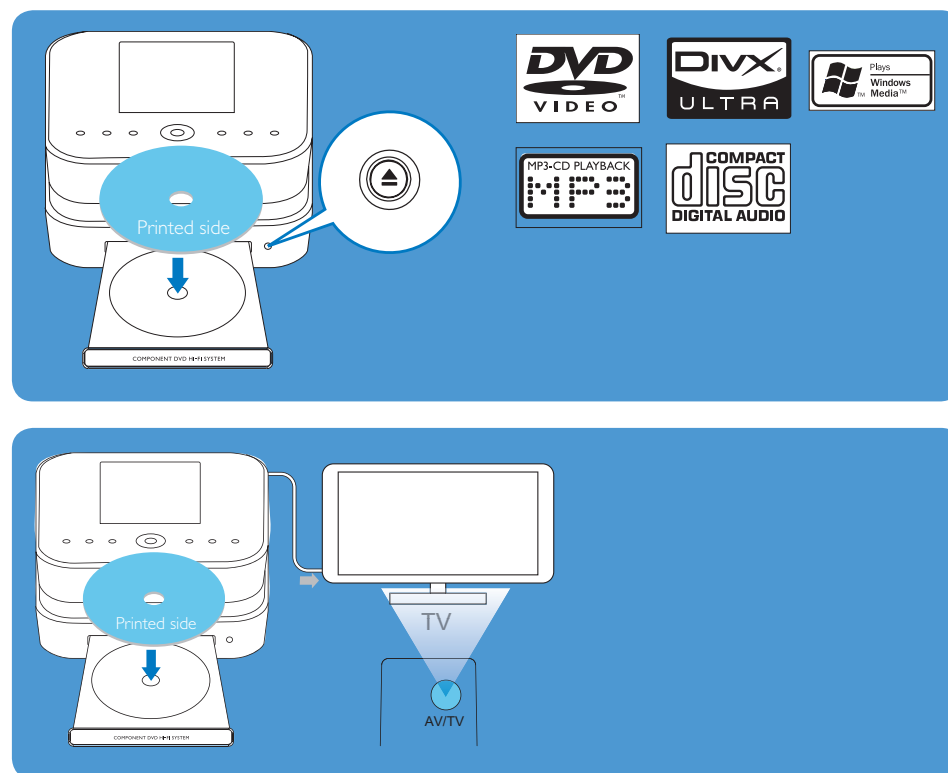

- 在电视上切换到正确的视频输入频道:
- 在电视的遥控器上, 反复按 AV/TV 按钮, 直到见到 Philips 屏幕或视频光盘屏幕; 或者
 - 反复按电视遥控器上的来源按钮。
- On the TV, switch to the correct video-in channel:
- On the remote control of your TV, press the AV/TV button repeatedly until you see the Philips screen, or the video disc screen; or
 - Press the source button repeatedly on the remote control of your TV.

