

Register your product and get support at
www.philips.com/welcome

DS6600



EN User manual

PHILIPS

Contents

1	Important	4
	Safety	4
	Notice	5

2	Your Docking Entertainment System	6
	Introduction	6
	What's in the box	6
	Overview of the speakers	7
	Overview of the remote control	8

3	Get started	8
	Connect speakers	8
	Connect power	9
	Prepare the remote control	9
	Turn on	9

4	Play	10
	Play from iPod/iPhone	10
	Play from an external device	11
	Control play	12

5	Other features	13
	Synchronize the iPod/iPhone with PC	13
	Listen through headphone	13

6	Product information	14
	Specifications	14

7	Troubleshooting	15
----------	------------------------	-----------

1 Important

Safety

Important Safety Instructions

- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control:
 - Install all batteries correctly, + and - as marked on the remote control.

- Remove batteries when the remote control is not used for a long time.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug, or adaptor to disconnect the apparatus from the power.

Risk of overheating! Never install this apparatus in a confined space. Always leave a space of at least four inches around this apparatus for ventilation. Ensure curtains or other objects never cover the ventilation slots on this apparatus.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually

be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Mains fuse

This information applies only to products with a UK mains plug.

This product is fitted with an approved molded plug. If you replace the fuse, use one with:

- the ratings shown on the plug,
- a BS 1362 approval, and
- the ASTA approval mark.

Contact your dealer if you are not sure about what type of fuse to use.

Caution: To conform with the EMC directive (2004/108/EC), do not detach the plug from the power cord.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



This product complies with the radio interference requirements of the European Community.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent

negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



**Be responsible
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.



Note

- The type plate is located on the bottom of the apparatus.

2 Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

Introduction

With this unit, you can:

 
- enjoy audio from the iPod/iPhone and other audio devices.
- synchronize your iPod/iPhone with PC.

What's in the box

Check and identify the contents of your package:

- Main unit (2 x speakers)
- Remote control
- 1 x speaker connection cable
- 1 x AC power adaptor
- 2 x AC power cords
- 1 x MP3 link cable
- 1 x USB cable
- Quick start guide

Overview of the speakers

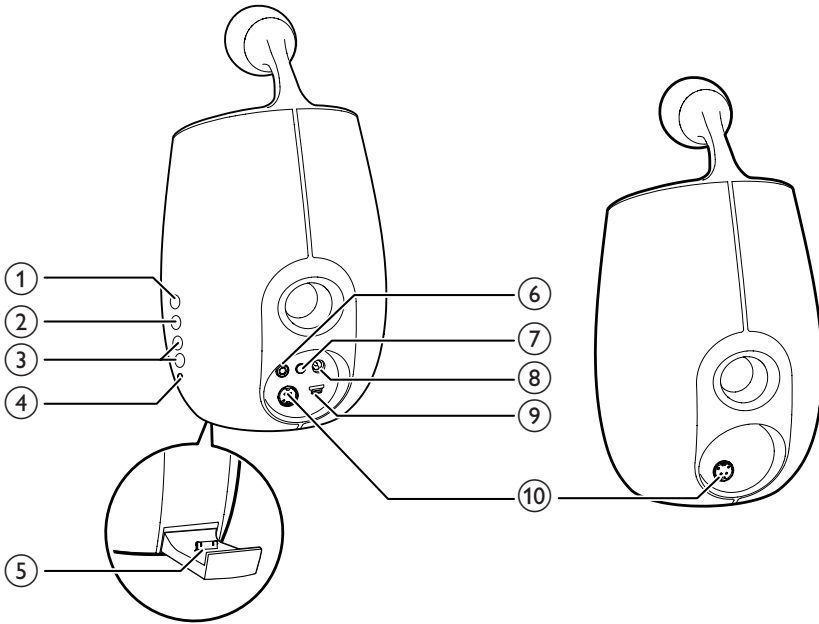

① **SRC**

- Select a source: iPod/iPhone; USB; MP3-LINK.

②

- Select the sync mode.

③ **+/-**

- Adjust volume.

④

- Headphone socket.

⑤ **DOCK**

- Dock for iPod/iPhone.

⑥ **MP3-LINK**

- Connect an external audio player through the supplied MP3 link cable.

⑦

- Turn on the unit.
- Switch the unit to standby mode.

⑧ **DC-IN**

- Connect the power adapter.

 
⑨ **USB**

- Connect a computer through the supplied USB cable.

⑩ **CABLE IN**

- Connect the two speakers through the supplied speaker cable.

Overview of the remote control

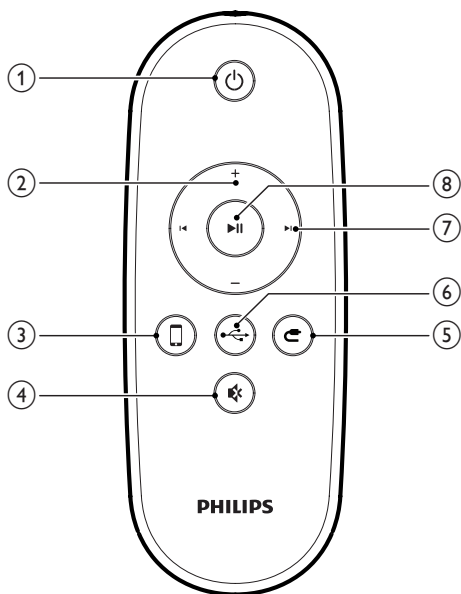

- ①
 - Turn on the unit.
 - Switch the unit to standby mode.
- ②
 - Adjust volume.
- ③
 - Select the iPod/iPhone source.
- ④
 - Mute or restore volume.
- ⑤
 - Select the MP3-LINK source.
- ⑥
 - select the USB source.
- ⑦
 - Skip to the previous/next track.
- ⑧
 - Start or pause play.

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Connect speakers

 


Note

- For optimal sound, use the supplied speakers only.
- The supplied DIN cable is only intended for use with this product. Never try to connect any other devices through this cable.

Connect the supplied DIN cable to the **CABLE IN** sockets on both speakers:


- active speaker (with buttons): right channel
- passive speaker: left channel

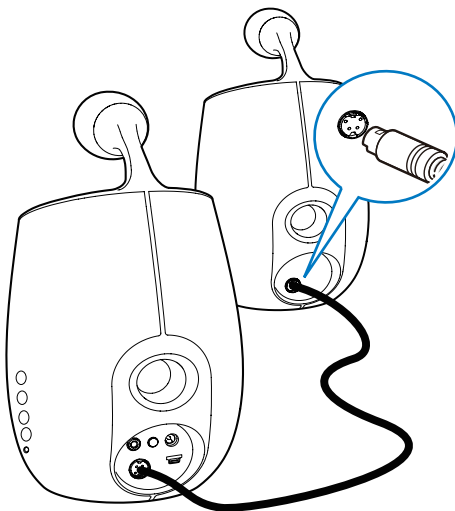

Connect power

! Caution

 - Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the unit.
- Before connecting the AC adaptor, ensure you have completed all other connections.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

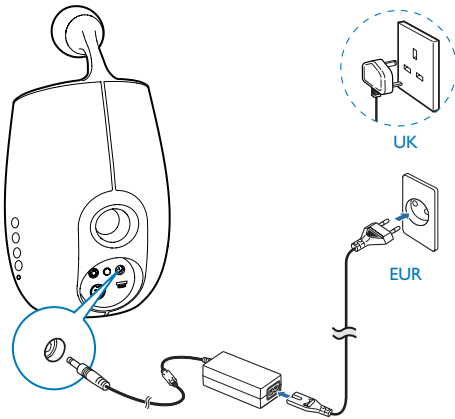

Connect the AC power cord to

- the DC-IN socket on the back of the main speaker.
- the wall power outlet.

Prepare the remote control

! Caution

 
- Risk of explosion! Keep batteries away from heat, sunshine, or fire. Never discard batteries in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery contains chemical substances, so it should be disposed of properly.
- Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert one CR2032 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

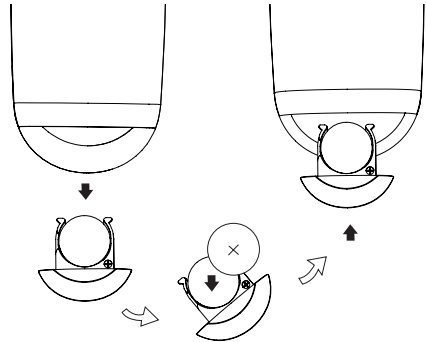

≡ Note

- Before pressing any function button on the remote control, first select the correct source with the remote control instead of the main unit.
- If you are not going to use the remote control for a long time, remove the battery.

Turn on

In standby mode, Press ϕ on the back of the main speaker:

- ➡ The ϕ indicator turns amber.
- ➡ The unit switches to the last selected source.

Switch to standby mode

The unit switches to standby mode, when:

- In power on mode, press ϕ on the back of the main speaker.
- In DOCK mode: no iPod/iPhone connected over 15 minutes.
- In USB mode: no PC-USB connected over 15 minutes.
- In MP3 link mode: no audio device connected over 15 minutes.

➡ The power indicator turns off.

4 Play

Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

Compatible iPod/iPhone

 
The unit supports the following iPod/iPhone models.

Made for:

- iPod touch (1st, 2nd, 3rd, and 4th generation)
- iPod classic
- iPod nano (2nd, 3rd, 4th, 5th, and 6th generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Load the iPod/iPhone

- 1 Push to open the dock compartment.
- 2 Insert your iPod/iPhone into the dock.

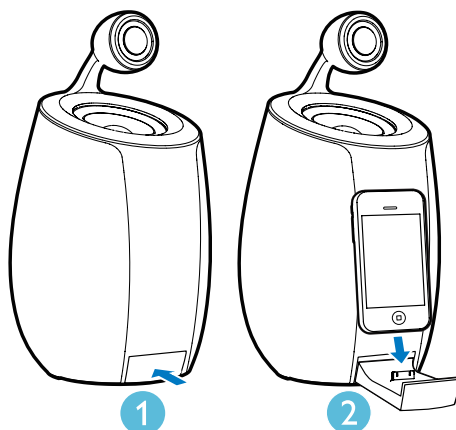

Remove the iPod/iPhone

- 1 Pull the iPod/iPhone out of the dock.
- 2 Push to close the dock compartment.

Charge the iPod/iPhone

When the unit is connected to power, the docked iPod/iPhone begins to charge automatically.

Listen to the iPod/iPhone



Note

- Make sure that your iPod/iPhone has been loaded securely.

- 1 Press on the remote control to select the DOCK mode.
↳ The **SRC** indicator on the main speaker turns amber.
- 2 Press .
↳ The connected iPod/iPhone starts play.
 - To pause/resume play, press again.



Tip

- You can also press SRC on the main speaker repeatedly until SRC indicator turns amber to select the DOCK mode.

 
Play from an external device

You can enjoy audio from an external device through this unit.

Play from PC with supplied USB cable

- 1 Connect the USB cable to:
 - the (USB) socket on the back of the main speaker.
 - the (USB) socket on the computer.

- 2 Press on the remote control to select USB mode.
↳ The **SRC** indicator on the main speaker turns green.
- 3 Start to play audio on your computer.
↳ The music streams from your docking speakers.

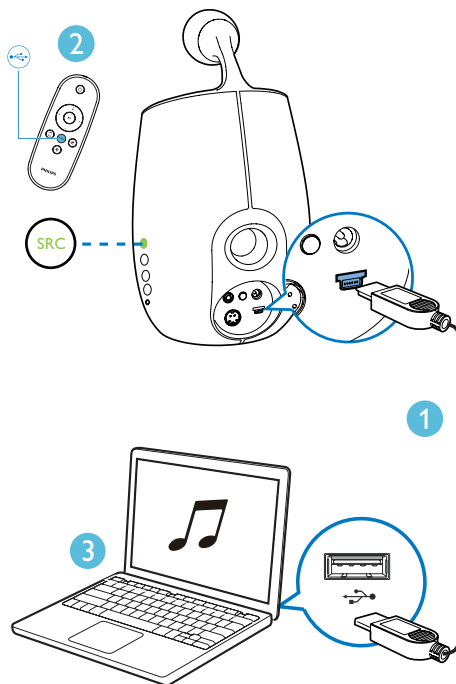

Tip

- You can also press SRC on the main speaker repeatedly until SRC indicator turns green to select the USB mode.

 


Note

- Before playing audio on PC, make sure that you have connected your docking speakers with PC successfully, and selected the USB source.

Play from an external device with supplied MP3 link cable

- 1 Connect the supplied MP3 link cable to:
 - the **MP3-LINK** jack (3.5mm) on the back of the main speaker.
 - the headphone jack on an external device.
- 2 Press **⏮** on the remote control to select MP3 link mode.
 - The **SRC** indicator on the main speaker turns blue.
- 3 Start to play the device (see the device user manual).

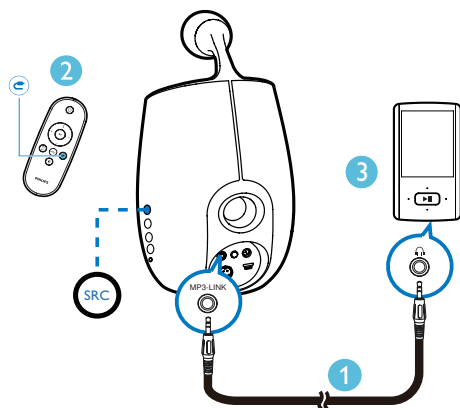

Tip

- You can also press SRC on the main speaker repeatedly until SRC indicator turns blue to select the MP3 link mode.

Control play

You can select different play options from either your main speaker or the supplied remote control.



Note


- All the operations below are based on the supplied remote control.
- To start or pause play, press **▶||**.
- To skip to the previous or next track, press **◀|** / **|▶**.
- To adjust volume, press **+/-** repeatedly.
- To mute or restore volume, press **⏸**.
- To switch the USB audio source (if connected), press **🔌**.
- To switch to the MP3-LINK source (if connected), press **⏮**.
- To switch back to the iPod/iPhone source, press **📱**.

5 Other features

Synchronize the iPod/iPhone with PC

Note

 - Make sure that iTunes has been configured properly in your PC.
- If the iTunes can't be configured properly, the synchronization process needs to be triggered in iTunes manually.

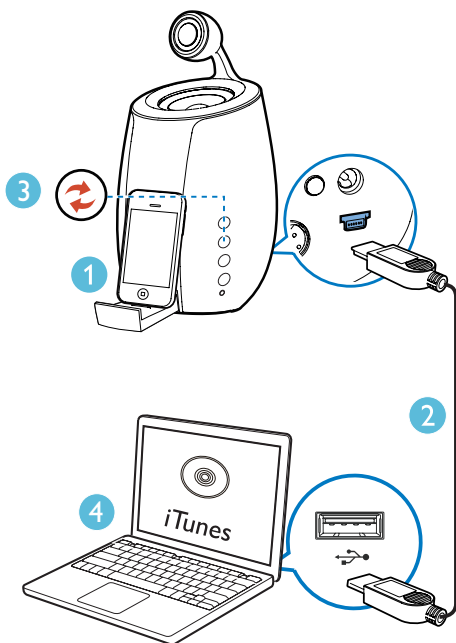

- 1 Insert the iPod/iPhone in the dock.
- 2 Connect your main speaker and PC with the supplied USB cable.
- 3 Press on the main speaker:
 - ↳ The **SRC** indicator and **VOL+/-** indicators turns off, and the indicator turns amber.

- 4 Start iTunes to synchronize your docking speakers with PC.
 - ↳ The docked iPod/iPhone is synchronized with PC successfully through the iTunes.

To exit synchronization mode:

- 1 Reject your iPod/iPhone from iTunes first.
- 2 Press on the main speaker.
 - ↳ Your speakers return to audio mode automatically.

Listen through headphone

Plug a headphone into the socket on the main speaker.

Note

- You cannot listen through the headphone if your main speaker is in DOCK mode.

6 Product information

Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2 x 25 W RMS
Frequency Response	30-2000 Hz
Signal to Noise Ratio	> 90 dB
MP3 Link	600 mV RMS 20 kohm

Speakers

Speaker Impedance	Woofer: 8 ohm Tweeter: 8 ohm
Speaker Driver	78 mm woofer + 34 mm tweeter

General information	
AC power	Model: GFP651DA-2028 Input: 100-240 V~, 50/60 Hz 1.4 A Output: 20 V $\approx$ 2.8 A
Operation Power Consumption	25 W
Standby Power consumption	<0.5 W
Dimensions	
- Main Unit (diameter x height)	145 x 262 mm
Weight	
- With Packing	4.0 kg
- Main Unit	2.6 kg

7 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Make sure that the AC power plug of the device is connected properly.
- Make sure that there is power at the AC outlet.

No sound

- Adjust the volume.
- Check if you have selected the correct audio source.

No response from the unit

- Disconnect and reconnect the AC power plug, and then switch on the device again.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/– signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the IR sensor on the front of the main speaker.



Specifications are subject to change without notice
© 2011 Koninklijke Philips Electronics N.V.
All rights reserved.

DS6600_10_UM_V1.1